
# KEY FUNCTION GUIDE

**X1:** Press once **X2:** Press twice **Hold:** Press and hold



**Hold**

**Power on/off**

Long press 1second to power on; Long press 1second to power off.

**X1**

**Play/Pause**

In music mode: Switch between play/pause.

**X1**

**Answer/Hang up**

In phone mode: Short press play key answer/hang up call.

**Hold**

**Reject**

In phone mode: Long press >1 second to reject the call.



**X2 or Hold**

**Bluetooth pairing**

After the speaker is turned on, the white light flashes alternately. Open the Bluetooth on your phone and search for Bluetooth devices. Click on the "TOZO PE1" to connect. After a successful connection, the indicator light will be on.

In the connected state, double-click the Bluetooth button to disconnect all current connections and re-enter the pairing state.

If needed, after answering the call, press and hold the Bluetooth button to switch the call to the phone.



**X1**


**Volume down**

Short press to increase the volume by 1 step (total 16 steps).

**Hold**

**Previous song**

Long press 1.5 second to switch to the previous song.



**X1**

**Volume up**

Short press to increase the volume by 1 step (total 16 steps).

**Hold**

**Next song**

Long press 1.5 second to switch to the next song.



**Hold**

**Restore the factory settings**

Press and hold the "+"and "-" keys together for 5 second to restore the factory settings.

**Warning**

**EN**

**Warning:** Avoid dropping and do not disassemble. Do not charge when the products are wet. Avoid extreme high or low temperatures. Do not expose this product to excessive temperatures such as sunlight or fire. Use original or certified cables. Keep away from children. The included small parts may cause a choking hazard.

**JP**

**警告:** 落下や商品の分解を避けてください。製品が濡れているときには充電しないでください。また、極端な高温や低温、日光や火などの過度の温度にさらさないようにしてください。ぜひ認定済みのケーブルをご使用ください。お子様の手の届かない場所に保管し、付属の小さな部品は窒息の危険がありますのでご注意ください。

**DE**

**Warnung:** Nicht fallen lassen und nicht auseinandernehmen. Nicht aufladen, wenn die Produkte nass sind. Extrem hohe oder niedrige Temperaturen vermeiden. Dieses Produkt keinen übermäßigen Temperaturen wie Sonnenlicht oder Feuer aussetzen. Verwenden Sie Originalkabel oder zertifizierte Kabel. Von Kindern fernhalten. Die enthaltenen Kleinteile können eine Erstickungsgefahr darstellen.

**FR**

**Attention:** Évitez de le faire tomber et ne le démontez pas. Ne chargez pas les produits lorsqu'ils sont mouillés. Évitez les températures extrêmement élevées ou basses. N'exposez pas ce produit à des températures excessives telles que la lumière du soleil ou le feu. Utilisez des câbles d'origine ou certifiés. Tenir hors de portée des enfants. Les petites pièces fournies peuvent présenter un risque d'étouffement.

**IT**

**Attenzione:** evitare di far cadere e non smontare. Non caricare i prodotti quando sono bagnati. Evitare temperature estremamente alte o basse. Non esporre questo prodotto a temperature eccessive come luce solare o fuoco. Utilizzare cavi originali o certificati. Tenere lontano dalla portata dei bambini. Le piccole parti incluse possono causare un rischio di soffocamento.

**ES**

**Advertencia:** Evite que se caigan y no desarme. No cargue el producto cuando esté mojado. Evite temperaturas extremadamente altas o bajas. No exponga este producto a temperaturas excesivas, como la luz solar o el fuego. Utilice cables originales o certificados. Manténgalo alejado de los niños. Las pieces pequeñas incluidas pueden provocar peligro de asfixia.

**NL**

**Waarschuwing:** Laat het niet vallen en haal het niet uit elkaar. Laad het product niet op als het nat is. Vermijd extreem hoge of lage temperaturen. Stel dit product niet bloot aan extreme temperaturen zoals zonlicht of vuur. Gebruik originele of gecertificeerde kabels. Houd het buiten bereik van kinderen. De meegeleverde kleine onderdelen kunnen verstikkingsgevaar opleveren.

**SE**

**Varning:** Undvik att tappa och ta inte isär. Ladda inte när produkterna är blöta. Undvik extremt höga eller låga temperaturer. Utsätt inte denna produkt för höga temperaturer som solljus eller eld. Använd original eller certifierade kablar. Förvaras åtskilt från barn. De medföljande små delarna kan orsaka kvävningsrisk.

**TR**

**Uyarı:** Düşürmeyin ve sökmeyin. Ürünler ıslakken şarj etmeyin. Aşırı yüksek veya düşük sıcaklıklardan kaçının. Bu ürünü güneş ışığı veya ateş gibi aşırı sıcaklıklara maruz bırakmayın. Orijinal veya sertifikalı kablolar kullanın. Çocuklardan uzak tutun. Dahil edilen küçük parçalar boğulma tehlikesine neden olabilir.

**PL**

**Ostrzeżenie:** Unikaj upuszczania i nie rozmontowuj. Nie ładuj, gdy produkty są mokre. Unikaj ekstremalnie wysokich lub niskich temperatur. Nie wystawiaj tego produktu na działanie nadmiernych temperatur, takich jak światło słoneczne lub ogień. Używaj oryginalnych lub certyfikowanych kabli. Trzymaj z dala od dzieci. Dołączone małe części mogą powodować ryzyko zadławienia.

Thank you for purchasing the TOZO authentic product.
For more latest products, parts and accessories,
please visit: **www.tozostore.com**
For any assistance please contact Email: **info@tozostore.com**

FC RoHS CE


# HANDLE BUCKLE




1. Pinch the handle buckle and squeeze it inward to detach the buckle from the hole.
2. Insert the detached handle buckle into your preferred hanging location (such as the handle of a schoolbag or an outdoor branch). Then, place the end of the handle buckle into the hole and push it outward to secure the handle buckle, creating a stable suspension for the speaker.

# TWINS MODE

1. Turn on both speakers, then press and hold the Bluetooth buttons on both speakers for 5 seconds to pair them as left and right channels.
2. To set one speaker as the master (left channel), press and hold its Bluetooth button for 5 seconds. Then, press and hold the Bluetooth button on the other speaker for 5 seconds to set it as the right channel.
3. Your phone can search for and connect to the speakers via Bluetooth before or after the two speakers are paired.
4. After connecting, the white light on the master speaker will be on, and the white light on the slave speaker will flash slowly (on for 500ms, off for 500ms).

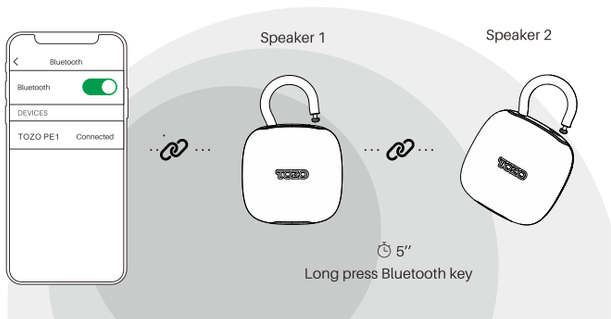



# VOICE ASSISTANT

1. When the device is turned on and connected, double-click the power button to activate voice assistant.
2. When the voice assistant function is enabled, press and hold the button for 2 seconds to exit the voice assistant function.
3. Note that some Android phones may not support this button mode.

# CHARGING

1. Plug in the USB C charging cable to charge the speaker. The power light will turn red when charging and will turn off when fully charged.
2. When the speaker is playing and the charging cable is connected, both the red and white lights will be on.
3. When the speaker has a low battery, the charging indicator light will flash slowly (on for 500ms, off for 500ms) along with a beeping sound.

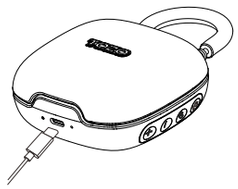

# TOZO APP

TOZO APP can be downloaded from TOZO official website and Google Play and Apple APP Store.

TOZO

Download on the App Store

GET IT ON Google Play

TOZO®
www.tozostore.com




# PE1

## Portable Wireless Sports Speaker

## Quick Guide