Dell Pro 7 13 2-in-1

P703260

Service Manual

Regulatory Model: P208G
Regulatory Type: P208G00A
July 2026
Rev. A01

Notes, cautions, and warnings

NOTE: A NOTE indicates important information that helps you make better use of your product.

CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © Dell Inc. All Rights Reserved. Dell Technologies, Dell, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Contents

Chapter 1: Working inside your computer..... 6
Safety instructions..... 6
Before working inside your computer..... 6
Safety precautions..... 7
Electrostatic discharge—ESD protection..... 7
ESD Field Service kit..... 8
Transporting sensitive components..... 9
After working inside your computer..... 9
Information on repairability for Québec - From Dell Canada Inc. - to Quebec consumers..... 9
BitLocker..... 9
Recommended tools..... 10
Screw list..... 10
Major components of Dell Pro 7 13 2-in-1 P703260..... 11
Customer Replaceable Units (CRUs) and Field Replaceable Units (FRUs) list..... 13

Chapter 2: Removing and installing Customer Replaceable Units (CRUs)..... 14
Nano-SIM card tray (optional)..... 14
Removing the nano-SIM card tray..... 14
Installing the nano-SIM card tray..... 15
Base cover..... 16
Removing the base cover..... 16
Installing the base cover..... 19
Battery..... 21
Rechargeable Li-ion battery precautions..... 21
Removing the battery..... 22
Installing the battery..... 23
Battery cable..... 24
Removing the battery cable..... 24
Installing the battery cable..... 24
Wireless Wide Area Network (WWAN) card..... 25
Removing the 5G WWAN card..... 25
Installing the 5G WWAN card..... 26
Removing the 4G WWAN card..... 28
Installing the 4G WWAN card..... 29
Wireless Local Area Network (WLAN) card..... 30
Removing the WLAN card..... 30
Installing the WLAN card..... 31
Solid State Drive (SSD)..... 33
Removing the M.2 2230 SSD..... 33
Installing the M.2 2230 SSD..... 34
Removing the M.2 2280 SSD..... 34
Installing the M.2 2280 SSD..... 35
Speakers..... 36
Removing the speakers..... 36

Installing the speakers....37
Fan....39
Removing the fan....39
Installing the fan....39

Chapter 3: Removing and installing Field Replaceable Units (FRUs)....41
USH-board cable....41
Removing the USH-board cable....41
Installing the USH-board cable....42
Smart-card reader....42
Removing the smart-card reader....42
Installing the smart-card reader....43
Heat sink....45
Removing the heat sink....45
Installing the heat sink....46
USB Type-C connector module....47
Removing the USB Type-C connector module....47
Installing the USB Type-C connector module....48
Wireless Local Area Network (WLAN) antenna modules....49
Removing the wireless antenna modules....49
Installing the wireless antenna modules....50
I/O-bridge board....52
Removing the I/O-bridge board....52
Installing the I/O-bridge board....52
I/O board....55
Removing the I/O board....55
Installing the I/O board....56
System board....59
Removing the system board....59
Installing the system board....62
Power button with optional fingerprint reader....66
Removing the power button with an optional fingerprint reader....66
Installing the power button with optional fingerprint reader....67
Touchpad cable....68
Removing the touchpad cable....68
Installing the touchpad cable....69
Keyboard....70
Removing the keyboard....70
Installing the keyboard....72
Nano-SIM card dummy filler....75
Removing the nano-SIM card dummy filler....75
Installing the nano-SIM card dummy filler....76
Palm-rest assembly....76
Removing the palm-rest assembly....76
Installing the palm-rest assembly....78
Display assembly....80
Removing the display assembly....80
Installing the display assembly....82

Chapter 4: Software **85**
Operating system 85
Drivers and downloads 85

Chapter 5: BIOS Setup **86**
Entering BIOS Setup program 86
Navigation keys 86
F12 One Time Boot menu 86
View Advanced Setup options 87
View Service options 87
BIOS Setup options 87
Updating the BIOS 103
Updating the BIOS in Windows 103
Updating the BIOS using the USB drive in Windows 103
Updating the BIOS from the One-Time boot menu 104
Updating the BIOS in Linux and Ubuntu 104
System and setup password 104
Assigning a System Setup password 104
Deleting or changing an existing system password or setup password 105
Clearing system and setup passwords 105

Chapter 6: Troubleshooting **106**
Handling swollen rechargeable Li-ion batteries 106
Quick charge support on power adapters with detachable Type-C cables 106
Dell SupportAssist Pre-boot System Performance Check diagnostics 107
Running the SupportAssist Pre-Boot System Performance Check 107
Built-in self-test (BIST) 107
Motherboard Built-In Self-Test (M-BIST) 107
Enhanced LCD Built-in Self-Test (LCD-BIST) 108
Logic Built-in Self-test (L-BIST) 109
System-diagnostic lights 109
Recovering the operating system 110
Real-Time Clock (RTC Reset) 110
Backup media and recovery options 111
Network power cycle 111
Drain flea power (perform hard reset) 111

Chapter 7: Getting help and contacting Dell **112**

Chapter 8: Revision history **113**

1

Working inside your computer

Safety instructions

Use the following safety guidelines to protect your computer from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure in this document assumes that you have read the safety information that shipped with your computer.

WARNING: Before working inside your computer, read the safety information that is shipped with your computer. For more safety best practices, see Dell Regulatory Compliance Home Page.

WARNING: Disconnect your computer from all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting your computer to an electrical outlet.

CAUTION: To avoid damaging the computer, ensure that the work surface is flat, dry, and clean.

CAUTION: You should only perform troubleshooting and repairs as authorized or directed by the Dell technical support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty.

CAUTION: Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity which could harm internal components.

CAUTION: To avoid damaging the components and cards, handle them by their edges, and avoid touching the pins and the contacts.

CAUTION: When you disconnect a cable, pull it by its connector or its pull tab, not the cable itself. Some cables have connectors with locking tabs or thumbscrews that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending the connector pins. When connecting cables, ensure that the connector on the cable is correctly oriented and aligned with the port.

CAUTION: Press and eject any installed card from the media-card reader.

Before working inside your computer

About this task

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Steps

1. Save and close all open files and exit all open applications.
2. Shut down your computer. For Windows operating system, click **Start** > **Power** > **Shut down**.

   NOTE: If you are using a different operating system, see the documentation of your operating system for instructions.
3. Turn off all the attached peripherals.
4. Disconnect your computer from the electrical outlet.
5. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.
6. Remove any media card and optical drive from your computer, if applicable.
7. To clean the air vents, use a soft brush and move vertically.

NOTE: Do not remove the base cover or use any blower to clean the vents.

8. Enter the Service Mode.

   Service Mode

   Service Mode is used to cut off power without disconnecting the battery cable from the system board before conducting repairs in the computer.

   NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

   NOTE: Ensure that your computer is shut down and the power adapter is disconnected.

   a. Press and hold the B key and the power button for three seconds, or until the Dell logo appears on the screen.
   b. If the **Owner Tag** is set, it is displayed on the screen. Press any key to continue.

      NOTE: If the **Owner Tag** information is not already set, the computer automatically skips this step and proceeds to enter Service Mode.

   c. If the power adapter is still connected, a message appears on the screen prompting you to disconnect it. Disconnect the power adapter, then press any key to continue.
   d. When the **System Ready For Service** message appears on the screen, press any key to proceed. The computer emits three short beeps and shuts down immediately.
      The computer shuts down and enters the Service Mode.

Safety precautions

This section details the primary steps to be followed before disassembling any device or component.

Observe the following safety precautions before any installation or break-fix procedures involving disassembly or reassembly:

- Turn off the computer and all attached peripherals.
- Disconnect the computer from AC power.
- Disconnect all network cables and peripherals from the computer.
- Use an ESD field service kit when working inside your computer to avoid electrostatic discharge (ESD) damage.
- Place the removed component on an anti-static mat after removing it from the computer.
- Press and hold the power button for 15 seconds to discharge the residual power in the system board.

Bonding

Bonding is a method for connecting two or more grounding conductors to the same electrical potential. This is done by using a field service electrostatic discharge (ESD) kit. When connecting a bonding wire, ensure that it is connected to bare metal and never to a painted or nonmetal surface. Ensure that the wrist strap is secure and in full contact with your skin. Remove all jewelry, watches, bracelets, or rings before grounding yourself and the equipment.

Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory modules, and system boards. A slight charge can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory module that has received a static shock and immediately generates a "No POST/No Video" symptom with a beep code that is emitted for missing or nonfunctional memory.
- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The memory module receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms that are related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, and so on.

Intermittent failures that are also called latent or "walking wounded" are difficult to detect and troubleshoot.

Perform the following steps to prevent ESD damage:

- Use a wired ESD wrist strap that is properly grounded. Wireless anti-static straps do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, use the anti-static wrist strap to discharge the static electricity from your body.

  NOTE: You can protect against ESD and discharge static electricity from your body by touching a metal-grounded object before you interact with anything electronic, for example, an unpainted metal surface on your computer's I/O panel. When connecting a peripheral (including handheld digital assistants) to your computer, you should always ground both yourself and the peripheral before connecting it to the computer. In addition, as you work inside the computer, periodically touch a metal-grounded object to remove any static charge that your body may have accumulated.

  For more information about the wrist strap and ESD wrist strap tester, see Components of an ESD Field Service Kit.
- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

ESD Field Service kit

The unmonitored field service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

CAUTION: It is critical to keep ESD-sensitive devices away from internal parts that are insulated and often highly charged, such as plastic heat sink casings.

Working environment

Before the ESD Field Service kit is deployed, conduct an evaluation of the site to ensure proper setup and readiness. For example, deploying the kit for a server environment is different than for a desktop or laptop environment. Servers are typically installed in a rack within a data center; desktops or laptops are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of computer that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components.

ESD packaging

All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged component using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the anti-static mat, in the computer, or inside an ESD bag.

Components of an ESD Field Service kit

The components of an ESD Field Service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the anti-static mat and to any bare metal on the computer being worked on. Once deployed properly, service parts can be removed from the ESD bag and placed directly on the anti-static mat. ESD-sensitive items are safe in your hand, on the anti-static mat, in the computer, or inside an ESD bag.
- **Wrist Strap and Bonding Wire** – If an anti-static mat is not being used, the wrist strap and bonding wire should be connected directly between your wrist and an exposed metal part of the hardware. If you are using an anti-static mat, connect the wrist strap and bonding wire to the anti-static mat to ensure protection for any hardware placed on the mat.

The physical connection of the wrist strap and bonding wire between your skin, the anti-static mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, anti-static mat, and bonding wire. Never use wireless wrist straps. Always be cautious that the internal wires of a wrist strap are prone to damage from normal wear and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.

- **ESD Wrist Strap Tester** – The wires inside an ESD strap are prone to damage over time. When using an unmonitored ESD kit, it is recommended to test the wrist strap regularly—ideally before each service session, and at a minimum, once per week. The most reliable method for testing is with a wrist strap tester. To perform the test, connect the bonding wire of the wrist strap to the tester while wearing the strap. Press the test button to initiate the check. A green LED indicates a successful test, while a red LED and audible alarm signal a failure.

NOTE: It is recommended to always use the traditional wired ESD grounding wrist strap and protective anti-static mat when servicing Dell products. In addition, it is critical to keep sensitive parts separate from all insulator parts while servicing the computer.

Transporting sensitive components

When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

After working inside your computer

About this task

CAUTION: Leaving stray or loose screws inside your computer may severely damage your computer.

Steps

1. Replace all screws and ensure that no stray screws remain inside your computer.
2. Connect any external devices, peripherals, or cables you removed before working on your computer.
3. Replace any media cards, disks, or any other parts that you removed before working on your computer.
4. Connect your computer to their electrical outlets.

   NOTE: To exit service mode, ensure to connect the AC adapter to the power-adapter port on your computer.

5. Press the power button to turn on the computer.

Information on repairability for Québec - From Dell Canada Inc. - to Quebec consumers

Dell does not guarantee the availability of replacement parts, repair services, or information necessary for maintenance or repair.

BitLocker

When updating the BIOS on a computer with BitLocker enabled, consider the following precautions.

CAUTION: If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result in data loss or an operating system reinstall. For more information, refer Updating the BIOS on Dell systems with BitLocker enabled.

The installation of the following components triggers BitLocker:

- Hard disk drive or solid state drive
- System board

Recommended tools

The procedures in this document may require the following tools:

- Phillips screwdriver #0
- Plastic scribe

Screw list

NOTE: When removing screws from a component, it is recommended to note the screw type and the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.

NOTE: Some computers have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.

NOTE: Screw color may vary depending on the configuration ordered.

Table 1. Screw list

Component	Screw type	Quantity	Screw torque strength	Screw image
Base cover	M2x4 (Captive screws)	6	2.55 kgf-cm to 3.45 kgf-cm	
Battery	M2x4 (Captive screws)	5	2.55 kgf-cm to 3.45 kgf-cm	
5G WWAN card	M2x2.5	1	1.6 kgf-cm	
4G WWAN card	M1.6x3.2	1	1.6 kgf-cm	
WLAN card	M2x3.5	1	1.6 kgf-cm	
Solid state drive M.2 2230	M2x2.5	3	1.6 kgf-cm	
Solid state drive M.2 2280	M2x2.5	2	1.6 kgf-cm	
Speaker	M2x2	4	1.6 kgf-cm	
Fan	M2x4	3	1.6 kgf-cm	
Smart-card reader	M1.6x1.7	4	1.0 kgf-cm	
Heat sink	M2x4 (Captive screws)	4	2.55 kgf-cm to 3.45 kgf-cm	
Display assembly	M2.5x3.5	6	1.6 kgf-cm	
System board	M2x2.5	6	1.6 kgf-cm	

Table 1. Screw list (continued)

Component	Screw type	Quantity	Screw torque strength	Screw image
USB Type-C connector module	M2x5	3	1.6 kgf-cm	
WLAN antenna module	M1.6x2.5	4	1.0 kgf-cm	
I/O-bridge board	M1.6x5.5	2	1.0 kgf-cm	
I/O board	M2x2.5	1	1.6 kgf-cm	
Power button	M1.6x1.5	1	1.6 kgf-cm	
Keyboard	• M2x2.2 • M1.6x2 • M1.4x1.2	• 2 • 3 • 17	• 1.6 kgf-cm • 1.0 kgf-cm	

Major components of Dell Pro 7 13 2-in-1 P703260

The following image shows the major components of Dell Pro 7 13 2-in-1 P703260.

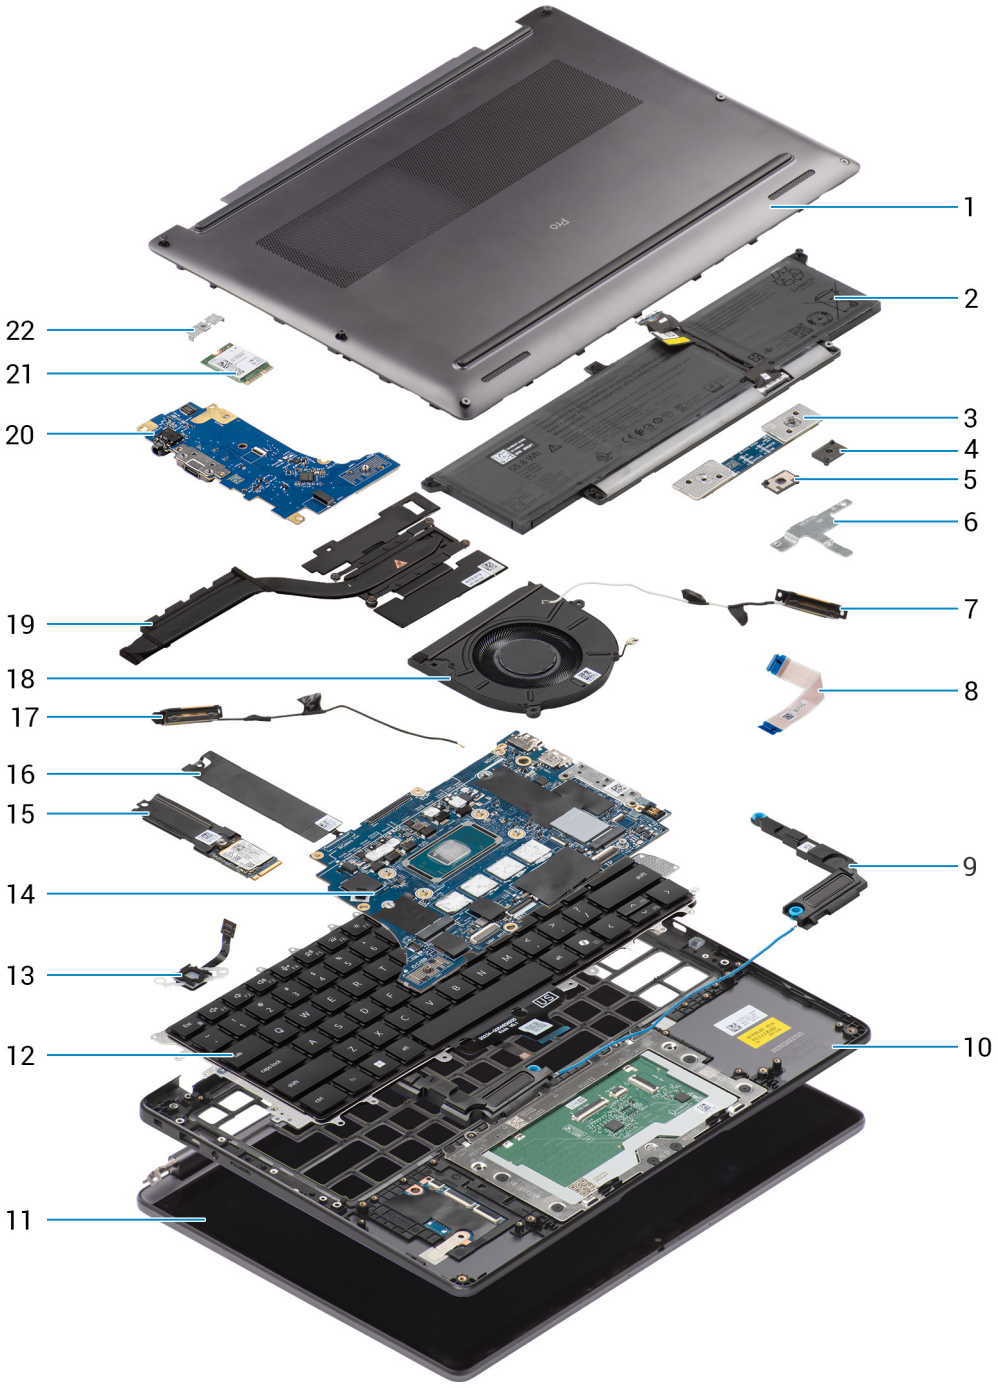


Figure 1. Major components of Dell Pro 7 13 2-in-1 P703260

1. Base cover
2. Battery
3. I/O-bridge board
4. I/O-bridge board interposer (to system board)
5. I/O-bridge board interposer (to I/O board)
6. I/O-board bracket
7. WLAN antenna module
8. Touchpad cable
9. Speakers
10. Palm-rest assembly
11. Display assembly

12. Keyboard
13. Power button with optional finger print reader
14. System board
15. Solid state drive
16. Solid state drive shield
17. WLAN-antenna module
18. Fan
19. Heat sink
20. I/O board
21. WLAN card
22. WLAN-card bracket

NOTE: Dell provides a list of components and their part numbers for the original computer configuration purchased. These parts are available depending on the warranty coverage that is selected at the time of purchase. Components from upsell or upgraded variants may not be covered under the standard system warranty. For more details or to explore purchase options, contact your Dell sales representative.

Customer Replaceable Units (CRUs) and Field Replaceable Units (FRUs) list

The replaceable components in Dell Pro 7 13 2-in-1 P703260 are either Customer Replaceable Units (CRUs) or Field Replaceable Units (FRUs).

CAUTION: To avoid any potential damage to the component or loss of data, ensure that an authorized service technician replaces the Field Replaceable Units (FRUs). Customers can replace only the Customer Replaceable Units (CRUs) following the safety precautions and replacement procedures.

Table 2. CRU and FRU list

Customer Replaceable Unit (CRU)	Field Replaceable Unit (FRU)
Base cover	USH-board cable
Battery and battery cable	Smart-card reader
Wireless Wide Area Network (WWAN) card and WWAN thermal shield	Heat sink
Wireless Local Area Network (WLAN) card and WLAN-card bracket	Display assembly
Fan	System board
Speakers	USB Type-C connector module
Solid state drive (SSD) and SSD thermal shield	Wireless Local Area Network (WLAN) antenna modules
SSD holder (for M.2 2230 SSD)	I/O-bridge board
nano-SIM card tray (optional)	I/O board
	Power button with fingerprint reader
	Power button (without fingerprint reader)
	Touchpad cable
	Keyboard
	Nano-SIM card slot dummy filler
	Palm-rest assembly

2

Removing and installing Customer Replaceable Units (CRUs)

The replaceable components in this chapter are Customer Replaceable Units (CRUs).

CAUTION: CRUs may be replaced by the customer, following the safety precautions and replacement procedures.

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Nano-SIM card tray (optional)

Removing the nano-SIM card tray

Prerequisites

1. Follow the procedure in Before working inside your computer.

NOTE: This procedure is applicable only if your computer is shipped with a WWAN module.

CAUTION: Removing the SIM card when the computer is turned on can cause data loss or damage to the card. Ensure that your computer is turned off or the network connections are disabled.

About this task

The following images indicate the location of the nano-SIM card tray and provide a visual representation of the removal procedure.

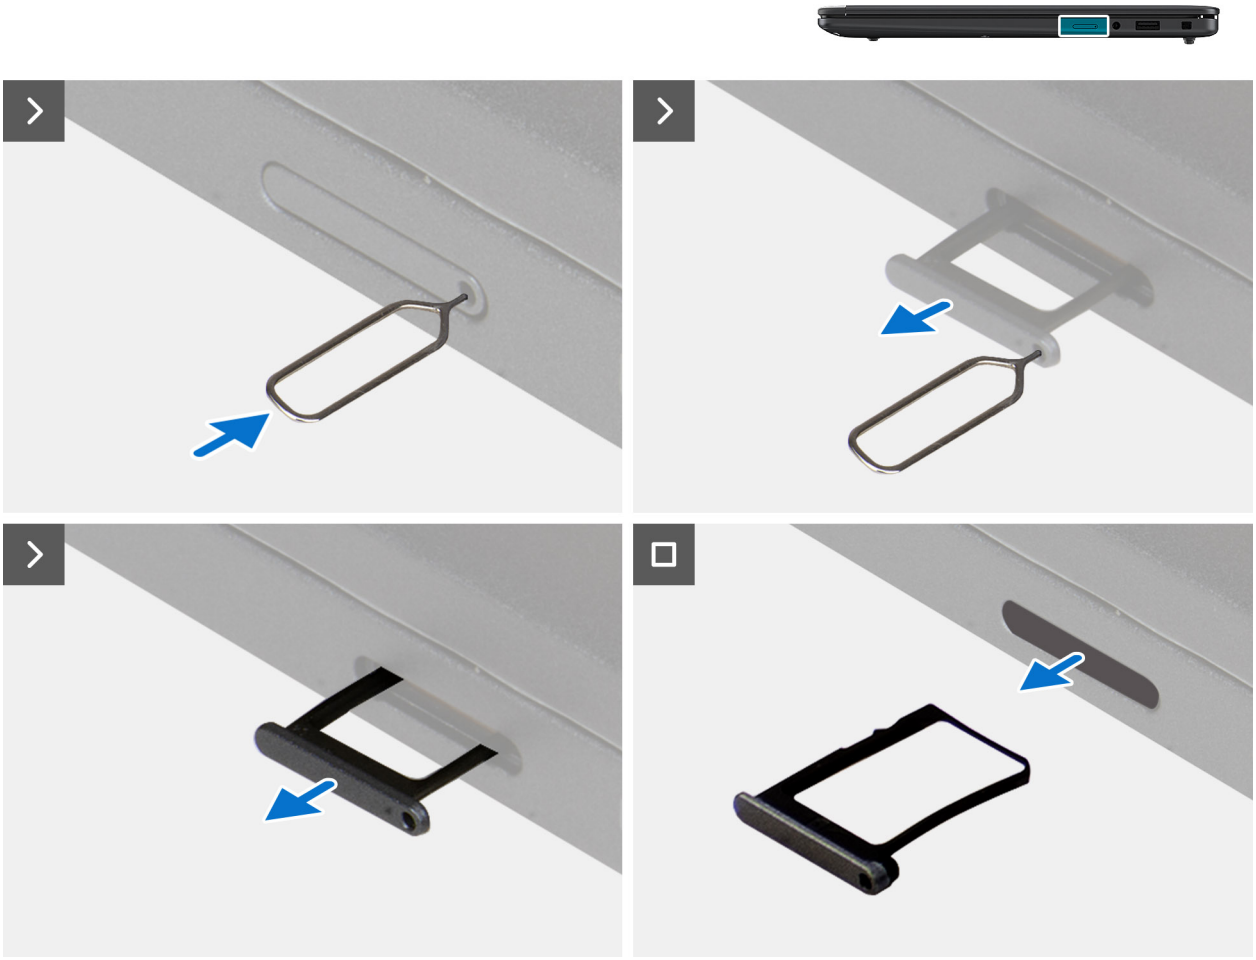


Figure 2. Removing the nano-SIM card tray

Steps

1. Insert a SIM-ejector pin into the release hole to release the nano-SIM card tray.
2. Push the SIM-ejector pin to disengage the lock, and eject the nano-SIM card tray.
3. Slide the nano-SIM card tray out of the slot on the computer.

Installing the nano-SIM card tray

Prerequisites

NOTE: This procedure is applicable only if your computer is shipped with a WWAN module.

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the nano-SIM card tray and provide a visual representation of the installation procedure.

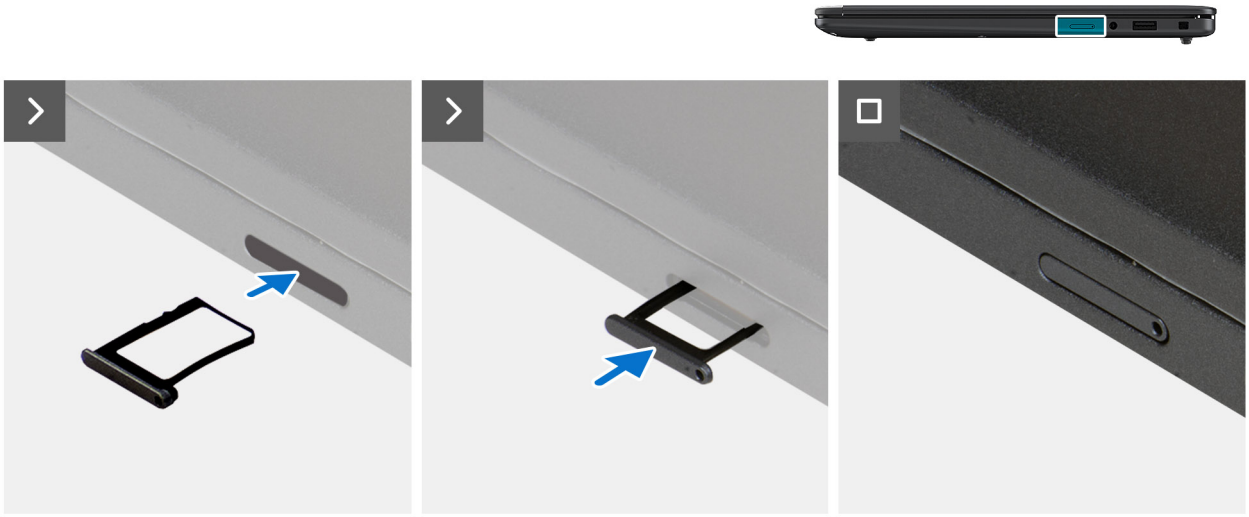


Figure 3. Installing the nano-SIM card tray

Steps

1. Align the nano-SIM card tray with the slot on the computer and carefully slide it in.
2. Slide the nano-SIM card tray into the slot, until it clicks into place.

Next steps

1. Follow the procedure in After working inside your computer.

Base cover

Removing the base cover

Prerequisites

1. Follow the procedure in Before working inside your computer.

   CAUTION: If you are unable to enter Service Mode, peel off the tape and disconnect the battery cable from the battery-cable connector (BATT1) on the system board.

2. Remove the nano-SIM card tray, if applicable.

About this task

The following images indicate the location of the base cover and provide a visual representation of the removal procedure.



Figure 4. Removing the base cover

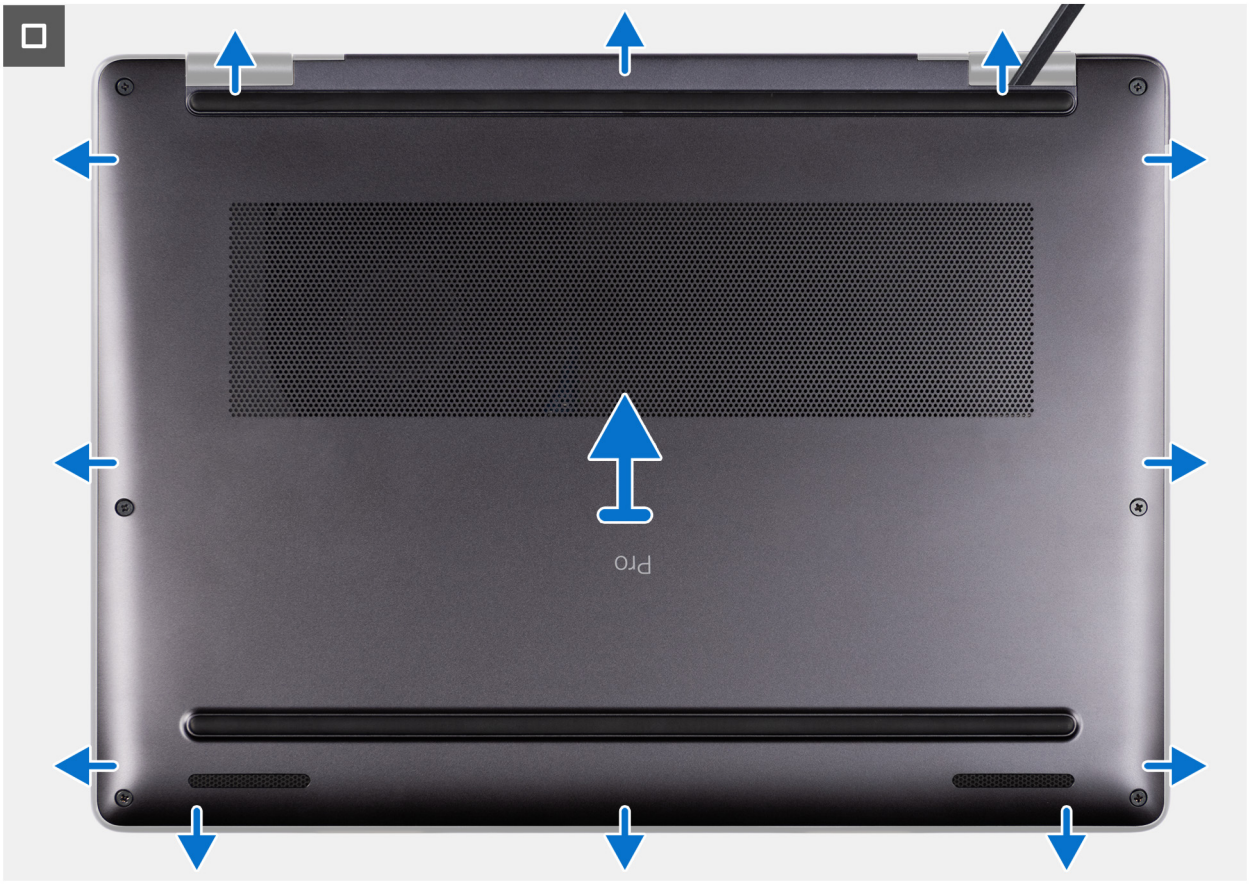


Figure 5. Removing the base cover

Steps

1. Loosen the two captive screws (M2.5x7) that secure the base cover to the palm-rest assembly.
2. Loosen the four captive screws (M2.5x5) that secure the base cover to the palm-rest assembly.
3. Using a plastic scribe, pry open the base cover from the recesses that are located in the U-shaped indents at the top edge of the base cover near the hinges.
4. Lift the base cover off the palm-rest assembly.

NOTE:

If you are unable to enter Service Mode, peel off the tape and disconnect the battery cable from the battery-cable connector (BATT1) on the system board.

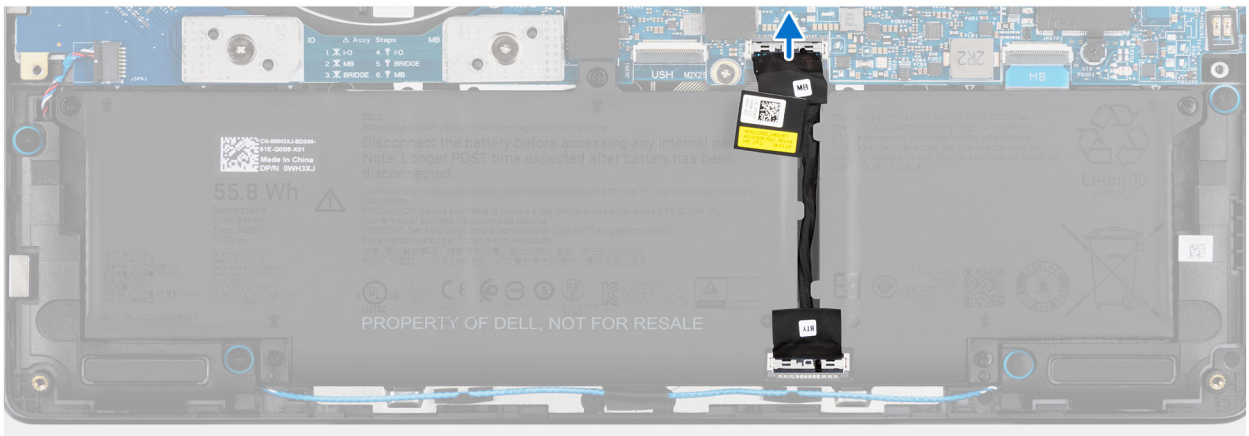


Figure 6. Disconnecting the battery cable

5. Press and hold the power button for five seconds to ground the computer and drain the flea power.

Installing the base cover

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the base cover and provide a visual representation of the installation procedure.

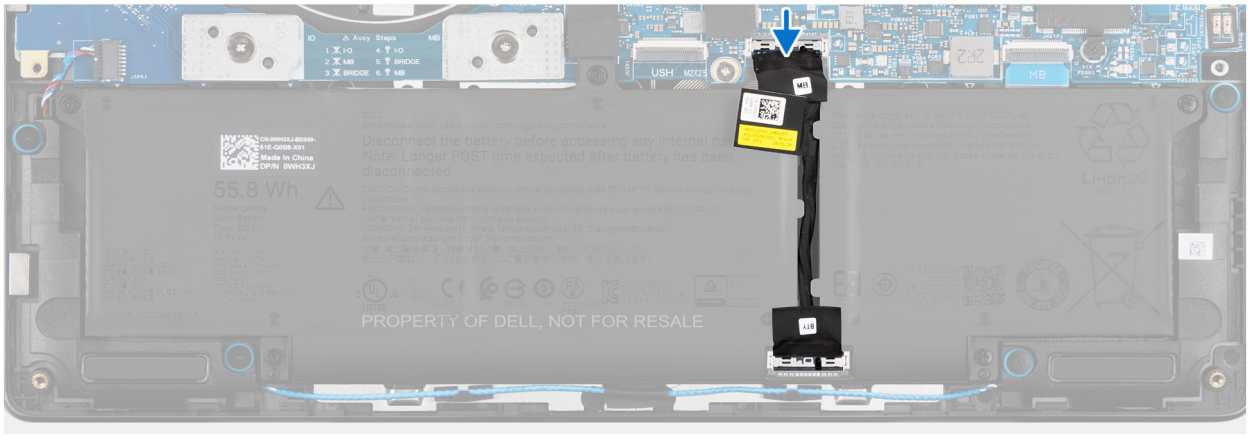


Figure 7. Connecting the battery cable

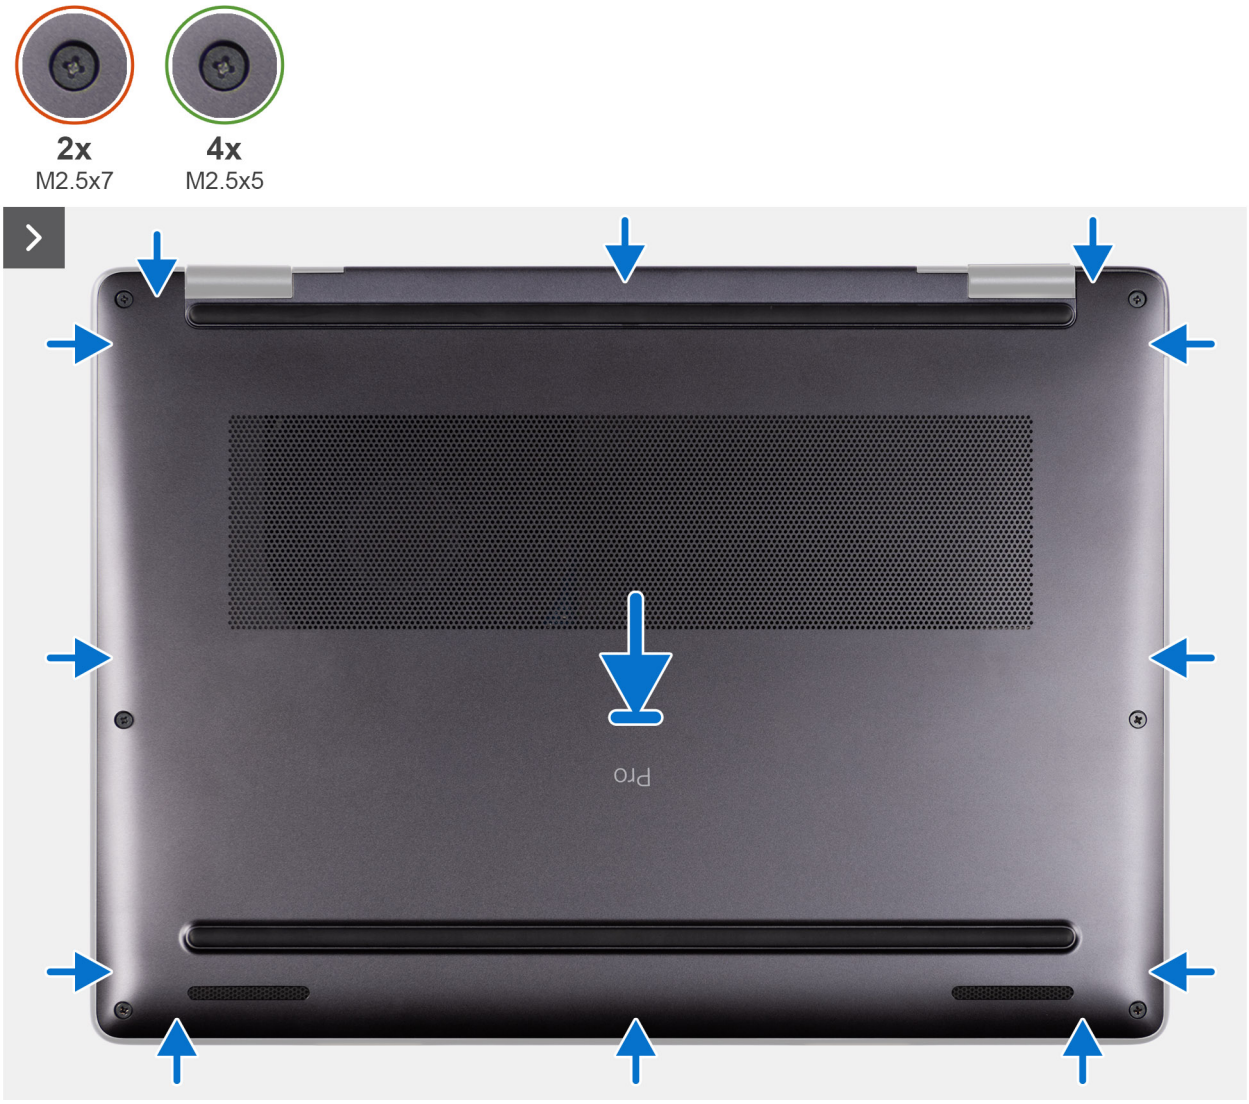


Figure 8. Installing the base cover



Figure 9. Installing the base cover

NOTE: If the battery is not a pre-requisite and if you have disconnected the battery cable, ensure to connect the battery cable. To connect the battery cable, follow step 1 in the procedure.

Steps

1. Connect the battery cable to the battery-cable connector (BATT1) on the system board.
2. Adhere the tape on the battery cable to the battery.
3. Align the screw holes on the base cover with the screw holes on the palm-rest assembly, and then snap the base cover into place.
4. Tighten the two captive screws (M2.5x7) that secure the base cover to the palm-rest assembly.
5. Tighten the four captive screws (M2.5x5) that secure the base cover to the palm-rest assembly.

Next steps

1. Install the nano-SIM card tray, if applicable.
2. Follow the procedure in After working inside your computer.

NOTE: Ensure that your computer is in Service Mode. For more information, see Before working inside your computer.

Battery

Rechargeable Li-ion battery precautions

CAUTION:

- **Exercise caution when handling rechargeable Li-ion batteries.**

- **Discharge the battery completely before removing it. Disconnect the AC power adapter from the computer and operate the computer solely on battery power—the battery is fully discharged when the computer no longer turns on when the power button is pressed.**
- **Do not crush, drop, mutilate, or penetrate the battery with foreign objects.**
- **Do not expose the battery to high temperatures, or disassemble battery packs and cells.**
- **Do not apply pressure to the surface of the battery.**
- **Do not bend the battery.**
- **Do not use tools of any kind to pry on or against the battery.**
- **To prevent accidental puncture or damage to the battery and other components, ensure that no screws are lost or misplaced during the servicing of the computer.**
- **Always purchase genuine batteries from Dell Support Site or authorized Dell partners and resellers.**
- **Swollen batteries should not be used and should be replaced and disposed properly. For guidelines on how to handle and replace swollen rechargeable Li-ion batteries, see Handling swollen rechargeable Li-ion batteries.**

Removing the battery

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.

About this task

CAUTION: Removing the battery resets the BIOS setup settings to default. It is recommended that you note the BIOS setup settings before removing the battery.

The following images indicate the location of the battery and provide a visual representation of the removal procedure.

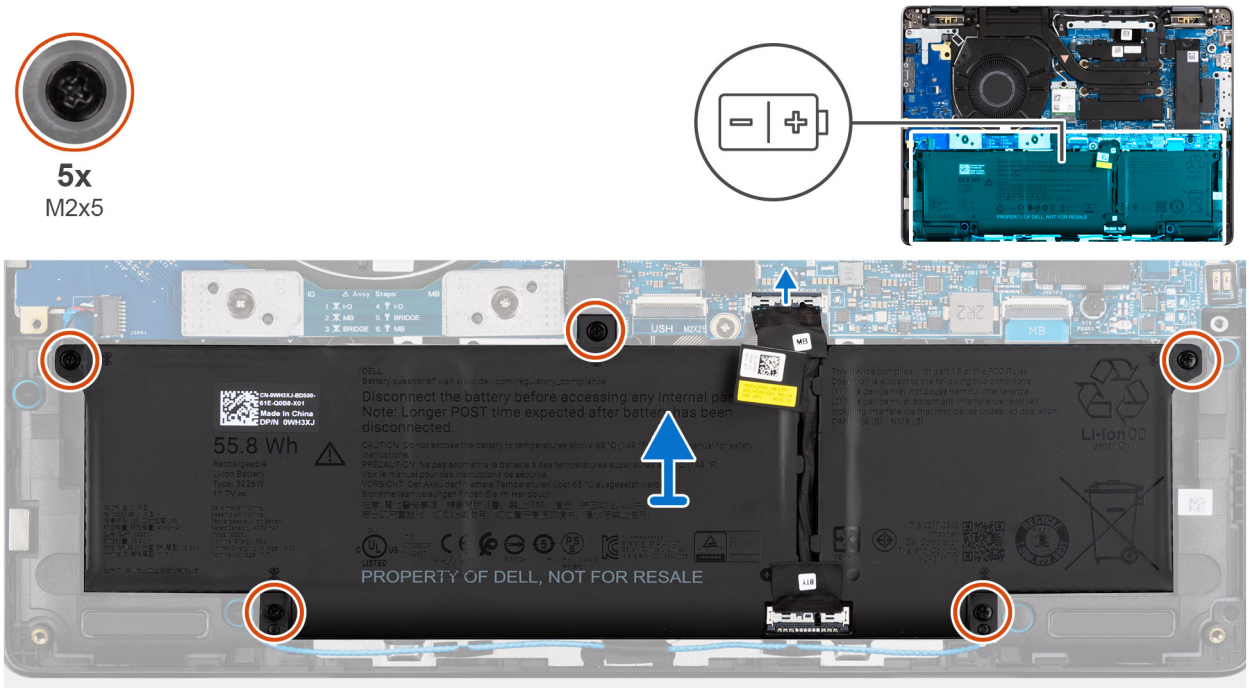


Figure 10. Removing the battery

Steps

1. Disconnect the battery cable from the battery cable connector (BATT1) on the system board (if not disconnected earlier).

NOTE: The tab on the battery is part of the covering, not a pull tab pulling it may tear and expose wires. Use caution when disconnecting the cable at either end to avoid damage.

2. Loosen the five captive screws (M2x5) that secure the battery to the palm-rest assembly.
3. Lift the battery off the palm-rest assembly.
4. If you are replacing the battery, remove the battery cable to transfer it to the replacement battery. For more information, see Removing the battery cable.

Installing the battery

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the battery and provide a visual representation of the installation procedure.

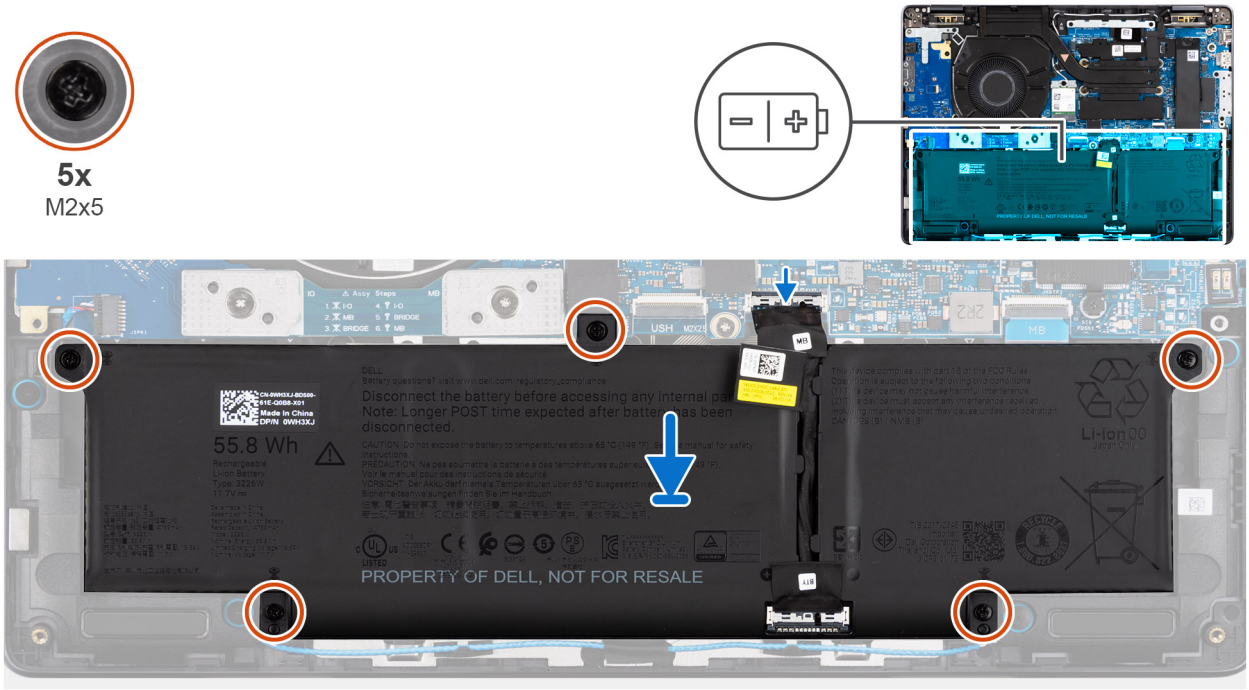


Figure 11. Installing the battery

Steps

1. If the battery cable was removed for replacing the battery, you must transfer the battery cable from the old battery to the replacement battery. For more information, see Installing the battery cable.
2. Using the alignment posts, place the battery on the palm-rest assembly.
3. Align the screw holes on the battery with the screw holes on the palm-rest assembly.
4. Tighten the five captive screws (M2x5) that secure the battery to the palm-rest assembly.

Next steps

1. Install the base cover.
2. Install the nano-SIM card tray, if applicable.
3. Follow the procedure in After working inside your computer.

Battery cable

Removing the battery cable

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.

About this task

The following images indicate the location of the battery cable and provide a visual representation of the removal procedure.

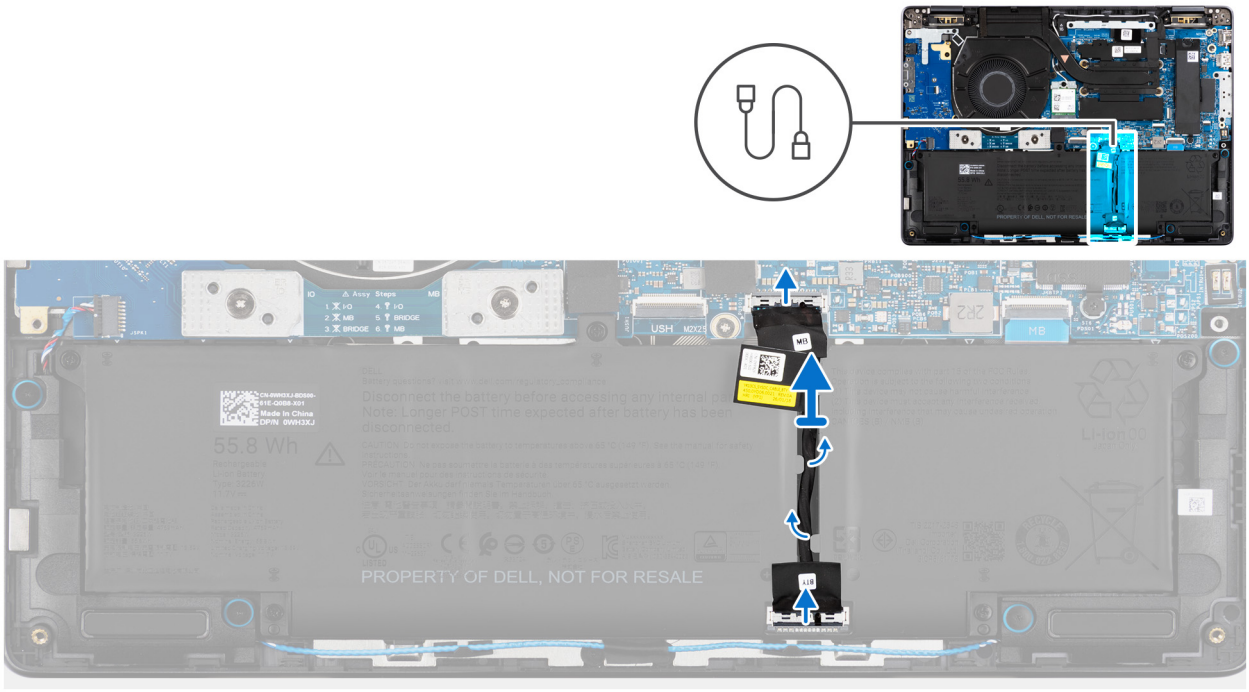


Figure 12. Removing the battery cable

Steps

1. Remove the battery cable from the routing guides on the battery.
2. Lift the connector up vertically to disconnect the battery cable from the battery.

NOTE: The tab on the battery is part of the covering, not a pull tab pulling it may tear and expose wires. Use caution when disconnecting the cable at either end to avoid damage.

Installing the battery cable

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the battery cable and provide a visual representation of the installation procedure.

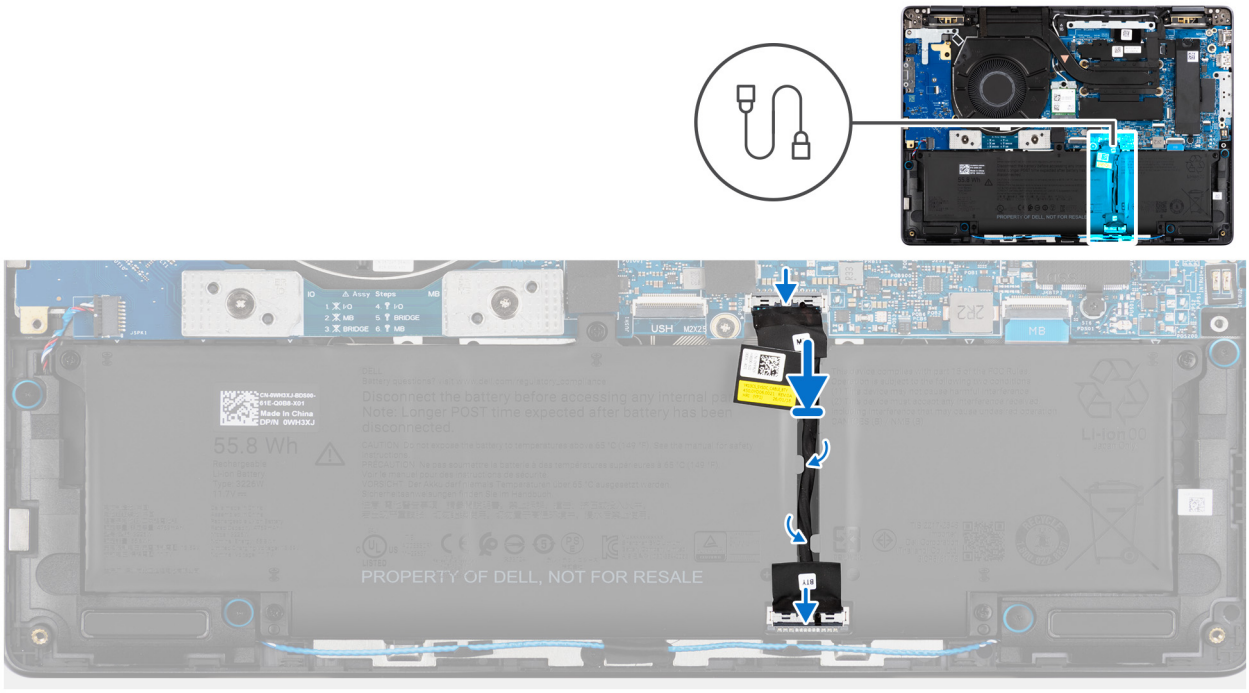


Figure 13. Installing the battery cable

Steps

1. Align the connector and press it vertically down to connect the battery cable to the battery.
2. Route the battery cable along the routing guides on the battery.

NOTE: When installing the battery cable, ensure that the cable is properly routed under the routing guides.

Next steps

1. Install the base cover.
2. Install the nano-SIM card tray, if applicable.
3. Follow the procedure in After working inside your computer.

Wireless Wide Area Network (WWAN) card

Removing the 5G WWAN card

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.

About this task

NOTE: The 5G WWAN card is available only on certain configurations. It is connected to the computer with four antenna cables.

The following images indicate the location of the 5G WWAN card and provide a visual representation of the removal procedure.

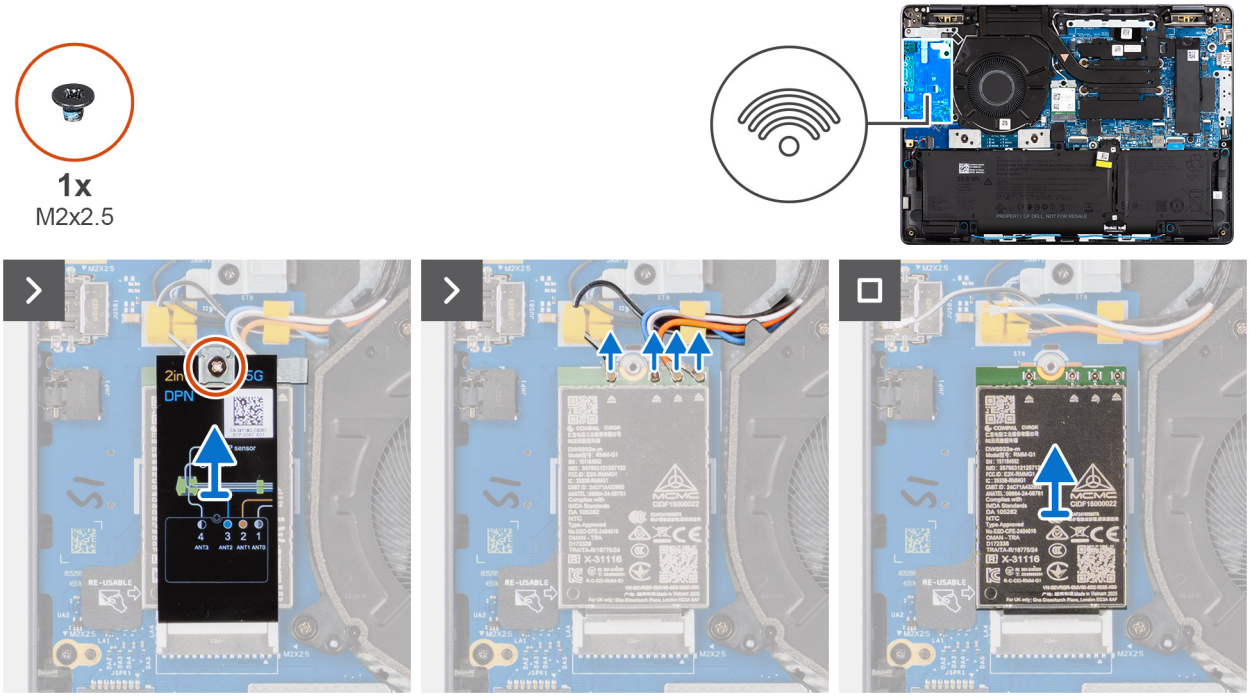


Figure 14. Removing the 5G WWAN card

Steps

1. Remove the screw (M2x2.5) that secure the 5G WWAN-card bracket to the 5G WWAN card.
2. Lift the WWAN-card shield off the WWAN card.
3. Disconnect the four antenna cables from the 5G WWAN card.
4. Slide and remove the 5G WWAN card off the 5G WWAN-card slot (JWWAN1) on the I/O board.

NOTE: If you are replacing the 5G WWAN card, ensure that the thermal pad is in place.

NOTE: If you are replacing the system board, ensure to transfer the thermal pad from the old system board to the new system board. If the thermal pad is damaged, peel the thermal pad from the system board and replace it with a new thermal pad.

Installing the 5G WWAN card

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

NOTE: The 5G WWAN card is available only on certain configurations. It is connected to the computer with four antenna cables.

The following images indicate the location of the 5G WWAN card and provide a visual representation of the installation procedure.

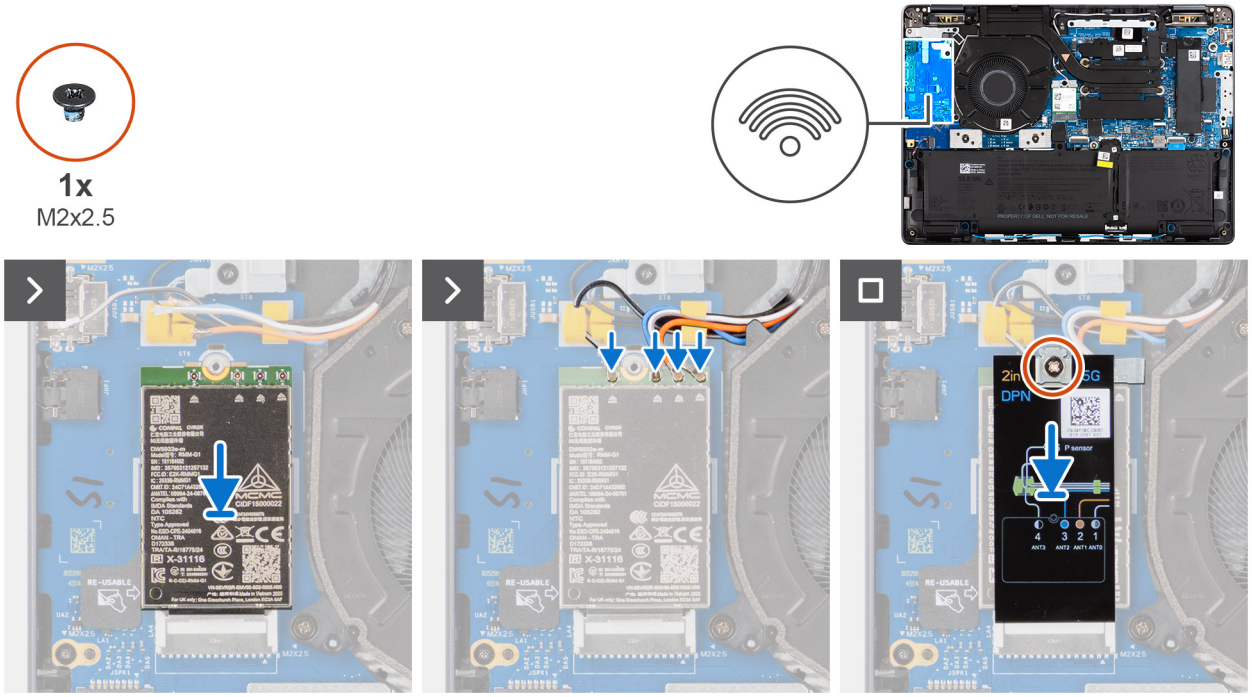


Figure 15. Removing the 5G WWAN card

Steps

1. Align the notch on the 5G WWAN card with the tab on the I/O board.

   NOTE: If you are replacing the 5G WWAN card, ensure that the thermal pad is in place.

   NOTE: If you are replacing the system board, ensure to peel the thermal pad from the old system board to the new system board.

   NOTE: If the thermal pad is damaged, peel the thermal pad from the system board and replace it with a new thermal pad.

2. Connect the antenna cables to the 5G WWAN card.

   The following table provides the antenna-cable color scheme for the 5G WWAN card that is supported on your computer.

Table 3. Antenna-cable color scheme for 5G WWAN cards

Connectors on the WWAN card	Antenna-cable color	Silkscreen marking	
D/G	Black with a thin white stripe	ANT3 D/G	△ (white triangle)
M2	Blue	ANT2 M2	△ (white triangle)
M1	Orange	ANT1 M1	△ (white triangle)
M	White with a thin gray stripe	ANT0 M	△ (white triangle)

3. Insert the 5G WWAN card at an angle into the 5G WWAN-card slot.
4. Align the notch on the 5G WWAN card with the tab on the 5G WWAN-card slot (JWWAN1).
5. Replace the screw (M2x2.5) that secure the WWAN-card shield to the WWAN card.

Next steps

1. Install the base cover.
2. Install the nano-SIM card tray, if applicable.
3. Follow the procedure in After working inside your computer.

Removing the 4G WWAN card

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.

About this task

The following images indicate the location of the 4G WWAN card and provide a visual representation of the removal procedure.

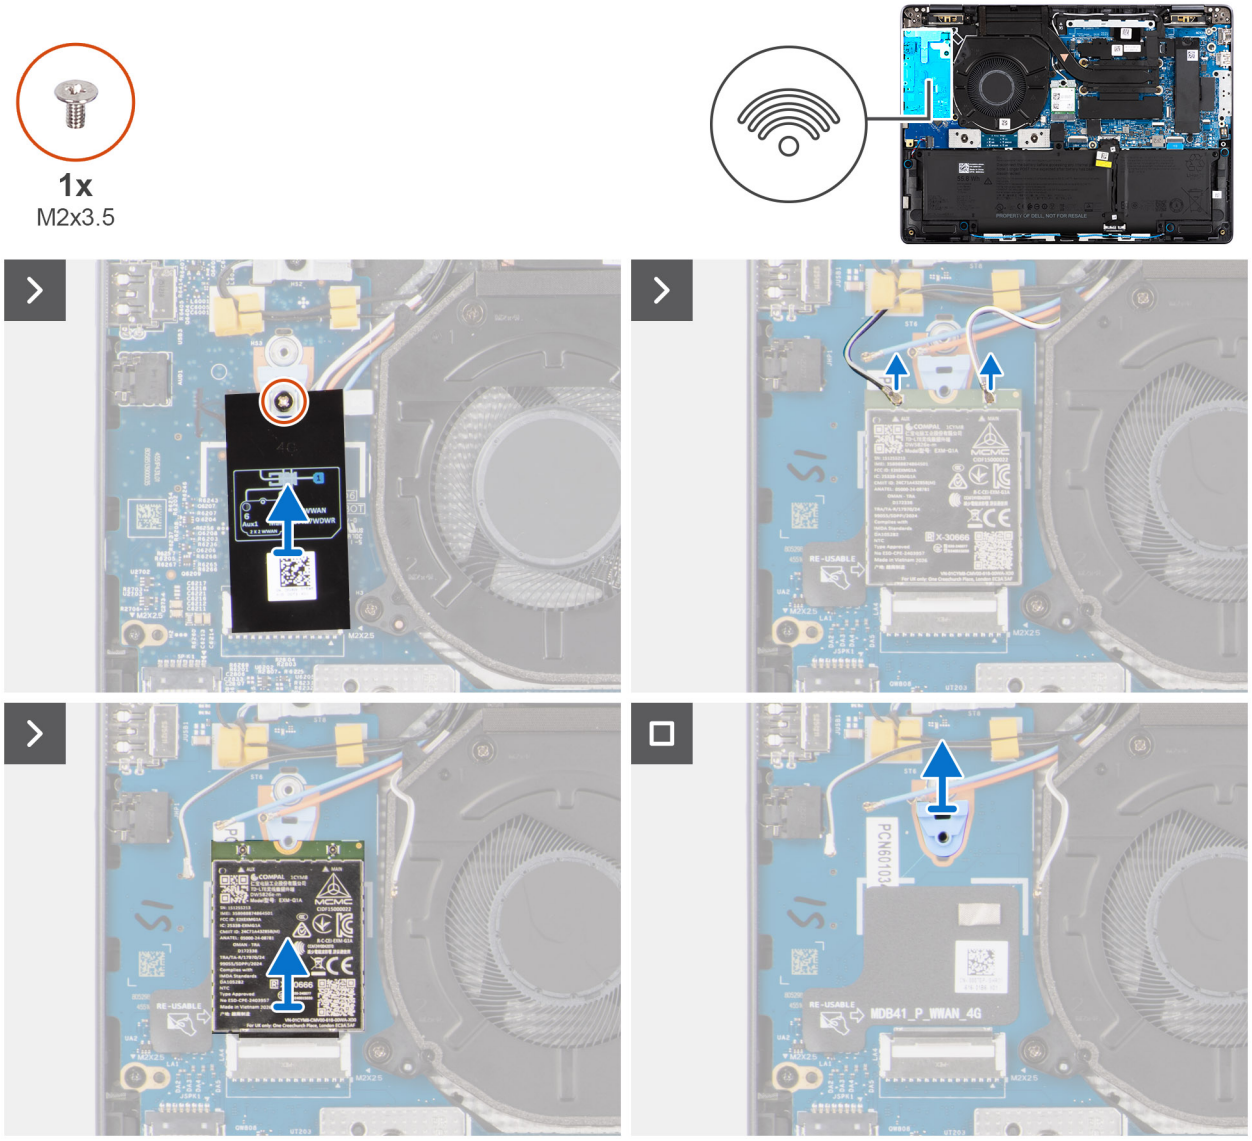


Figure 16. Removing the 4G WWAN card

Steps

1. Loosen the screw (M2x3.5) that secures the WWAN-card bracket.
2. Disconnect the two antenna cables from the WWAN card.
3. Remove the WWAN card from the WWAN-card slot on the I/O board.

Installing the 4G WWAN card

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the 4G WWAN card and provide a visual representation of the installation procedure.

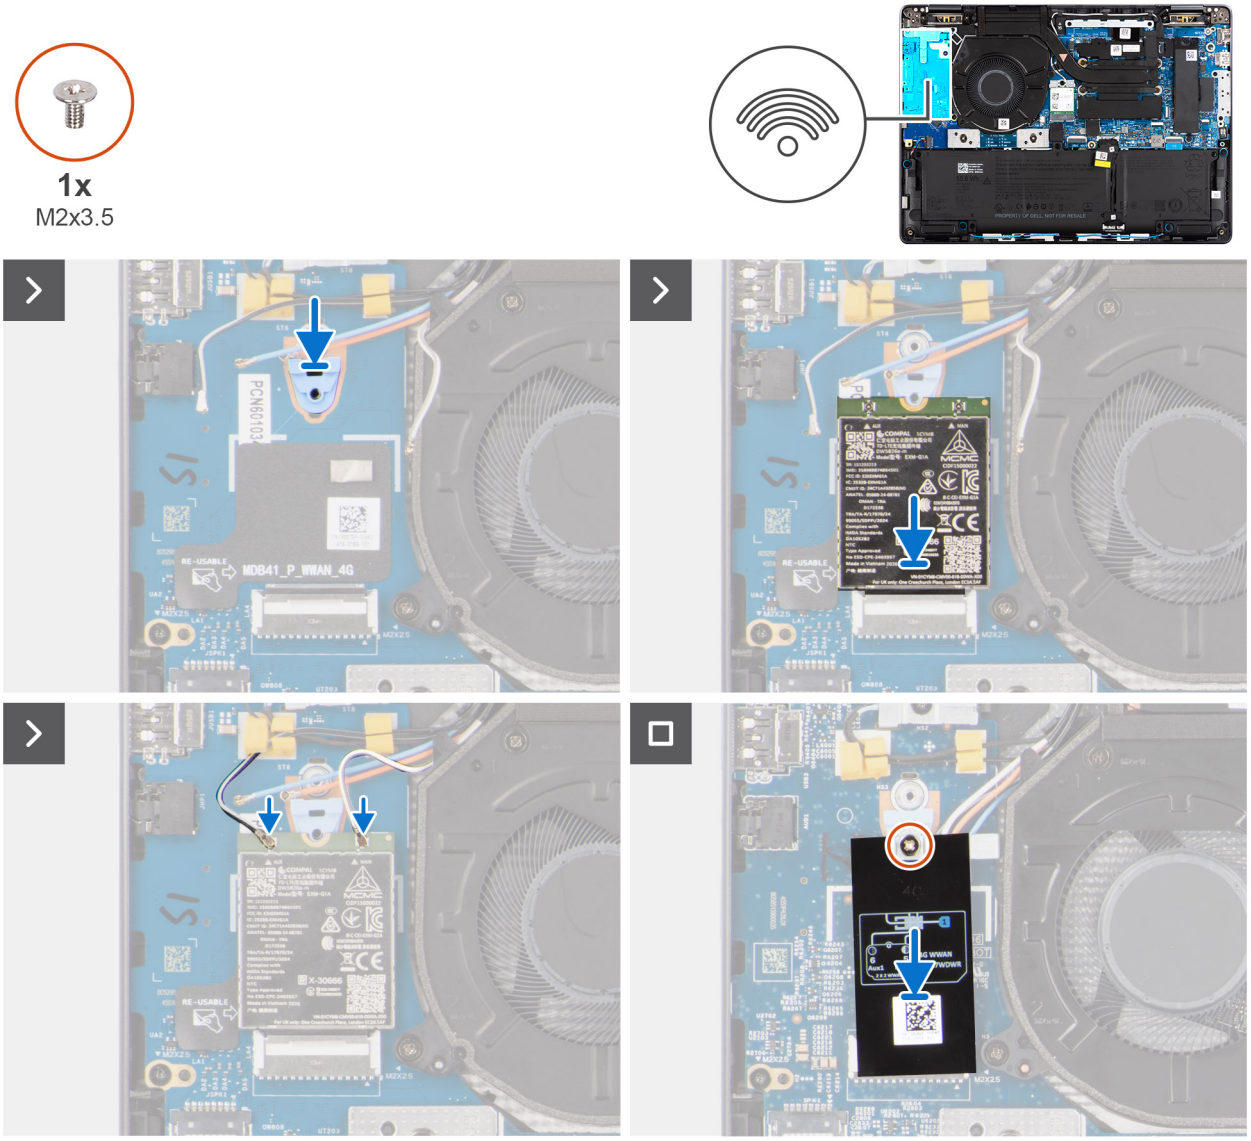


Figure 17. Installing the 4G WWAN card

Steps

1. Insert the WWAN card at an angle into the WWAN-card slot on the I/O board.
2. Connect the antenna cables to their respective connectors on the WWAN card.

   The following table provides the antenna-cable color scheme for the WWAN card that is supported on your computer.

Table 4. Antenna-cable color scheme for 4G WWAN card

Connectors on the WWAN card	Antenna-cable color
6 Aux1	Black with a thin gray stripe

Table 4. Antenna-cable color scheme for 4G WWAN card (continued)

Connectors on the WWAN card	Antenna-cable color
5 Main	White with a thin gray stripe

3. Replace the screw (M2x3.5) that secures the WWAN-card thermal shield to the I/O board.

Next steps

1. Install the base cover.
2. Install the nano-SIM card tray, if applicable.
3. Follow the procedure in After working inside your computer.

Wireless Local Area Network (WLAN) card

Removing the WLAN card

Prerequisites

1. Follow the procedure in before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.

About this task

The following image indicates the location of the WLAN card and provides a visual representation of the removal procedure.

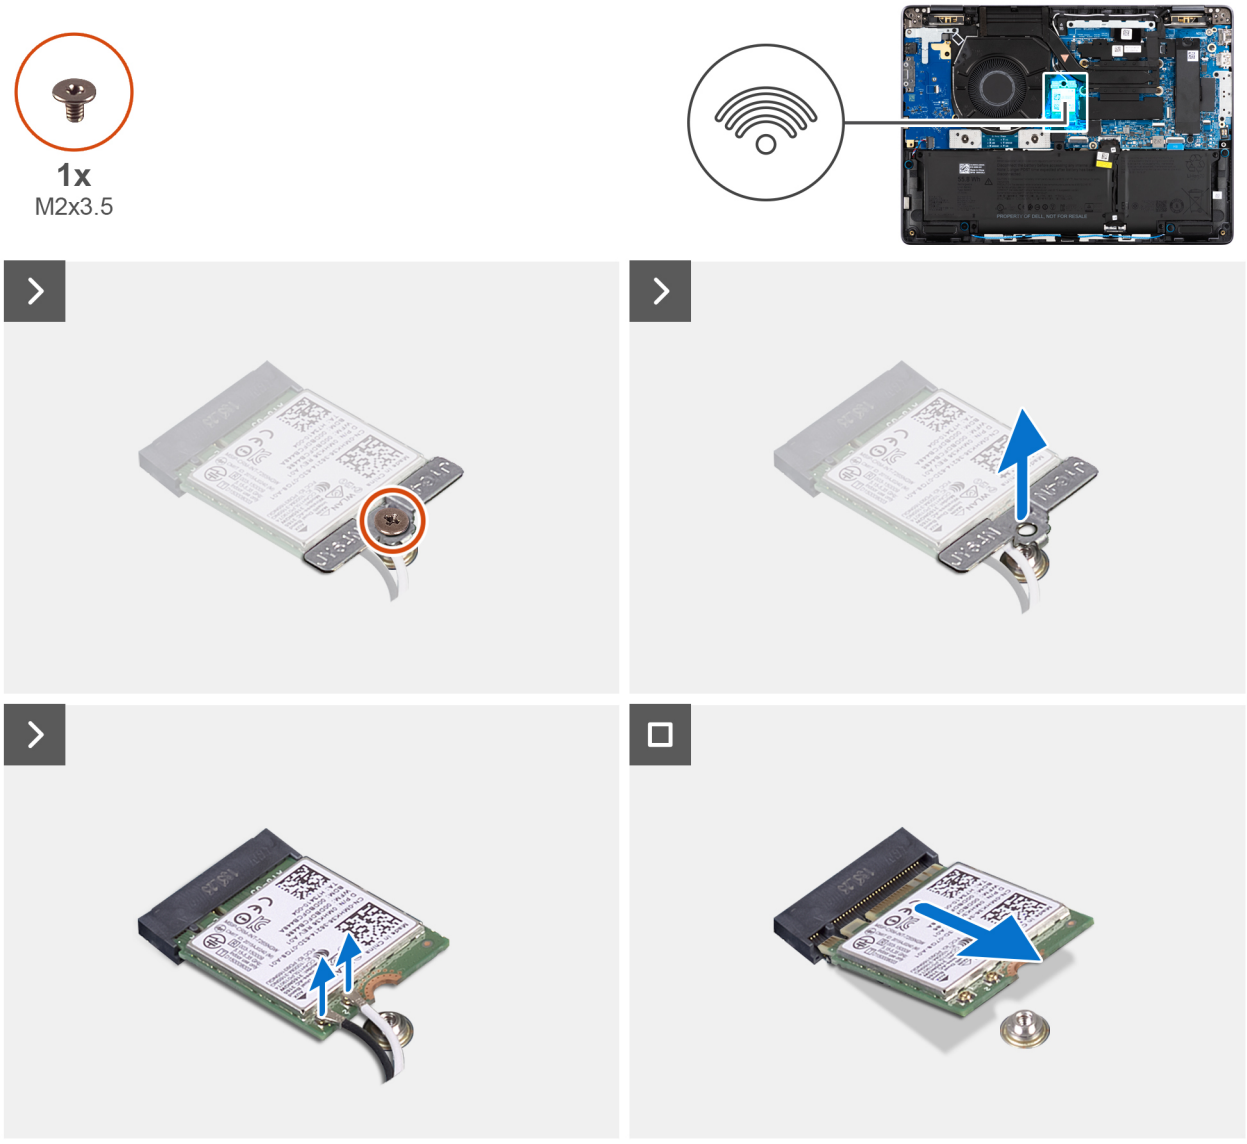


Figure 18. Removing the WLAN card

Steps

1. Remove the screw (M2x3.5) that secures the wireless-card bracket to the system board.
2. Lift the wireless-card bracket from the WLAN card.
3. Disconnect the WLAN antenna cables from the WLAN card.
4. Slide and remove the WLAN card at an angle from the wireless-card slot.

Installing the WLAN card

About this task

The following image indicates the location of the WLAN card and provides a visual representation of the install procedure.

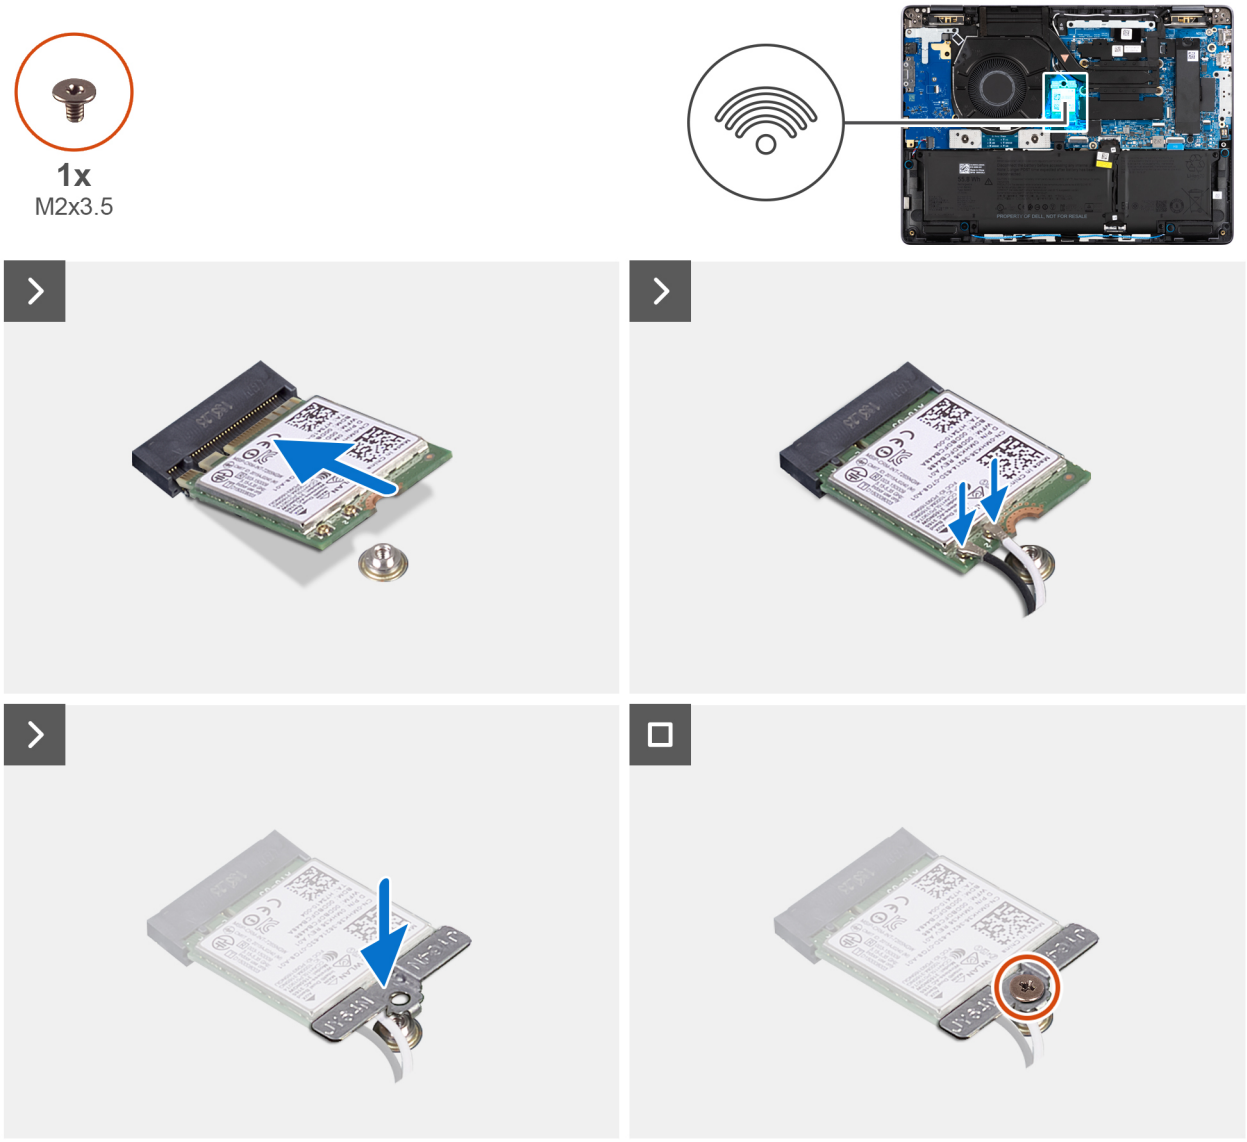


Figure 19. Installing the WLAN card

Steps

1. Align the notch on the WLAN card with the tab on the wireless-card slot.
2. Connect the WLAN-antenna cables to the respective connectors on the WLAN card.

Table 5. WLAN-antenna cable color scheme

Connectors on the WLAN card	Antenna-cable color
Main - White triangle (△)	White cable
Auxiliary - Solid triangle (▲)	Black cable

3. Slide the WLAN card at an angle into the WLAN-card slot.
4. Align and place the WLAN-card bracket on the WLAN card.
5. Align the screw hole on the WLAN-card bracket with the screw hole on the system board.
6. Replace the screw (M2x3.5) that secures the WLAN-card bracket and the WLAN card to the system board.

Next steps

1. Install the base cover.

2. Install the nano-SIM card tray, if applicable.
3. Follow the procedure in After working inside your computer.

Solid State Drive (SSD)

Removing the M.2 2230 SSD

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.

About this task

The following images indicate the location of the M.2 2230 SSD and provide a visual representation of the removal procedure.

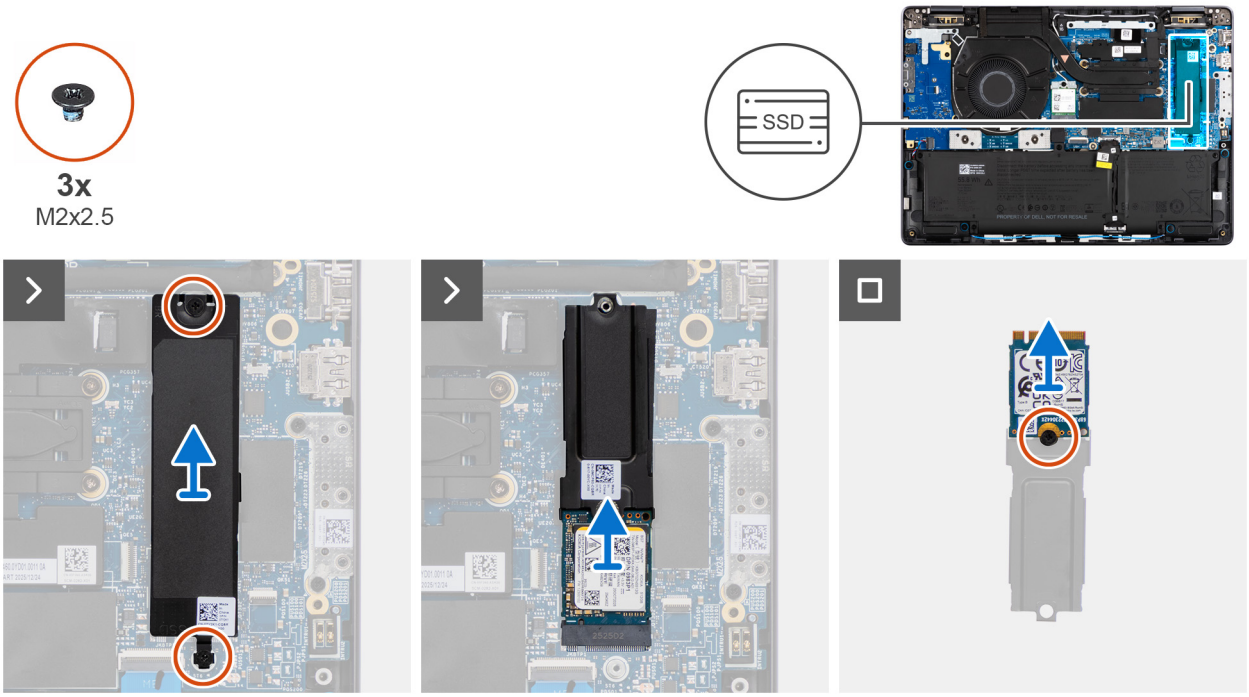


Figure 20. Removing the M.2 2230 SSD

Steps

1. Remove the two screws (M2x2.5) that secure the SSD thermal shield to the system board.
2. Lift the SSD thermal shield off the SSD.

   NOTE: If the thermal pads get separated from the shielding cover or gets adhered to the SSD while replacing the SSD, they must be adhered back to the SSD cover before reinstalling it to the computer.

3. Lift and slide the M.2 2230 SSD assembly out of the M.2 card slot (SSD1) on the right I/O board.
4. Slide and remove the SSD from the SSD slot.

   NOTE: For models shipped with M.2 2230 SSD, ensure that the SSD screw holder is transferred when the system board is removed or replaced.

Installing the M.2 2230 SSD

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the M.2 2230 SSD and provide a visual representation of the installation procedure.

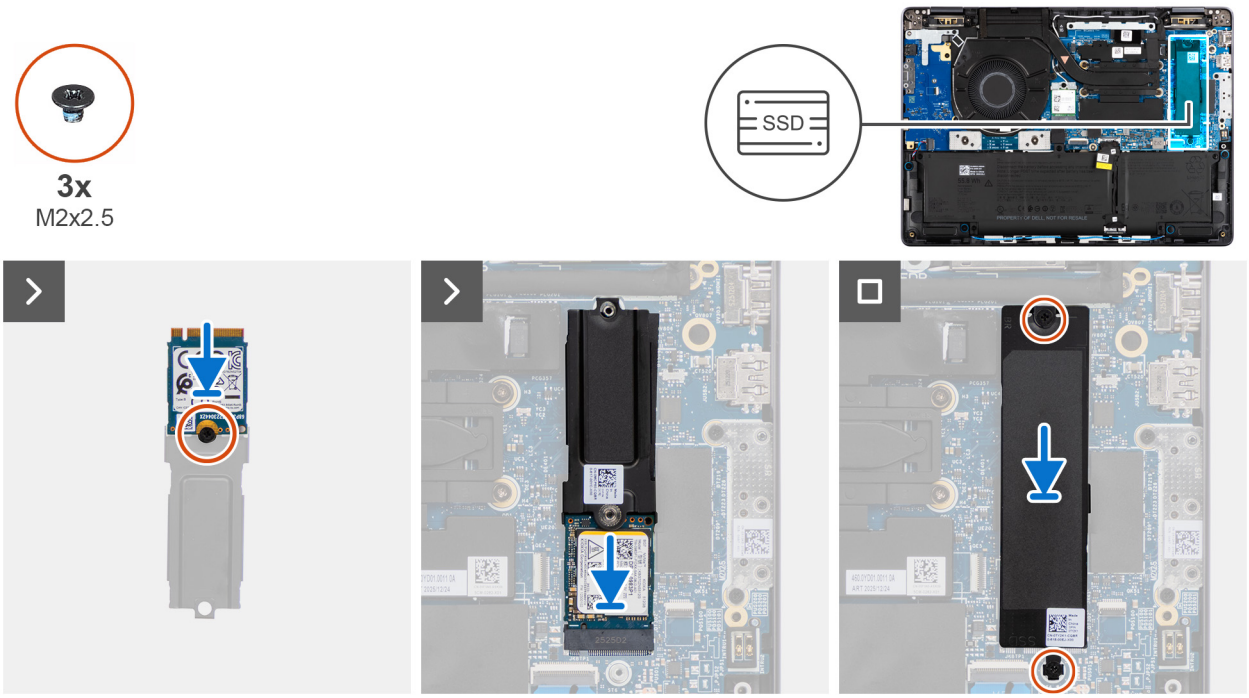


Figure 21. Installing the M.2 2230 SSD

Steps

1. Place the M.2 2230 solid state drive on the M.2 2230 bracket.

   NOTE: For models shipped with M.2 2230 SSD, ensure that the SSD screw holder is transferred when the system board is removed or replaced.

2. Align the screw hole on the M.2 2230 solid state drive with the screw hole on the SSD holder.
3. Replace the screw (M2x2.5) that secures the M.2 2230 SSD (SSD1) to the M.2 SSD holder.
4. Align the notch on the M.2 2230 SSD to the tab on the M.2 card slot (SSD1) on the I/O board.
5. Slide the M.2 2230 SSD at an angle into the M.2 card slot (SSD1) on the right I/O board.
6. Align and place the SSD thermal shield over the M.2 2230 SSD.
7. Replace the screw (M2x2.5) that secures the M.2 SSD thermal shield to the right I/O board.

Next steps

1. Install the base cover.
2. Install the nano-SIM card tray, if applicable.
3. Follow the procedure in After working inside your computer.

Removing the M.2 2280 SSD

Prerequisites

1. Follow the procedure in Before working inside your computer.

2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.

About this task

The following images indicate the location of the M.2 2280 SSD and provide a visual representation of the removal procedure.

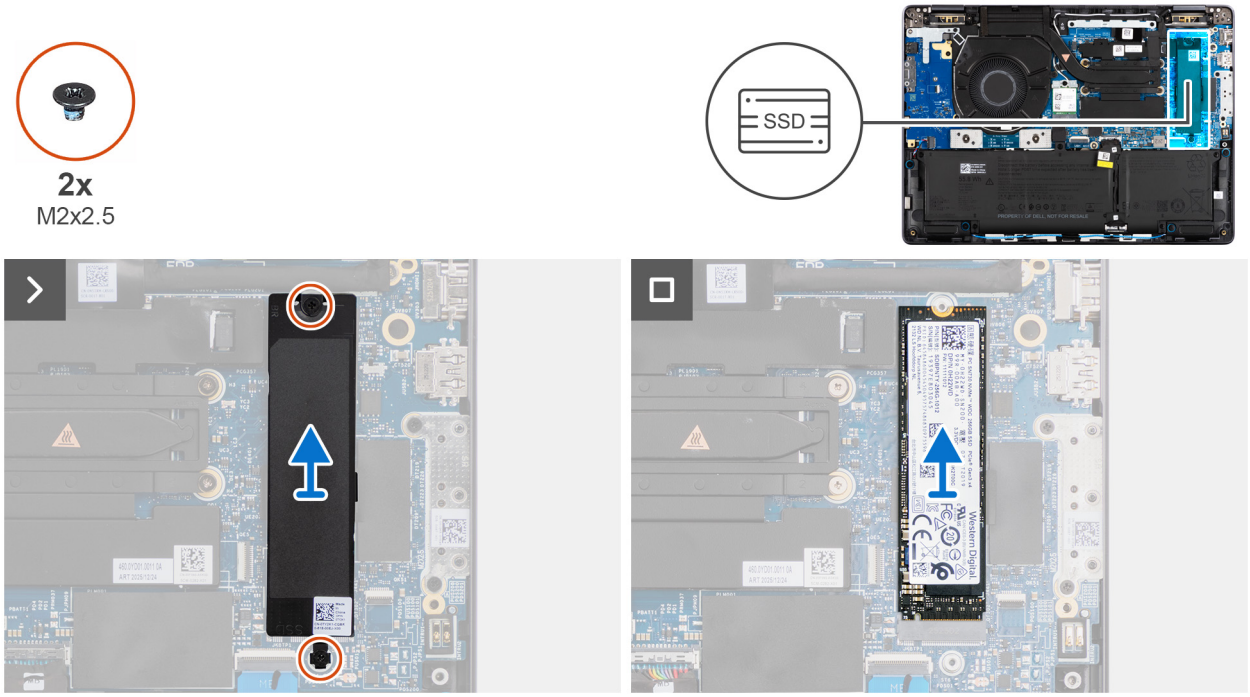


Figure 22. Removing the M.2 2280 SSD

Steps

1. Remove the two screws (M2x2.5) that secure the SSD thermal shield to the palm-rest assembly.
2. Lift the SSD thermal shield off the palm-rest assembly.
3. Slide and remove the M.2 2280 SSD off the SSD slot.

Installing the M.2 2280 SSD

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the M.2 2280 SSD and provide a visual representation of the installation procedure.

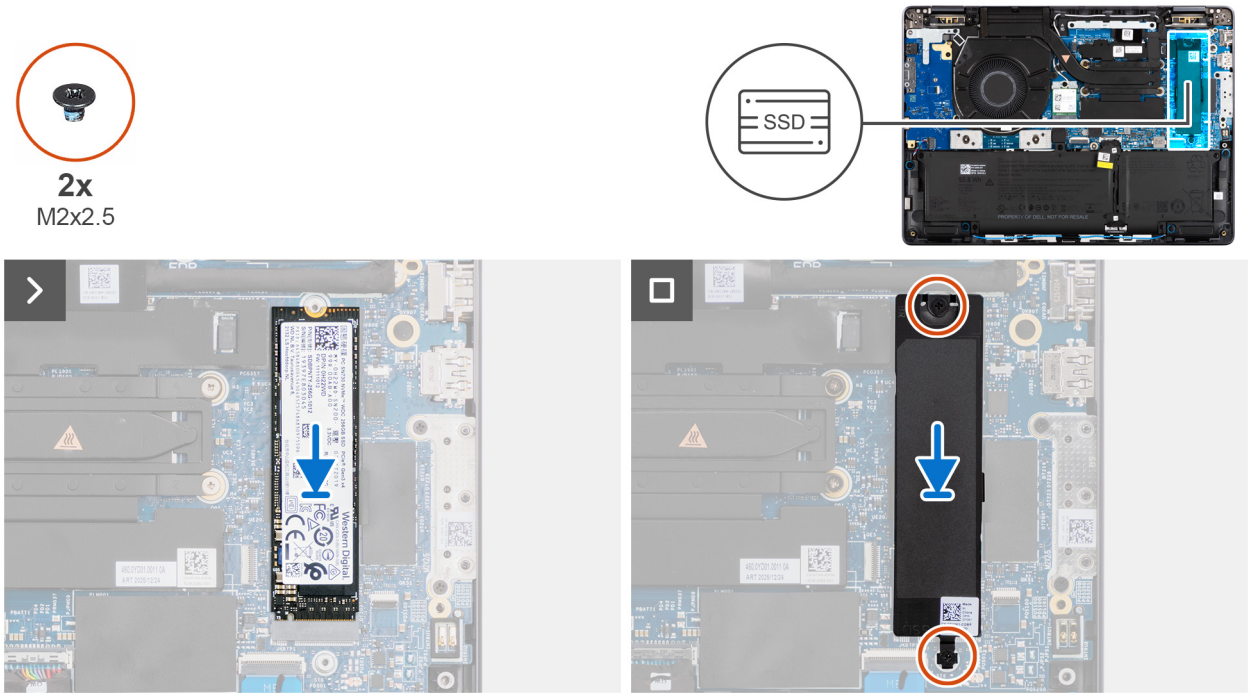


Figure 23. Installing the M.2 2280 SSD

Steps

1. Align the notch on the M.2 2280 SSD with the tab on the M.2 2280 SSD slot.
2. Slide the M.2 2280 SSD into the M.2 2280 SSD slot (SSD).
3. Align and place the SSD thermal shield on the SSD.
4. Replace the two screws (M2x2.5) that secure the SSD thermal shield to the palm-rest assembly.

Next steps

1. Install the base cover.
2. Install the nano-SIM card tray, if applicable.
3. Follow the procedure in After working inside your computer.

Speakers

Removing the speakers

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.
4. Remove the battery.

About this task

The following images indicate the location of the speakers and provide a visual representation of the removal procedure.

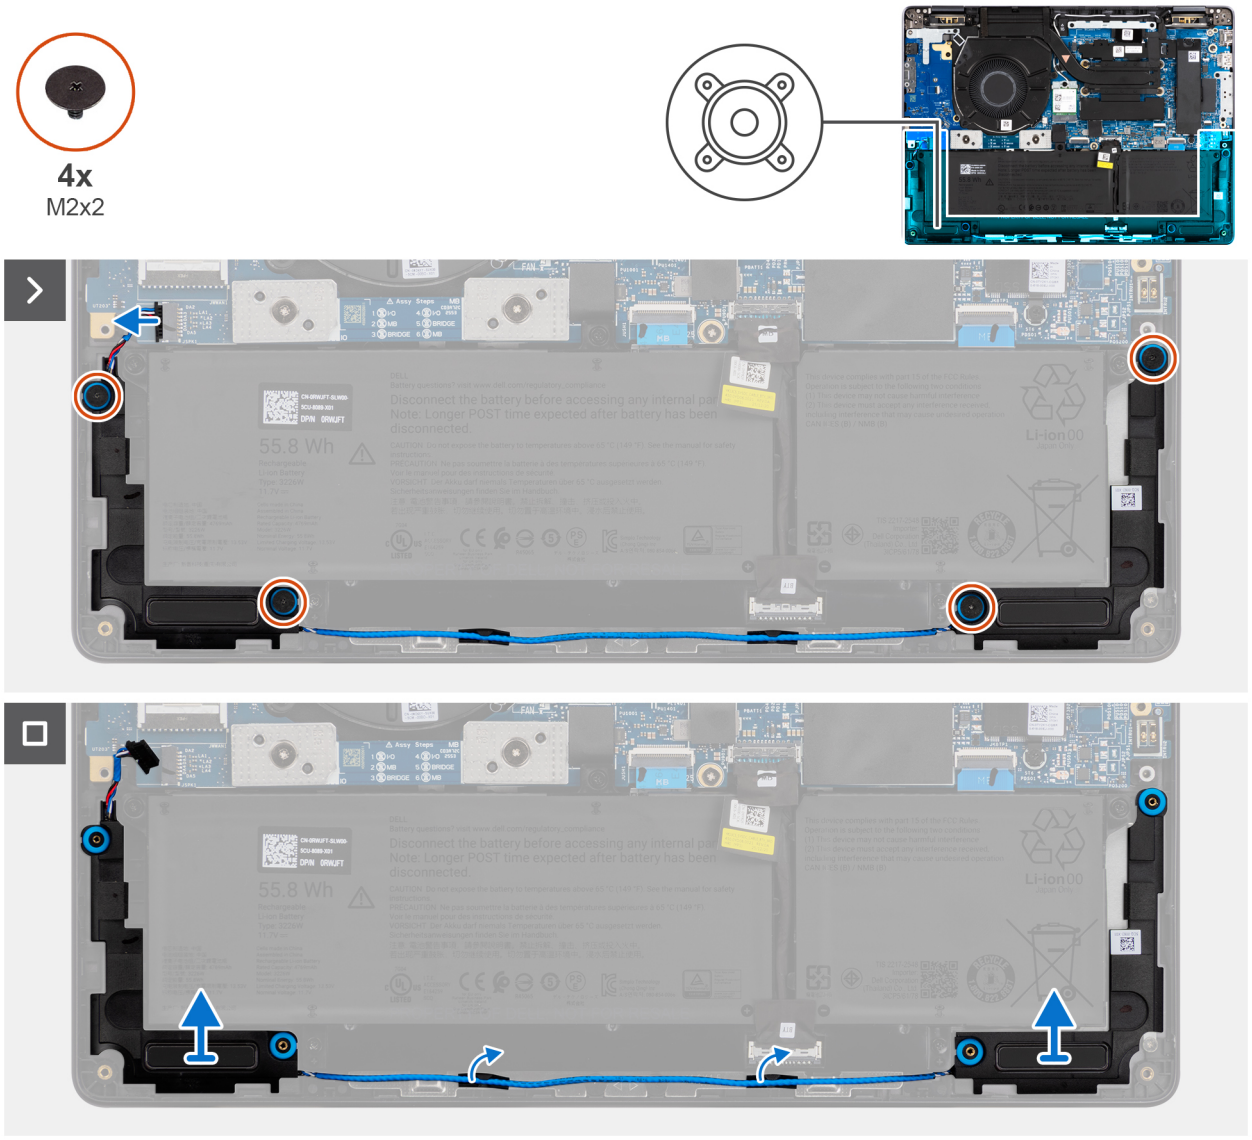


Figure 24. Removing the speakers

Steps

1. Disconnect the speaker cable from the I/O board.
2. Remove the speaker cables from the routing guides on the palm-rest assembly.
3. Remove the four screws (M2x2) that secure the speakers to the palm-rest assembly.
4. Release the right and left speakers from the rubber grommets and lift the speakers along with the cable, off the palm-rest assembly.

Installing the speakers

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the speakers and provide a visual representation of the installation procedure.

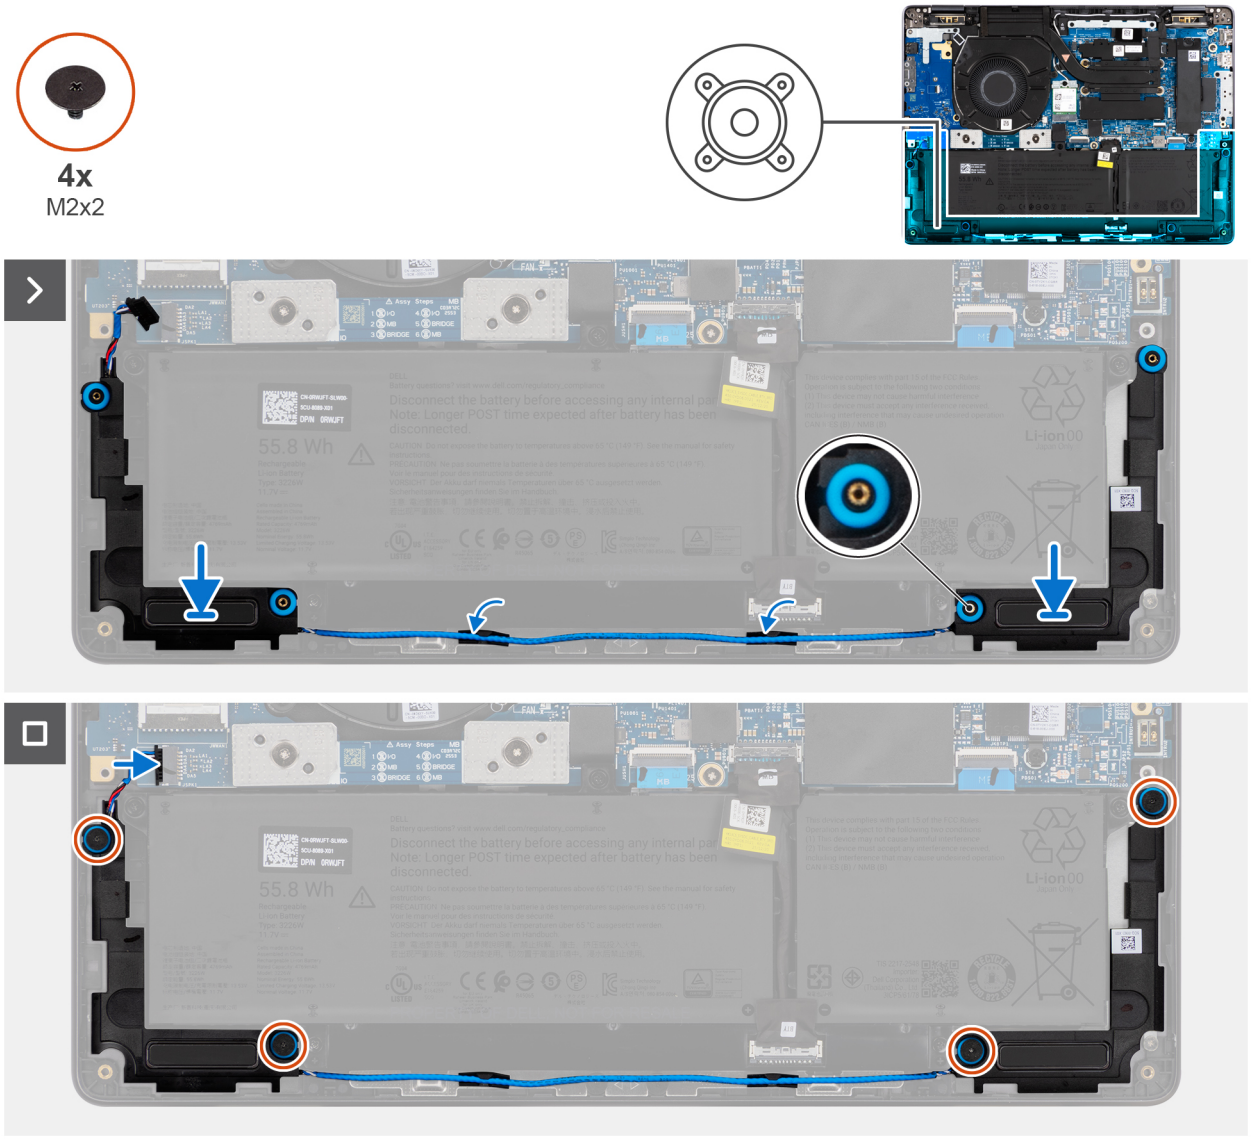


Figure 25. Installing the speakers

Steps

1. Using the alignment posts, place the left and right speakers into their slots on the palm-rest assembly.
2. Route the speaker cable through the routing guides on the palm-rest assembly.
3. Replace the four screws (M2x2) that secure the speakers to the palm-rest assembly.
4. Connect the speaker cable to the speaker cable connector on the I/O board.

Next steps

1. Install the battery.
2. Install the base cover.
3. Install the nano-SIM card tray, if applicable.
4. Follow the procedure in After working inside your computer.

Fan

Removing the fan

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.

About this task

The following images indicate the location of the fan and provide a visual representation of the removal procedure.

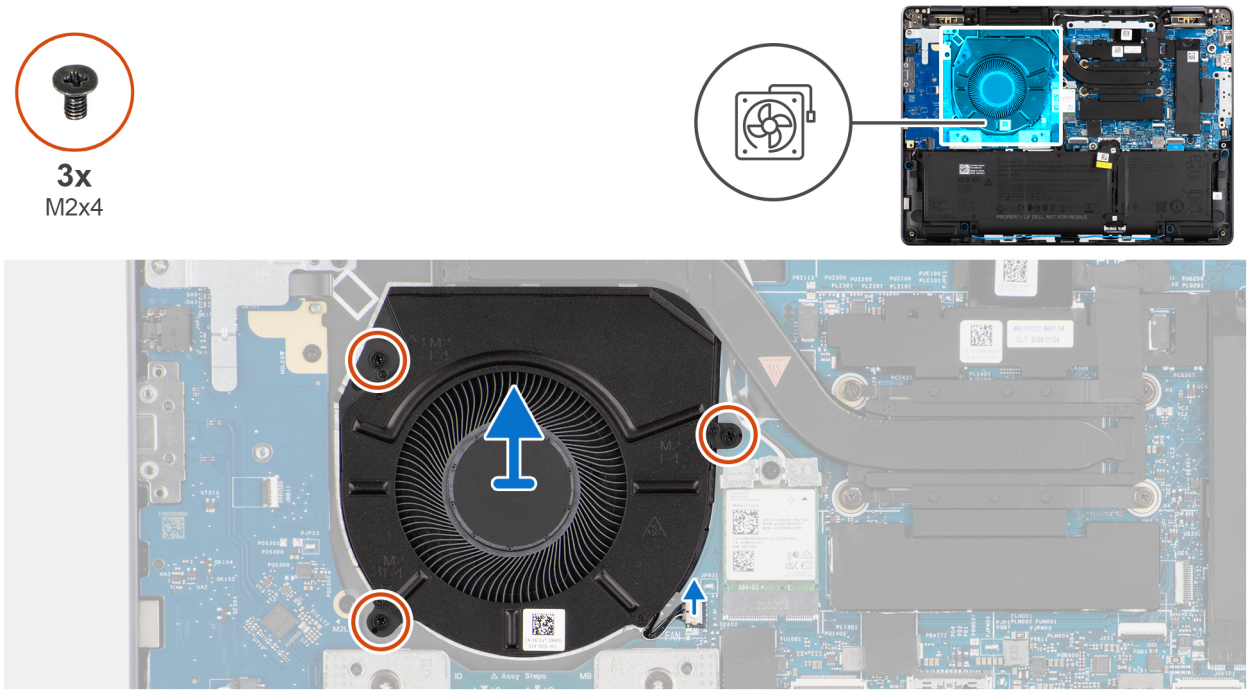


Figure 26. Removing the fan

Steps

1. Remove the three screws (M2x4) that secure the fan on the palm-rest assembly.
2. Disconnect the fan cable from the top of the fan-cable connector (FAN1) on the system board.
3. Lift the fan off the palm-rest assembly.

Installing the fan

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the fan and provide a visual representation of the installation procedure.

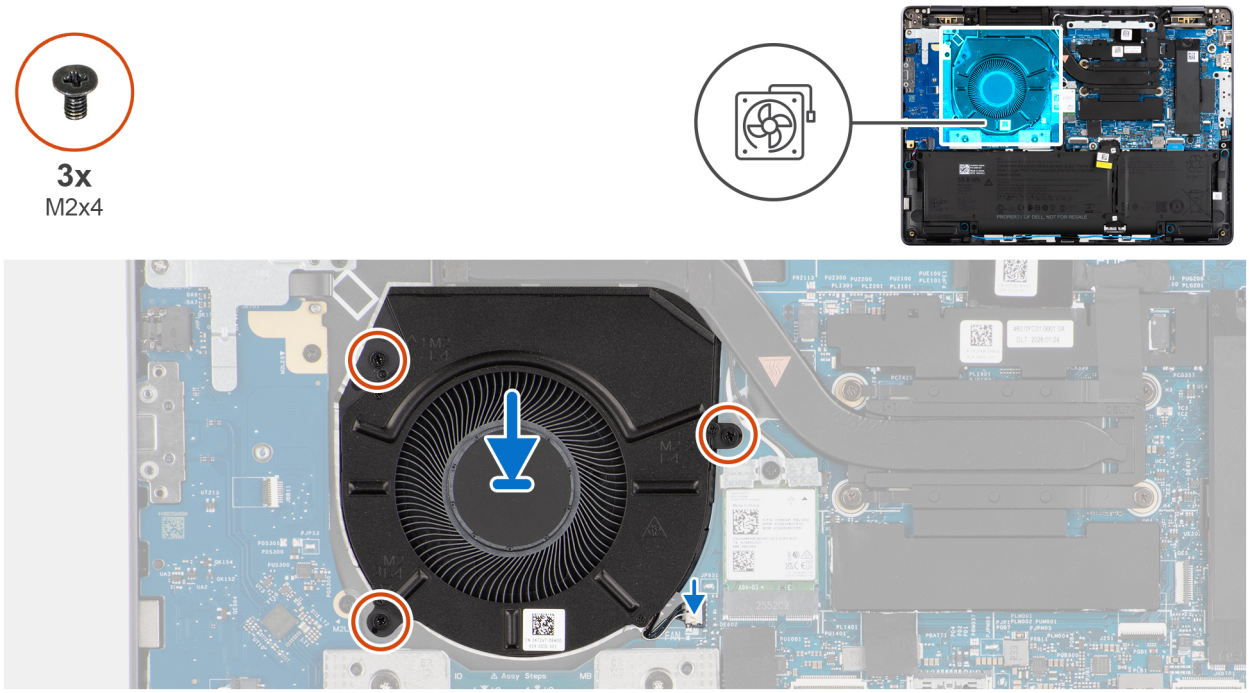


Figure 27. Installing the fan

Steps

1. Align the screw holes on the fan with the screw holes on the palm-rest assembly.
2. Replace the three screws (M2x4) that secure the fan to the palm-rest assembly.
3. Connect the fan cable to the fan-cable connector (FAN1) on the system board by aligning the connector and pressing it down from the top until it is fully seated.

Next steps

1. Install the base cover.
2. Install the nano-SIM card tray, if applicable.
3. Follow the procedure in After working inside your computer.

3

Removing and installing Field Replaceable Units (FRUs)

The replaceable components in this chapter are Field Replaceable Units (FRUs).

CAUTION: FRUs should be replaced by an authorized service technician, who is a trained technical repair specialist.

NOTE: Damages resulting from improper replacement or from failure to follow instructions are not covered by your warranty. Consider having a trained technical repair specialist perform replacements of FRU components.

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

USH-board cable

Removing the USH-board cable

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.
4. Remove the battery.

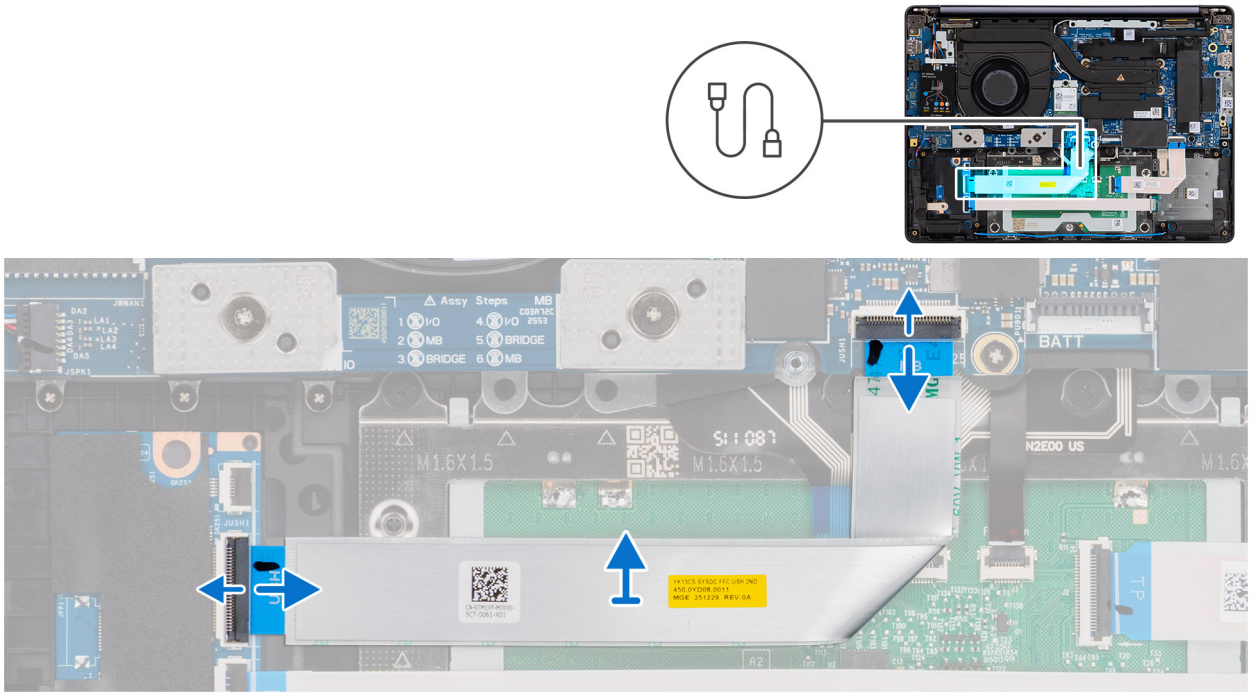


Figure 28. Removing the USH-board cable

Steps

1. Open the latches and disconnect the USH-board cable from the connectors on both the system board and the USH board.
2. Lift the USH-board cable off the computer.

Installing the USH-board cable

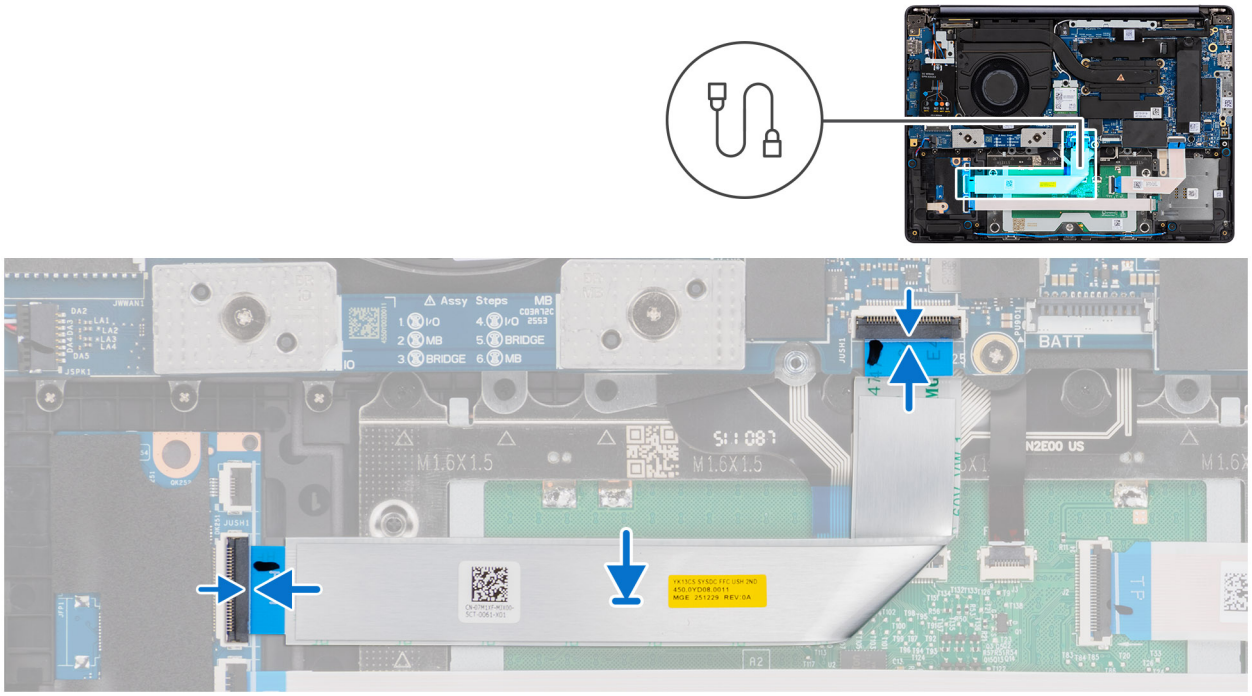


Figure 29. Installing the USH-board cable

Steps

1. Place the USH-board cable on the chassis.
2. Connect the USH-board cable to the connectors on both the system board and the USH board, and close the latches to secure the cable.

Next steps

1. Install the battery.
2. Install the base cover.
3. Install the nano-SIM card tray, if applicable.
4. Follow the procedure in After working inside your computer.

Smart-card reader

Removing the smart-card reader

NOTE: This procedure is applicable only if your computer is shipped with a smart-card reader.

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.

4. Remove the battery.
5. Remove the speakers.

About this task

The following images indicate the location of the smart-card reader and provide a visual representation of the removal procedure.

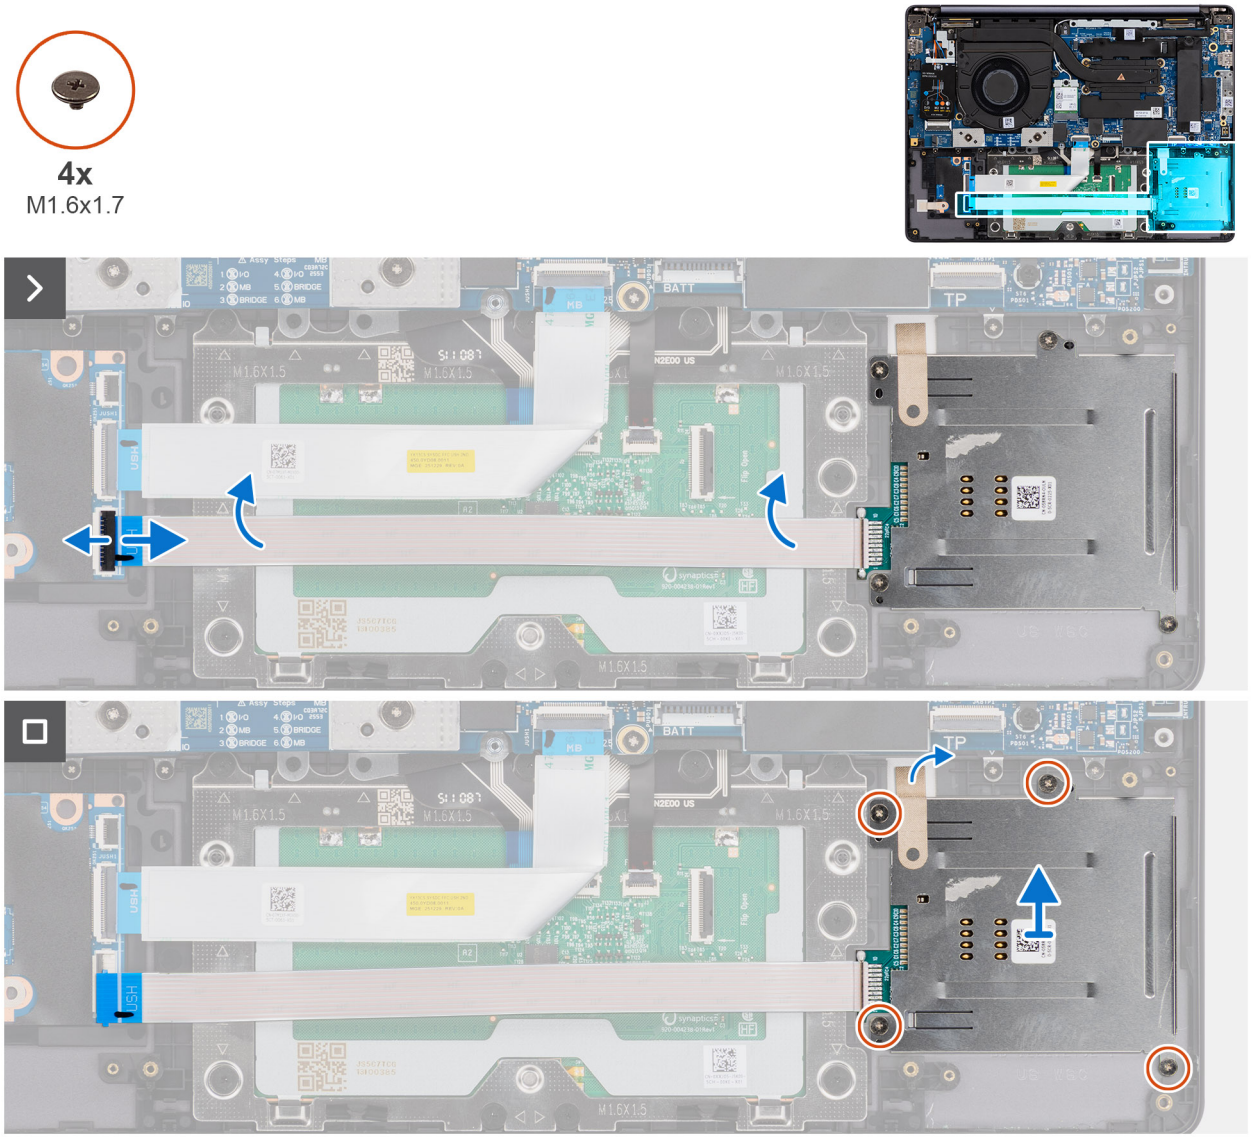


Figure 30. Removing the smart-card reader

Steps

1. Open the latch and disconnect the smart-card reader cable from the connector on the USH board.
2. Gently peel the smart-card reader cable from the palm-rest assembly.
3. Gently peel up and remove the grounding tape securing the smart-card reader cable.
4. Remove the four screws (M1.6x1.7) that secure the smart-card reader to the palm-rest assembly.
5. Lift the smart-card reader, along with its cable, off the palm-rest assembly.

Installing the smart-card reader

NOTE: This procedure is applicable only if your computer is shipped with a smart-card reader.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the smart-card reader and provide a visual representation of the installation procedure.

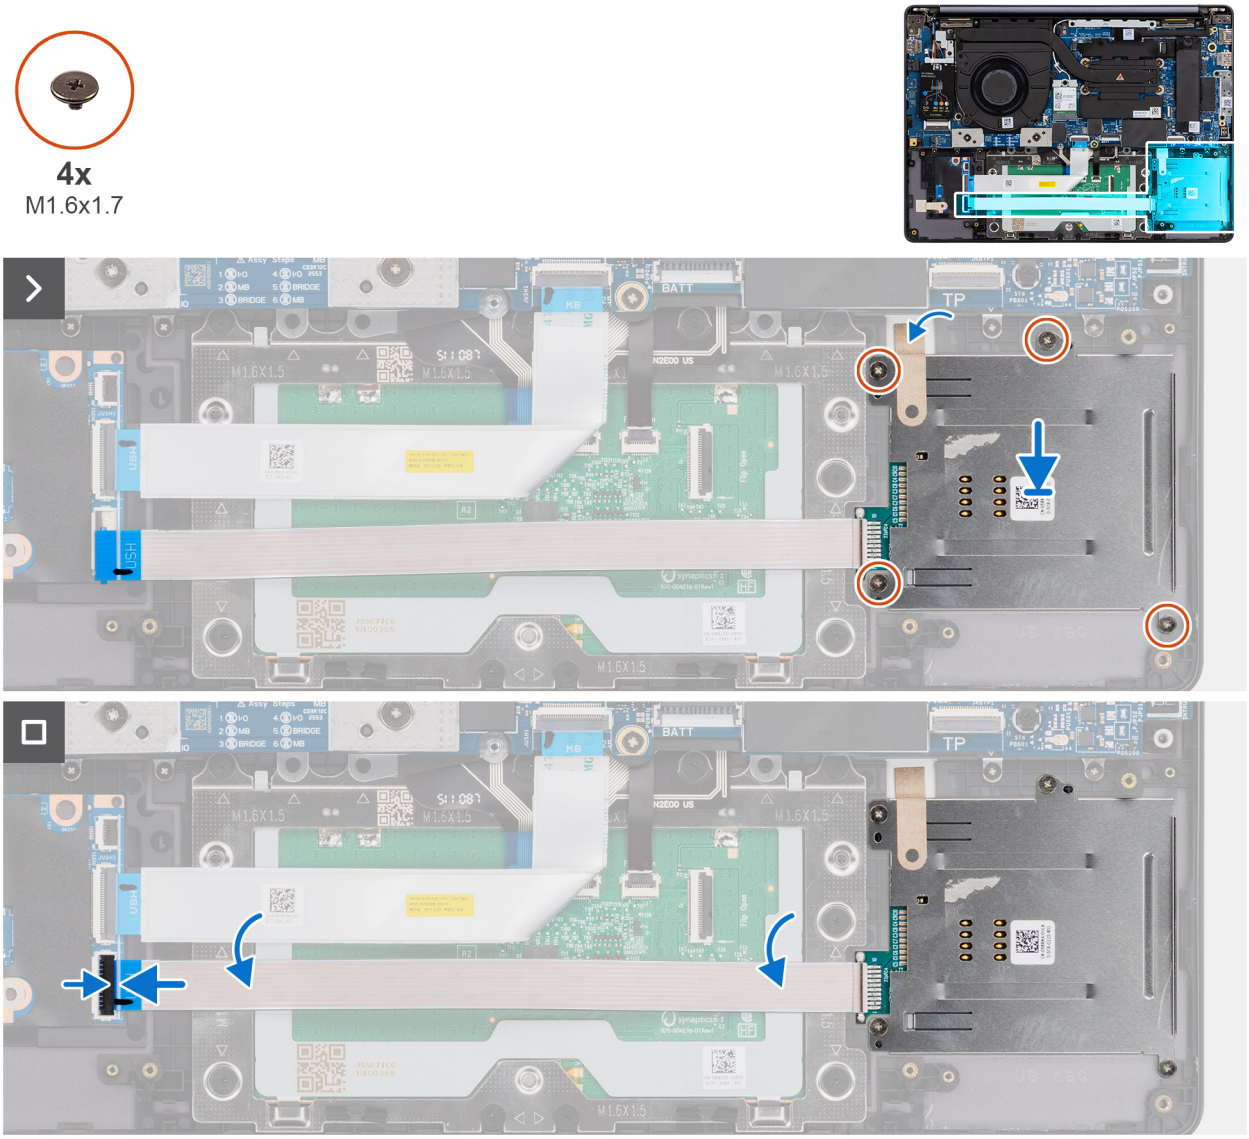


Figure 31. Installing the smart-card reader

Steps

1. Align and place the smart-card reader on its slot on the palm-rest assembly.
2. Apply the grounding tape to secure the smart-card reader cable in place.
3. Replace the four screws (M1.6x1.7) that secures the smart-card reader to the palm-rest assembly.
4. Connect the smart-card cable to the connector on the USH board and close the latch to secure the cable.

Next steps

1. Install the speakers.
2. Install the battery.
3. Install the base cover.
4. Install the nano-SIM card tray, if applicable.

5. Follow the procedure in After working inside your computer.

Heat sink

Removing the heat sink

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.

About this task

NOTE: The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.

NOTE: For maximum cooling of the processor, do not touch the heat-transfer areas on the heat sink. The oils on your skin can reduce the heat-transfer capability of the thermal grease.

The following images indicate the location of the heat sink and provide a visual representation of the removal procedure.

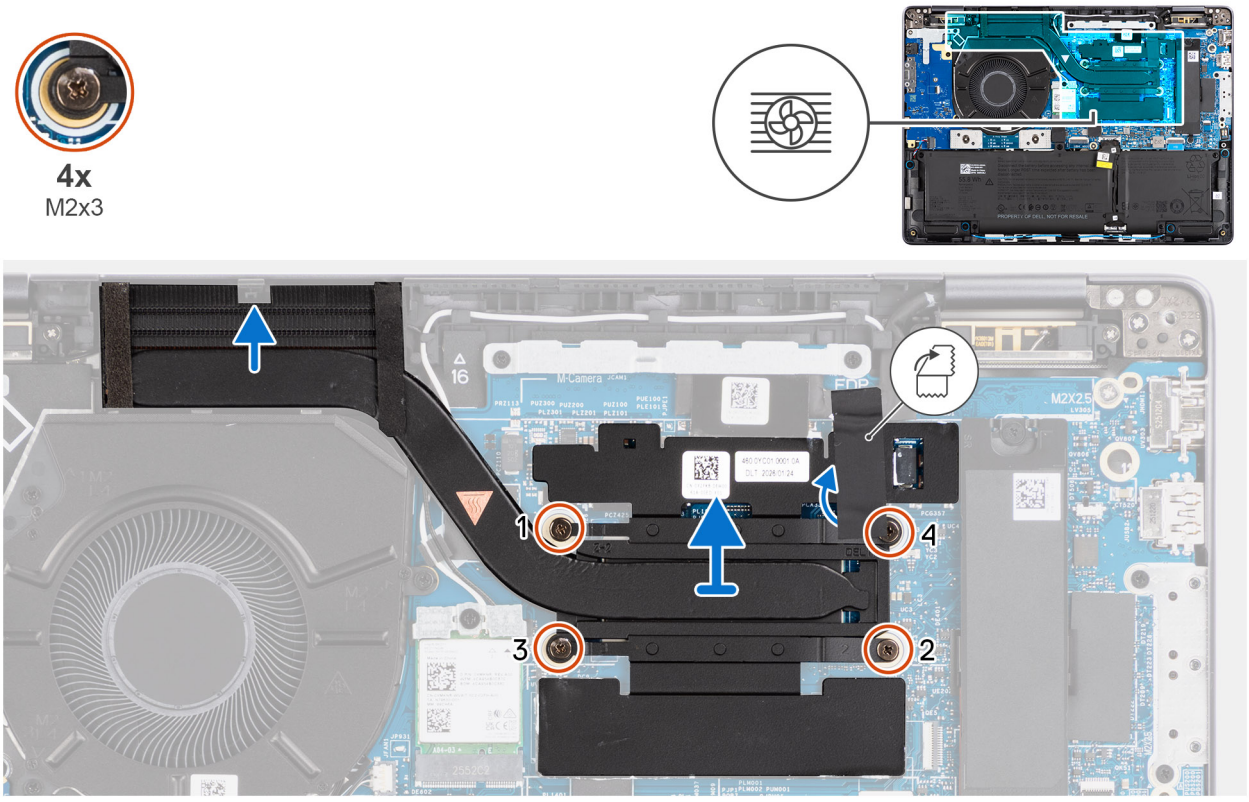


Figure 32. Removing the heat sink

Steps

1. Peel and remove the grounding tape from the smart-card reader.
2. In the reverse sequential order (4 > 3 > 2 > 1), loosen the four captive screws that secure the heat sink to the system board.
3. Lift the heat sink from the system board.

Installing the heat sink

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

NOTE: If either the system board or the heat sink is replaced, use the thermal gel and grease that is provided in the kit to ensure that the thermal conductivity is achieved.

The following images indicate the location of the heat sink and provide a visual representation of the installation procedure.

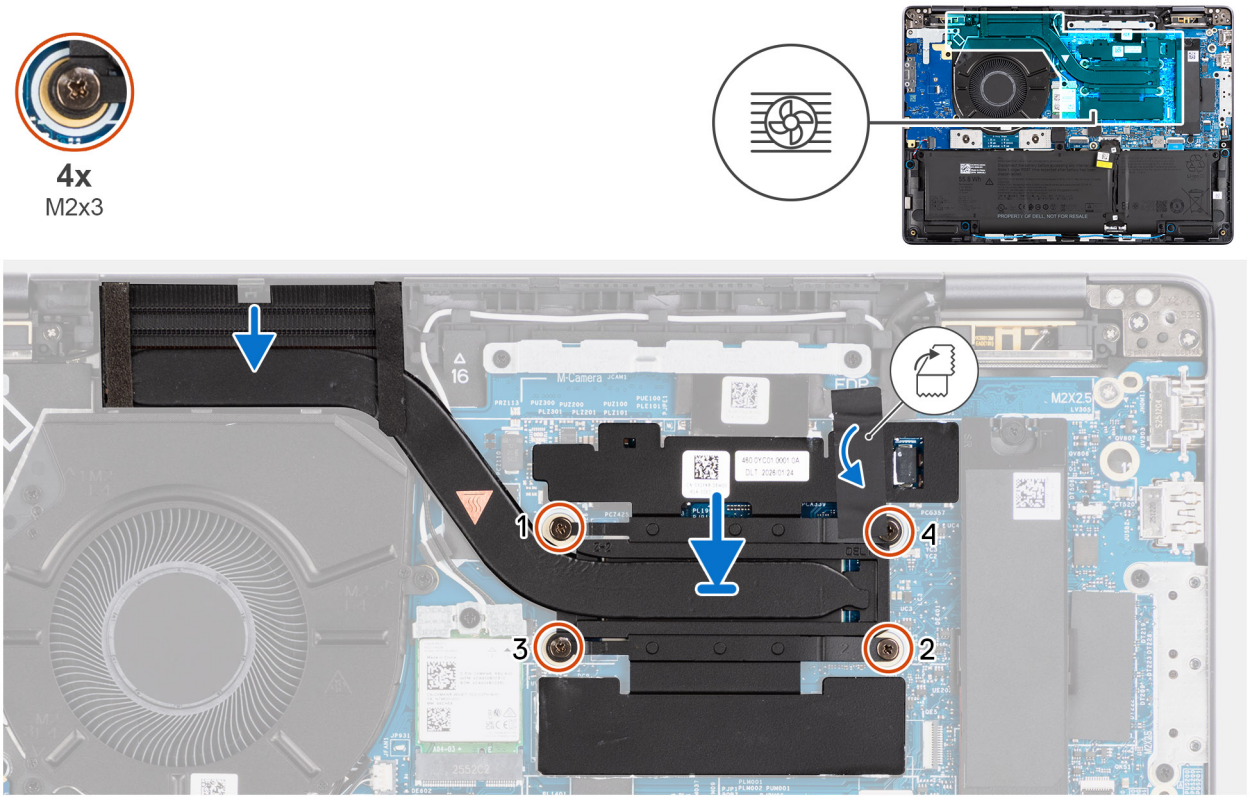


Figure 33. Installing the heat sink

Steps

1. Place the heat sink on the system board and align the captive screws on the heat sink with the screw holes on the system board.

   CAUTION: Incorrect alignment of the heat sink can damage the system board and processor.

2. In sequential order (1 > 2 > 3 > 4), tighten the four (M2x3) captive screws that secure the heat sink to the system board.
3. Place and secure the grounding tape onto the smart-card reader.

Next steps

1. Install the base cover.
2. Install the nano-SIM card tray, if applicable.
3. Follow the procedure in After working inside your computer.

USB Type-C connector module

Removing the USB Type-C connector module

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.
4. Remove the battery.
5. Remove the M.2 2230 or M.2 2280 SSD, as applicable.
6. Remove the 5G WWAN card or 4G WWAN card, as applicable.
7. Remove the I/O-board bridge.
8. Remove the WLAN card.
9. Remove the fan.
10. Remove the display assembly.
11. Remove the system board.

NOTE: The system board can be removed and installed with the heat sink to preserve the thermal bond.

About this task

The following images indicate the location of the USB Type-C connector module and provide a visual representation of the removal procedure.

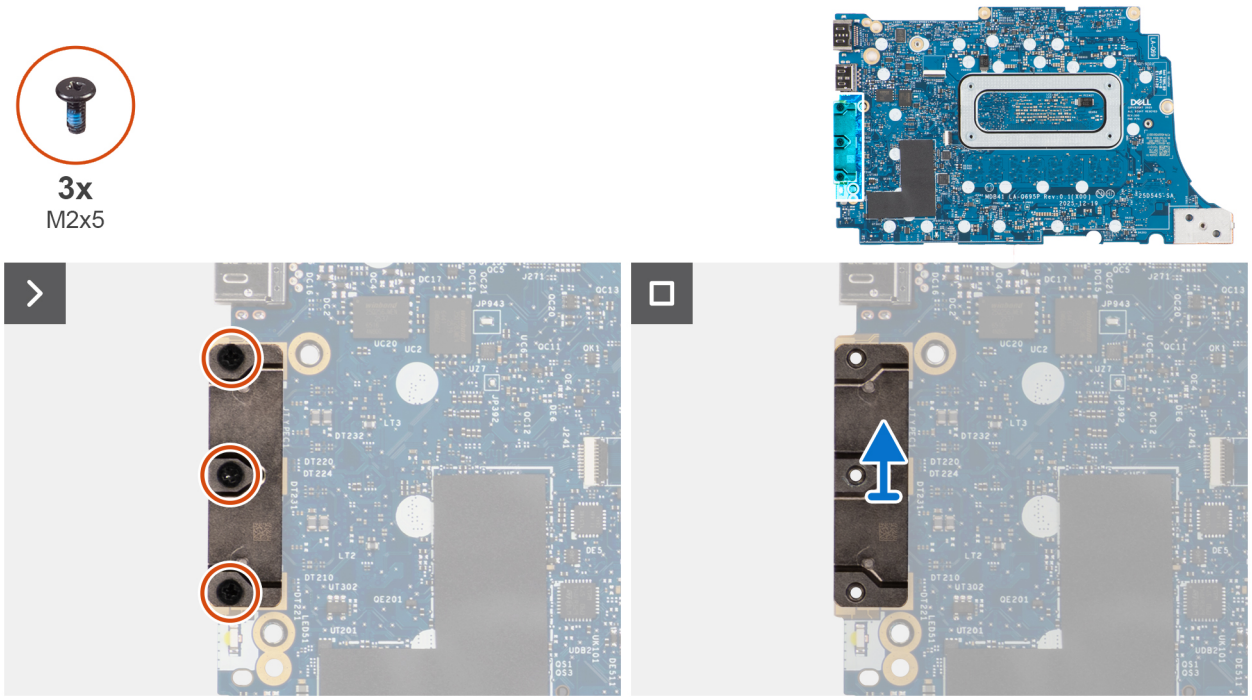


Figure 34. Removing the USB Type-C Connector Module

Steps

1. Remove the three screws (M2x5) that secure the USB Type-C connector module to the bottom side of the system board.
2. Remove the USB Type-C connector module from the system board.

Installing the USB Type-C connector module

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the USB Type-C connector module and provide a visual representation of the installation procedure.

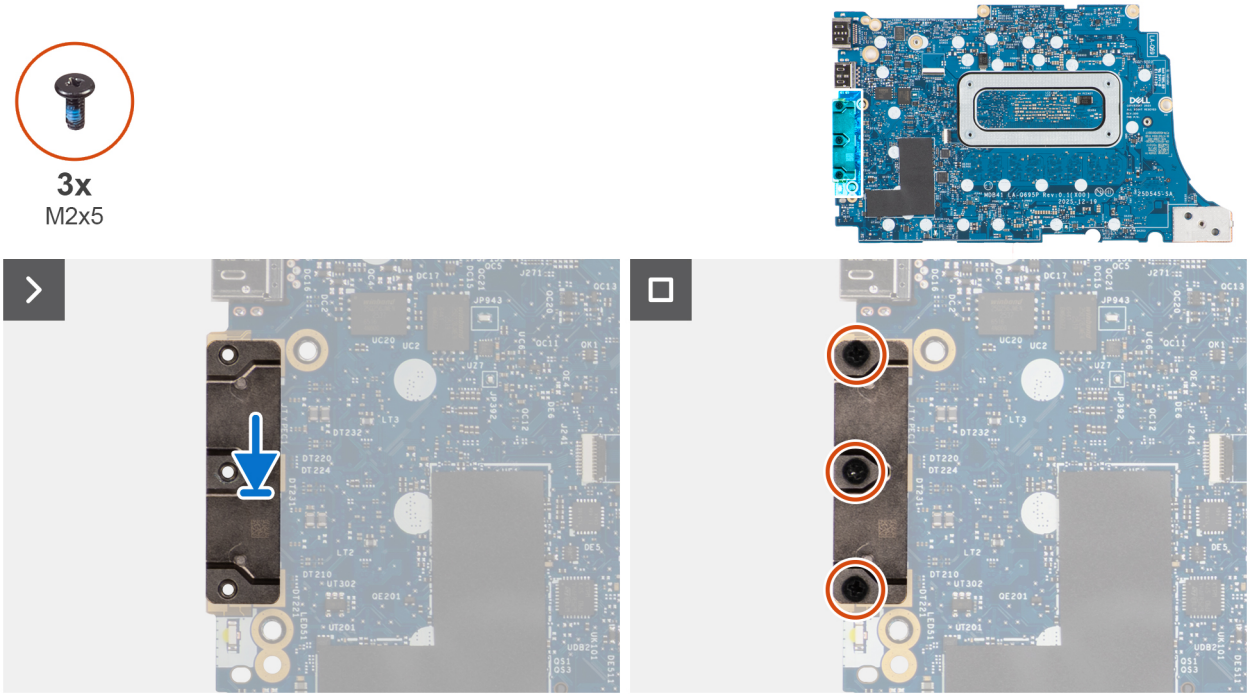


Figure 35. Installing the USB Type-C Connector Module

Steps

1. Align and place the USB Type-C connector module to the slot on the bottom side of the system board.
2. Replace the three screws (M2x5) that secure the USB Type-C connector module in place.

Next steps

1. Install the system board.

   NOTE: The system board can be removed and installed with the heat sink to preserve the thermal bond.

2. Install the display assembly.
3. Install the WLAN card.
4. Install the fan.
5. Install the I/O-board bridge.
6. Install the 5G WWAN card or 4G WWAN card, as applicable.
7. Install the M.2 2230 or M.2 2280 SSD, as applicable.
8. Install the battery.
9. Install the base cover.
10. Install the nano-SIM card tray, if applicable.
11. Follow the procedure in After working inside your computer.

Wireless Local Area Network (WLAN) antenna modules

Removing the wireless antenna modules

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.
4. Remove the battery.
5. Remove the M.2 2230 or M.2 2280 SSD, as applicable.
6. Remove the 5G WWAN card or 4G WWAN card, as applicable.
7. Remove the WLAN card.

About this task

The following images indicate the location of the wireless antenna modules and provide a visual representation of the removal procedure.

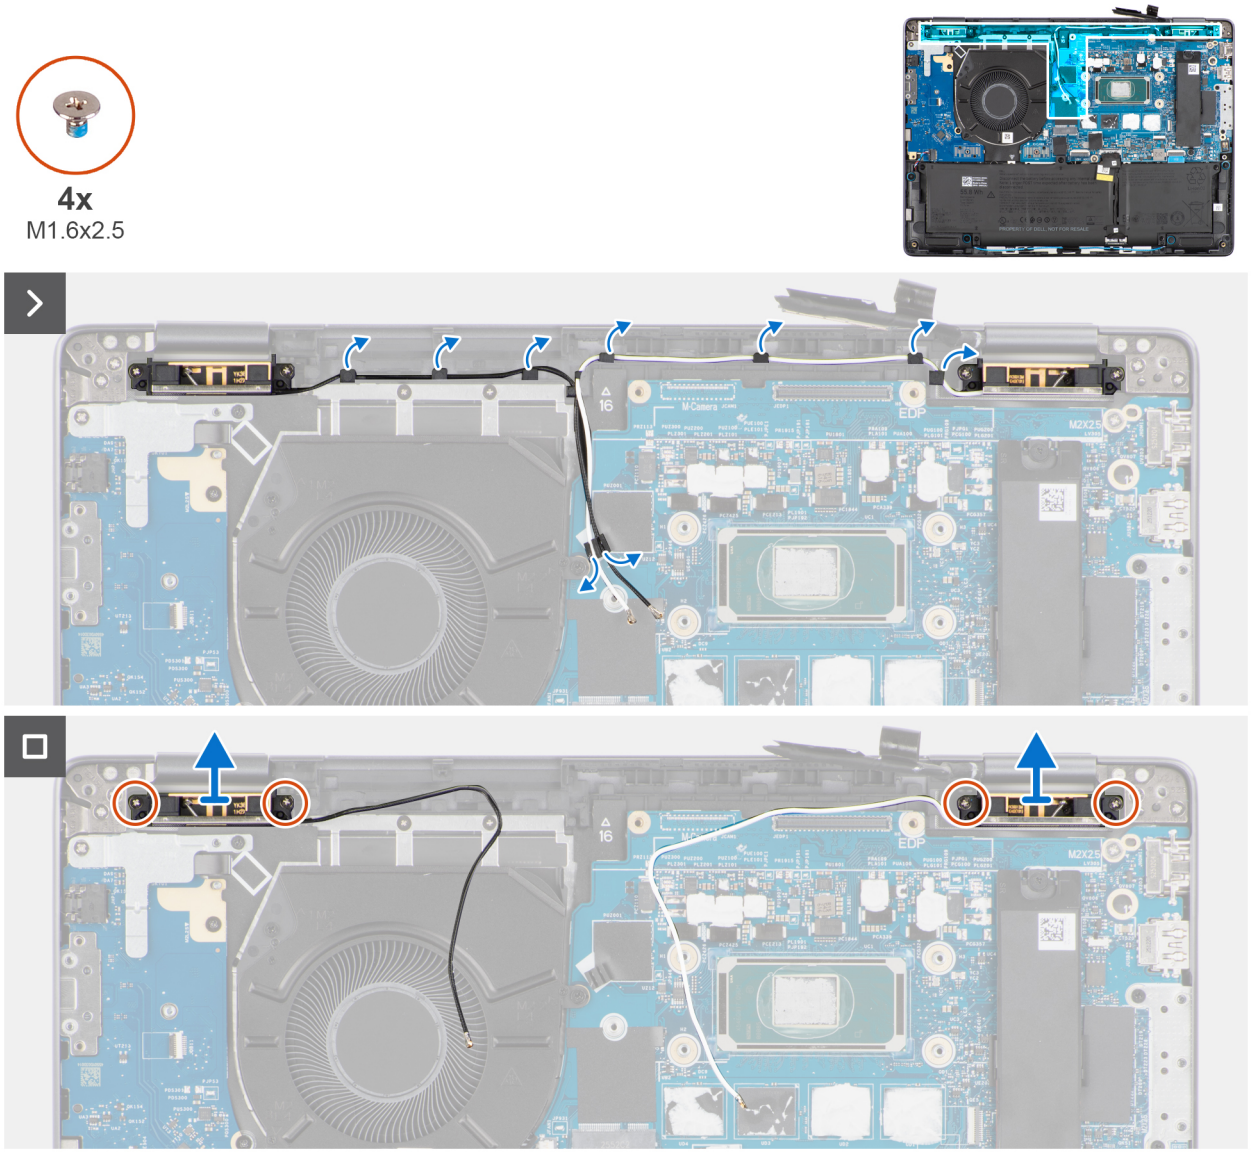


Figure 36. Removing the wireless antenna module

Steps

1. Remove the antenna cables from the routing guides on the palm-rest assembly.
2. Remove the four screws (M1.6x2.5) that secure the WLAN antenna modules to the palm-rest assembly.
3. Lift the WLAN antenna modules off the palm-rest assembly.

Installing the wireless antenna modules

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the wireless antenna module and provides a visual representation of the removal procedure.

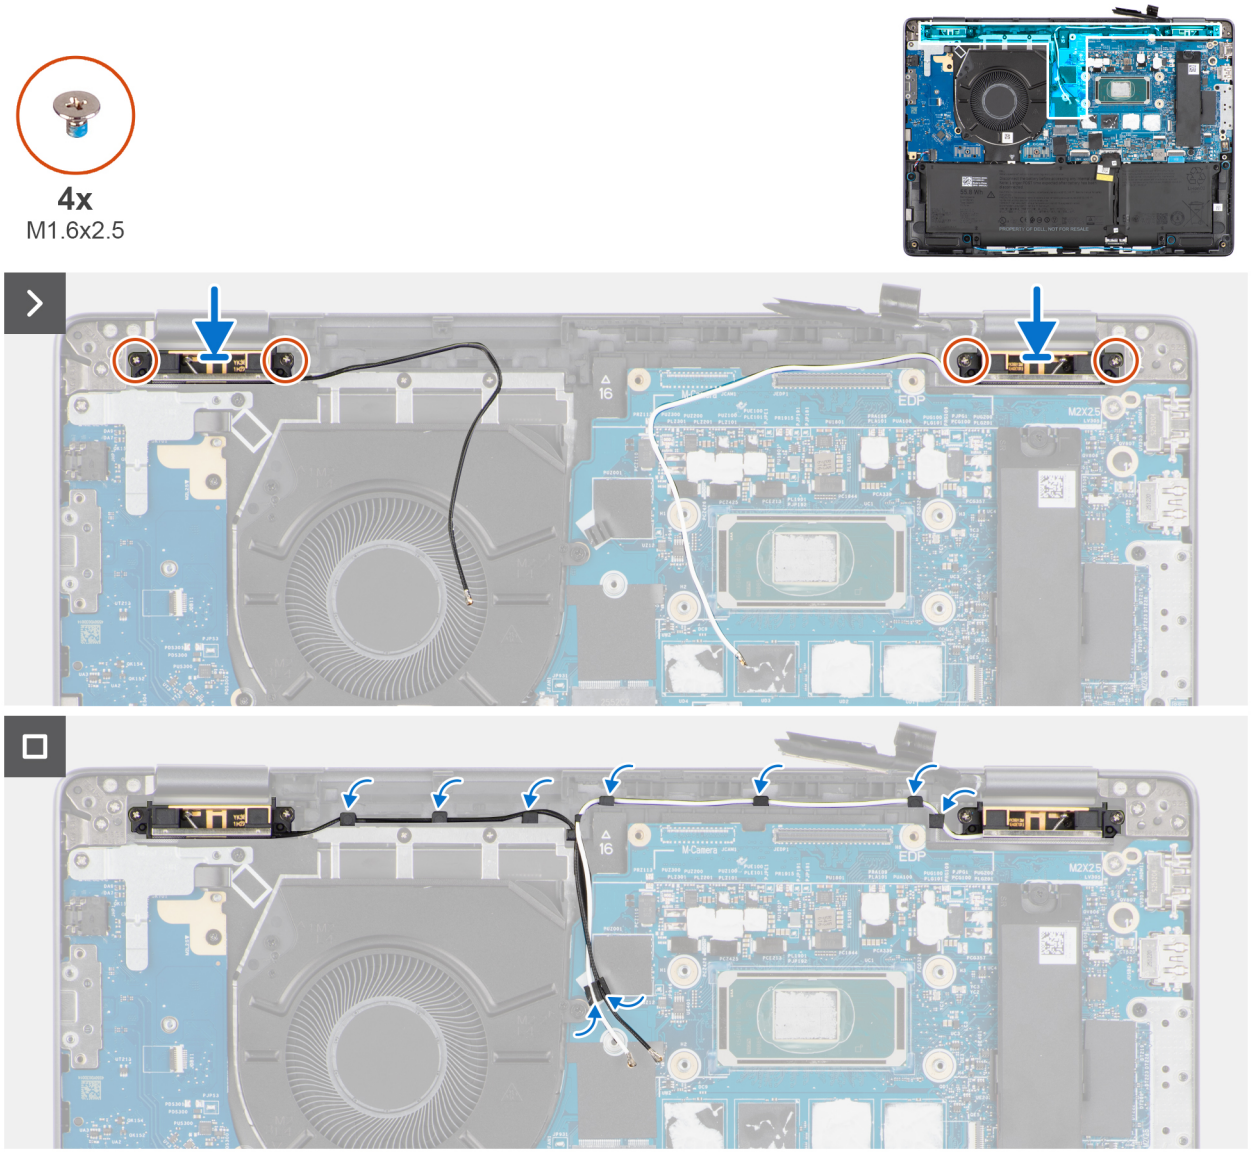


Figure 37. Installing the wireless antenna module

Steps

1. Align and place the wireless antenna modules on to its slot on the palm-rest assembly.
2. Replace the four screws (M1.6x2.5) that secure the wireless antenna modules to the palm-rest assembly.
3. Route the WLAN antenna cables through the routing guides on the palm-rest assembly.

Next steps

1. Install the wiresless card.
2. Install the 5G WWAN card or 4G WWAN card, as applicable.
3. Install the M.2 2230 or M.2 2280 SSD, as applicable.
4. Install the battery.
5. Install the base cover.
6. Install the nano-SIM card tray, if applicable.
7. Follow the procedure in After working inside your computer.

I/O-bridge board

Removing the I/O-bridge board

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.

About this task

The following images indicate the location of the I/O-bridge board and provide a visual representation of the removal procedure.

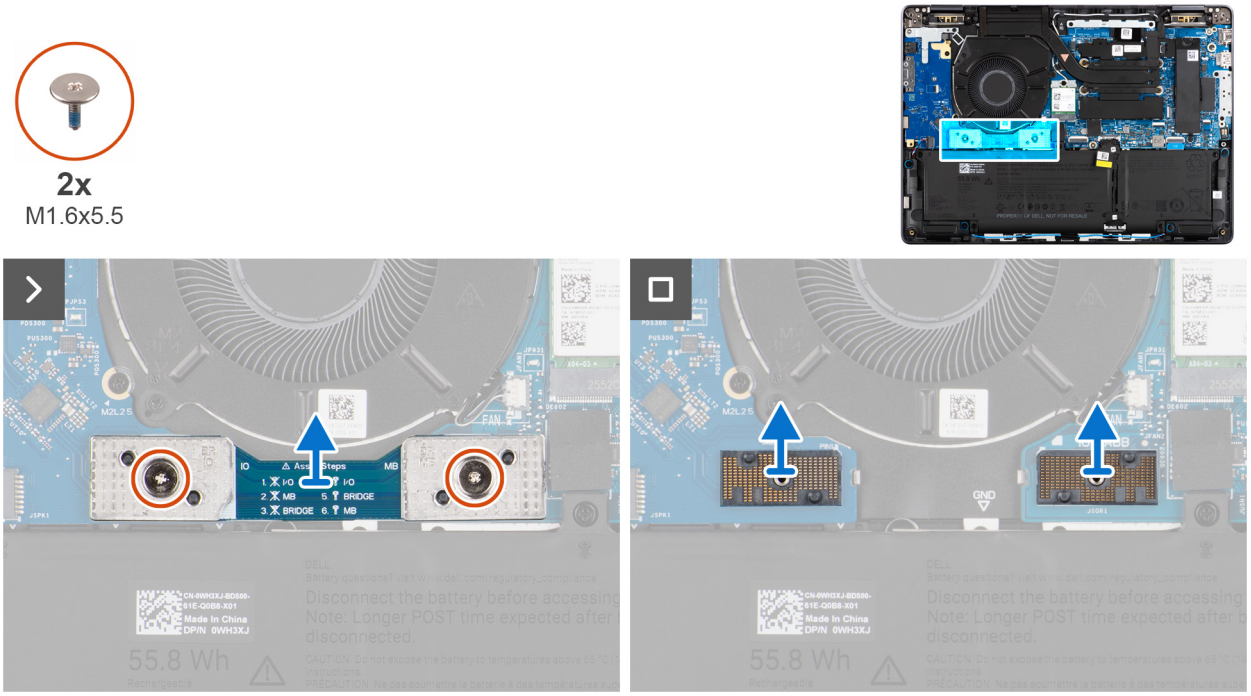


Figure 38. Removing the I/O-bridge board

Steps

1. Remove the two (M1.6x5.5) screws that secures the I/O-bridge board in place.
2. Lift the I/O-bridge board away from the system board.

Installing the I/O-bridge board

About this task

The following images indicate the location of the I/O-bridge board and provide a visual representation of the installation procedure.

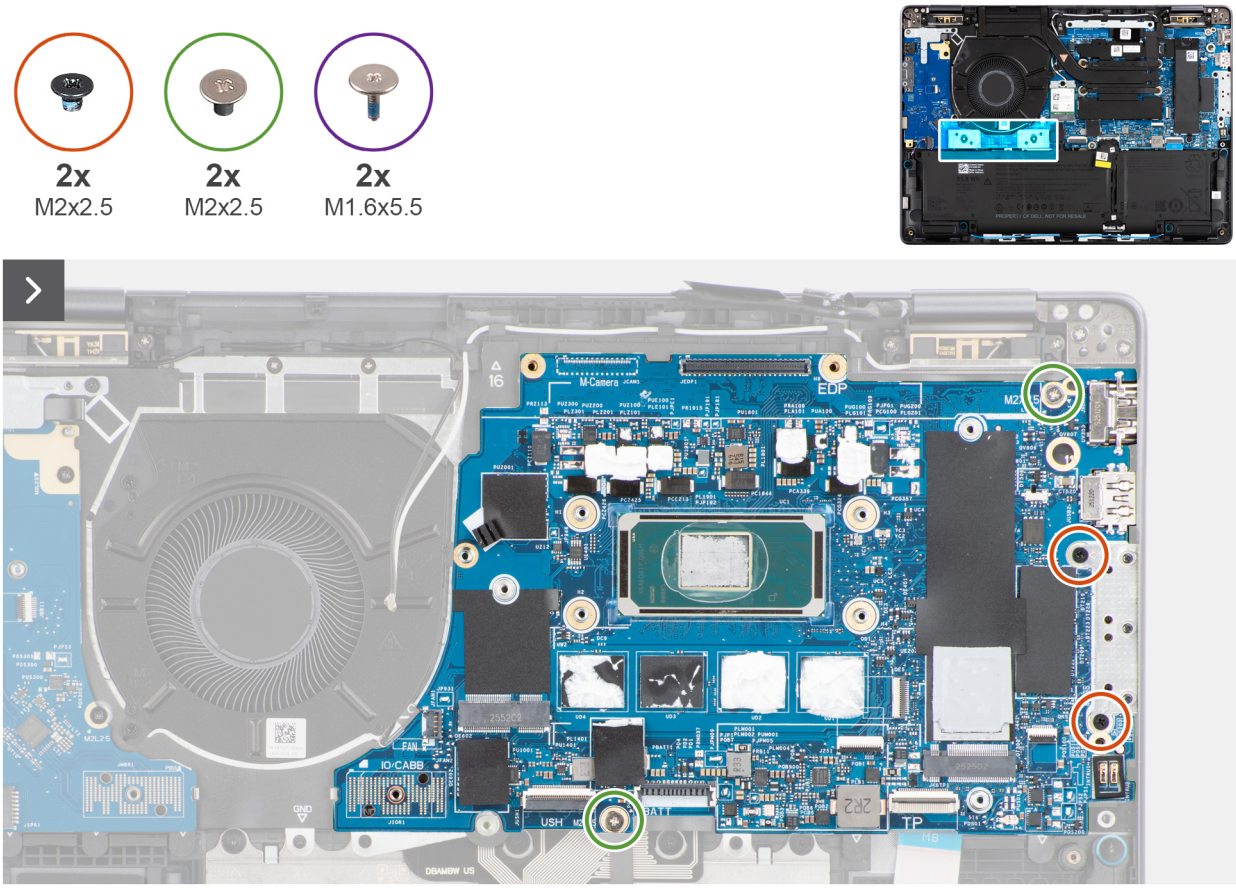


Figure 39. Installing the I/O-bridge board

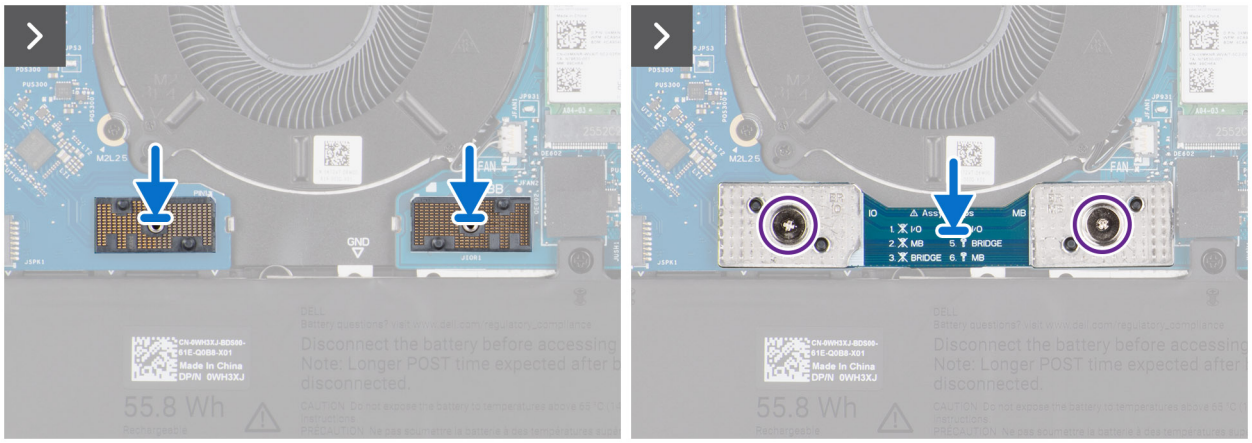


Figure 40. Installing the I/O-bridge board

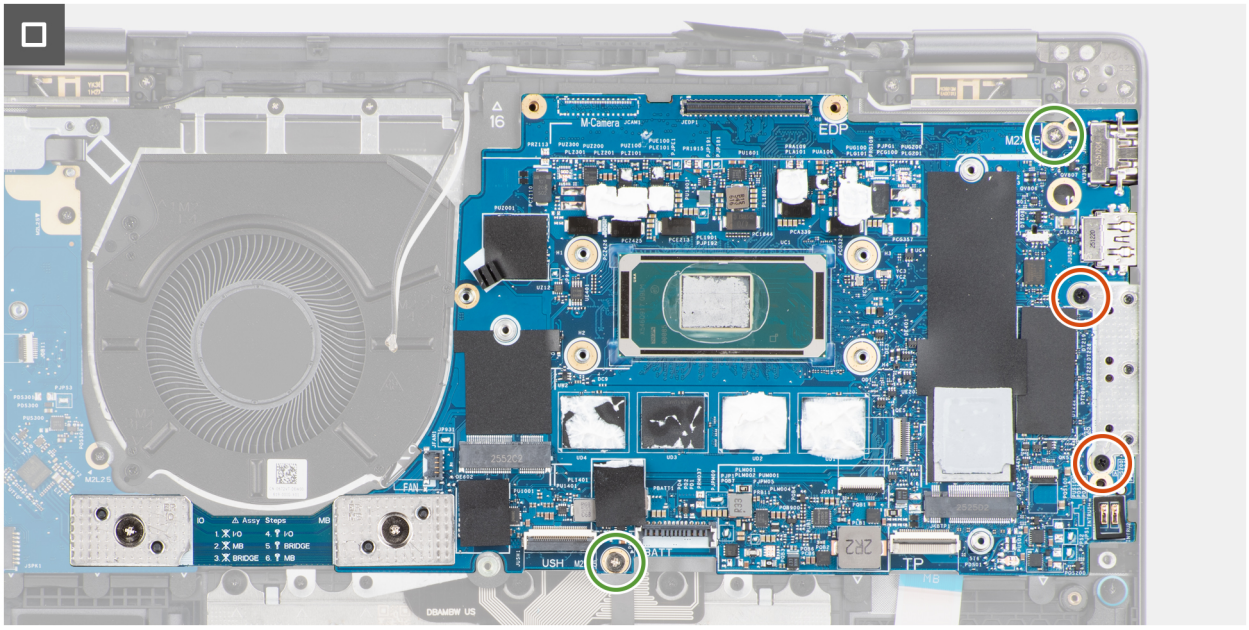


Figure 41. Installing the I/O-bridge board

Steps

1. Remove the two screws (M2x2.5) that secure the system board to the palm-rest assembly.
2. Remove the two screws (M2x2.5) that secure the system board to the palm-rest assembly.
3. Using the alignment posts on the I/O board, place and align the I/O-bridge board interposer onto its connector on the I/O board.
4. Using the alignment posts on the system board, place and align the I/O-bridge board interposer onto its connector on the system board.
5. Replace the two (M1.6x5.5) that secures the I/O-bridge board in place.

   NOTE: To avoid bending the pins and damaging the I/O-bridge board interposer, pinch the edges of the interposer while handling it.

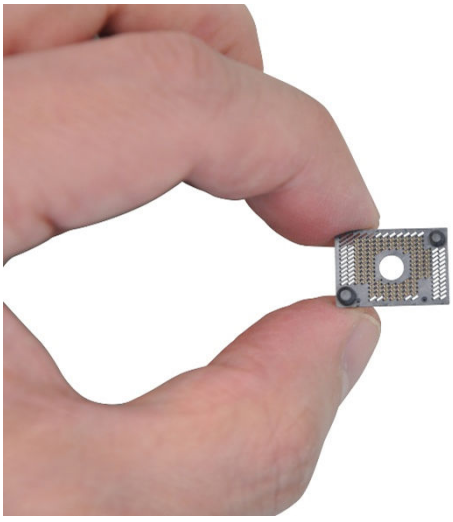


Figure 42. Proper handling of the I/O-bridge board interposer

6. Using the alignment posts on the I/O-bridge board interposers, place and align the I/O-bridge board onto the I/O-bridge board interposers on the system board and I/O board.

   NOTE: There is an installation sequence (from left to right) that must be followed when either the I/O daughter board or system board is replaced. This installation sequence is documented for reference on the Bridge Connector.



Figure 43. installation sequence

7. Replace the screw (M2x4) that secures the I/O-bridge board to its connector on the I/O board.
8. Replace the screw (M2x4) that secures the I/O-bridge board to its connector on the system board.
9. Replace the two screws (M2x2.5) that secure the system board to the palm-rest assembly.
10. Replace the two screws (M2x2.5) that secure the system board to the palm-rest assembly.

Next steps

1. Install the base cover.
2. Install the nano-SIM card tray, if applicable.
3. Follow the procedure in After working inside your computer.

I/O board

Removing the I/O board

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.
4. Remove the 5G WWAN card or 4G WWAN card, as applicable.
5. Remove the fan.
6. Remove the I/O-bridge board.

About this task

The following images indicate the location of the I/O board and provide a visual representation of the removal procedure.

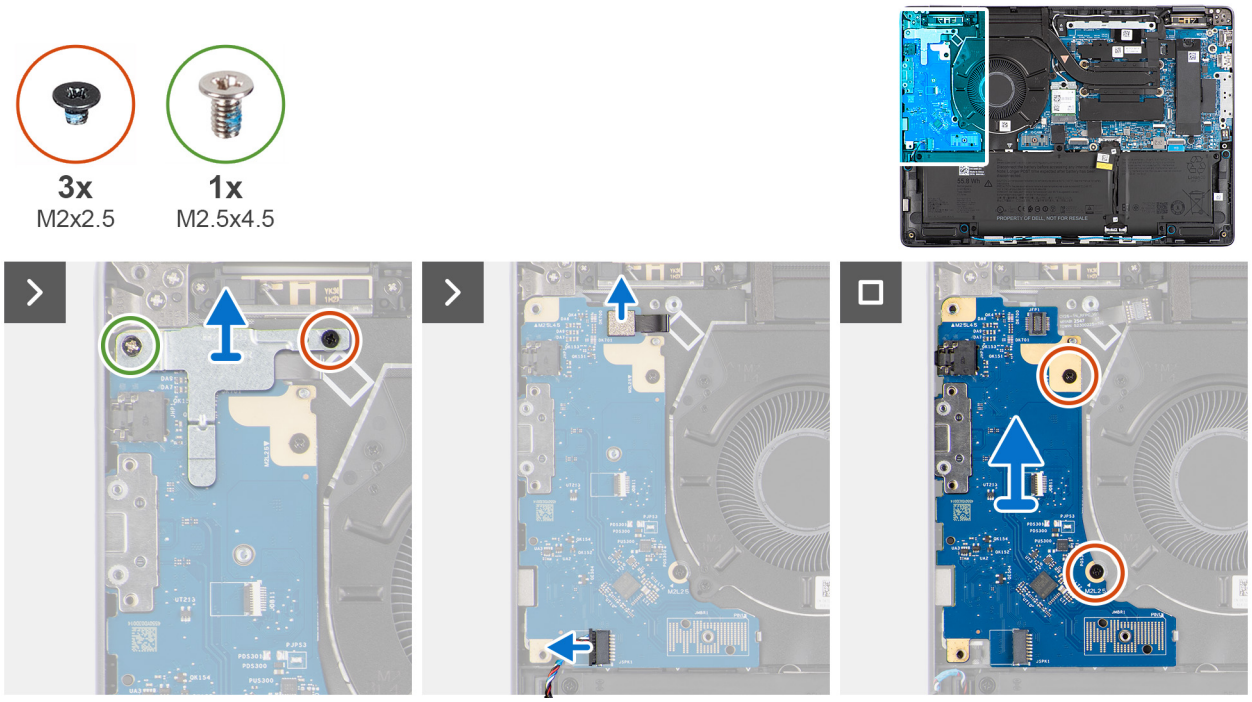


Figure 44. Removing the I/O board

Steps

1. Remove the I/O board bracket screw (M2x2.5) and (M2.5x4.5) securing the I/O board to the palmrest assembly.
2. Disconnect the optional fingerprint-reader cable from the I/O board.
3. Disconnect the speaker cable from the I/O board.
4. Remove the two screws (M2x2.5) that secures the I/O board in place.
5. Lift the I/O board away from the palmrest assembly.

Installing the I/O board

About this task

The following images indicate the location of the I/O board and provide a visual representation of the installation procedure.

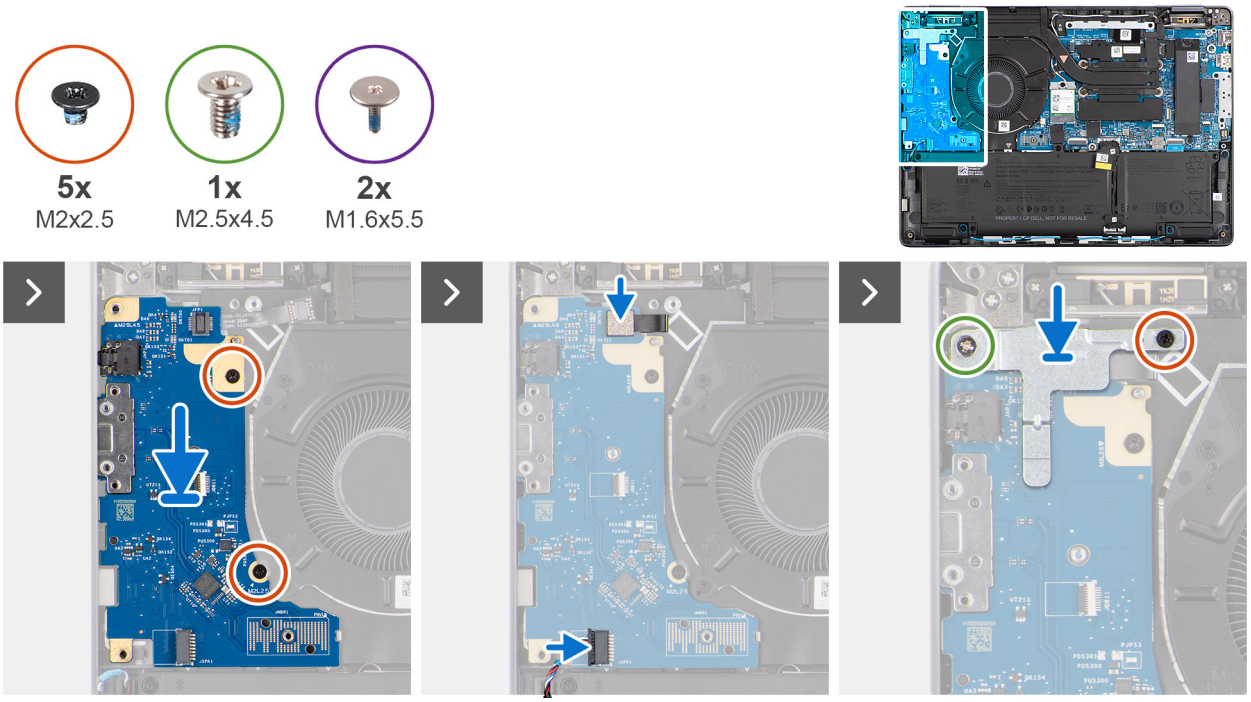


Figure 45. Installing the I/O board

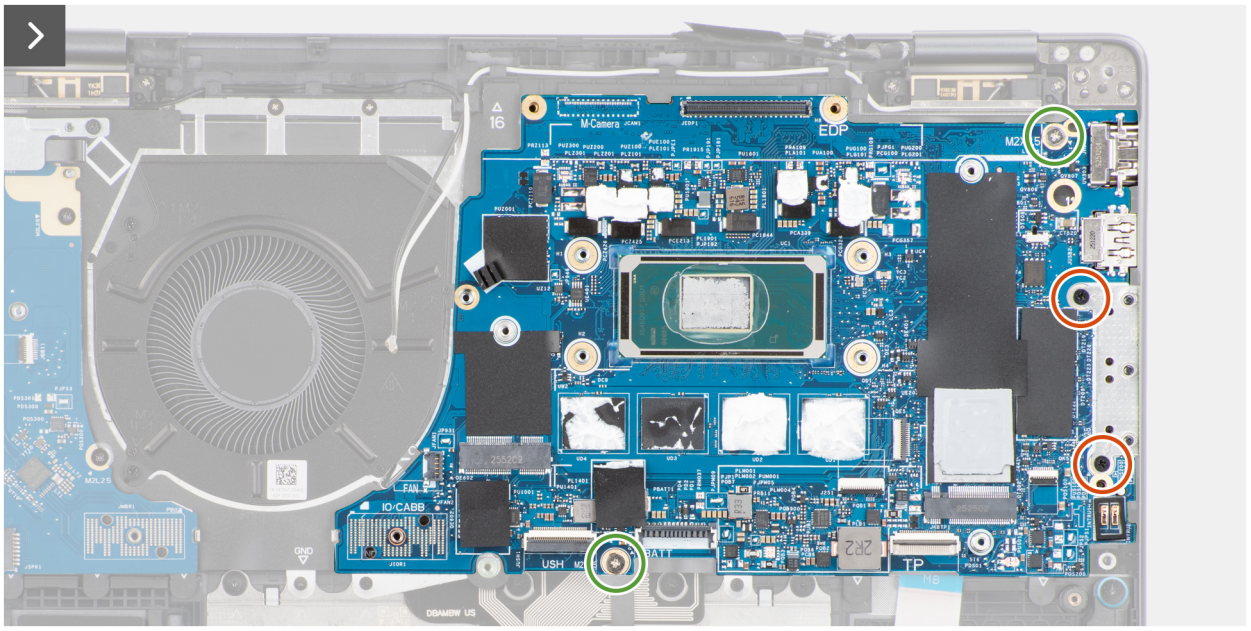


Figure 46. Installing the I/O board

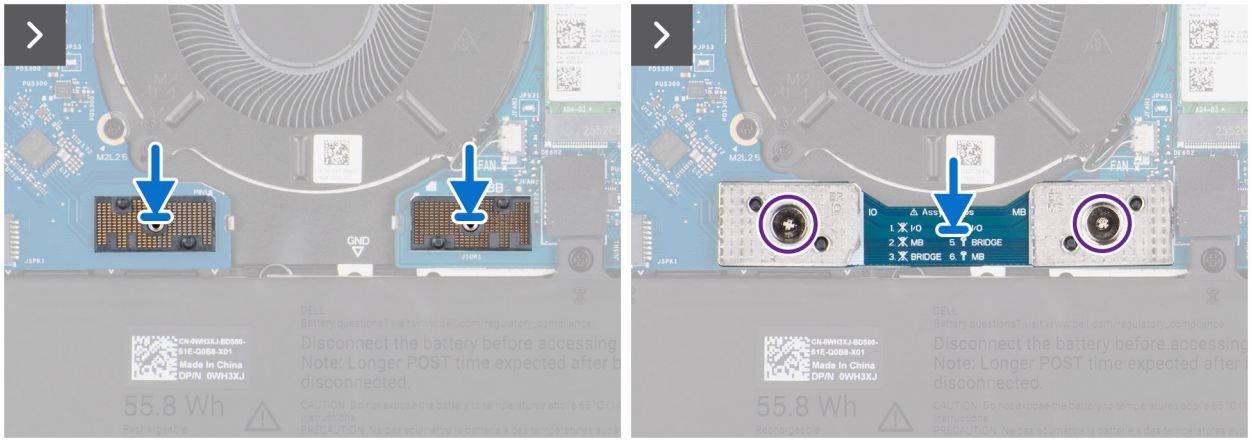


Figure 47. Installing the I/O board

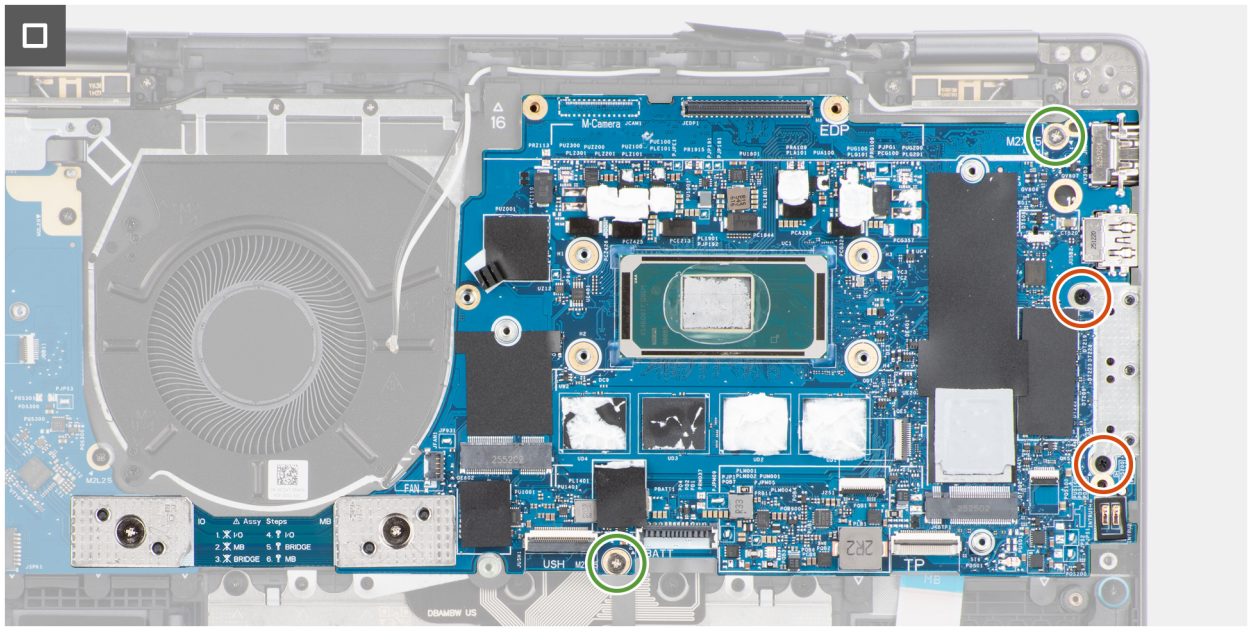


Figure 48. Installing the I/O board

Steps

1. Place the I/O board on the palm-rest assembly.
2. Align the screw holes on the I/O board with the screw holes on the palm-rest assembly.
3. Replace the screw (M2x2.5) that secure the I/O board to the palm-rest assembly.
4. Adhere the WWAN-card thermal pad and Mylar tape on the I/O board.

   NOTE: This step is applicable only if your computer has a WWAN card installed and you are replacing the I/O board on your computer with a new one.

5. Connect the speaker cable to its connector on the I/O board.
6. For computers shipped with the fingerprint reader, connect the fingerprint-reader cable to the I/O board.
7. Remove the two screws (M2.5x4.5) that secure the system board to the palm-rest assembly.
8. Remove the two screws (M2x3.5) that secure the system board to the palm-rest assembly.
9. Using the alignment posts on the I/O board, place and align the I/O-bridge board interposer onto its connector on the I/O board.
10. Using the alignment posts on the system board, place and align the I/O-bridge board interposer onto its connector (JIOR1) on the system board.

CAUTION: To avoid bending the pins and damaging the I/O-bridge board interposer, pinch the edges of the interposer while handling it.

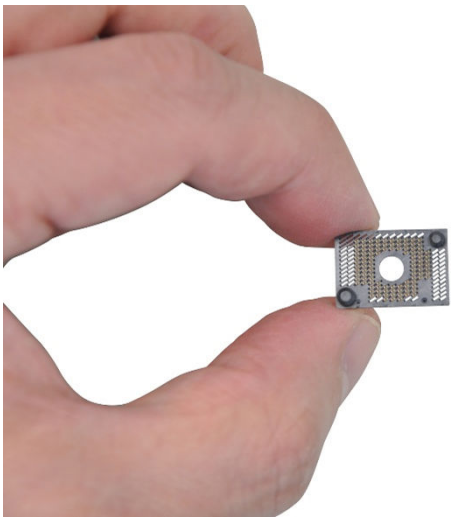


Figure 49. Proper handling of the I/O-bridge board interposer

11. Using the alignment posts on the I/O-bridge board interposers, place and align the I/O-bridge board onto the I/O-bridge board interposers on the system board and I/O board.
12. Replace the screw (M1.6x5.5) that secures the I/O-bridge board to its connector on the I/O board.
13. Replace the screw (M1.6x5.5) that secures the I/O-bridge board to its connector on the system board.
14. Replace the three screws (M2.5x4.5) that secure the system board to the palm-rest assembly.
15. Replace the two screws (M2x2.5) that secure the system board to the palm-rest assembly.

Next steps

1. Install the fan.
2. Install the 5G WWAN card or 4G WWAN card, as applicable.
3. Install the base cover.
4. Install the nano-SIM card tray, if applicable.
5. Follow the procedure in After working inside your computer.

System board

Removing the system board

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.
4. Remove the M.2 2230 or M.2 2280 SSD, as applicable.
5. Remove the 5G WWAN card or 4G WWAN card, as applicable.
6. Remove the WLAN card.
7. Remove the I/O-bridge board.
8. Remove the fan.
9. Remove the display assembly.

About this task

The following image indicates the system board connectors.

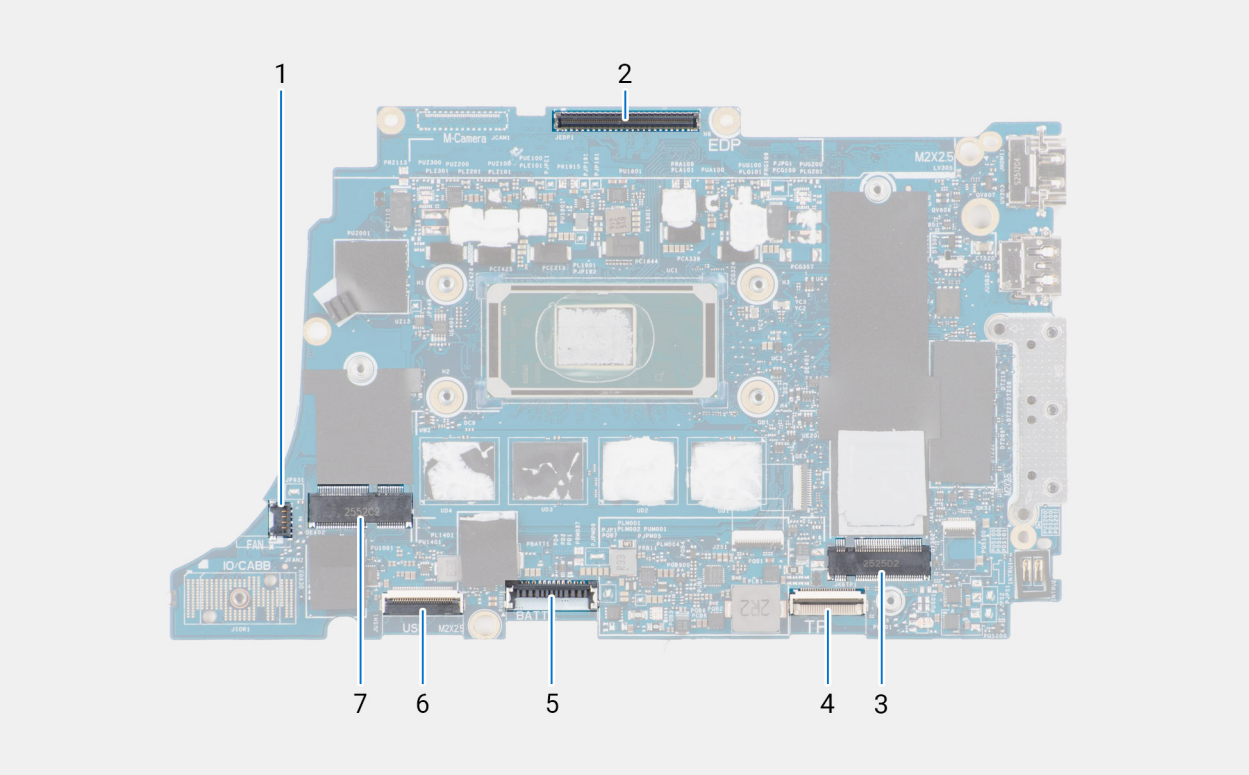


Figure 50. System board connectors

1. Fan-cable connector (FAN)
2. Display-cable connector (LCD)
3. Solid state drive slot (SSD)
4. Touchpad-cable connector (TP)
5. Battery-cable connector (BATT)
6. USH-board connector (USH)
7. WLAN-card connector (WLAN)

The following images indicate the location of the system board and provide a visual representation of the removal procedure.

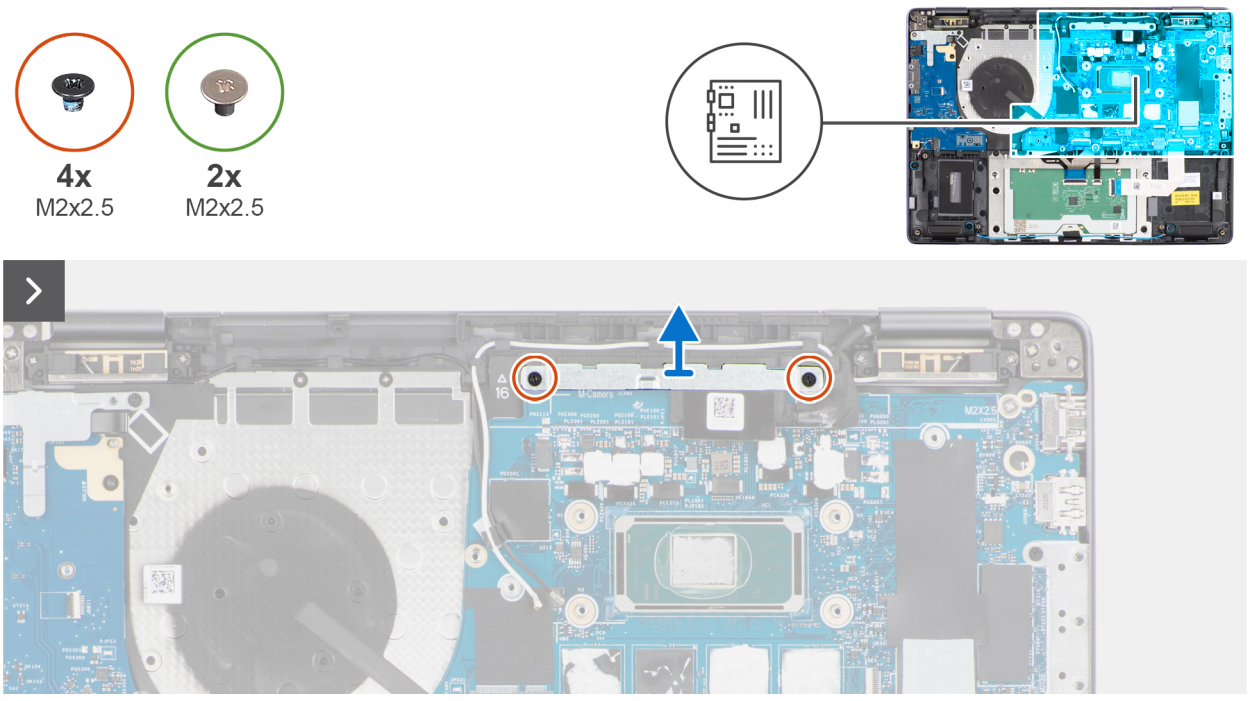


Figure 51. Removing the system board

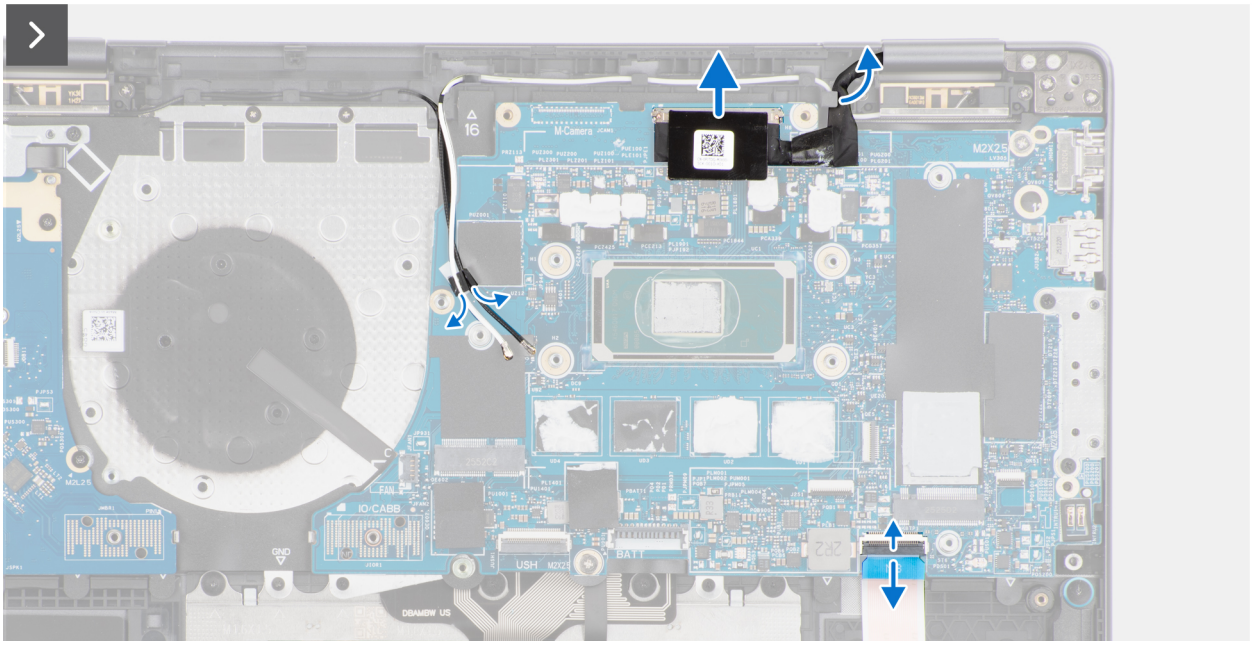


Figure 52. Removing the system board

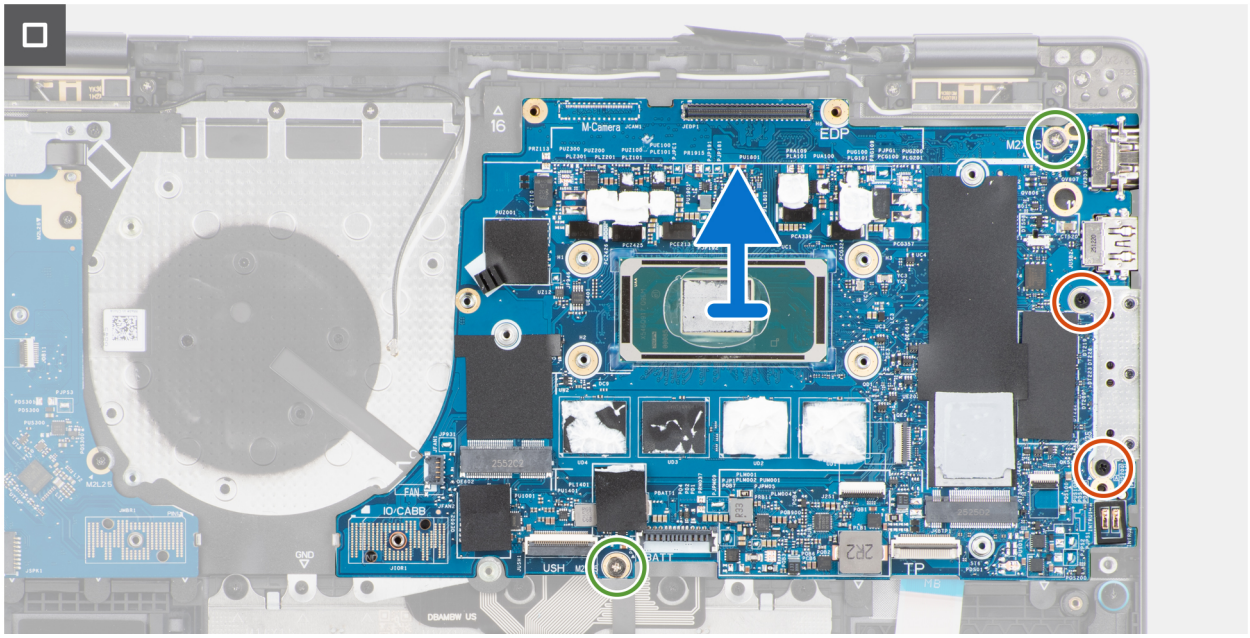


Figure 53. Removing the system board

Steps

1. Disconnect the WLAN antennas from the WLAN card and unrouted the cables.
2. Remove the two screws (M2x2.5) that secure the display-cable bracket to the palm-rest assembly.
3. Lift the display-cable bracket off the palm-rest assembly.
4. Disconnect the display cable from the display cable connector (LCD1) on the system board.
5. Open the latch and disconnect the touchpad cable from the system board.
6. Open the latch and disconnect the smartcard reader cable from the system board.
7. Remove the two screws (M2x2.5) that secure the USB Type-C connector module to the palm-rest assembly.
8. Remove two (M2x2.5) screws securing the system board to the palm-rest assembly.
9. Lift the system board off the palm-rest assembly.

Installing the system board

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the system board connectors.

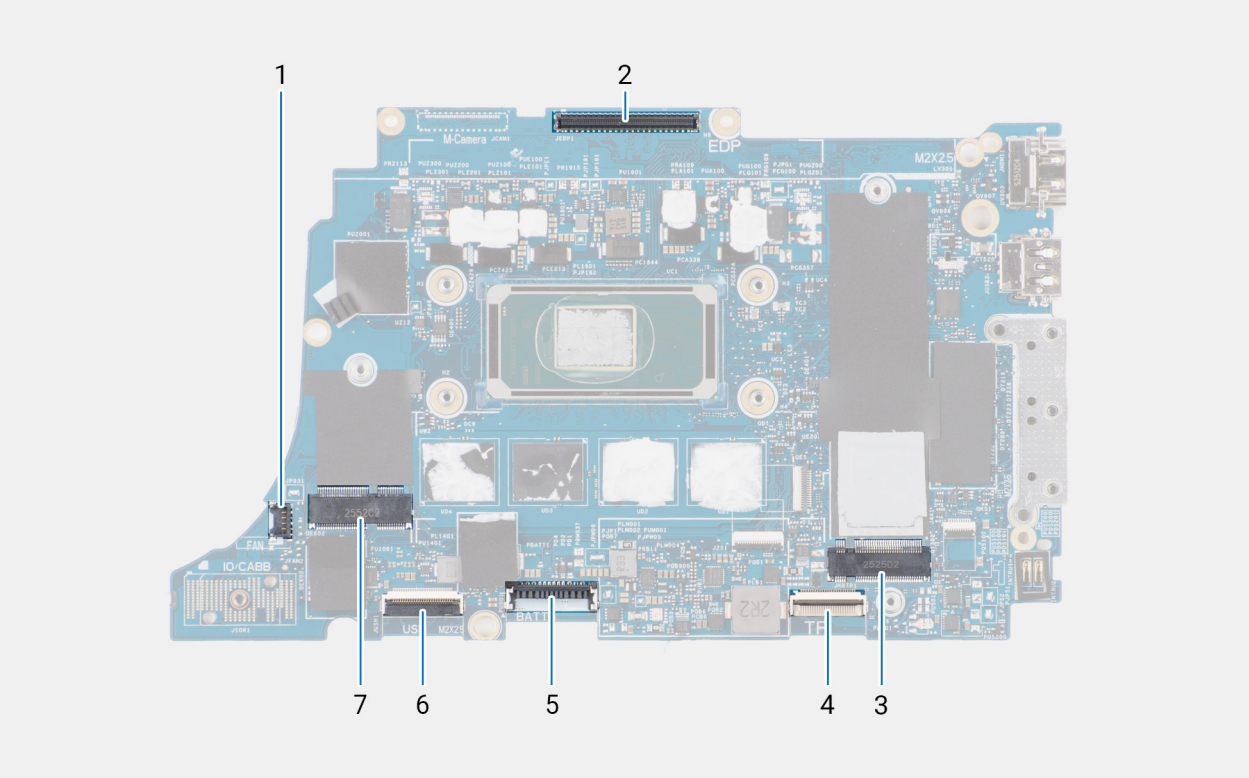


Figure 54. System board connectors

1. Fan-cable connector (FAN)
2. Display-cable connector (LCD)
3. Solid state drive slot (SSD)
4. Touchpad-cable connector (TP)
5. Battery-cable connector (BATT)
6. USH-board connector (USH)
7. WLAN-card connector (WLAN)

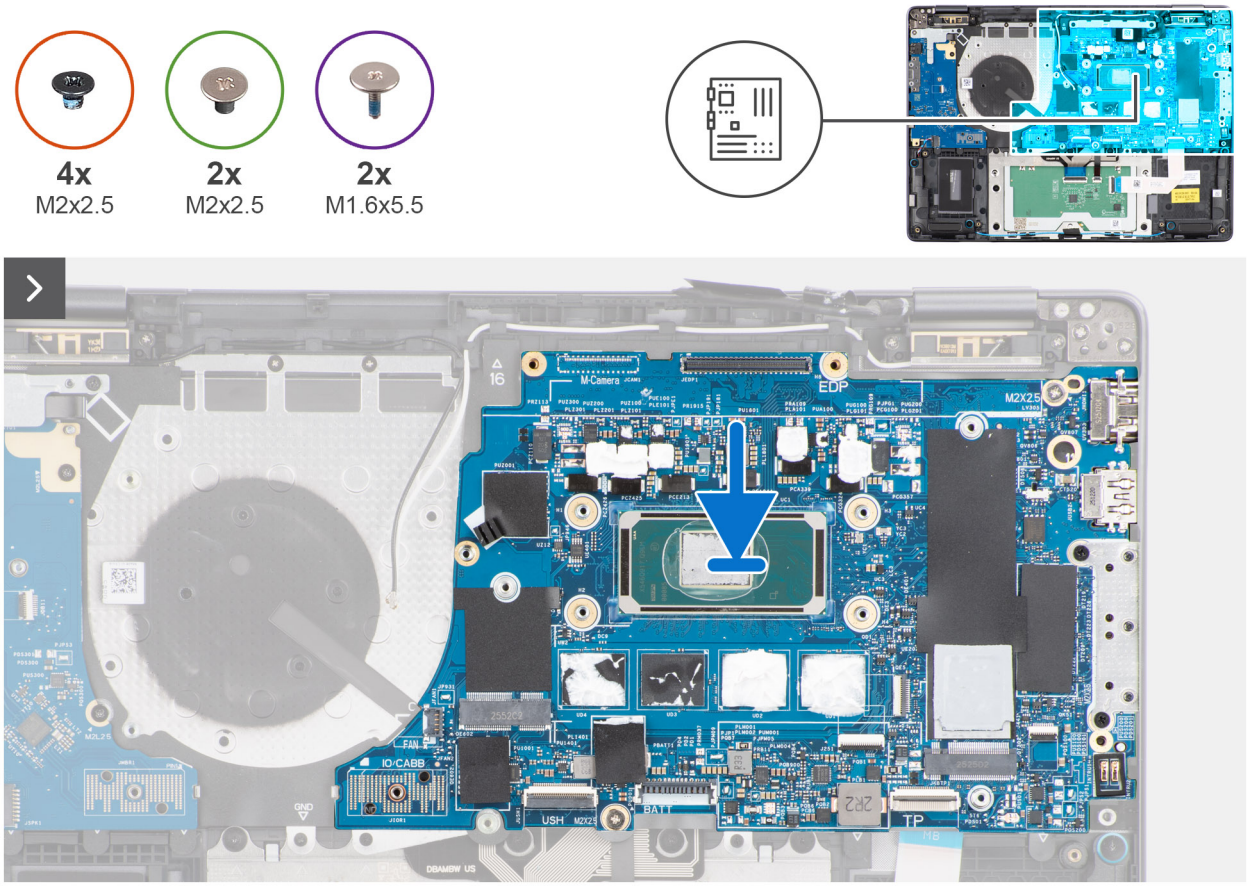


Figure 55. Installing the system board

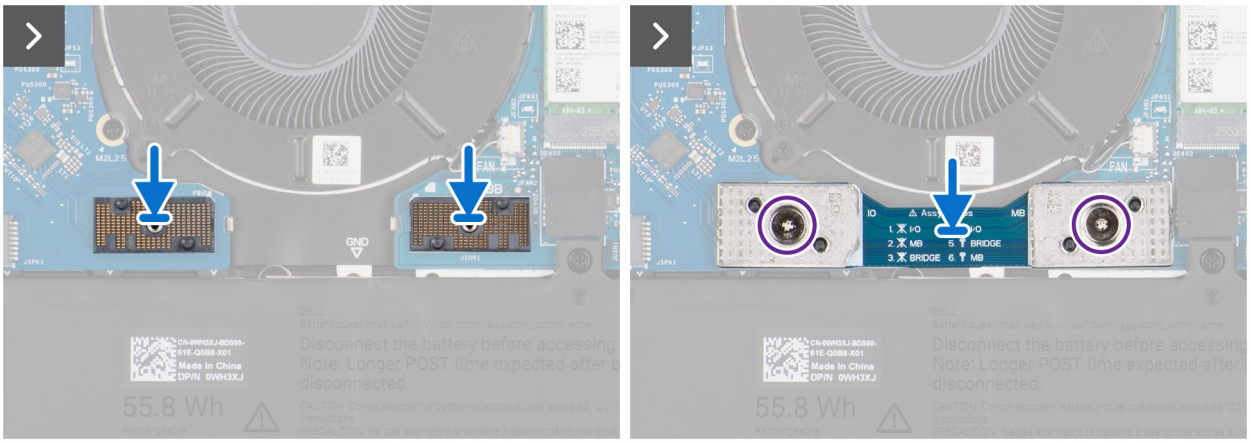


Figure 56. Installing the system board

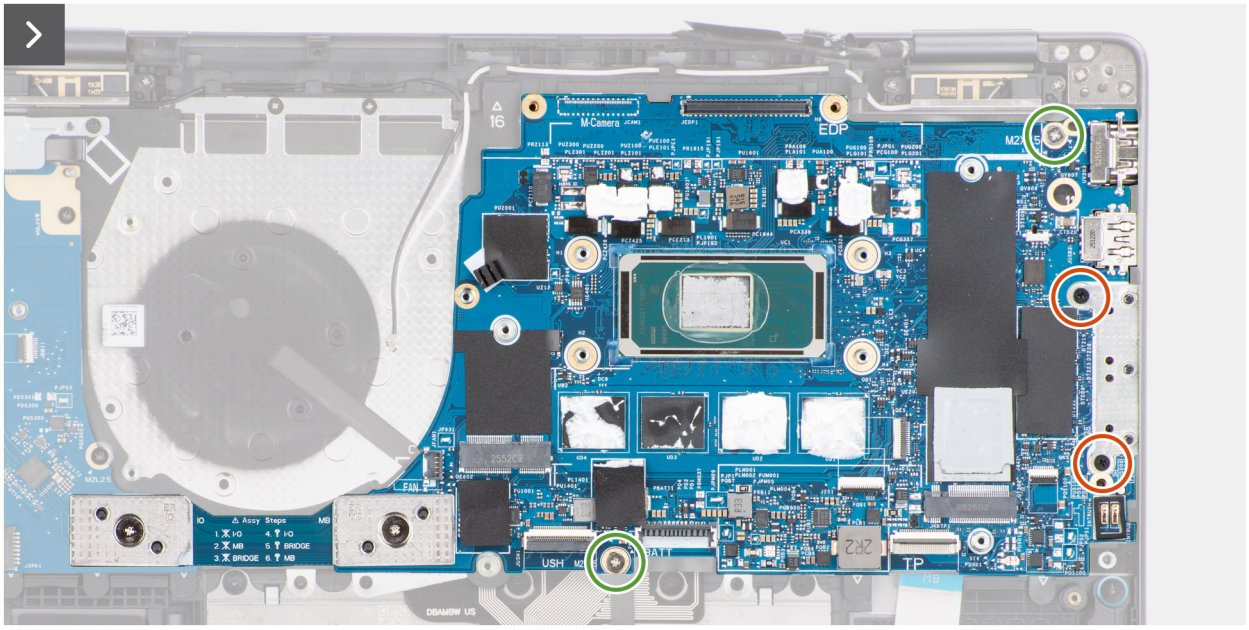


Figure 57. Installing the system board

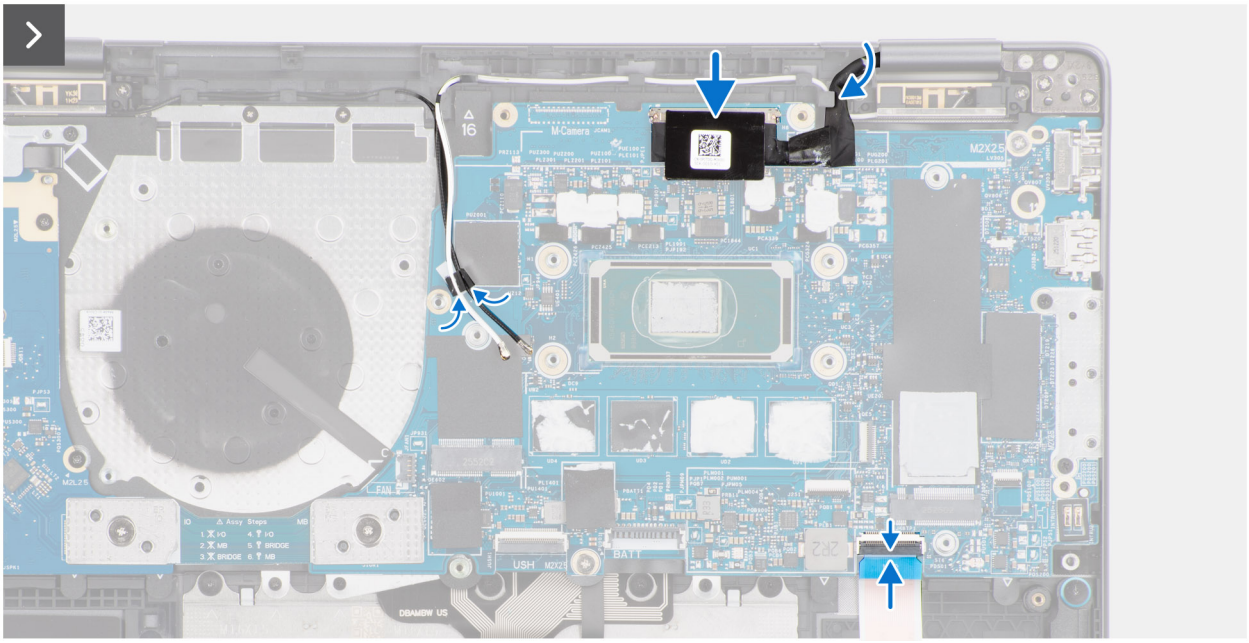


Figure 58. Installing the system board

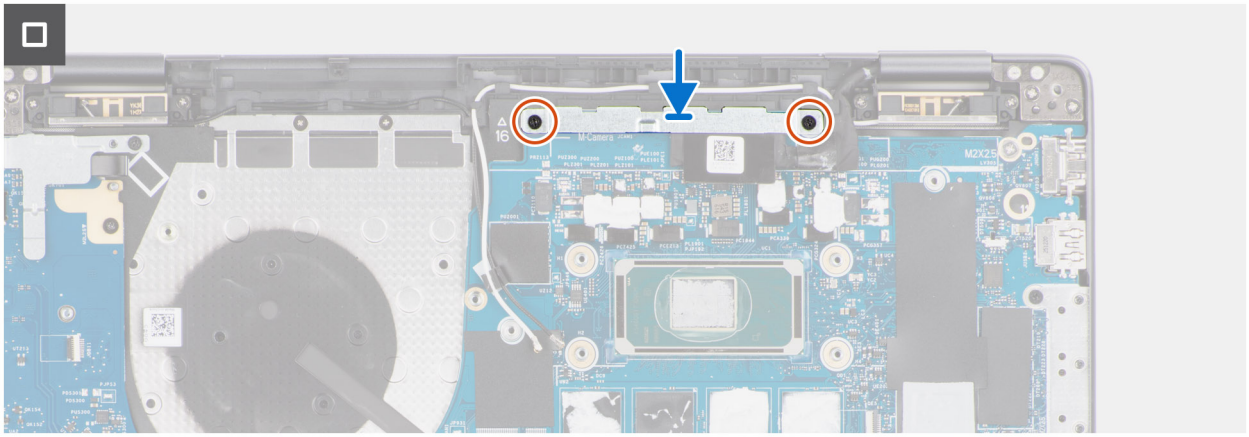


Figure 59. Installing the system board

NOTE: There is an installation sequence (from left to right) that must be followed when either the I/O daughter board or system board is replaced. This installation sequence is shown on the I/O-bridge board.

NOTE: Before installing the screws to the system board, the I/O-bridge board must be seated into location and 2 of the screws for I/O Bridge board must be installed first. After that only the screws of the MB can be installed.



Figure 60. installation sequence

Steps

1. Align the ports on the system board with the slots on the palm-rest assembly and slide them into place.
2. Place the system board on the palm-rest assembly.
3. Align the screw holes on the system board with the screw holes on the palm-rest assembly.
4. Using the alignment posts on the I/O board, place and align the I/O-bridge board interposer onto its connector on the I/O board.
5. Using the alignment posts on the system board, place and align the I/O-bridge board interposer onto its connector on the system board.

   CAUTION: To avoid bending the pins and damaging the I/O-bridge board interposer, pinch the edges of the interposer while handling it.

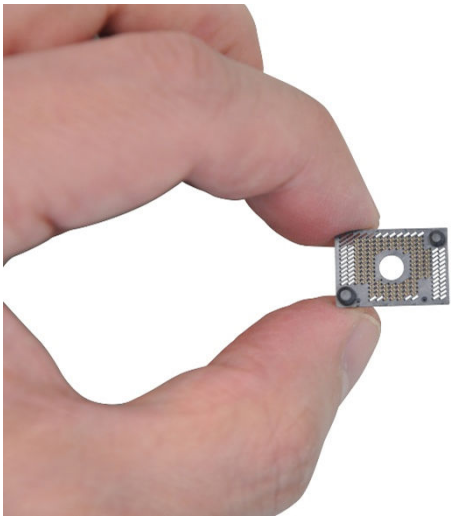


Figure 61. Proper handling of the I/O-bridge board interposer

6. Using the alignment posts on the I/O-bridge board interposers, place and align the I/O-bridge board onto the I/O-bridge board interposers on the system board and I/O board.
7. Replace the screws (M1.6x5.5) that secures the I/O-bridge board to its connector on the I/O board.
8. Replace the screws (M1.6x5.5) that secures the I/O-bridge board to its connector on the system board.
9. Replace the two screws (M2x2.5) that secure the system board to the palm-rest assembly.
10. Replace the two screws (M2x2.5) that secure the system board to the palm-rest assembly.
11. Connect the USH-board cable to its connector (MB) on the system board and close the latch to secure the cable.
12. Connect the touchpad cable to its connector (TP) on the system board and close the latch to secure the cable.
13. Route the WLAN-antenna cables through the routing guides on the system board.
14. Connect the display and camera cable to its connector (EDP) on the system board.
15. Place the display-cable bracket over the display connectors on the system board.
16. Align the screw holes on the display-cable bracket to the screw holes on the system board.
17. Replace the two screws (M2x2.5) that secure the display-cable bracket to the system board.

Next steps

1. Install the display assembly.
2. Install the WLAN card.
3. Install the fan.
4. Install the I/O-bridge board.
5. Install the 5G WWAN card or 4G WWAN card, as applicable.
6. Install the M.2 2230 or M.2 2280 SSD, as applicable.
7. Install the base cover.
8. Install the nano-SIM card tray, if applicable.
9. Follow the procedure in After working inside your computer.

Power button with optional fingerprint reader

Removing the power button with an optional fingerprint reader

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.
4. Remove the battery.

5. Remove the M.2 2230 or M.2 2280 SSD, as applicable.
6. Remove the 5G WWAN card or 4G WWAN card, as applicable.
7. Remove the WLAN card.
8. Remove the I/O-board bridge.
9. Remove the display assembly.
10. Remove the I/O board.

About this task

The following images indicate the location of the power button with the optional fingerprint reader and provide a visual representation of the removal procedure.

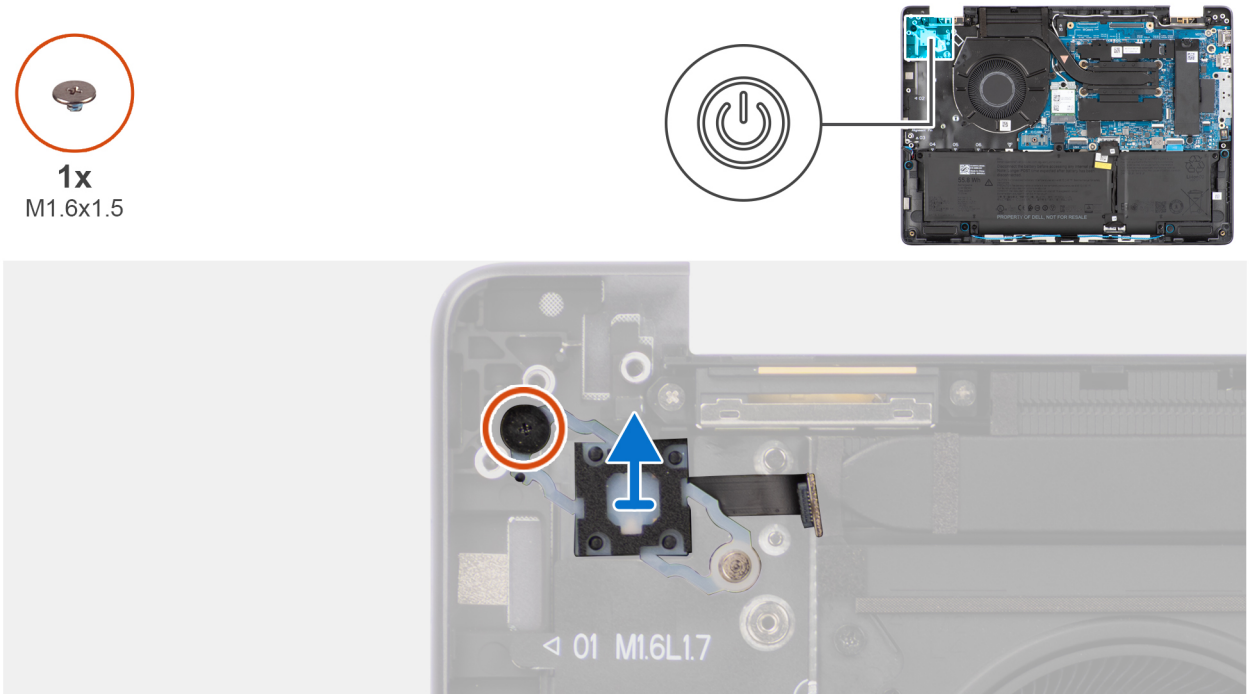


Figure 62. Removing the power button with an optional fingerprint reader

Steps

1. Remove the screw (M1.6x1.5) that secures the power button to the palm-rest assembly.
2. Lift the power button off the palm-rest assembly.

Installing the power button with optional fingerprint reader

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the power button with optional fingerprint reader and provide a visual representation of the installation procedure.

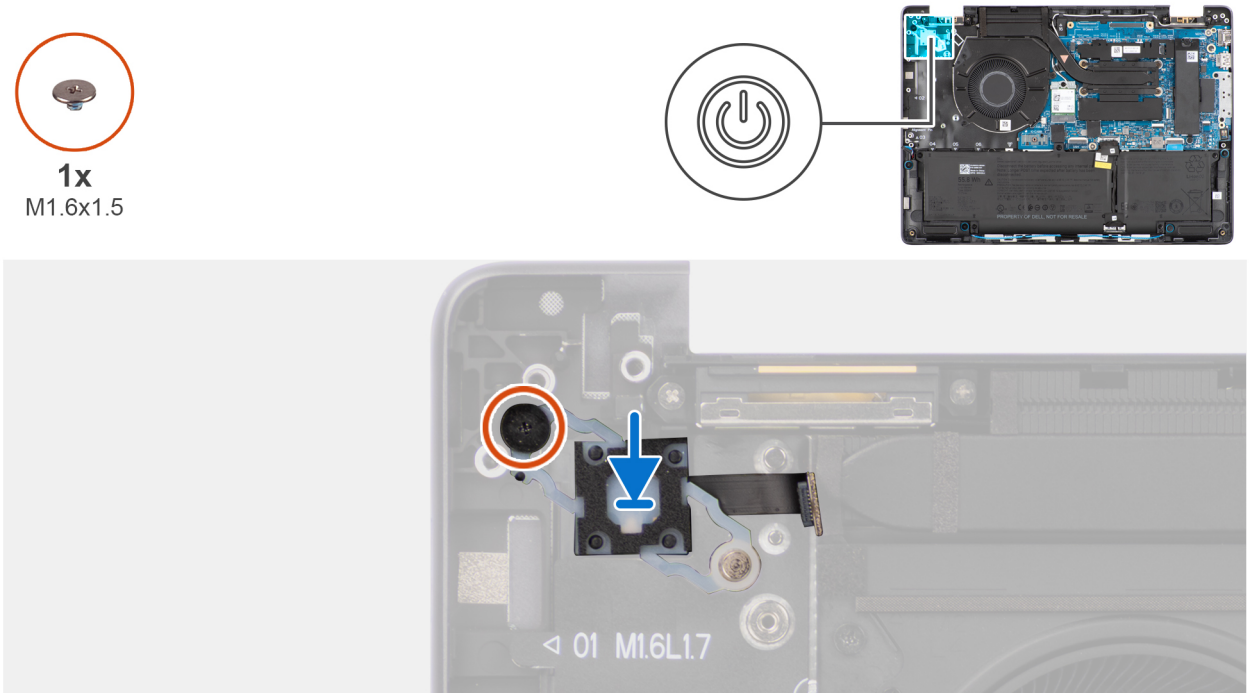


Figure 63. Installing the power button with optional fingerprint reader

Steps

1. Align and place the power button on the palm-rest assembly.
2. Replace the screw (M1.6x1.5) that secures the power button to the palm-rest assembly.

Next steps

1. Install the I/O board.
2. Install the display assembly.
3. Install the I/O-board bridge.
4. Install the WLAN card.
5. Install the 5G WWAN card or 4G WWAN card, as applicable.
6. Install the M.2 2230 or M.2 2280 SSD, as applicable.
7. Install the battery.
8. Install the base cover.
9. Install the nano-SIM card tray, if applicable.
10. Follow the procedure in After working inside your computer.

Touchpad cable

Removing the touchpad cable

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.
4. Remove the battery.

About this task

The following images indicate the location of the touchpad cable and provide a visual representation of the removal procedure.

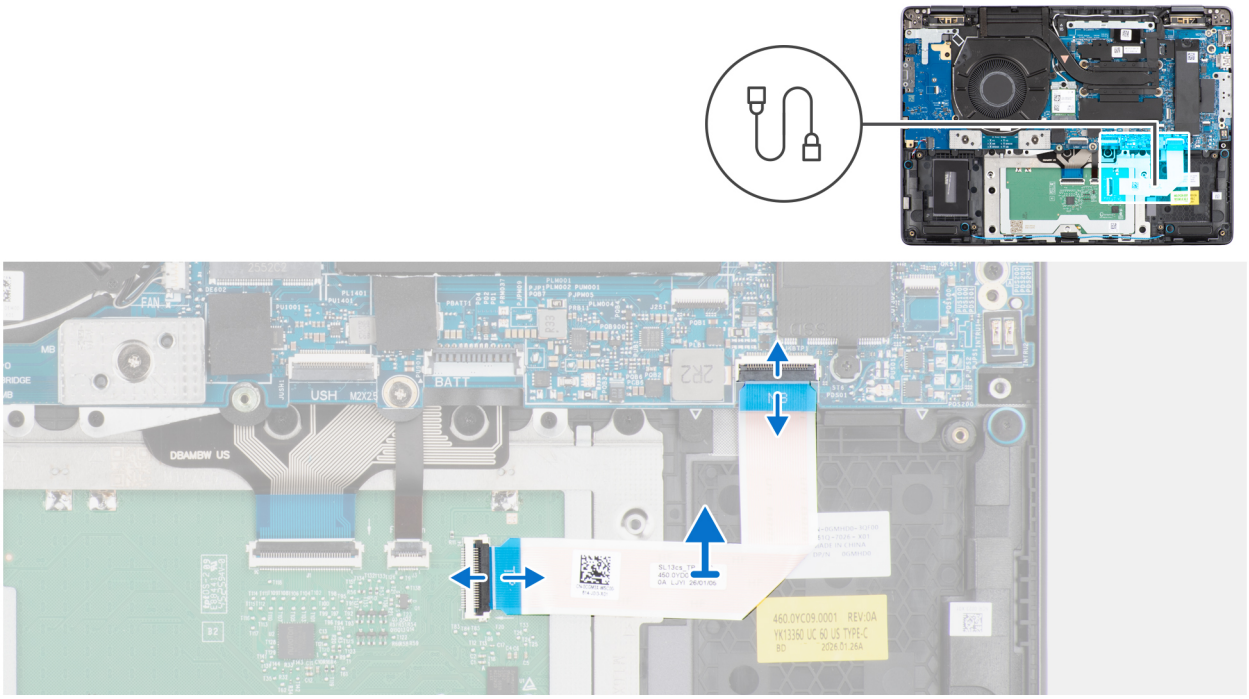


Figure 64. Removing the touchpad cable

Steps

1. Peel the tape that secures the touchpad cable to the palmrest-assembly..
2. Disconnect the touchpad cable from the system board.

Installing the touchpad cable

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the touchpad cable and provide a visual representation of the installation procedure.

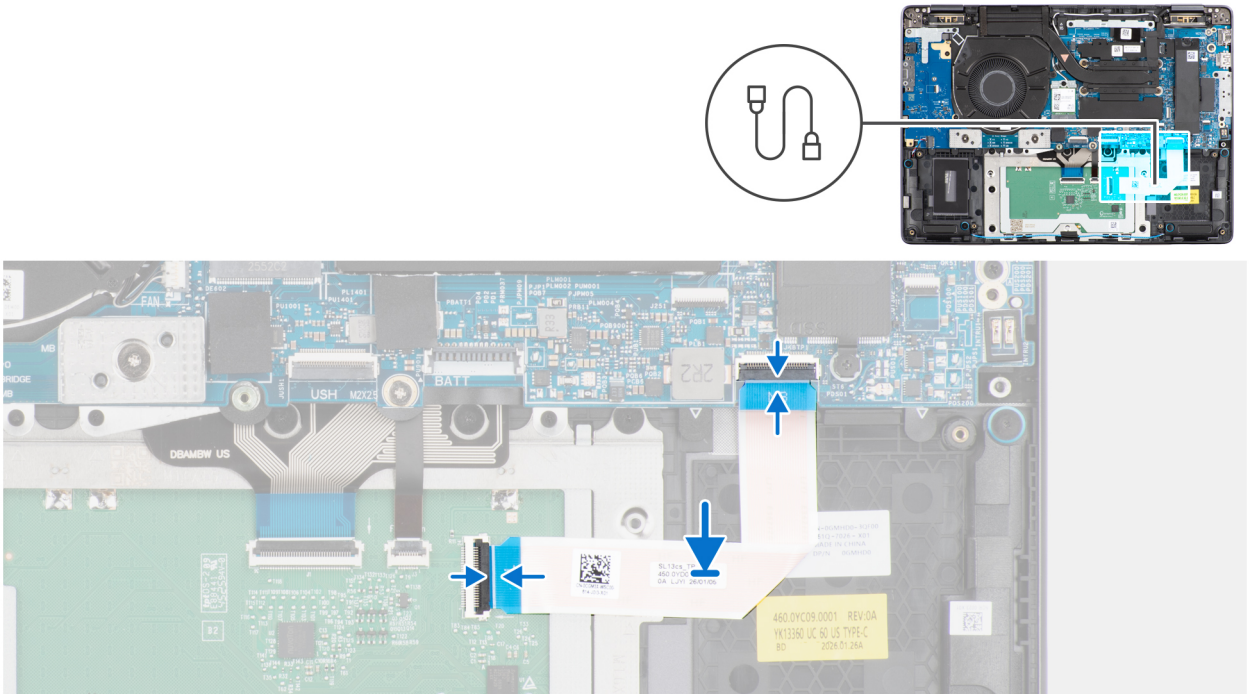


Figure 65. Installing the touchpad cable

Steps

1. Close the latch and connect touchpad cable to the connector on the palm-rest assembly.
2. Adhere the touchpad cable to the system board.

Next steps

1. Install the battery.
2. Install the base cover.
3. Install the nano-SIM card tray, if applicable.
4. Follow the procedure in After working inside your computer.

Keyboard

Removing the keyboard

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.
4. Remove the battery.
5. Remove the M.2 2230 or M.2 2280 SSD, as applicable.
6. Remove the 5G WWAN card or 4G WWAN card, as applicable.
7. Remove the WLAN card.
8. Remove the I/O-bridge board.
9. Remove the fan.
10. Remove the display assembly.
11. Remove the system board.

NOTE: The system board can be removed and installed with the heat sink to preserve the thermal bond.

12. Remove the I/O board.

About this task

The following images indicate the location of the keyboard and provide a visual representation of the removal procedure.

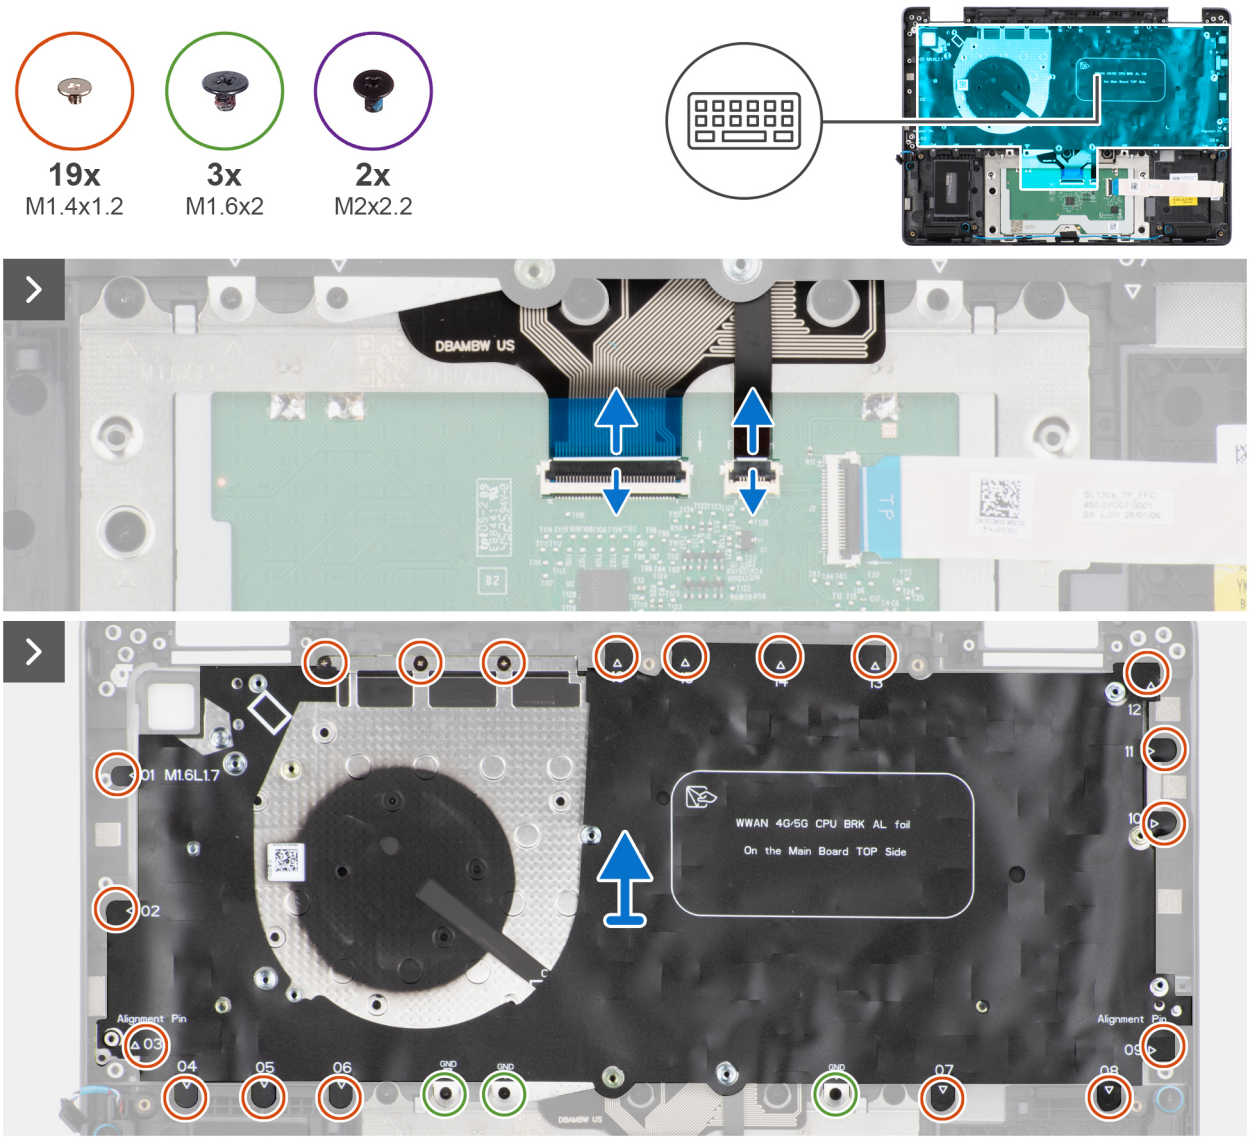


Figure 66. Removing the keyboard

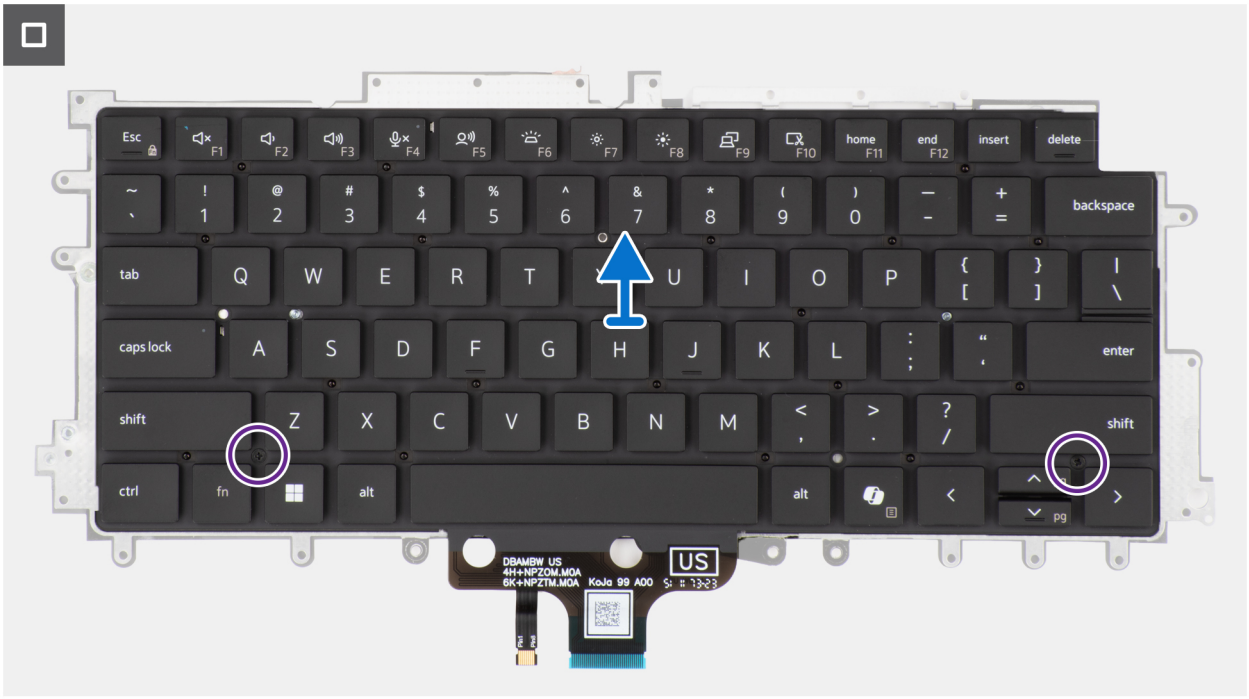


Figure 67. Removing the keyboard

Steps

1. Open the latch and disconnect the keyboard cable from the touchpad.

   NOTE: For the keyboard, the latch is the "black" portion of the connector.

2. Flip Open the latch and disconnect the keyboard-backlight cable from the touchpad.

   NOTE: For the keyboard-backlight, the latch is the "black" portion of the connector.

3. Remove the 19 screws (M1.4x1.2) and three (M1.6x2) screws that secure the keyboard bracket to the palm-rest assembly.
4. Lift the keyboard bracket off the palm-rest assembly.
5. Turn the keyboard bracket over.
6. Remove the two screws (M2x2.2) that secure the keyboard to the keyboard bracket.
7. Lift the keyboard off the keyboard bracket.

Installing the keyboard

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the keyboard and provide a visual representation of the installation procedure.



Figure 68. Installing the keyboard

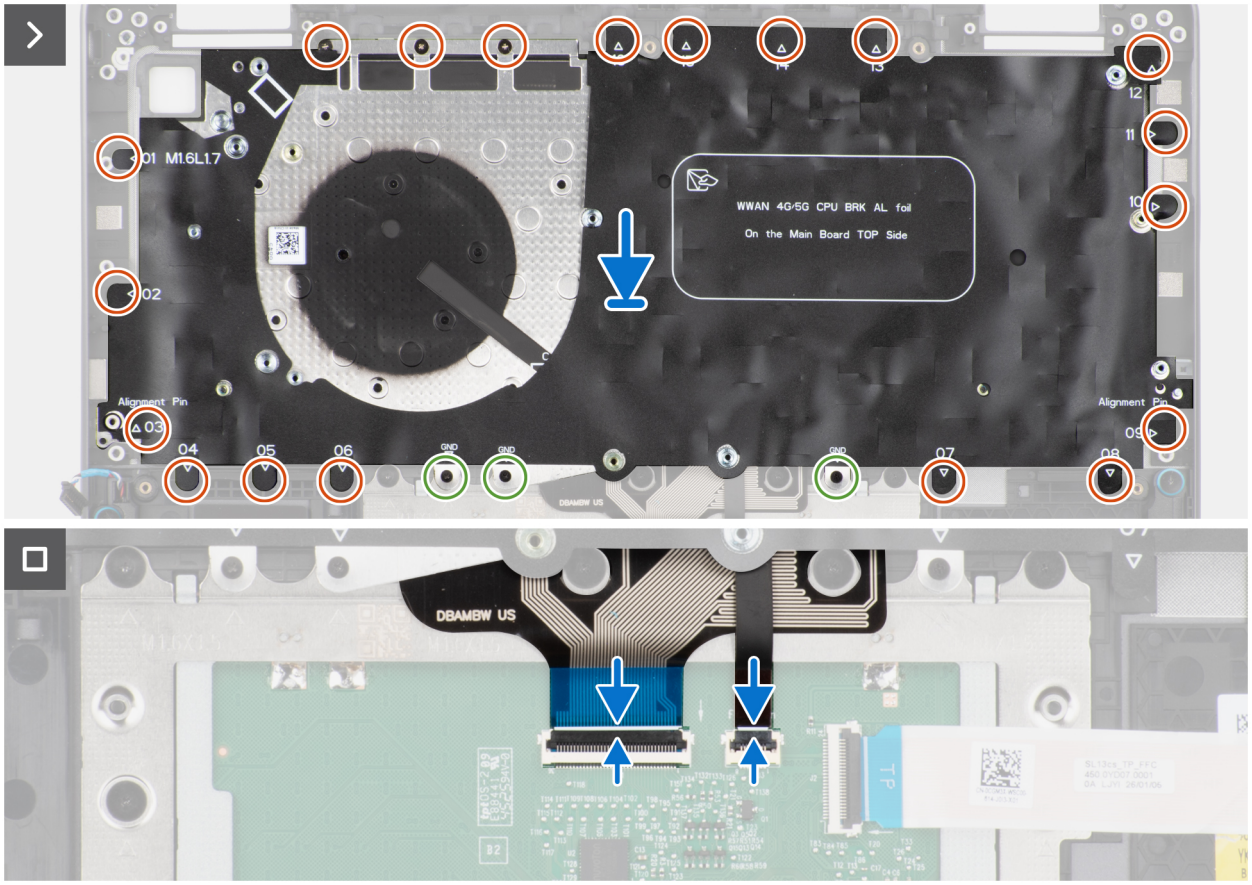


Figure 69. Installing the keyboard

Steps

1. Align and place the keyboard on the keyboard bracket.
2. Replace the two screws (M2x2.2) to secure the keyboard to the keyboard bracket.
3. Turn the keyboard bracket over.
4. Align and place the keyboard bracket on the palm-rest assembly.
5. Replace the 19 screws (M1.4x1.2) and three (M1.6x2) screws that secure the keyboard bracket to the palm-rest assembly.
6. Connect the keyboard-backlight cable to the connector on the touchpad and close the latch to secure the cable.

   NOTE: The system board can be removed and installed with the heat sink to preserve the thermal bond.

   NOTE: For the keyboard-backlight, the latch is the "black" portion of the connector.

7. Connect the keyboard cable to the connector on the touchpad and close the latch to secure the cable.

   NOTE: For the keyboard, the latch is the "black" portion of the connector.

Next steps

1. Install the I/O board.
2. Install the system board.

   NOTE: The system board can be removed and installed with the heat sink to preserve the thermal bond.

3. Install the display assembly.
4. Install the I/O-bridge board.
5. Install the WLAN card.
6. Install the fan.

7. Install the 5G WWAN card or 4G WWAN card, as applicable.
8. Install the M.2 2230 or M.2 2280 SSD, as applicable.
9. Install the battery.
10. Install the base cover.
11. Install the nano-SIM card tray, if applicable.
12. Follow the procedure in After working inside your computer.

Nano-SIM card dummy filler

Removing the nano-SIM card dummy filler

Prerequisites

1. Follow the procedure in Before working inside your computer.

NOTE: This procedure is applicable only if your computer is shipped with a WWAN module.

CAUTION: Removing the SIM card when the computer is turned on can cause data loss or damage to the card. Ensure that your computer is turned off or the network connections are disabled.

About this task

The following images indicate the location of the nano-SIM card dummy filler and provide a visual representation of the removal procedure.

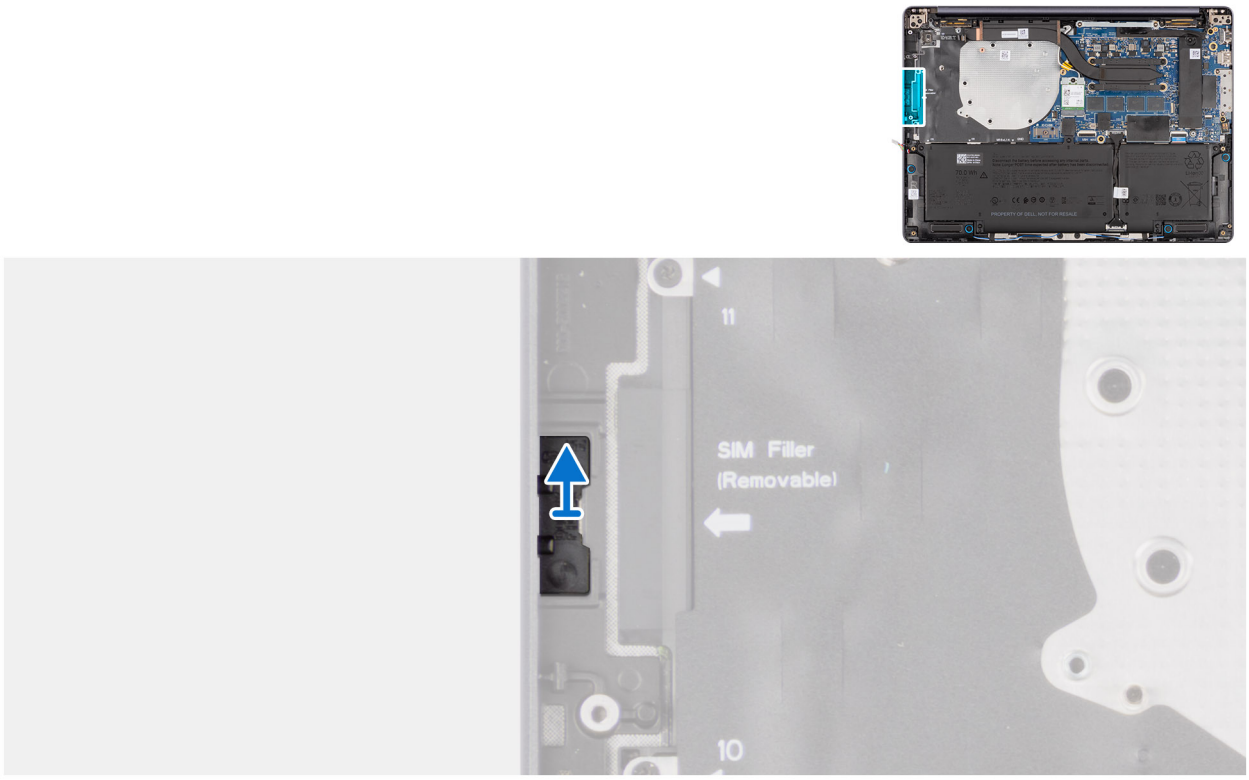


Figure 70. Removing the nano-SIM card dummy filler

Steps

1. Identify the dummy filler installed in the SIM slot.
2. Using a fingertip, gently push or pull the dummy filler outward in the direction indicated by the arrow.

Installing the nano-SIM card dummy filler

Prerequisites

NOTE: This procedure is applicable only if your computer is shipped with a WWAN module.

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the nano-SIM card dummy filler and provide a visual representation of the installation procedure.

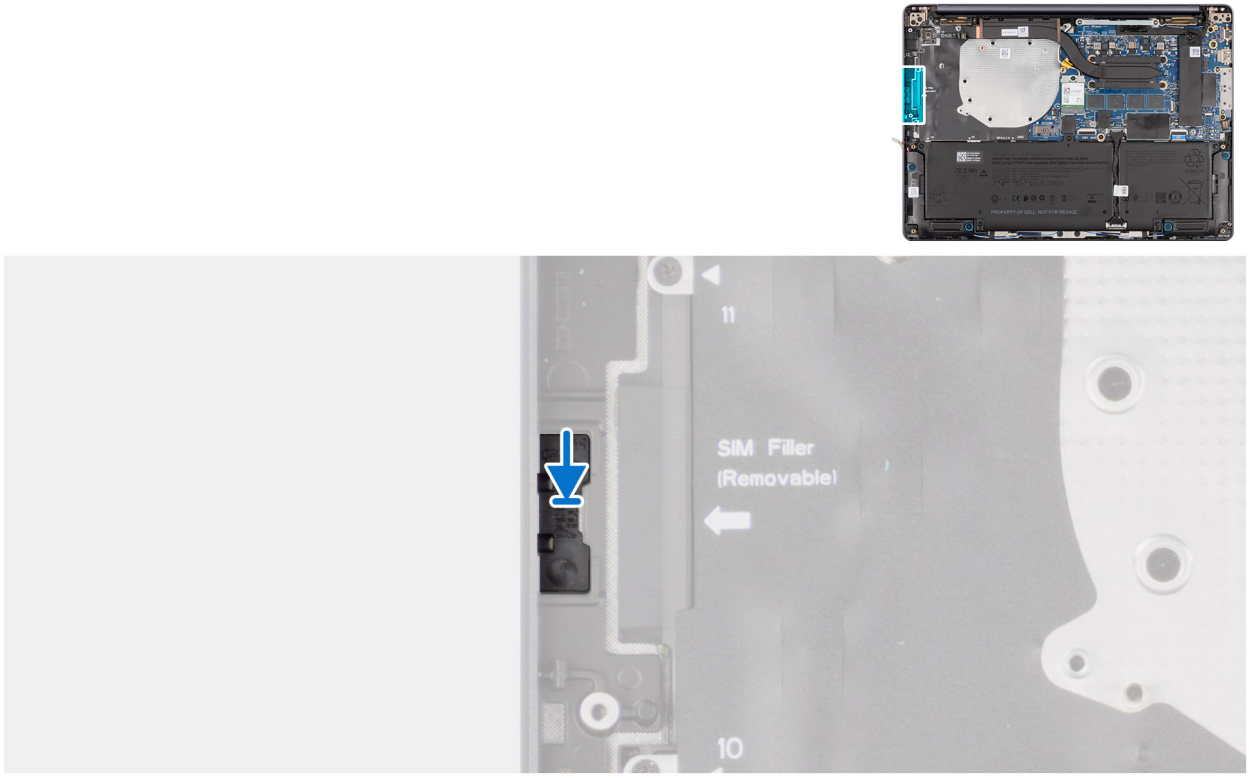


Figure 71. Installing the nano-SIM card dummy filler

Steps

1. Align the dummy filler with the nano-SIM slot.
2. Gently insert the dummy filler into the slot.

Next steps

1. Follow the procedure in After working inside your computer.

Palm-rest assembly

Removing the palm-rest assembly

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.

4. Remove the battery.
5. Remove the M.2 2230 or M.2 2280 SSD, as applicable.
6. Remove the 5G WWAN card or 4G WWAN card, as applicable.
7. Remove the WLAN card.
8. Remove the I/O-bridge board.
9. Remove the speakers.
10. Remove the fan.
11. Remove the USH-board cable.
12. Remove the smart-card reader.
13. Remove the display assembly.
14. Remove the system board.

NOTE: The system board can be removed and installed with the heat sink to preserve the thermal bond.

15. Remove the I/O board.
16. Remove the power button with an optional fingerprint reader.
17. Remove the WLAN antenna module.
18. Remove the keyboard.
19. Remove the nano-SIM card slot dummy filler, if applicable.

About this task

NOTE: The palm-rest assembly is an assembly that contains the following components. To replace any of the components listed below, replace the entire palm-rest assembly.

- touchpad
- touchpad cable
- palm-rest assembly
- USH board
- USH-board cable

NOTE: When replacing the palm-rest assembly, transfer the dummy SIM filler to the new palm-rest. assembly.

NOTE: For computers shipped with WLAN configuration only, the nano-SIM card slot dummy filler is a separate service part and is not included with replacement palm-rest assembly. Hence, the nano-SIM card slot dummy filler must be removed and then reinstalled when replacing the palm-rest assembly.

The following image indicates the location of the palm-rest assembly and provides a visual representation of the removal procedure.

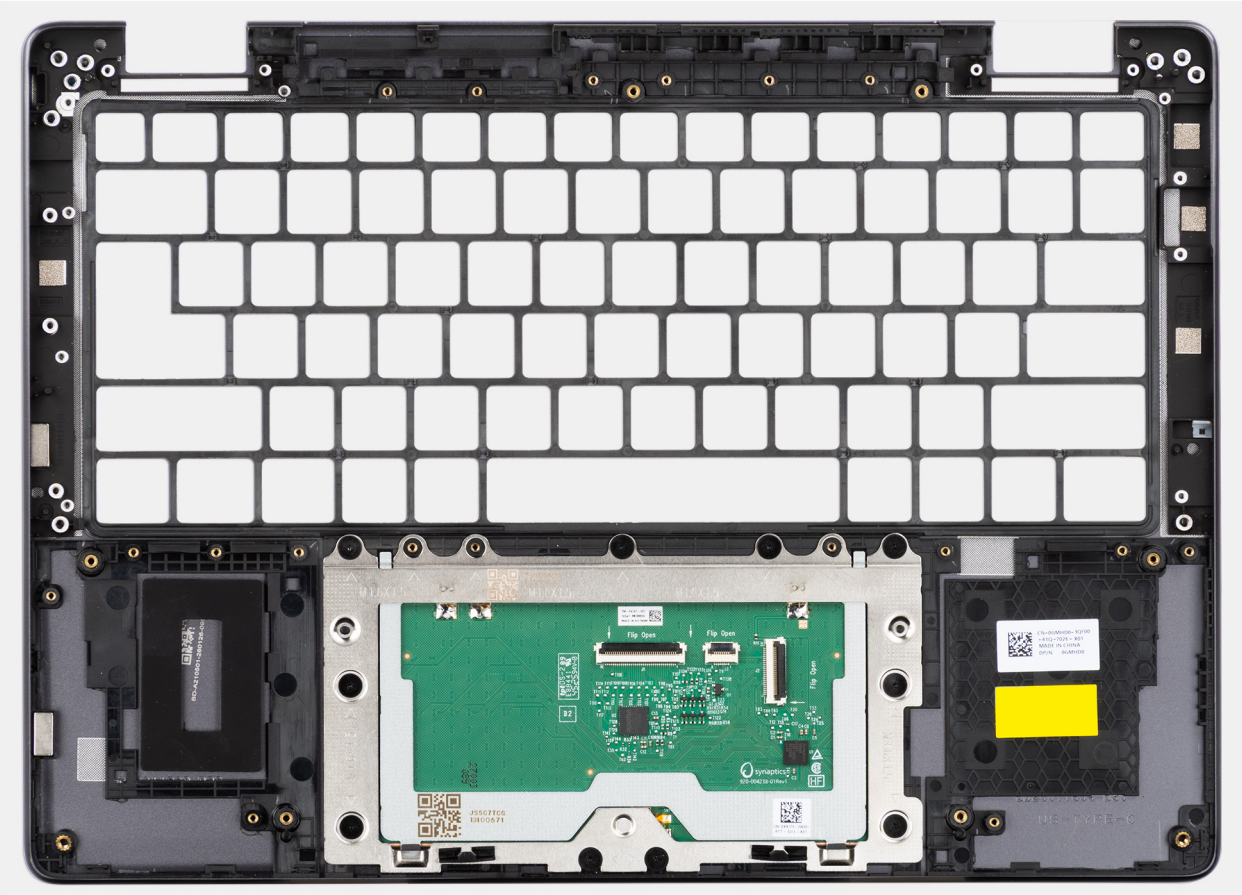


Figure 72. Removing the palm-rest assembly

Steps

Remove all the components mentioned in the pre-requisites to get the palm-rest assembly.

NOTE: Do not remove the touchpad from the palm-rest assembly.

NOTE: Security-cable slot (wedge-shaped) is part of palm-rest assembly.

NOTE: For computers shipped with WLAN configuration only, the nano-SIM card slot dummy filler is a separate service part and is not included with replacement palm-rest assembly. Hence, the nano-SIM card slot dummy filler must be removed and then reinstalled when replacing the palm-rest assembly.

Installing the palm-rest assembly

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the palm-rest assembly and provides a visual representation of the installation procedure.

NOTE: The palm-rest assembly is an assembly that contains the following components. To replace any of the components listed below, replace the entire palm-rest assembly.

- touchpad
- touchpad cable
- palm-rest assembly

- USH board
- USH-board cable

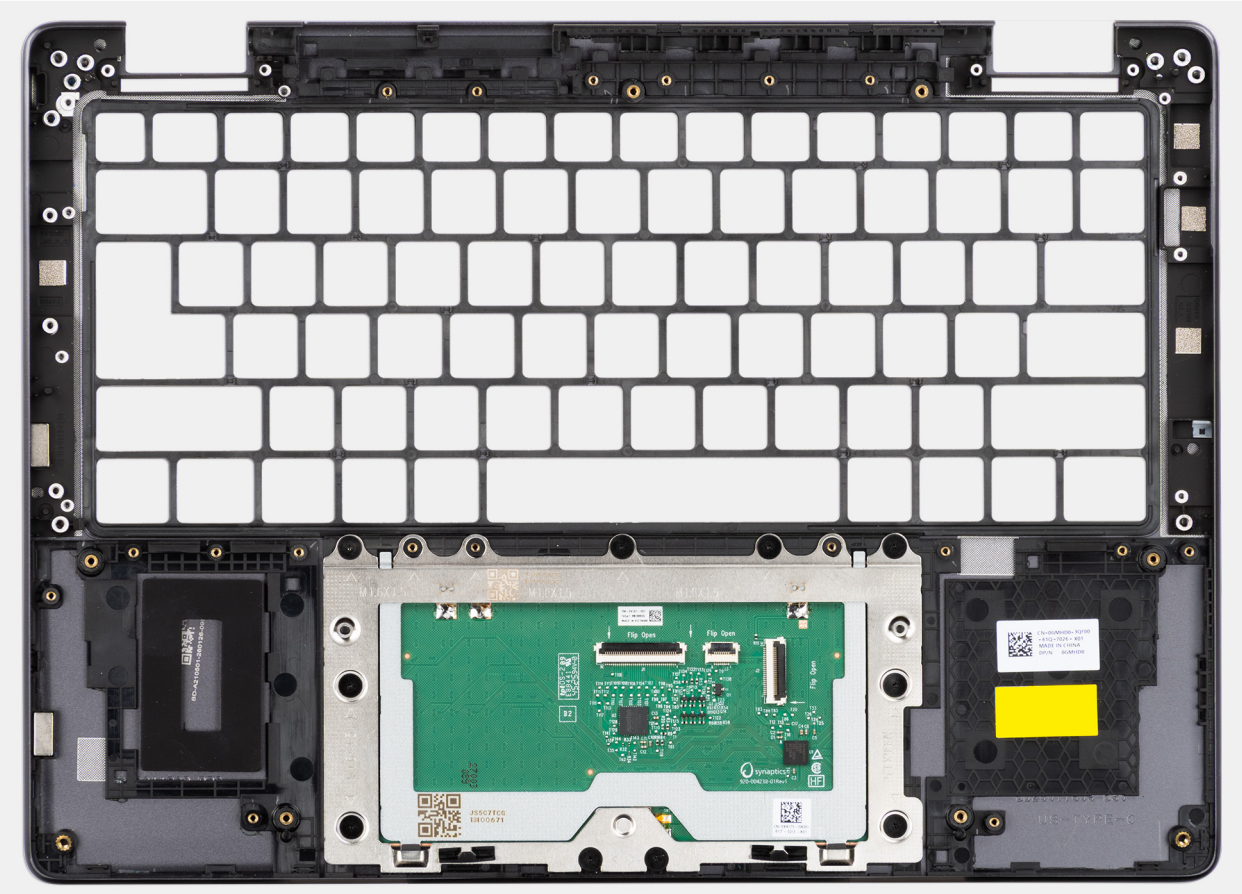


Figure 73. Installing the palm-rest assembly

Steps

Place the palm-rest assembly on a clean and flat surface.

NOTE: The touchpad is pre-assembled with the palm-rest assembly.

NOTE: Security-cable slot (wedge-shaped) is part of palm-rest assembly.

NOTE: For computers shipped with WLAN configuration only, the nano-SIM card slot dummy filler is a separate service part and is not included with replacement palm-rest assembly. Hence, the nano-SIM card slot dummy filler must be removed and then reinstalled when replacing the palm-rest assembly.

Next steps

1. Install the nano-SIM card slot dummy filler, if applicable.
2. Install the keyboard.
3. Install the WLAN-antenna module.
4. Install the power button with an optional fingerprint reader.
5. Install the I/O board.
6. Install the system board.

   NOTE: The system board can be removed and installed with the heat sink to preserve the thermal bond.

7. Install the display assembly.
8. Install the smart card reader.

9. Install the USH-board cable.
10. Install the I/O-bridge board.
11. Install the fan.
12. Install the speakers.
13. Install the WLAN card.
14. Install the 5G WWAN card or 4G WWAN card, as applicable.
15. Install the M.2 2230 or M.2 2280 SSD, as applicable.
16. Install the battery.
17. Install the base cover.
18. Install the nano-SIM card tray, if applicable.
19. Follow the procedure in After working inside your computer.

Display assembly

Removing the display assembly

Prerequisites

1. Follow the procedure in Before working inside your computer.
2. Remove the nano-SIM card tray, if applicable.
3. Remove the base cover.
4. Remove the battery.
5. Remove the 5G WWAN card or 4G WWAN card, as applicable.

About this task

The following images indicate the location of the display assembly and provide a visual representation of the removal procedure.

NOTE: The procedures in this section only apply to computers shipped with WWAN configuration.

NOTE: The display assembly is an assembly consisting of the following components:

- display bezel
- display hinges
- display panel
- camera
- display cable
- display-back cover

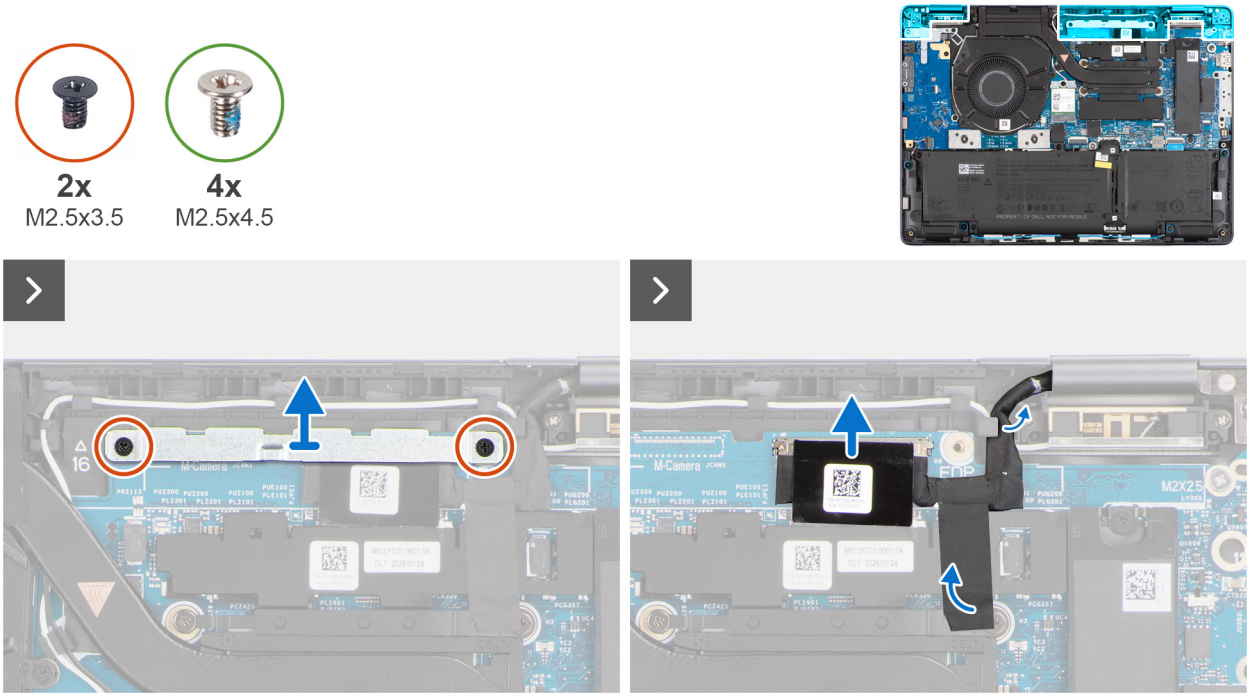


Figure 74. Removing the display assembly



Figure 75. Removing the display assembly

Steps

1. Disconnect the WWAN card cables from the WWAN card.
2. Remove the two (M2.5x3.5) screws that secure the display-cable bracket to the system board.
3. Lift the display-cable bracket away from the palm-rest assembly.
4. Disconnect the display cable from the display cable connector (LCD1) on the system board.
5. Remove the display cable from the routing guides on the system board.
6. Lift the black flap near the antenna cables to uncover the sensor-board cable.

7. Disconnect the sensor-board cable from the connector on the system board.
8. Remove the antenna cables (where applicable) from the routing guides on the system board.
9. Open the display assembly to 90 degrees and then continue opening it until the display lies completely flat on the table.
10. Remove the four screws (M2.5x3.5) that secure the left and right display hinges to the palm-rest assembly.
11. Lift the display assembly from the palm-rest assembly.
12. Place the display assembly on a clean, flat surface.

Installing the display assembly

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the display assembly and provide a visual representation of the installation procedure.

NOTE: The procedures in this section only apply to computers shipped with WWAN configuration.

NOTE: The display assembly is an assembly consisting of the following components:

- display bezel
- display hinges
- display panel
- camera
- display cable
- display-back cover



Figure 76. Installing the display assembly

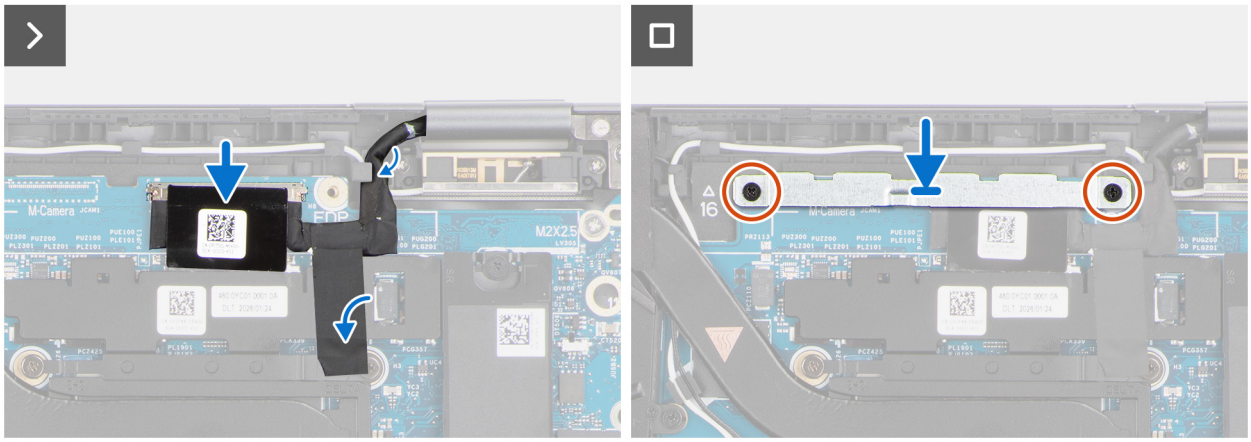


Figure 77. Installing the display assembly

Steps

1. Place the display assembly flat on the palm-rest assembly and align the hinges with the hinge mounts on the palm rest. Ensure that the system is opened and positioned flat on the table.
2. Align the screw holes on the palm-rest assembly with the screw holes on the display hinges.
3. Replace the four screws (M2.5x3.5) that secure the left and right display hinges to the palm-rest assembly.
4. Connect the sensor-board cable to the connector on the system board.
5. Cover the sensor-board cable with the black flap near the antenna cables.

6. Route the antenna cables (where applicable) from the routing guides on the system board.
7. Connect the display cable and the display cable to the respective connectors (LCD1) on the system board.
8. Adhere the tape that secures the display cable to the system board.
9. Align the screw holes on the display-cable bracket with the screw holes on the system board.
10. Replace the two (M2.5x3.5) screws that secure the display cable bracket to the system board.
11. Connect the 5G/4G WWAN card cables off the WWAN card.

Next steps

1. Install the 5G WWAN card or 4G WWAN card, as applicable.
2. Install the battery.
3. Install the base cover.
4. Install the nano-SIM card tray, if applicable.
5. Follow the procedure in After working inside your computer.

4

Software

This chapter details the supported operating systems along with instructions on how to install the drivers.

Operating system

Your Dell Pro 7 13 2-in-1 P703260 supports the following operating systems:

- Windows 11 Professional
- Windows 11 Home
- Ubuntu Linux 24.04 LTS

Drivers and downloads

When troubleshooting, downloading, or installing drivers, it is recommended that you read the Dell Knowledge Base article Drivers and Downloads FAQs.

5

BIOS Setup

CAUTION: Certain changes can make your computer work incorrectly. Before you change the settings in BIOS Setup, it is recommended that you note down the original settings for future reference.

NOTE: Depending on the computer and the installed devices, the options that are listed in below may differ.

Use BIOS Setup for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the capacity of the storage device.
- Change the system configuration information.
- Set or change user-selectable options such as the user password, enabling or disabling base devices, and configuring hard drive settings.

Entering BIOS Setup program

Turn on or restart your computer and press F2 immediately.

Navigation keys

NOTE: For most of the BIOS Setup options, changes that you make are recorded but do not take effect until you restart the computer.

Table 6. Navigation keys

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follows the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restart the computer.

F12 One Time Boot menu

To enter the One Time Boot menu, turn on or restart your computer, and then press F12 immediately.

NOTE: If you are unable to enter the One Time Boot menu, repeat the above action.

The One Time Boot menu displays the devices that you can boot from and also display the options to start diagnostics. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)

NOTE: XXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The One Time Boot menu screen also displays the option to access BIOS Setup.

View Advanced Setup options

About this task

Some BIOS Setup options are only visible by enabling **Advanced Setup** mode, which is disabled by default.

NOTE: BIOS Setup options, including **Advanced Setup** options, are described in the **System setup options** option.

To enable Advanced Setup:

Steps

1. Enter BIOS Setup.
   The Overview menu appears.
2. Click the **Advanced Setup** option to move it to the **ON** mode.
   Advanced BIOS Setup options are displayed.

View Service options

About this task

Service options are hidden by default and only visible by entering a hotkey command.

NOTE: Service options are described in BIOS Setup options.

To view Service options:

Steps

1. Enter BIOS Setup.
   The **Overview** menu appears.
2. Enter the hotkey combination **Ctrl + Alt + S** to view the **Service** options.
   Service options are displayed.

BIOS Setup options

NOTE: For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the computer.

NOTE: Depending on your computer and its installed devices, the items that are listed in this section may differ.

Table 7. System Setup options—Overview menu

Overview	Description
Dell Pro 7 13 2-in-1 P703260	
BIOS Version	Displays the BIOS version number.
Service Tag	Displays the Service Tag of the computer.
Asset Tag	Displays the Asset Tag of the computer.

Table 7. System Setup options—Overview menu (continued)

Overview	Description
Manufacture Date	Displays the manufacture date of the computer.
Ownership Date	Displays the ownership date of the computer.
Express Service Code	Displays the Express Service Code of the computer.
Ownership Tag	Displays the Ownership Tag of the computer.
System UUID	Displays the System UUID of the computer.
BATTERY Information	
Primary	Displays the primary battery of the computer.
Battery Level	Displays the battery level of the computer.
Battery State	Displays the battery state of the computer.
Health	Displays the battery health of the computer.
AC Adapter	Displays whether an AC adapter is connected. If connected, displays the type of AC adapter that is connected.
Battery Life Type	Displays the battery life type of the computer.
PROCESSOR Information	
Processor Type	Displays the processor type.
Maximum Clock Speed	Displays the maximum processor clock speed. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Core Count	Displays the number of cores on the processor.
Processor ID	Displays the processor identification code.
Processor L2 Cache	Displays the processor Processor L2 Cache.
Processor L3 Cache	Displays the processor Processor L3 Cache.
Microcode Version	Displays the microcode version. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Intel Hyper-Threading Capable	Displays whether the processor is Hyper-Threading (HT) capable. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Intel vPro technology	Displays the processor technology.
MEMORY Information	
Memory Installed	Displays the total memory installed on the computer.
Memory Available	Displays the total memory available on the computer.
Memory Speed	Displays the memory speed. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Memory Technology	Displays the technology that is used for the memory.
DEVICES Information	
Panel Type	Displays the type of display panel available on the computer.
Panel Revision	Displays the type of display revision available on the computer.
Privacy Screen	Displays if the computer supports privacy screen.

Table 7. System Setup options—Overview menu (continued)

Overview	Description
Video Controller	Displays the type of video controller available on the computer.
Video Memory	Displays the video memory information of the computer.
Wi-Fi Device	Displays the wireless device information of the computer.
Native Resolution	Displays the native resolution of the computer.
Video BIOS Version	Displays the video BIOS version of the computer. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Audio Controller	Displays the audio controller information of the computer.
Bluetooth Device	Displays the Bluetooth device information of the computer.
Pass Through MAC Address	Displays the MAC address of the video pass-through.

Table 8. System Setup options—Boot Configuration menu

Boot Configuration	
Boot Sequence	
Boot Mode: UEFI only	Displays the boot mode of the computer. **NOTE:** To view this option, enable **Service** options as described in View Service options.
Enable PXE Boot Priority	Displays if the PXE boot option is avaible on the computer.
UEFI Network Boot Order	This option is used to select the IPv4 ands Plv6 option boot order.
Boot Sequence	Displays the boot sequence.
Secure Boot	Secure Boot is a method of guaranteeing the integrity of the boot path by performing additional validation of the operating system and PCI add-in cards. The computer stops booting to the operating system when a component is not authenticated during the boot process. Secure Boot can be enabled in BIOS setup or using management interfaces like Dell Command|Configure, but can only be disabled from BIOS setup.
Enable Secure Boot	Enables the computer to boot using only validated boot software. By default, this **Enable Secure Boot** option is disabled. For additional security, Dell Technologies recommends keeping the **Secure Boot** option enabled to ensure that the UEFI firmware validates the operating system during the boot process. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options. **NOTE:** To enable Secure Boot, the computer must be in UEFI boot mode and the Enable Legacy Option ROMs option must be turned off.
Enable Microsoft UEFI CA	When disabled, the UEFI CA is removed from the BIOS UEFI Secure Boot database. **CAUTION: If you disable Microsoft UEFI CA, the computer may not boot, computer graphics may not function, some devices may not function properly, and the computer could become unrecoverable.** By default, the **Enable Microsoft UEFI CA** option is enabled. For additional security, Dell Technologies recommends keeping the **Enable Microsoft UEFI CA** option enabled to ensure the broadest compatibility with devices and operating systems.
Secure Boot Mode	Enables or disables the Secure Boot operation mode.

Table 8. System Setup options—Boot Configuration menu (continued)

Boot Configuration	
	By default, the **Deployed Mode** is selected. **Deployed Mode** should be selected for normal operation of Secure Boot. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Expert Key Management	
Enable Custom Mode	Enables or disables the keys in the PK, KEK, db, and dbx security key databases to be modified. By default, the **Enable Custom Mode** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Custom Mode Key Management	Selects the custom values for expert key management. By default, the **Reset All key Delete All key** option is selected. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.

Table 9. System Setup options—Integrated Devices menu

Integrated Devices	
Date/Time	
Date	Sets the computer date in MM/DD/YYYY format. Changes to the date format take effect immediately.
Time	Sets the computer time in HH/MM/SS 24-hour format. You can select between a 12-hour or 24-hour clock. Changes to the time format take effect immediately.
Camera	
Enable Camera	Enables the camera. By default, the **Enable Camera** option is enabled. **NOTE:** Depending on the configuration ordered, the camera setup option may not be available.
Audio	
Enable Audio	Enables all integrated audio controller. By default, all the options are enabled.
Enable Microphone	Enables the microphone. By default, the **Enable Microphone** option is enabled. **NOTE:** Depending on the configuration ordered, the microphone setup option may not be available.
Enable Internal Speaker	Enables the internal speaker. By default, the **Enable Internal Speaker** option is enabled.
USB/Thunderbolt Configuration	
Enable USB Boot Support	Enables booting from USB mass storage devices that are connected to external USB ports. By default, the **Enable USB Boot Support** option is enabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.

Table 9. System Setup options—Integrated Devices menu (continued)

Integrated Devices	
Enable External USB Ports	Enables the external USB ports. By default, the **Enable External USB Ports** option is enabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Enable Thunderbolt Technology Support	
Enable Thunderbolt Technology Support	Enables the associated ports and adapters for Thunderbolt Technology support. By default, the **Enable Thunderbolt Technology Support** option is enabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Enable Thunderbolt Boot Support	
Enable Thunderbolt Boot Support	Enables the Thunderbolt adapter-peripheral device and USB devices that are connected to the Thunderbolt adapter to be used during BIOS Preboot. By default, the **Enable Thunderbolt Boot Support** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Disable USB4 PCIE Tunneling	Disables the USB4 PCIE Tunneling option. By default, the **Disable USB4 PCIE Tunneling** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in Entering BIOS Setup program.
Video/Power only on Type-C Ports	Enables or disables the Type-C port functionality to video or only power. By default, the **Video/Power only on Type-C Ports** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Type-C Dock	
Type-C Dock Override	Enables or disables to use connected Type-C Dell Dock to provide data stream with external USB ports disabled. When Type-C Dock override is enabled, the Video/Audio/LAN submenu is activated. By default, the **Type-C Dock Override** option is enabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in Entering BIOS Setup program.
Type-C Dock Audio	Enables or disables the usage of audio inputs and outputs from the connected Type-C Dell docking station. By default, the **Type-C Dock Audio** option is enabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Type-C Dock LAN	Enables or disables the usage of LAN on the external ports of the connected Type-C Dell docking station. By default, the **Type-C Dock LAN** option is enabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Miscellaneous Devices	

Table 9. System Setup options—Integrated Devices menu (continued)

Integrated Devices	
Enable Fingerprint Reader Device	Enables or disables the Fingerprint Reader Device option. By default, the **Enable Fingerprint Reader Device** option is enabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Unobtrusive Mode	Enables or disables the unobtrusive mode. When enabled, all system LEDs, LCD panel backlight and audio devices of the computer are turned off. By default, the **Unobtrusive Mode** option is disabled. **NOTE:** On computers with collaboration touchpad, the Collaboration Touchpad is disabled when the **Unobtrusive Mode** option is enabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Dust Filter Mainteninace	This field enables or disables BIOS messages for maintianingthe optionl dust filter.

Table 10. System Setup options—Storage menu

Storage	
SATA/NVMe Operation	
Storage Interface	Displays the information of various onboard drives.
Port Enablement	Enables or disables the M.2 PCIe SSD option. By default, the **M.2 PCIe SSD** option is enabled.
Smart Reporting	Enables or disables the Smart reporting option. By default, the **Smart Reporting** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Drive Information	Displays the information of onboard drives.

Table 11. System Setup options—Display menu

Display	
Touchscreen	Enables or disables the touch screen option. By default, the **Touchscreen** option is enabled. **NOTE:** Only available on computers with touch screen displays. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Full Screen Logo	Enables or disables the computer to display full screen logo, if the image matches screen resolution. By default, the **Full Screen Logo** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.

Table 12. System Setup options—Connection menu

Connection
Wireless Device Enable

Table 12. System Setup options—Connection menu (continued)

Connection	
WLAN	Enables or disables the internal WLAN device. By default, the **WLAN** option is enabled.
Bluetooth	Enables or disables the internal Bluetooth device. By default, the **Bluetooth** option is enabled.
Wireless Radio Control	
Control WLAN Radio	Allows the computer to detect a wired network connection and then disable the selected wireless radios (WLAN and/or WWAN). Upon disconnection from the wired network, the selected wireless radios are re-enabled. By default, the **Control WLAN Radio** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Control WWAN Radio	Enables to sense the connection of the computer to a wired network and then disables the selected WWAN radios. By default, the **Control WWAN Radio** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
HTTP(s) Boot	When enabled, supports HTTP(s) boot on the client BIOS, which offers wired or wireless and HTTP/HTTPS connection options. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
HTTP(s) Boot Modes	In Auto Mode, the boot URL is obtained from the DHCP response; the boot URL specifies the HTTP Boot Server and location of the Network Boot Program (NBP) file. In Manual mode, the user enters the URL in the text box, which must start with `http://` or `https://` and end with the NBP file name. By default, **Auto Mode** is selected. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
CA Certificate	Upload or delete the CA certificate. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.

Table 13. System Setup options—Power menu

Power	
Battery Configuration	Enables or disables the computer to run on battery during peak power usage hours. Use the table **Custom Charge Start** and **Custom Charge Stop**, to prevent AC power usage between certain times of each day. By default, the **Adaptive** option is selected. Battery settings are adaptively optimized based on your typical battery usage pattern.
Advanced Configuration	
Enable Advanced Battery Charge Configuration	Enables Advanced Battery Charge Configuration from the beginning of the day to a specified work period. When enabled, Advanced Battery Charged maximizes battery health while still supporting heavy use during the work day. By default, the **Enable Advanced Battery Charge Configuration** option is disabled.

Table 13. System Setup options—Power menu (continued)

Power	
	NOTE: To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Peak Shift	
Enable Peak Shift	Enables the computer to switch to battery power automatically during peak energy usage hours. By default, the **Enable Peak Shift** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Enable USB PowerShare	Enables or disables the USB PowerShare on the computer. By default, the **USB Powershare** option is disabled.
Thermal Management	Allows you to manage the fan settings to regulate processor temperature and control computer performance, noise, and thermal levels. By default, the **Optimized** option is selected.
USB Wake Support	
Wake on Dell USB-C Dock	When enabled, connecting a Dell USB-C Dock wakes the computer from Standby, Hibernate, and Power Off. By default, the **Wake on Dell USB-C Dock** option is enabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Block Sleep	Enables or disables the computer from entering Sleep (S3) mode in the operating system. By default, the **Block Sleep** option is disabled. **NOTE:** When enabled, the computer does not go to Sleep, Intel Rapid Start is disabled automatically, and the operating system power option is blank if it was set to Sleep. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Lid Switch	
Enable Lid Switch	Enables or disables the Lid Switch. By default, the **Enable Lid Switch** option is enabled.

Table 14. System Setup options—Security menu

Security	
TPM 2.0 Security	Trusted Platform Module (TPM) is a security device that stores computer-generated keys for encryption and features such as BitLocker, Virtual Secure Mode, remote Attestation. By default, the **TPM 2.0 Security** option is enabled. For additional security, Dell Technologies recommends keeping the Trusted Platform Module (TPM) enabled to allow these security technologies to fully function.
TPM 2.0 Security On	Enables or disables the TPM. By default, the **TPM 2.0 Securty On** option is enabled.

Table 14. System Setup options—Security menu (continued)

Security	
	For additional security, Dell Technologies recommends keeping TPM enabled to allow these security technologies to fully function. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Attestation Enable	The **Attestation Enable** option controls the endorsement hierarchy of TPM. Disabling the **Attestation Enable** option prevents TPM from being used to digitally sign certificates. By default, the **Attestation Enable** option is enabled. For additional security, Dell Technologies recommends keeping the **Attestation Enable** option enabled. **NOTE:** When disabled, this feature may cause compatibility issues or loss of functionality in some operating systems. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Key Storage Enable	The **Key Storage Enable** option controls the storage hierarchy of TPM, which is used to store digital keys. Disabling the **Key Storage Enable** option restricts the ability of TPM to store owner's data. By default, the **Key Storage Enable** option is enabled. For additional security, Dell Technologies recommends keeping the **Key Storage Enable** option enabled. **NOTE:** When disabled, this feature may cause compatibility issues or loss of functionality in some operating systems. **NOTE:** To view this option, enable **Service** options as described in View Service options.
SHA-256	Enables selection of the hashing algorithm that is used by the TPM. When enabled, the BIOS and TPM use the SHA-256 hash algorithm to extend measurements into the TPM PCRs during BIOS boot. When disabled, the BIOS and TPM use the SHA-1 hash algorithm to extend measurements into the TPM PCRs during BIOS boot. By default, the **SHA-256** option is enabled. For additional security, Dell Technologies recommends keeping the **SHA-256** option enabled. **NOTE:** To view this option, enable **Service** options as described in View Service options.
Clear	When enabled, the **Clear** option clears information that is stored in the TPM after exiting the system's BIOS. This option returns to the disabled state when the computer restarts. By default, the **Clear** option is disabled. Dell Technologies recommends enabling the **Clear** option only when TPM data is required to be cleared. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Physical Presence Interface (PPI) Bypass for Clear Commands	The PPI Bypass for Clear Commands option allows the operating system to manage certain aspects of PTT. When enabled, you are not prompted to confirm changes to the PTT configuration. By default, the **PPI Bypass for Clear Commands** option is disabled.

Table 14. System Setup options—Security menu (continued)

Security	
	For additional security, Dell Technologies recommends keeping the **PPI Bypass for Clear Commands** option disabled.
Intel Total Memory Encryption	Enables or disables the processor's memory encryption feature. By default, the **Intel Total Memory Encryption** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Chassis Intrusion	
Chassis Intrusion	Enables or disables the detection of chassis intrusion events. This feature notifies the user when the base cover has been removed from the computer. When set to **Enabled**, a notification is displayed on the next boot and the event is logged in the BIOS Events log. When set to **Disabled**, no notification is displayed and no event is logged in the BIOS Events log. When set to **On-Silent**, the event is logged in the BIOS Events log, but no notification is displayed. By default, the **Chassis Intrusion Detection** option is disabled. For additional security, Dell Technologies recommends keeping the **Chassis Intrusion** option enabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Block Boot Until Cleared	The **Block Boot Until Clear** option is enabled when **Chassis Intrusion** is enabled. When enabled, the computer does not boot until the chassis intrusion is cleared. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
SMM Security Mitigation	Enables or disables additional UEFI SMM Security Mitigation protections. This option uses the Windows SMM Security Mitigations Table (WSMT) to confirm to the operating system that security best practices have been implemented by the UEFI firmware. By default, the **SMM Security Mitigation** option is enabled. For additional security, Dell Technologies recommends keeping the **SMM Security Mitigation** option enabled unless you have a specific application which is not compatible. **NOTE:** This feature may cause compatibility issues or loss of functionality with some legacy tools and applications. **NOTE:** To view this option, enable **Service** options as described in View Service options.
Data Wipe on Next Boot	
Start Data Wipe	Data Wipe is a secure wipe operation that deletes information from a storage device. **CAUTION: The secure Data Wipe operation deletes information in a way that it cannot be reconstructed.** Commands such as delete and format in the operating system may remove files from showing up in the file system. However, they can be reconstructed through forensic means as they are still represented on the physical media. Data Wipe prevents this reconstruction and the data can no longer be recovered.

Table 14. System Setup options—Security menu (continued)

Security	
	When enabled, the data wipe option provides prompts to wipe any storage devices that are connected to the computer on the next boot. By default, the **Start Data Wipe** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Absolute	Absolute Software provides various cyber security solutions, some requiring software preloaded on Dell computers and integrated into the BIOS. To use these features, you must enable the Absolute BIOS setting and contact Absolute forconfiguration and activation. By default, the **Absolute** option is enabled. For additional security, Dell Technologies recommends keeping the **Absolute** option enabled. **WARNING: The Permanently Disabled option can only be selected once. When Permanently Disabled is selected, Absolute Persistence cannot be reenabled. No further changes to the Enable/Disable states are allowed.** **NOTE:** The Enable/Disable options are unavailable while the computer is in the activated state. **NOTE:** When the Absolute features are activated, the Absolute integration cannot be disabled from the BIOS Setup screen.
UEFI Boot Path Security	Enables or disables the computer to prompt the user to enter the Administrator password (if set) when booting to a UEFI boot path device from the F12 boot menu. By default, the **Always Except Internal HDD** option is enabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Authenticated BIOS Interface	Enables or disables authenticated BIOS interface.
Legacy Manageability Interface Access	Enables or disables legacy manageability interface access.
Firmware Device Tamper Detection	Allows you to control the firmware device tamper detection feature. This feature notifies the user when the firmware device is tampered. When enabled, a screen warning message is displayed on the computer and a tamper detection event is logged in the BIOS Events log. The computer fails to reboot until the event is cleared. By default, the **Firmware Device Tamper Detection** option is enabled. For additional security, Dell Technologies recommends keeping the **Firmware Device Tamper Detection** option enabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Clear Firmware Device Tamper Detection	Allows you to clear the events that are logged when tampering of firmware device is detected. By default, the **Clear Firmware Device Tamper Detection** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Pluton Security Processor	Enables or disables Pluton Security Processor.

Table 15. System Setup options—Passwords menu

Passwords	
Administrator Password	The Administrator Password prevents unauthorized access to the BIOS Setup options. Once the administrator password is set, the BIOS Setup options can only be modified after providing the correct password. The following rules and dependencies apply to the Administrator Password - ● The administrator password cannot be set if computer and/or internal storage device passwords are already set. ● The administrator password can be used in place of the system and/or internal storage passwords. ● When set, the administrator password must be provided during a firmware update. ● Clearing the administrator password also clears the system password (if set). Dell Technologies recommends using an administrator password to prevent unauthorized changes to BIOS Setup options.
System Password	The System Password prevents the computer from booting to an operating system without entering the correct password. The following rules and dependencies apply when the System Password is used - ● The computer shuts down when idle for approximately 10 minutes at the system password prompt. ● The computer shuts down after three incorrect attempts to enter the system password. ● The computer shuts down when the **Esc** key is pressed at the **System Password** prompt. ● The system password is not prompted when the computer resumes from standby mode. Dell Technologies recommends using the system password in situations where it is likely that a computer may be lost or stolen.
M.2 PCIe SSD-0 Password	**M.2 PCIe SSD-0 Password** ● The SSD password option cannot be accessed when the hard drive is disabled in the BIOS Setup. ● The computer shuts down when idle for approximately 10 minutes at the hard drive password prompt. ● The computer shuts down after three incorrect attempts to enter the SSD password and treats the SSD as not available. ● The SSD does not accept password unlock attempts after five incorrect attempts to enter the SSD password from the BIOS Setup. The SSD password must be reset for the new password unlock attempts. ● The computer treats the SSD as not available when the **Esc** key is pressed at the hard drive password prompt. ● The SSD password is not prompted when the computer resumes from standby mode. When the hard drive is unlocked by the user before the computer goes into standby mode, it remains unlocked after the computer resumes from standby mode. ● If the system and SSD passwords are set to the same value, the SSD unlocks after the correct system password is entered. Dell Technologies recommends using a SSD password to protect unauthorized data access.
Password Configuration	The Password configuration page includes several options for changing the requirements of BIOS passwords. You can modify the minimum and maximum length of the passwords as well as require passwords to contain certain character classes (upper case, lower case, digit, special character). When the **Lower Case Letter** option is enabled, the password requires at least one lower case letter.

Table 15. System Setup options—Passwords menu (continued)

Passwords	
	When the **Upper Case Letter** option is enabled, the password requires at least one upper case letter. When the **Digit** option is enabled, the password requires at least one numeric digit. When the **Special Character** option is enabled, the password requires at least one special character from the set: !"#$%&'()*+,-./:;<=>?@[\]^_`{|}~. When setting **Minimum Characters** for password length, Dell Technologies recommends setting the minimum password length to at least eight characters. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Enable Master Password Lockout	The **Master Password Lockout** option allows you to disable the Recovery Password feature. If the system, administrator, or hard drive password is forgotten, the computer becomes unusable. **NOTE:** When the owner password is set, the Master Password Lockout option is not available. **NOTE:** When an internal hard drive password is set, it must first be cleared before Master Password Lockout can be changed. By default, the **Enable Master Password Lockout** option is disabled. Dell Technologies does not recommend enabling the **Master Password Lockout** unless you have implemented your own password recovery system. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.

Table 16. System Setup options—Update, Recovery menu

Update, Recovery	
BIOS Downgrade	
Allow BIOS Downgrade	Allows downgrading of the system firmware to previous revisions. By default, the **Allow BIOS Downgrade** option is enabled.
SupportAssist OS Recovery	Enables or disables the boot flow for SupportAssist OS Recovery tool if certain system errors occur. By default, the **SupportAssist OS Recovery** option is enabled.
BIOSConnect	Enables or disables cloud service operating system recovery if the main operating system fails to boot with the number of failures equal to or greater than the value specified by the Auto OS Recovery Threshold setup option and local service operating system does not boot or is not installed. By default, the **BIOSConnect** option is enabled.
Dell Auto OS Recovery Threshold	Allows the control of the automatic boot flow for the SupportAssist System Resolution Console and the Dell OS Recovery Tool. By default, the **Dell Auto OS Recovery Threshold** value is set to **2**. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.

Table 17. System Setup options—System Management menu

System Management	
Service Tag	Displays the Service Tag of the computer.

Table 17. System Setup options—System Management menu (continued)

System Management	
Asset Tag	Creates a computer Asset Tag that an IT administrator can use to uniquely identify a particular computer. **NOTE:** Once set in the BIOS, the Asset Tag cannot be changed.
Wake on AC	Enables or disables the computer to turn on and go to boot when AC power is supplied to the computer. By default, the **Wake on AC** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Wake on LAN	Enables or disables the computer to turn on by a special LAN signal. By default, the **Wake on LAN** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Auto On Time	Enable to set the computer to turn on automatically every day or on a preselected date and time. This option can be configured only if the Auto On Time is set to Everyday, Weekdays, or Selected Days. By default, the **Auto On Time** option is disabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.

Table 18. System Setup options—Keyboard menu

Keyboard	
Fn Lock Options	Enables or disables the Fn Lock option. By default, the **Fn Lock** option is enabled.
Lock Mode	By default, the **Lock Mode Secondary** option is enabled. With this option, the F1-F12 keys scan the code for their secondary functions.
Keyboard Backlight Timeout on Battery	Sets the timeout value for the keyboard backlight when the computer is running only on the battery power. The keyboard backlight timeout value is only effective when the backlight is enabled. By default, the **10 seconds** option is selected. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Device Configuration HotKey Access	Allows you to control whether you can access device configuration screens through hotkeys during system startup. By default, the **Device Configuration HotKey Access** option is enabled. **NOTE:** This setting controls only the Intel RAID (CTRL+I), MEBX (CTRL+P), and LSI RAID (CTRL+C) Option ROMs. Other preboot Option ROMs, which support entry using a key sequence, are not affected by this setting. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.

Table 19. System Setup options—Pre-boot Behavior menu

Pre-boot Behavior
Adapter Warnings

Table 19. System Setup options—Pre-boot Behavior menu (continued)

Pre-boot Behavior	
Enable Adaptor Warning	Enables the warning messages during boot when the adapters with less power capacity are detected. By default, the **Enable Adaptor Warning Messages** option is enabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Warnings and Errors	Enables or disables the action to be taken when a warning or error is encountered. By default, the **Prompt on Warnings and Errors** option is selected. **NOTE:** Errors deemed critical to the operation of the computer hardware stop the functioning of the computer. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Extend BIOS POST Time	Sets the BIOS POST (Power-On Self-Test) load time. By default, the **0 seconds** option is selected. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
MAC Address Pass-Through	Replaces the external NIC MAC address (in a supported dock or dongle) with the selected MAC address from the computer. By default, the **System Unique MAC Address** option is selected.
Show Ownership Tag with Logo	Displays the Ownership Tag with Logo.
Unsupported hardware warning	Enables or disables the Unsupported hardware warning.

Table 20. System Setup options—Virtualization menu

Virtualization Support	
DMA Protection	
Enable Pre-Boot DMA Support	Allows you to control the Pre-Boot DMA protection for both internal and external ports. This option does not directly enable DMA protection in the operating system. **NOTE:** This option is not available when the virtualization setting for IOMMU is disabled (VT-d/AMD Vi). By default, the **Enable Pre-Boot DMA Support** option is enabled. For additional security, Dell Technologies recommends keeping the **Enable Pre-Boot DMA Support** option enabled. **NOTE:** This option is provided only for compatibility purposes, since some older hardware is not DMA capable. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Enable OS Kernel DMA Support	Allows you to control the Kernel DMA protection for both internal and external ports. This option does not directly enable DMA protection in the operating system. For operating systems that support DMA protection, this setting indicates to the operating system that the BIOS supports the feature. **NOTE:** This option is not available when the virtualization setting for IOMMU is disabled (VT-d/AMD Vi). By default, the **Enable OS Kernel DMA Support** option is enabled.

Table 20. System Setup options—Virtualization menu (continued)

Virtualization Support	
	NOTE: This option is provided only for compatibility purposes, since some older hardware is not DMA capable. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Internal Port DMA Compatibility Mode	When enabled, BIOS will notify the OS that the internal ports are not AMD compatible.

Table 21. System Setup options—Performance menu

Performance	
Intel SpeedStep	
Enable Intel SpeedStep Technology	Enables the computer to dynamically adjust processor voltage and core frequency, decreasing average power consumption and heat production. By default, the **Enable Intel SpeedStep Technology** option is enabled. **NOTE:** To view this option, enable **Service** options as described in View Service options.
PCIe Resizeable Base Address Register (BAR)	
Enable C-State Control	Enables or disables the PCIe Resizeable Base Address Register (BAR) By default, the **PCIe Resizeable Base Address Register (BAR)** option is enabled. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.

Table 22. System Setup options—System Logs menu

System Logs	
BIOS Event Log	
Clear BIOS Event Log	Select the option to keep or clear BIOS events logs. By default, the **Keep Log** option is selected. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Thermal Event Log	
Clear Thermal Event Log	Select the option to keep or clear thermal events logs. By default, the **Keep Log** option is selected. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.
Power Event Log	
Clear Power Event Log	Select the option to keep or clear power events logs. By default, the **Keep Log** option is selected. **NOTE:** To view this option, enable **Advanced Setup** mode as described in View Advanced Setup options.

Updating the BIOS

Updating the BIOS in Windows

About this task

CAUTION: If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result in data loss or an operating system reinstall. For more information, refer Updating the BIOS on Dell systems with BitLocker enabled.

CAUTION: Do not turn off the computer during the BIOS flash update process. The computer may not boot if you turn off your computer.

Steps

1. Go to Dell Support Site.
2. Go to **Identify your product or ask support**. In the box, enter the product identifier, model, service request or describe what you are looking for, and then click **Search**.

   NOTE: If you do not have the Service Tag, click **Detect This PC**. The site automatically detects your device, and you can then click **Explore Product Support** to go to the support page for your device. You can also use the product ID or manually browse for your computer model.

3. Click **Drivers & Downloads**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. After the download is complete, navigate to the folder where the BIOS update file has been saved.
8. Double-click the BIOS update file and follow the on-screen instructions.

   For more information, search Dell Support Site.

Updating the BIOS using the USB drive in Windows

About this task

CAUTION: If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result in data loss or an operating system reinstall. For more information, refer Updating the BIOS on Dell systems with BitLocker enabled.

CAUTION: Do not turn off the computer during the BIOS flash update process. The computer may not boot if you turn off your computer.

Steps

1. Go to Dell Support Site.
2. Go to **Identify your product or ask support**. In the box, enter the product identifier, model, service request or describe what you are looking for, and then click **Search**.

   NOTE: If you do not have the Service Tag, click **Detect This PC**. The site automatically detects your device, and you can then click **Explore Product Support** to go to the support page for your device. You can also use the product ID or manually browse for your computer model.

3. Click **Drivers & Downloads**.

4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. Create a bootable USB drive. For more information, search Dell Support Site.
8. Copy the BIOS setup program file to the bootable USB drive.
9. Connect the bootable USB drive to the computer that needs the BIOS update.
10. Restart the computer and press **F12**.
11. Select the USB drive from the **One Time Boot Menu**.
12. Type the BIOS setup program filename and press **Enter**.
    The **BIOS Update Utility** appears.
13. Follow the on-screen instructions to complete the BIOS update.

Updating the BIOS from the One-Time boot menu

To update the BIOS from the One-Time boot menu, see Updating the BIOS from the One Time Boot Menu at Dell Support Site.

Updating the BIOS in Linux and Ubuntu

To update the system BIOS on a computer that is installed with Linux or Ubuntu, see How to Update the Dell BIOS in the Ubuntu or Linux Environment at Dell Support Site.

System and setup password

CAUTION: The password features provide a basic level of security for the data on your computer.

CAUTION: Ensure that your computer is locked when it is not in use. Anyone can access the data that is stored on your computer, when left unattended.

Table 23. System and setup password

Password type	Description
System password	Password that you must enter to boot to your operating system.
Setup password	Password that you must enter to access and change the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

NOTE: The System and setup password feature is disabled by default.

Assigning a System Setup password

Prerequisites

You can assign a new System or Admin Password only when the status is set to **Not Set**. To enter BIOS System Setup, press F2 immediately after a power-on or reboot.

Steps

1. To enter the **System Setup**, press **F2** immediately after a power-on or reboot.
2. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.
   The **Security** screen is displayed.
3. Select **System/Admin Password** and create a password in the **Enter the new password** field.
   Use the following guidelines to create the system password:

- Password can be up to 32 characters.
- Password must contain at least one special character: "(! " # $ % & ' * + , - . / : ; < = > ? @ [\ ] ^ _ ` { | })"
- The password can contain numbers from 0 to 9.
- The password can contain alphabets A to Z and a to z.

4. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
5. Press Y to save the changes.
   The computer restarts.

Deleting or changing an existing system password or setup password

Prerequisites

Ensure that the **Password Status** is Unlocked in the System Setup before attempting to delete or change the existing system password and/or setup password. You cannot delete or change an existing system password or setup password if the **Password Status** is Locked. To enter the System Setup, press F2 immediately after a power-on or reboot.

Steps

1. To enter the **System Setup**, press **F2** immediately after a power-on or reboot.
2. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.
   The **System Security** screen is displayed.
3. In the **System Security** screen, verify that the **Password Status** is Unlocked.
4. Select **System Password**. Update or delete the existing system password, and press Enter or Tab.
5. Select **Setup Password**. Update or delete the existing setup password, and press Enter or Tab.

   NOTE: If you change the system password and/or setup password, reenter the new password when prompted. If you delete the system password and/or setup password, confirm the deletion when prompted.

6. Press Esc. A message prompts you to save the changes.
7. Press Y to save the changes and exit from **System Setup**.
   The computer restarts.

Clearing system and setup passwords

About this task

To clear the system or setup passwords, contact Dell technical support as described at Contact Support.

NOTE: For information about how to reset Windows or application passwords, see the documentation accompanying Windows or your application.

6

Troubleshooting

Handling swollen rechargeable Li-ion batteries

Like most laptops, Dell laptops use Lithium-ion batteries. One type of Lithium-ion battery is the rechargeable Li-ion battery. Rechargeable Li-ion batteries have increased in popularity in recent years and have become a standard in the electronics industry due to customer preferences for a slim form factor (especially with newer ultra-thin laptops) and long battery life. Inherent to rechargeable Li-ion battery technology is the potential for swelling of the battery cells.

A swollen battery may impact the performance of the laptop. To prevent possible further damage to the device enclosure or internal components leading to malfunction, discontinue the use of the laptop and discharge it by disconnecting the AC adapter and letting the battery drain.

Swollen batteries should not be used and must be replaced and disposed of properly. We recommend contacting Dell Support for options to replace a swollen battery under the terms of the applicable warranty or service contract, including options for replacement by a Dell authorized service technician.

The guidelines for handling and replacing rechargeable Li-ion batteries are as follows:

- Exercise caution when handling rechargeable Li-ion batteries.
- Discharge the battery before removing it from the laptop. To discharge the battery, unplug the AC adapter from the computer and operate the computer only on battery power. The battery is fully discharged when the computer no longer turns on when the power button is pressed.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any type to pry on or against the battery.
- If a battery gets stuck in a device as a result of swelling, do not try to free it as puncturing, bending, or crushing a battery can be dangerous.
- Do not attempt to reassemble a damaged or swollen battery into a laptop.
- Swollen batteries that are covered under warranty should be returned to Dell in an approved shipping container (provided by Dell)—this is to comply with transportation regulations. Swollen batteries that are not covered under warranty should be disposed of at an approved recycling center. Contact Dell Support at Dell Support Site for assistance and further instructions.
- Using a non-Dell or incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell that is designed to work with your Dell computer. Do not use a battery from other computers with your computer. Always purchase genuine batteries from Dell Site or otherwise directly from Dell.

Rechargeable Li-ion batteries can swell for various reasons such as age, number of charge cycles, or exposure to high heat. For more information about how to improve the performance and lifespan of the laptop battery and to minimize the possibility of occurrence of the issue, search Dell laptop battery at Dell Support Site.

Quick charge support on power adapters with detachable Type-C cables

For some Dell power adapters, there is a detachable Type-C cable that connects the power adapter to your computer. To ensure that Quick Charge is supported, the Type-C cable must be able to support a current higher than 3 A.

When the computer is connected to an adapter and turned on, it takes up to three seconds to detect the adapter. When the Type-C cable does not support Quick Charge, the power-adapter LED light flashes for about five seconds before resuming operation.

NOTE: Dell Power adapters are always shipped with a Type-C cable that supports Quick Charge. When using third-party cables, check and ensure that Quick Charge is supported by observing the LED light behavior of the power adapter.

Dell SupportAssist Pre-boot System Performance Check diagnostics

About this task

SupportAssist diagnostics (also known as system diagnostics) performs a complete check of your hardware. The Dell SupportAssist Pre-boot System Performance Check diagnostics is embedded within the BIOS and launched by the BIOS internally. The embedded system diagnostics provides options for particular devices or device groups allowing you to:

- Run tests automatically or in an interactive mode.
- Repeat the tests.
- Display or save test results.
- Run thorough tests to add more options and obtain details about any failed devices.
- View status messages that inform you when the tests are completed successfully.
- View error messages that inform you of problems encountered during testing.

NOTE: Some tests for specific devices require user interaction. Always ensure that you are present at the computer when the diagnostic tests are performed.

For more information, see How to Run Dell Preboot Diagnostics and Hardware Tests on Your Dell Computer.

Running the SupportAssist Pre-Boot System Performance Check

Steps

1. Turn on your computer.
2. As the computer boots, press the F12 key.
3. On the boot menu screen, select **Diagnostics**.
   The quick diagnostic test begins.
   NOTE: For more information about running the SupportAssist Pre-Boot System Performance Check on a specific device, see Dell Support Site.
4. If there are any issues, error codes are displayed.
   Note the error code and validation number and contact Dell.

Built-in self-test (BIST)

Motherboard Built-In Self-Test (M-BIST)

M-BIST is the system board onboard self-test diagnostics tool that improves the diagnostics accuracy of system board Embedded Controller (EC) failures.

NOTE: M-BIST can be manually initiated before Power On Self-Test (POST).

How to run M-BIST

NOTE: Before initiating M-BIST, ensure that the computer is in a power-off state.

1. Press and hold both the **M** key and the power button to initiate M-BIST.
2. The battery-status light may exhibit two states:
   - Off: No fault was detected.
   - Amber and White: Indicates a problem with the system board.
3. If there is a failure with the system board, the battery-status light flashes one of the following error codes for 30 seconds:

Table 24. LED error codes

Blinking Pattern		Possible Problem
Amber	**White**	
2	1	Processor Failure
2	8	LCD Power rail failure
1	1	TPM detection failure
2	4	Memory/RAM failure

4. If there is no failure with the system board, the LCD cycles through the solid color screens (that are described in the LCD-BIST) for 30 seconds and then turn off.

Enhanced LCD Built-in Self-Test (LCD-BIST)

Dell laptops have a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with the LCD (display panel) of the Dell laptop or with the video card (GPU) and computer settings.

When you notice screen abnormalities like cracks, flickering, distortion, clarity issues, fuzzy or blurry image, horizontal or vertical lines, color fade, it is always a good practice to isolate the LCD (screen) by running the LCD-BIST.

How to invoke the LCD-BIST

1. Turn off your computer.
2. Disconnect any peripherals that are connected to the computer.
3. Connect the AC adapter (charger) to the computer.
4. Ensure that the LCD screen is clean (no dust particles on the surface of the screen).
5. Press and hold the **D** key and press the power button to enter LCD Built-In Self-Test (BIST) mode. Continue to hold the **D** key until the computer boots up.
6. The screen displays solid colors and changes colors on the entire screen to white, black, red, green, and blue twice.

   NOTE: Refer to table below for diagnosis.

7. The screen will then display the colours in the following order of white, black and red. Carefully inspect the screen for abnormalities (any lines, fuzzy color, or distortion on the screen).
8. At the end of the last solid color (red), the computer shuts down.

Table 25. Enhanced LCD BIST behavior table

Diagnostic Event	Problem description
Enhanced LCD BIST displays white and black. The system's Power/Battery LED alternates between White and Off for approximately 25 seconds **NOTE:** The LCD Screen will attempt to alternate between Black (OFF) and White. However, when panels are damaged, they may show various colors, lines, or distortions. On systems with updated BIOS that supports **Enhanced LCD BIST Crack Glass diagnostics**, the Power/Battery LED can be used to determine if damage has occurred. The screen can be used to visually check for damage.	Potential cracked LCD panel / glass. **NOTE:** In some cases, the screen can be damaged or cracked underneath the LCD Bezel. In this scenario the crack may not be visible in the viewable area
LCD BIST displays white, black, red, green and blue but with display anomalies and visible crack present.	Potential cracked LCD panel / glass.
LCD BIST displays white, black, red, green and blue	LCD panel passed

NOTE: Dell SupportAssist Preboot diagnostics upon launch initiates an LCD-BIST first, expecting a user intervention to confirm functionality of the LCD.

Logic Built-in Self-test (L-BIST)

L-BIST is an enhancement to the single LED error code diagnostics and is automatically initiated during POST. L-BIST will check the LCD power rail. If there is no power being supplied to the LCD (that is if the L-BIST circuit fails), the battery status LED flashes either an error code [2,8] or an error code [2,7].

NOTE: If L-BIST fails, LCD-BIST cannot function as no power will be supplied to the LCD.

How to invoke the L-BIST

1. Turn on your computer.
2. If the computer does not start up look at the battery status LED:
   - If the battery status LED flashes an error code [2,7], the display cable may not be connected properly.
   - If the battery status LED flashes an error code [2,8], there is a failure on the LCD power rail of the system board, hence there is no power that is supplied to the LCD.
3. For cases, when a [2,7] error code is shown, check to see if the display cable is properly connected.
4. For cases when a [2,8] error code is shown, replace the system board.

System-diagnostic lights

This section lists the system-diagnostic lights of your Dell Pro 7 13 2-in-1 P703260.

The following table shows different Service LED blinking patterns and associated problems. The diagnostic light codes consist of a two-digit number, and the digits are separated by a comma. The number stands for a blinking pattern; the first digit shows the number of blinks in amber color, and the second digit shows the number of blinks in white color. The Service LED blinks in the following manner:

- The Service LED blinks the number of times equal to the value of the first digit and turns off with a short pause.
- After that, the Service LED blinks the number of times equal to the value of the second digit.
- The Service LED turns off again with a longer pause.
- After the second pause, the blinking pattern will be repeated.

Table 26. Diagnostic light codes

Diagnostic light codes (Amber, White)	Problem description
1,1	TPM Detection Failure
1,2	Unrecoverable SPI Flash Failure
1,3	The camera-cable overcurrent protection (OCP1) was triggered. The camera module along with its cable may be damaged.
1,4	The hinge-cable overcurrent protection (OCP) was triggered. The hinge cable may be damaged.
1,5	EC unable to program i-Fuse
1,6	Generic catch-all for ungraceful EC code flow errors
1,7	Non-RPMC Flash on Boot Guard fused system
1,8	Chipset “Catastrophic Error” signal has tripped
2,1	CPU configuration or CPU failure
2,2	System board: BIOS or Read-Only Memory (ROM) failure
2,3	No memory, or Random-Access Memory (RAM) detected
2,4	Memory, or Random-Access Memory (RAM) failure

Table 26. Diagnostic light codes (continued)

Diagnostic light codes (Amber, White)	Problem description
2,5	Invalid memory module
2,6	System board/Chipset Error
2,7	LCD failure SBIOS message
2,8	Display power-rail failure on the system board
3,1	CMOS battery failure
3,2	PCI of Video card/chip failure
3,3	Recovery image not found
3,4	Recovery image found but invalid
3,5	EC power-rail error
3,6	Flash corruption detected by SBIOS
3,7	Timeout waiting on ME to reply to HECI message
4,1	Memory DIMM power rail failure
4,2	CPU Power cable connection issue
4,3	LCD panel failure
4,4	Power rail failure at system board side
4,5	LCD Panel Failure and Power rail failure at system board side.
4,6	Display Cable (EDP) Failure
5,3	I/O board is not detected, or I/O ports are not functioning properly.

Recovering the operating system

When your computer is unable to boot to the operating system even after repeated attempts, it automatically starts Dell SupportAssist OS Recovery.

Dell SupportAssist OS Recovery is a standalone tool that is preinstalled on Dell computers running the Windows operating system. It consists of tools to diagnose and troubleshoot issues that may occur before your computer boots to the operating system. It enables you to diagnose hardware issues, repair your computer, back up your files, and restore your computer to its factory state.

You can also download it from the Dell Support website to troubleshoot and fix your computer when it fails to boot into the primary operating system due to software or hardware failures.

For more information about the Dell SupportAssist OS Recovery, see *Dell SupportAssist OS Recovery User's Guide* at Serviceability Tools at the Dell Support Site. Click **SupportAssist** and then click **SupportAssist OS Recovery**.

NOTE: Windows 11 IoT Enterprise LTSC 2024 and Dell ThinOS 10 do not support Dell SupportAssist. For more information about recovering ThinOS 10, see Recovery mode using R-Key.

Real-Time Clock (RTC Reset)

The Real-Time Clock (RTC) reset function enables you or the service technician to recover Dell computers from No POST/No Power/No Boot situations.

Start the RTC reset with the computer powered off and connected to AC power. Press and hold the power button for twenty-five seconds. The computer RTC Reset occurs after you release the power button.

Backup media and recovery options

It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows. Dell provides multiple options for recovering the Windows operating system on your Dell computer. For more information, see Dell Windows Backup Media and Recovery Options.

Network power cycle

About this task

If your computer is unable to access the Internet due to network connectivity issues, reset your network devices by performing the following steps:

Steps

1. Turn off the computer.
2. Turn off the modem.

   NOTE: Some Internet service providers (ISPs) provide a modem and router combo device.
3. Turn off the wireless router.
4. Wait for 30 seconds.
5. Turn on the wireless router.
6. Turn on the modem.
7. Turn on the computer.

Drain flea power (perform hard reset)

About this task

Flea power is the residual static electricity that remains in the computer even after it has been powered off and the battery is removed.

For your safety, and to protect the sensitive electronic components in your computer, you must drain residual flea power before removing or replacing any components in your computer.

Draining flea power, also known as a performing a "hard reset," is also a common troubleshooting step if your computer does not turn on or boot into the operating system.

Perform the following steps to drain the flea power:

Steps

1. Turn off the computer.
2. Disconnect the power adapter from the computer.
3. Remove the base cover.
4. Remove the battery.
5. Press and hold the power button for 20 seconds to drain the flea power.
6. Install the battery.
7. Install the base cover.
8. Connect the power adapter to the computer.
9. Turn on the computer.

   NOTE: For more information about performing a hard reset, go to Dell Support Site. On the menu bar at the top of the Support page, select Support > Support Library. In the Search field on the Support Library page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

7

Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Table 27. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	Dell Site
Contact Support	In Windows search, type `Contact Support`, and press Enter.
Online help for operating system	Windows Support Site Linux Support Site
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals, and documents.	Your Dell computer is uniquely identified using a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at Dell Support Site. For more information about how to find the Service Tag for your computer, see Locate the Service Tag on your computer.
Dell knowledge base articles	1. Go to Dell Support Site. 2. On the menu bar at the top of the Support page, select **Support** > **Support Library**. 3. In the Search field on the Support Library page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see Contact Support at Dell Support Site.

NOTE: Availability of the services may vary depending on the country or region, and product.

NOTE: If you do not have an active Internet connection, you can find contact information in your purchase invoice, packing slip, bill, or Dell product catalog.

8

Revision history

Tracks all updates that are made to the document. It typically includes the date of change, version number, and a brief description of the modification. This log helps maintain transparency, accountability, and a clear timeline of progress.

Table 28. Revision history

Revision	Date	Description
A01	06-2026	• Added Quick charge support on power adapters with detachable Type-C cables topic. • Updated display specifications. • Updated processor specifications. • Updated CRU and FRU removal and installation procedures.
A00	05-2026	Original publish date.