AKAI

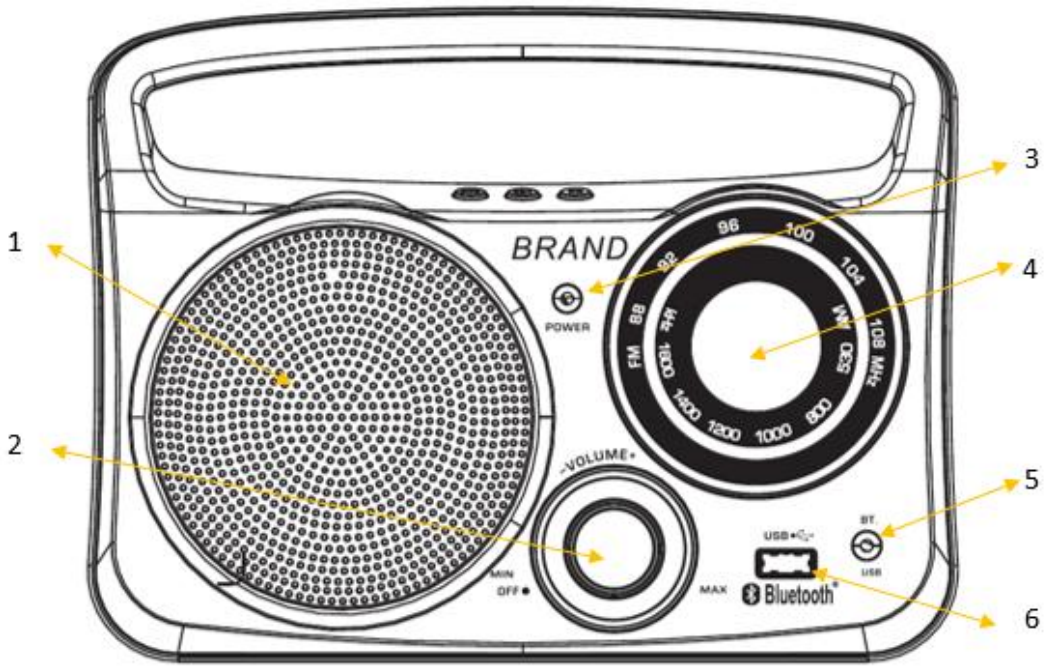
APR-85BT

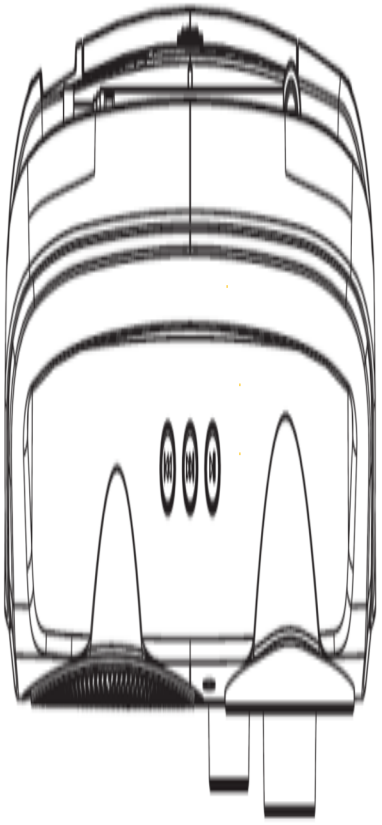
Portable radio with BT



User Manual

EN - ENGLISH

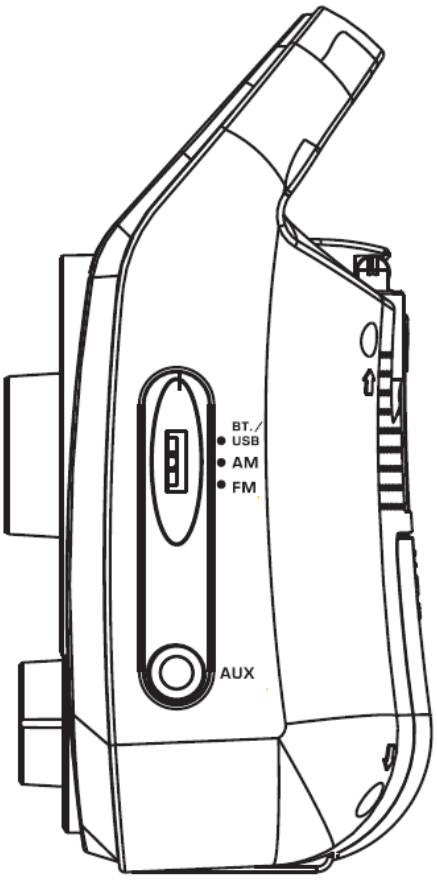

1
2
3
4
5
6
BRAND
POWER
VOLUME
MIN
OFF
MAX
USB
BT
Bluetooth
FM
MW
SW
96
100
104
88
92
108
MHz
530
1400
1200
1000
800



7

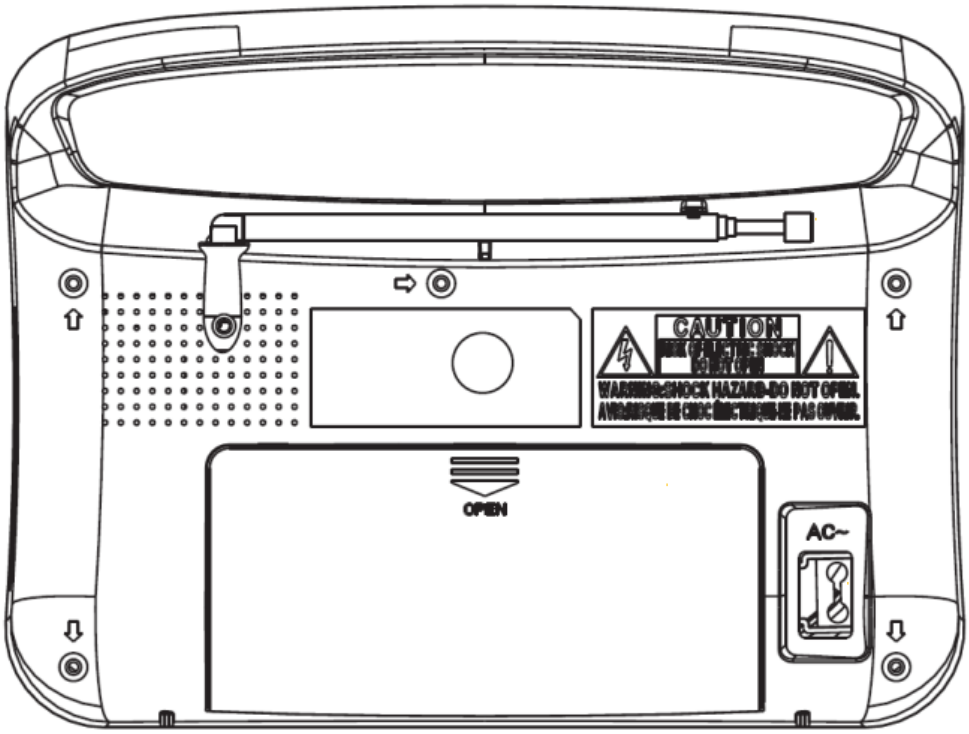
8

9


BT./
USB
AM
FM
AUX

10

11



12

13

14

LOCATION OF CONTROL BUTTONS

1. Speaker
2. Volume Control Knob
3. Power Indicator
4. Frequency Display
5. BT Indicator
6. USB Port
7. Play/Pause Button for USB Control
8. Fast Forward Button for USB Control
9. Fast Backward Button for USB Control
10. Function Band
11. Aux-In Jack
12. Antenna
13. Battery Door
14. Power Cord Jack

Safety information and warnings



Beware of small pieces and batteries, do not swallow them. It may be hazardous to your health and lead into suffocation. Please, make sure to keep small devices and batteries out of the reach of children.



Our recommendation: **Avoid high volumes**. Children should be supervised while using; make sure that the appliance is not set to high volume. High volumes may cause irreparable damage to children's ears.



NEVER let allow anyone, especially children, to put object into the holes, slots or openings on this device. The device must only be opened by a qualified personnel.

This device 

Only use the appliance for its intended purpose.
may only be used in housings and business premises.



Please keep this instruction manual for further reference.



Do not obstruct the ventilation of the device. Make sure, that no curtains, newspaper, furniture or any other type of object are blocking the ventilation system of the apparatus. Overheating may lead into serious damage of the device and reduce its performance and lifespan.



Heat and warmth

Do not expose the appliance to strong direct sunlight. Make sure that the appliance is not subject to direct heat sources such as heaters or open fire. Make sure that the ventilation slots of the appliance are not covered.



Moisture and cleaning

This appliance is not waterproof! Do not immerse player in water. Do not allow player to come in contact with water. If water gets inside the player it may cause serious damage. Do not use cleaning agents that contain alcohol, ammoniac, benzene or abrasives as these could damage the player. For cleaning, use a soft, moistened cloth.

Traffic safety :

Never listening to music when you cross a road or driving car.

Power Source

Battery Power Operation

1. Open the battery compartment door by punishing the catches downwards.
2. Insert 4 x UM2 batteries as indicated on the battery slot (Batteries excluded).
3. Close the battery compartment door.

AC Power Operation

1. Connect the power cord to the AC socket, and plug the other end to an AC outlet.

Radio Operation

1. Make Sure the unit is connected to power sources.
2. Turn to the unit by rotate the Volume knob in clockwise. The power indicator will be on.
3. Push the Band Switch to desired band (AM or FM).
4. Tune to a desired radio station by rotating the “Tuning knob”
5. Pull out the antenna and adjust the length or direction to get the best reception.

Aux-In Jack

To listen to an external audio source, a 3.5mm audio cable (excluded) is needed.

Connect the output jack of the audio source to the Aux-In jack of the radio. Play the audio source. Turn the Volume/ On-Off Knob clockwise to turn radio on. The audio source should then be heard.

Bluetooth

1. Push the Band Switch to BT/USB and make sure the USB is not connected.
2. The BT/USB indicator will be on and blink.
3. Turn on the Bluetooth source and Bluetooth function of it (e.g. mobile phone).
4. Select the APR-85BT to connect, there will be a prompt and your device is now connected to APR-85BT.
5. It is recommended to do the control of playback though the Bluetooth source.

USB Operation

1. Push the Band Switch to BT/USB
2. Plug in the USB to USB port
3. Play the music and control by the 3 buttons on the top.

To play or pause the music playback, press ⏯

To skip to the next track, press ⏭

To fast forward within the track, press and hold ⏭

To skip to the previous track, press ⏮

To fast backward within the tract, press and hold ⏮

Specifications

Power Source: AC~240V, 50Hz / DC 6V (4 x UM2 Batteries)

Power output: 500mW RMS
Frequency Range: FM 88-108Mhz / AM 540-1600kHz
Frequency response: 125Hz – 6kHz
Bluetooth Version: Ver. 4.2
Dimensions: (H) 162) x (W) 215 x (D) 69 mm
Weight: ~0.5kg

DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the product or packaging means that the product should not be treated as household waste. Do not throw garbage at the end of its life, but take it to a collection center for recycling. in this way you will help to protect the environment and be able to prevent any negative consequences that it would have on the environment and human health.

To find your nearest collection center:

-Contact local authorities

- Access the website: www.mmediu.ro
- Request additional information from the store where you purchased the product.

AKAI

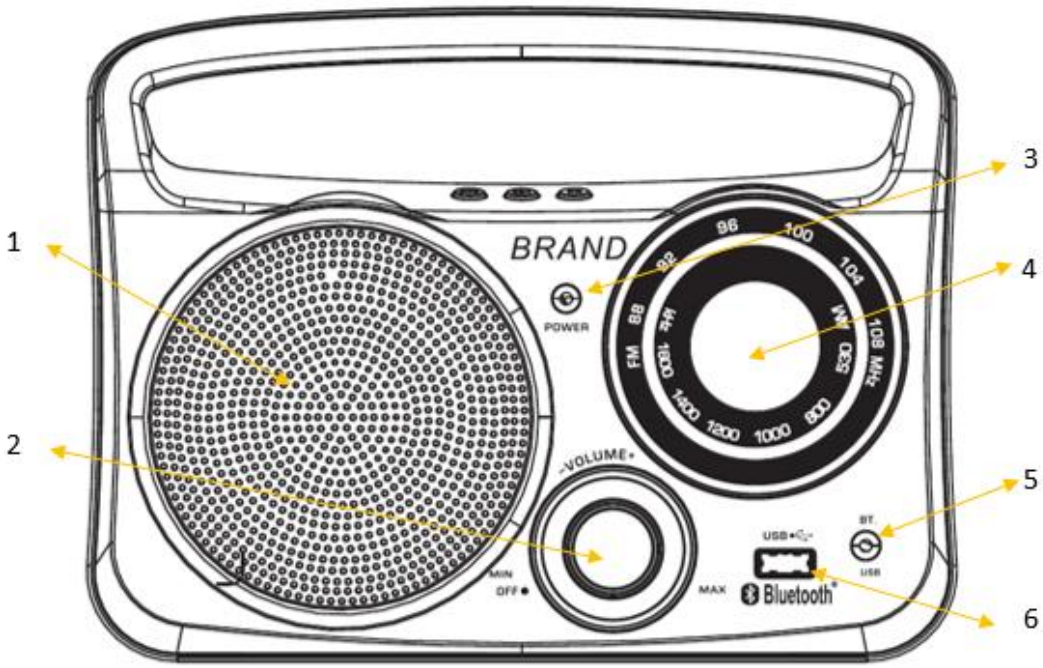
APR-85BT

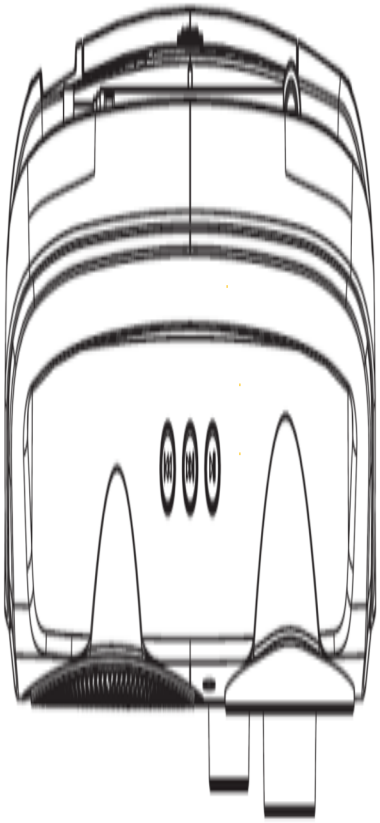
Radio portabil cu Bluetooth



Manualul utilizatorului

RO - ROMANA

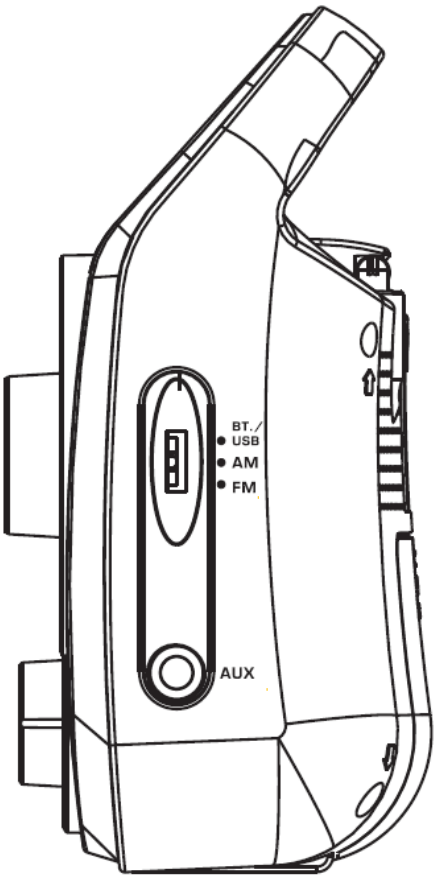

BRAND
POWER
VOLUME
MIN
OFF
MAX
USB
BT
Bluetooth
FM
88
96
100
104
108 MHz
530
800
1000
1200
1400
1600
1
2
3
4
5
6



7

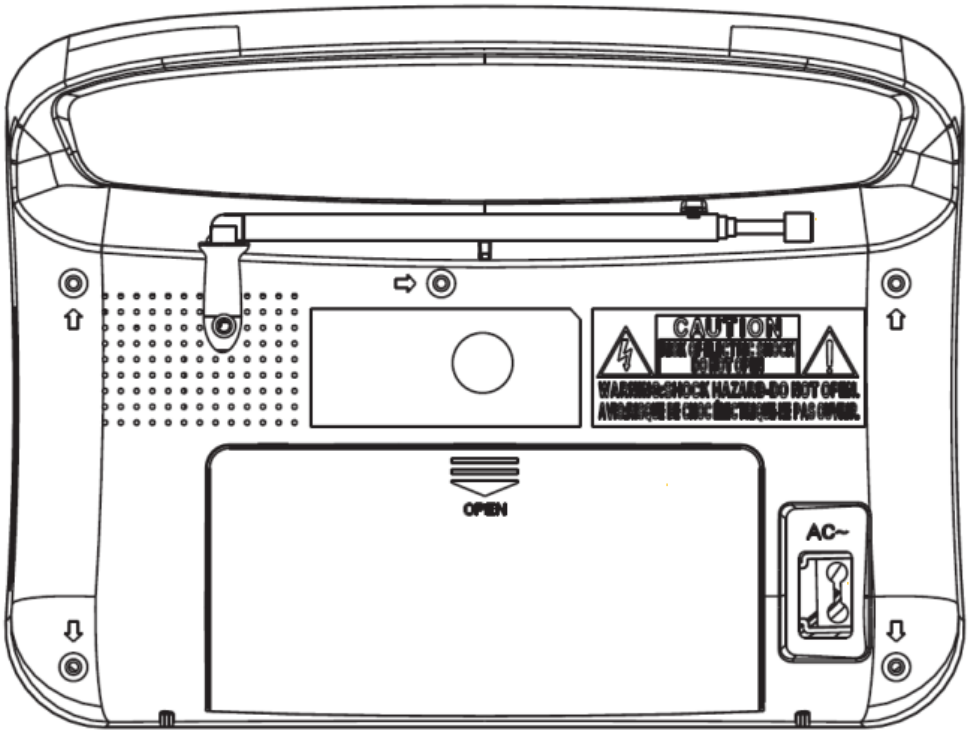
8

9


BT./
USB
AM
FM
AUX

10

11



12

13

14

LOCALIZAREA BUTOANELOR DE CONTROL

1. Difuzor
2. Buton control volum
3. Indicator alimentare
4. Afisaj frecventa
5. Indicator BT
6. Port USB
7. Buton redare/pauza pentru control USB
8. Buton derulare rapida inainte pentru control USB
9. Buton derulare rapida inapoi pentru control USB
10. Buton functii banda
11. Mufa Aux-In
12. Antena
13. Usa pentru compartimentul de baterii
14. Mufa cablu alimentare

Informatii de siguranta si avertizari



Atentie sa nu inghititi piese mici si baterii. Acestea pot fi periculoase pentru sanatate si pot duce la sufocare. Nu lasati piesele mici si bateriile la indemana copiilor.



Recomandarea noastra: **Evitati volumele ridicate**. Copiii trebuie supravegheati in timpul utilizarii; asigurati-va ca aparatul nu este setat la volum ridicat. Volumele ridicate pot cauza daune ireparabile pentru auzul copiilor.



NU PERMITETI NICIODATA NIMANUI, in special copiilor, sa puna obiecte in orificiile, fantele sau deschizaturile de pe acest aparat. Aparatul trebuie deschis doar de personal calificat.



Folositi aparatul doar in scopul prevazut. Acest aparat poate fi folosit doar in locuinte si spatii comerciale.



Pastrati acest manual de instructiuni pentru referinte viitoare.



Nu impiedicati gurile de ventilatie ale aparatului. Asigurati-va ca sistemul de ventilare a aparatului nu este blocat de draperii, ziare, mobila sau orice alt obiect. Supraincalzirea poate duce la defectarea serioasa a aparatului si poate reduce functionarea si durata de viata.



Incalzire si caldura

Nu expuneti aparatul la razele directe ale soarelui. Asigurati-va ca aparatul nu se afla in imediata apropiere a surselor de caldura, cum ar fi radioatoare sau foc deschis. Asigurati-va ca gurile de ventilatie ale aparatului nu sunt acoperite.



Umezeala si curatare

Acest aparat nu este rezistent la apa! Nu scufundati aparatul in apa. Nu lasati aparatul sa intre in contact cu apa. Daca in interiorul acestuia patrunde apa, acesta se poate defecta. Nu folositi agenti de curatare care contin alcool, amoniac, benzene sau substantante abrazive, deoarece acestea pot defecta produsul. Pentru curatare, folositi o carpa moale, umezita.

Siguranta in trafic:

Nu ascultati niciodata muzica atunci cand traversati strada sau conduceti masina.

Sursa de alimentare

Operare pe baterii

1. Deschideti compartimentul pentru baterii prin apasare si glisare in jos.
2. Introduceti 4 baterii x UM2, conform indicatiilor din compartimentul pentru baterii (bateriile nu sunt incluse).
3. Inchideti usa compartimentului pentru baterii.

Operare pe alimentare AC

1. Conectati cablul de alimentare la priza AC si conectati celalat cablu la o priza AC.

Operare Radio

1. Asigurati-va ca aparatul este conectat la sursele de alimentare.
2. Porniti aparatul prin rotirea butonului de volum in sensul invers acelor de ceasornic. Indicatorul luminos se va aprinde.
3. Comutati butonul de reglare frecvente pe frecventa dorita (AM sau FM).
4. Reglati pe postul de radio dorit, prin rotirea butonului de “reglare frecvente”.
5. scoateti antenna si reglati lungimea sau directia, pentru a obtine cea mai buna receptie.

Mufa Aux-In


Pentru a asculta o sursa audio externa, este necesar un cablu audio de 3.5mm (nu este inclus).
Conectati mufa externa a sursei audio la mufa Aux-In a radioului. Incepeti redarea din sursa audio. Rotiti butonul de volum/on-off in sensul acelor de ceasornic, pentru a porni radioul. Se va auzi ceea ce redati din sursa audio externa.

Bluetooth

1. Comutati butonul de reglare frecvente pe modul BT/USB si asigurati-va ca stickul USB nu este conectat.
2. Indicatorul BT/USB se va aprinde si va licari.
3. Porniti sursa Bluetooth si functia Bluetooth de pe aceasta (ex telefonul mobil).
4. Selectati APR-85BT pentru a conecta, dupa care se va auzi un sunet si dispozitivul dumneavoastra este conectat la APR-85BT.
5. Va recomandam sa faceti controlul redarii prin sursa Bluetooth.

Operare USB

1. Comutati butonul de reglare frecvente pe modul BT/USB
2. Conectati stick-ul USB la portul USB
3. Redati muzica si controlati-o cu ajutorul celor 3 butoane de pe panoul superior.

   Pentru a reda sau a pune pe pauza muzica, apasati butonul 

   Pentru a trece la melodia urmatoare, apasati butonul 

Pentru a derula rapid inainte in cadrul melodiei, apasati si tineti apasat butonul ⏭

Pentru a trece la melodia anterioara, apasati butonul ⏮

Pentru a derula rapid inapoi in cadrul melodiei, apasati si tineti apasat butonul ⏮

Specificatii

Sursa de alimentare: AC~240V, 50Hz / DC 6V (4 baterii x UM2)

Putere iesire: 500mW RMS

Gama de frecvente: FM 88-108Mhz / AM 540-1600kHz

Frecventa de raspuns: 125Hz – 6kHz

Versiune Bluetooth: Ver. 4.2

Dimensiuni: (I) 162) x (L) 215 x (G) 69 mm

Greutate: ~0.5kg

DEZAFECTAREA ECHIPAMENTELOR ELECTRICE SI ELECTRONICE UZATE



Acest simbol prezent pe produs sau pe ambalaj semnifică faptul că produsul respectiv nu trebuie tratat ca un deşeu menajer obişnuit. Nu aruncaţi aparatul la gunoiul menajer la sfârşitul duratei de funcţionare, ci duceţi-l la un centru de colectare autorizat pentru reciclare. În acest fel veţi ajuta la protejarea mediului înconjurător şi veţi putea împiedica eventualele consecinţe negative pe care le-ar avea asupra mediului înconjurător şi sănătăţii umane.

Pentru a afla adresa celui mai apropiat centru de colectare:

- Contactați autoritățile locale;
- Accesați pagina de internet: www.mmediu.ro;
- Solicitaţi informaţii suplimentare de la magazinul de unde aţi achiziţionat produsul.