Tradesman 3
Quick Start Guide




Table of Contents


Presentation
- Keys presentation
- Accessing Quick Settings

First steps
- How to insert a SIM card and an SD card
- How to charge the phone

Creating a contact
Sending a message
Making a phone call
Surfing on the Internet
Customizing your ringtone
Connecting to Wi-Fi
Making a call using Wi-Fi
Taking a picture/video
Creating an alarm
Accessing donwloaded files
Doing a factory reset

Presentation

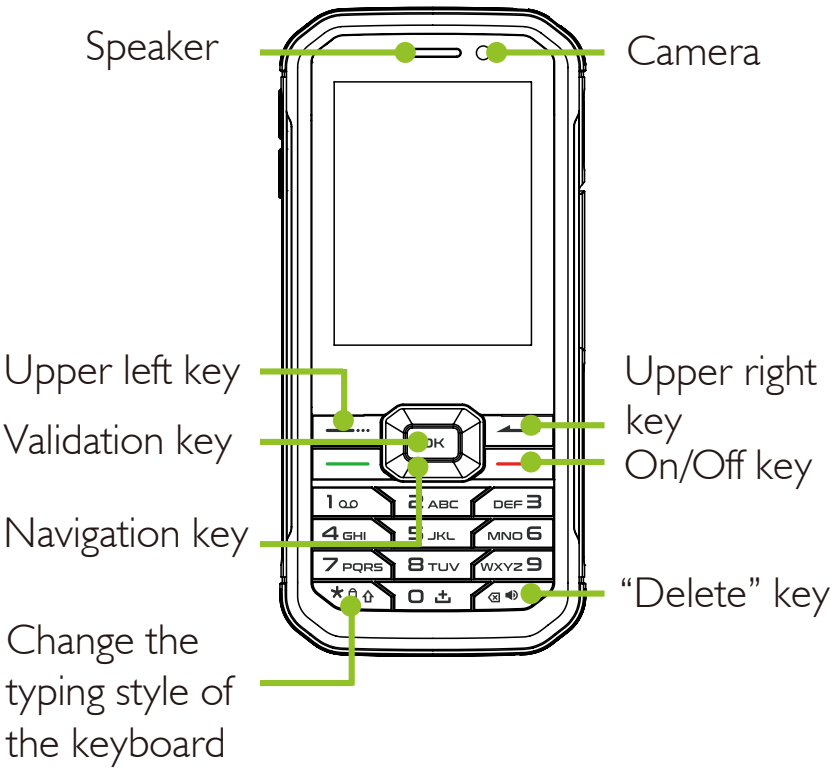


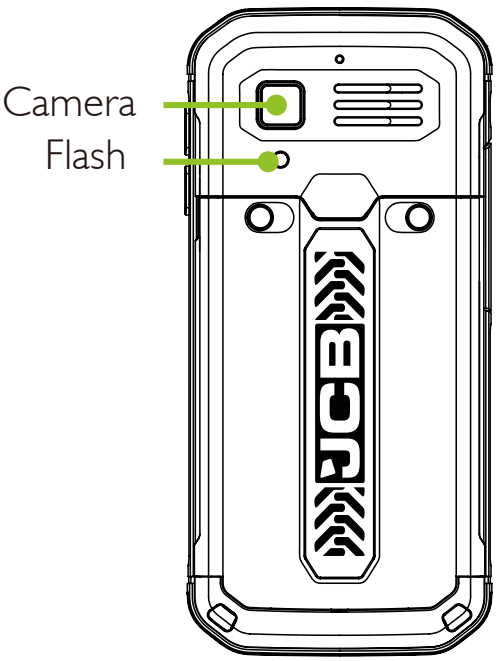

Keys Presentation

Keys	Functionalities
	• Short press: Display more options or display the notification bar
	1. Selection and validation key 2. Navigation pad
	Launch a call
	• Short press: *key • Long press to lock screen
	• Short press: Back function key • Long press: Applications history
	• Switch on/off key • Short press (during call): End Call key
	• Short press: Delete key • Long press: # key

Accessing Quick Settings

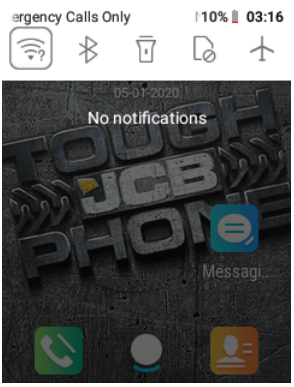


From the idle screen, press and hold this key  .
The notification bar appears.

You can:
-Select a Wi-Fi network
-Select on/off Bluetooth
-Switch on/off Torch
-Check the mobile network signal
-Set the device in plane mode


First steps

How to insert a SIM card or an SD card

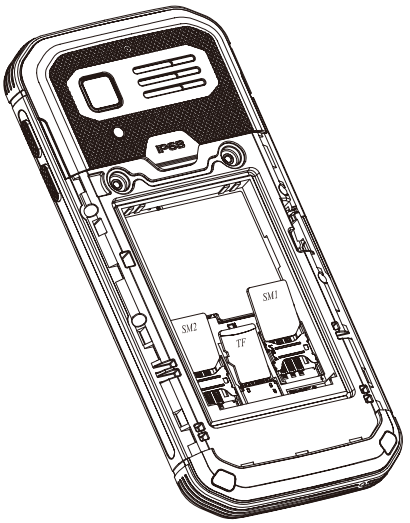

1. Switch off the device.
2. Remove the battery cover.
3. Remove the battery.
4. Place the SIM/SD card as indicated on the drawing.
5. Replace the battery and the battery cover.


How to charge the Phone

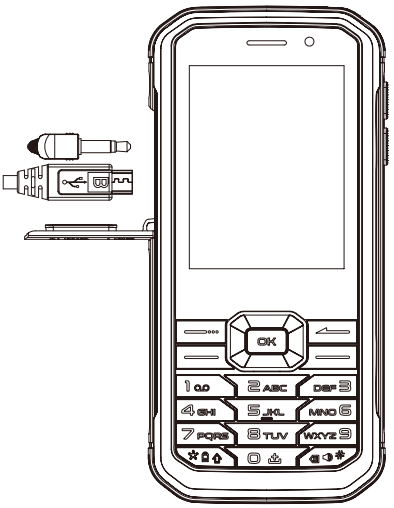


Connect the device to the micro-USB charger and plug it into a socket.

Creating a contact




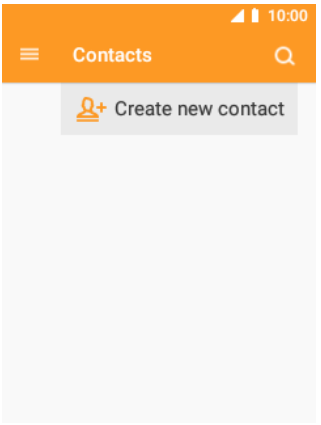

1. Select **Create a new contact.**
2. Select your storage.

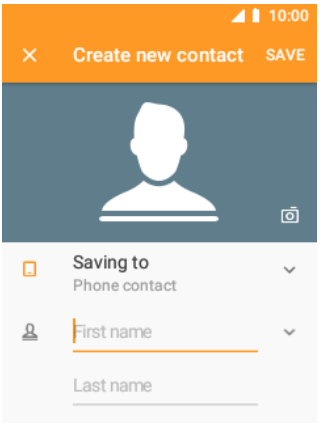


3. Fill in the fields.

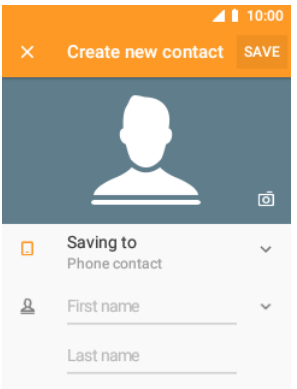


4. Select **Save**.

Sending a message



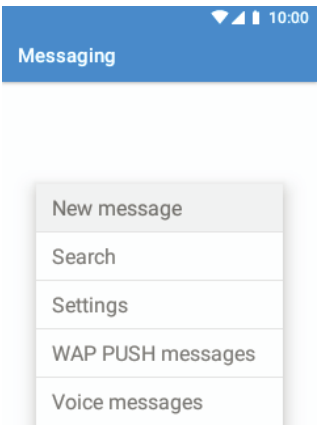

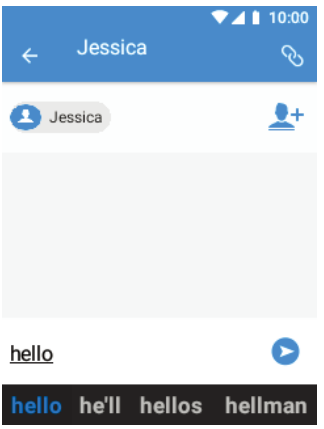

1. Press the upper left key and select **New message.**

2. Type the recipient information and type your message.

3. Select the arrow  to send.


Making a phone call



From the idle screen, type the number of your recipient or select the contact in the list of the **Contacts** application.

Surfing on the Internet



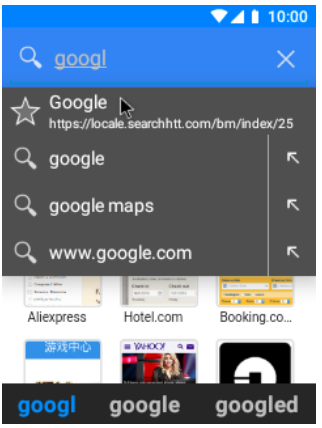


1. Type your keywords in the search field and start the search.


2. Use the navigation pad to move the cursor along the screen.

Customizing your ringtone




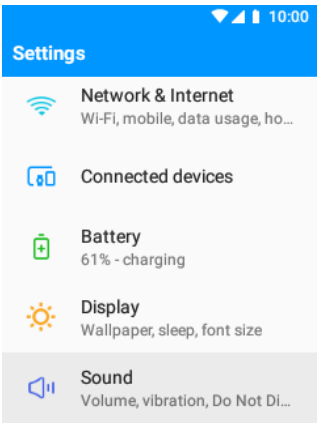

1. Select **Sound.**

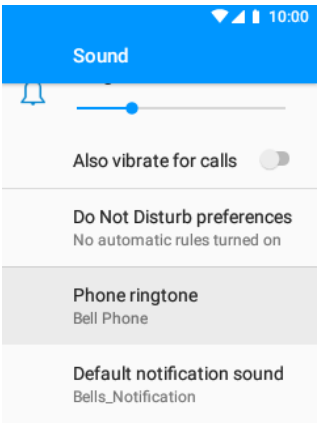


2. Select **Phone ringtone.**

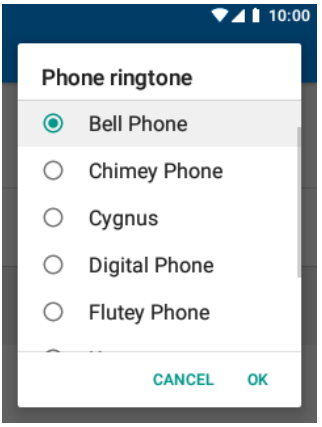


3. Select a ringtone in the list.

Connecting to Wi-Fi




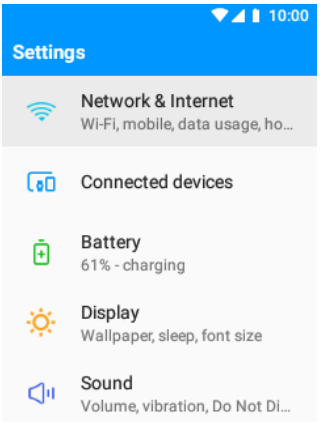

1. Select **Network & Internet.**

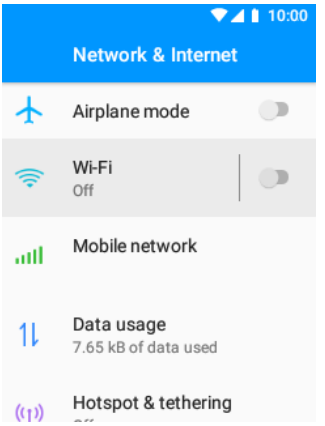


2. Select Wi-Fi and switch it on.

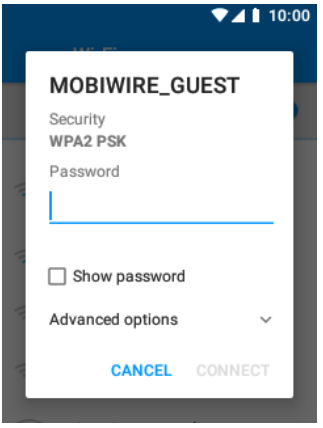


3. Select a network in the list and connect your device to it.

Making a call using Wi-Fi




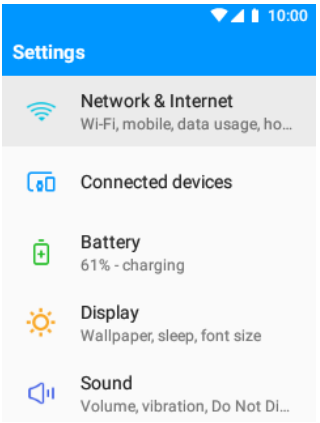


1. Select **Network & Internet.**

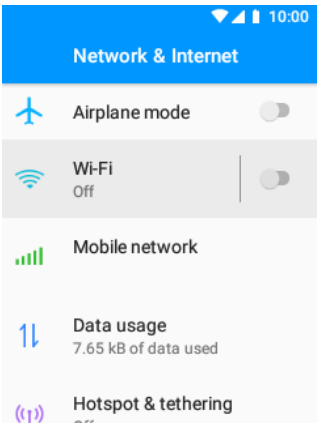

2. Select Wi-Fi and switch it on.

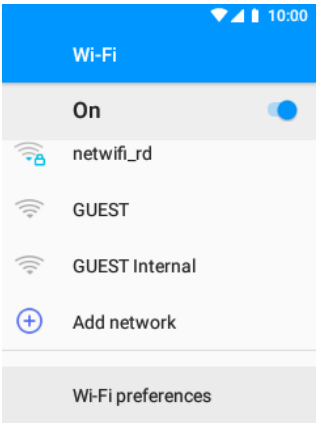

3. Under the network list, select **Wi-Fi Preferences**

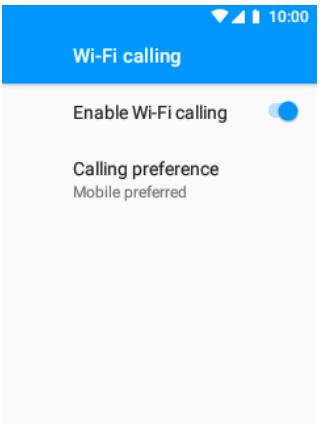


4. Select **Wi-Fi calling** and switch the option on.


Taking a picture



Use the screen to frame your picture and press on the validation key.
To take a video:

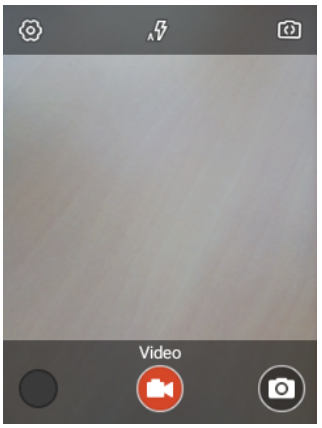

1. Once in the **Camera** application, use the navigation pad to select the "Camera icon".

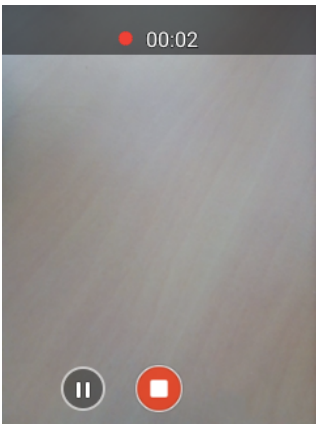


2. Press on the validation key to start recording the video.


3. Press on the validation key to end the recording.

Note: The video is automatically saved.

Creating an alarm



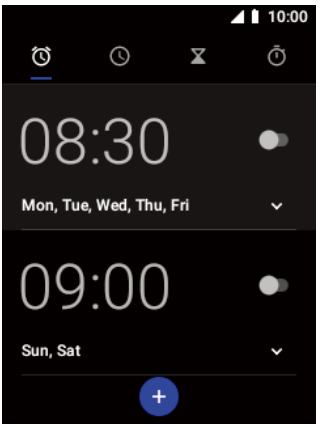

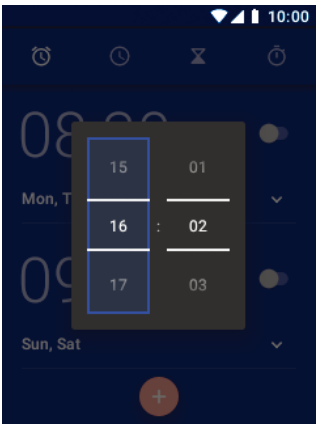


1. Select the alarm clock icon .

2. Select icon and set the alarm time.


3. Press the validation key to save the alarm.

Accessing downloaded files



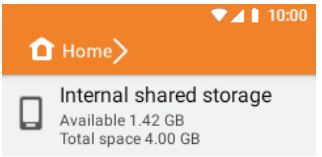


1. Select **Internal Shared storage.**

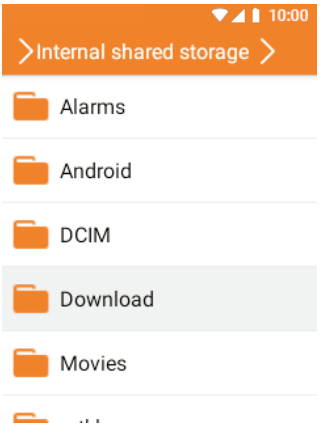


2. Select **Download** and select your file in the list.

Doing a factory reset



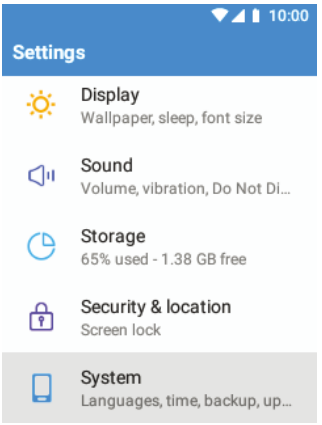

1. Select **System.**

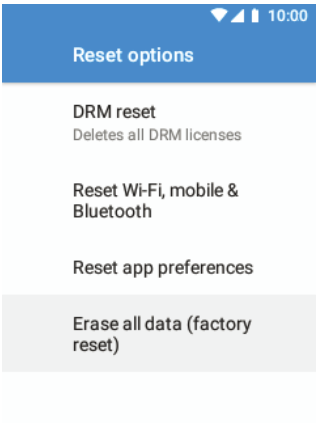

2. Select **Reset options.** Then select **Erase all data.**

the smart purchase.

JCBPHONE.COM