BARBERBOSS

QR-6086

Importer: Elite Capital Limited
Address: Studio 4 Clarks Courtyard, 145 Granville Street,
Birmingham, B1 1SB. United Kingdom.
Website: barberboss.co.uk
Email: care@barberboss.co.uk

BARBERBOSS



QR-6086

Voltage:5V

Product Structure



hair/beard guide

cutting blade

length arrow

length dial

switch button

power display

lock symbol

(When it flashes, the machine is locked, long press for 3 sec to unlock)

Product Accessories




Hair Cutting Blade



Beard Cutting Blade




Precise Styling Blade

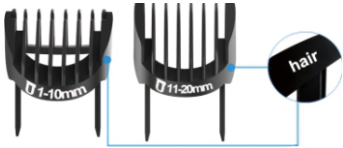

(guides for hair cutting has words "hair" on the side)

1-10mm hair guide

11-20mm hair guide

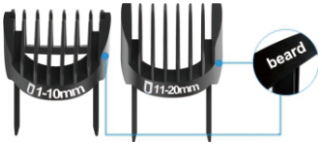

(guides for beard cutting has words "beard" on the side)

1-10mm beard guide

11-20mm beard guide

How to Remove Blade





1, Put thumb on upper part of blade;

2, Push forcefully until the blade fall off

How to Install Blade



1,Align the blade bottom and machine body as image shows.



2,Push the blade in showed direction forcefully.



3,Installation finished.

How to Change Guide



1, Insert the Guide into the holes on both sides of blade



2, Push in Guide until It clicks, guide is installed successfully.



3, To remove the guide, pull out the guide in the direction as image showes

How to Trim Hair







1, Install the Hair Cutting Blade. If you don't need to adjust cutting length, you may start hair trimming now.

2, To adjust cutting length, insert a hair guide according to your desired hair length. Say, if you want hair to be 8mm long, then please insert the 1-10mm hair guide.
NOTE: ONLY GUIDES WITH WORD " hair " ON THE SIDE ARE FOR HAIR BLADE.

3, Rotate the length dial to set your desired length (Align the arrow to the corresponding number). Say, if you want hair to be 8mm long, align the arrow to 8mm.

How to Trim Beard







1, Install the Beard Cutting Blade. If you don't need to adjust cutting length, you may start beard trimming now.

2, To adjust cutting length, insert a beard guide according to your desired beard length. Say, if you want beard to be 11mm long, then please insert the 11-20mm hair guide.
NOTE: ONLY GUIDES WITH WORD "beard" ON THE SIDE ARE FOR BEARD BLADE.

3, Rotate the length dial to set your desired length (Align the arrow to the corresponding number). Say, if you want beard to be 11mm long, align the arrow to 11mm.

4, Start the trimming on beard, moustache, sideburns.

Very Important!



1, Ensure the flat part of the guide is in full contact with the scalp, as the left image shows. Or it may cause an uneven cutting.

2, Move the trimmer against the direction of hair growth. Since all hair does not grow in the same direction, you need to move the device in different directions (upward, downward or across).

3, For very short cuts (stubble look) Don't use a guide, then the trim length would be 0.5mm.