Sandberg®

ConfCam EPTZ 1080P HD Remote

Quick guide

134-22




Double Quality Tested


www.sandberg.world

Sandberg®

Quick guide

Product overview

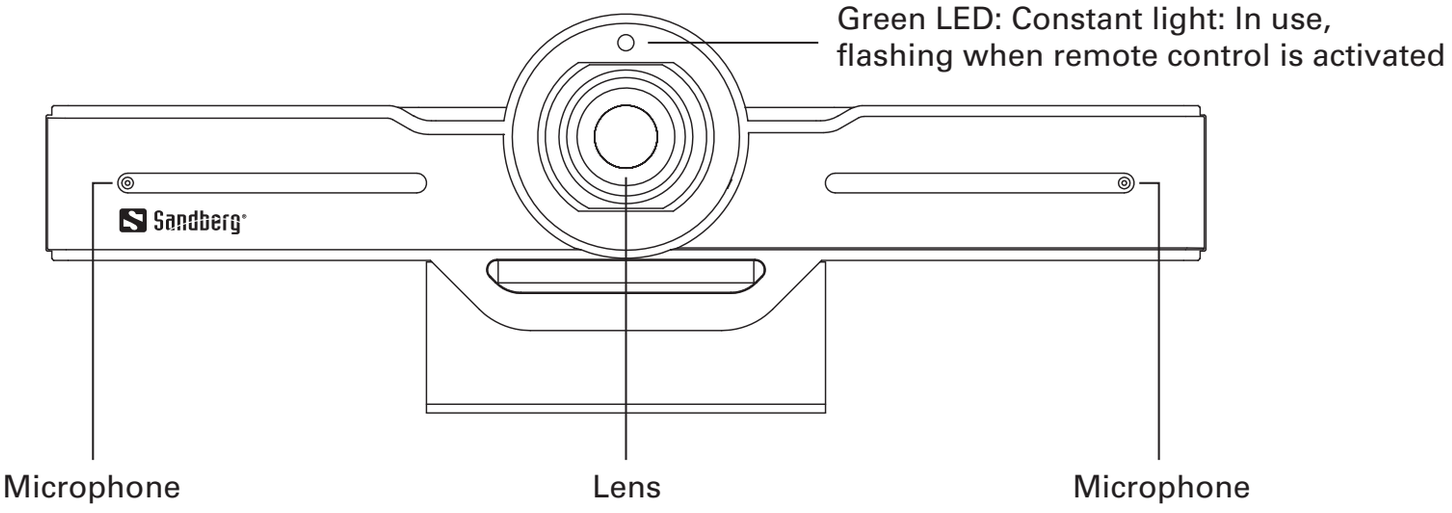


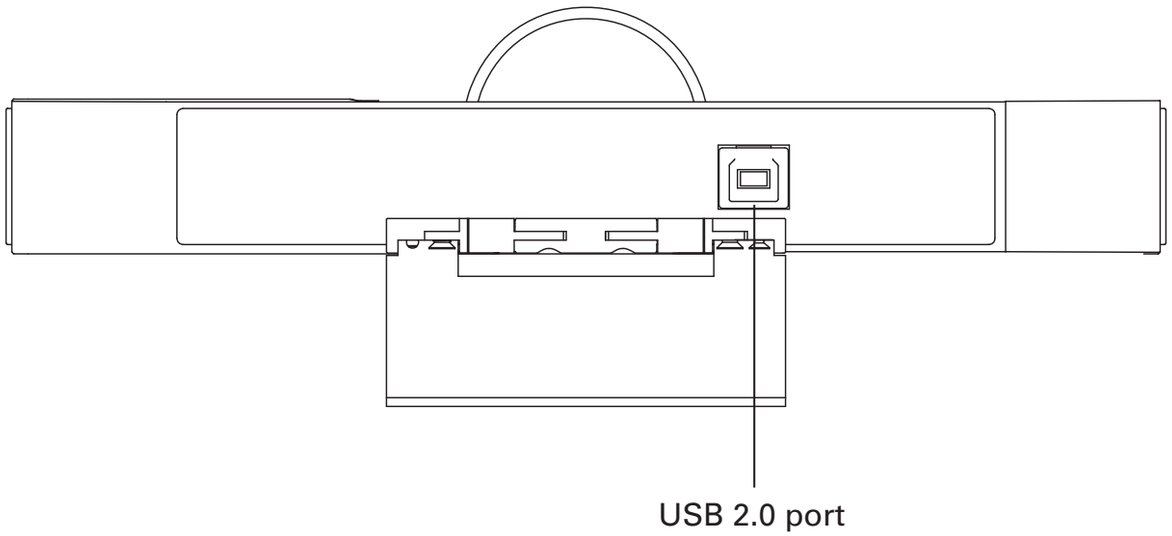


Sandberg®

Quick guide

Mounting options

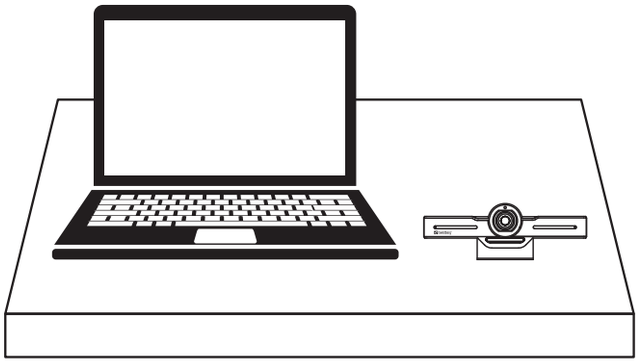


On a Desk

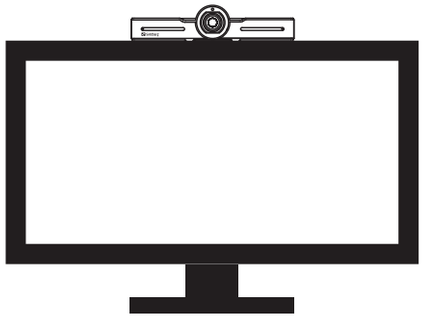

On a PC Monitor




On a tripod, for example
Sandberg item no. 134-26

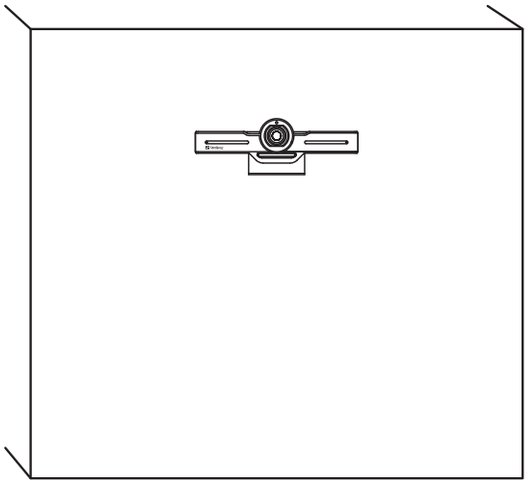


On a Wall

Screw the wall mount bracket on the wall, refer to the following picture 1.
Fasten the camera on the wall mount bracket, refer to the following picture 2.

(Picture 1)

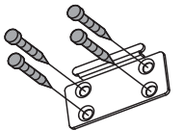


(Picture 2)

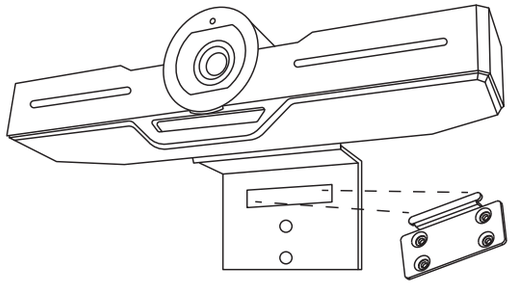

Sandberg®

Quick guide

Connect webcam to USB port on computer

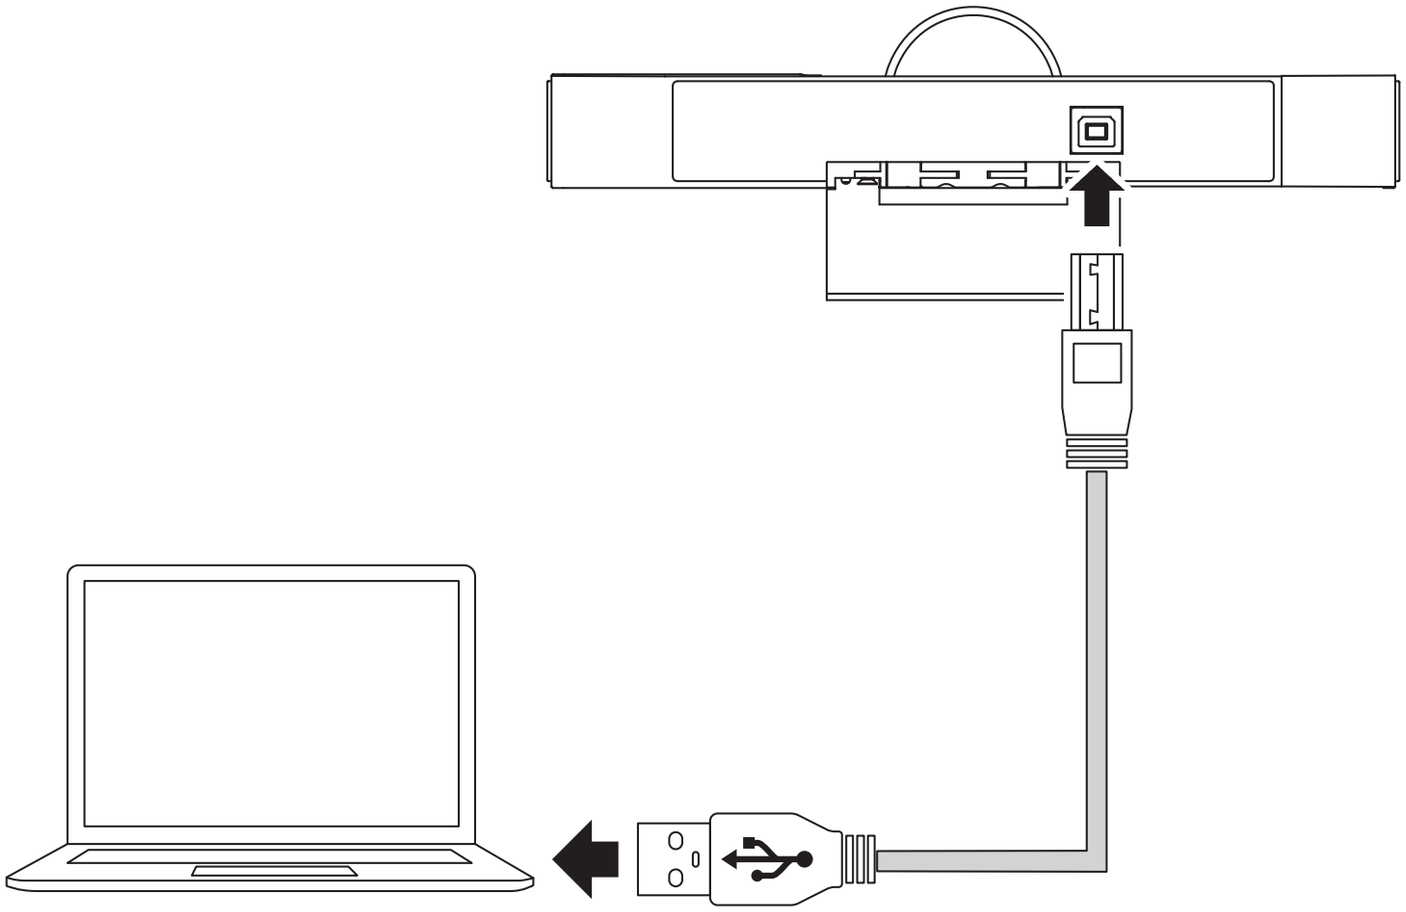

Sandberg®


Quick guide

Software installation

The camera works driver-less and is compatible with most chat-applications.

If you want to get further options for video-effects and image adjustments, please follow this link:
www.sandberg.world/webcamguide


Choose this device name on the device list for
video-camera and recording microphone:

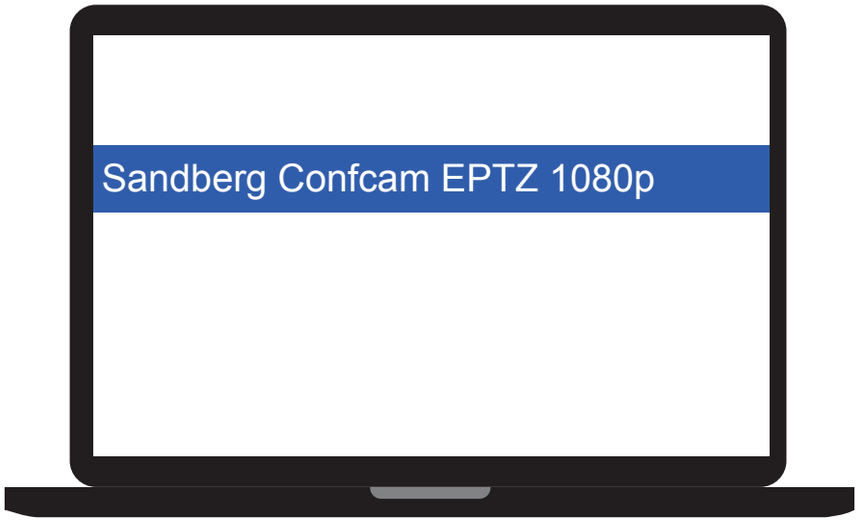

Sandberg®

Quick guide

Remote control

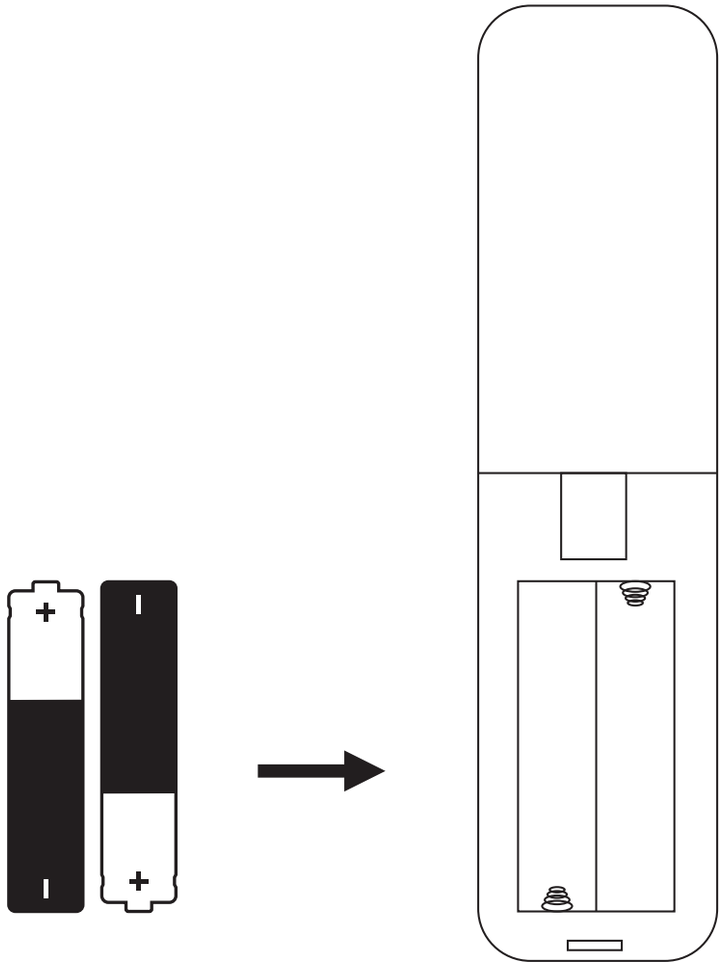

Open the back of the remote control and insert 2 x AAA batteries.

Sandberg®


Quick guide

Digital Pan, Tilt and Zoom functions (EPTZ)

Zoom:


The camera supports EPTZ 3x digital zoom. When you zoom into the image the option opens for moving Up / Down (Tilt) and Left / Right (Pan).

1. Press Zoom+ on the remote control to zoom in image.

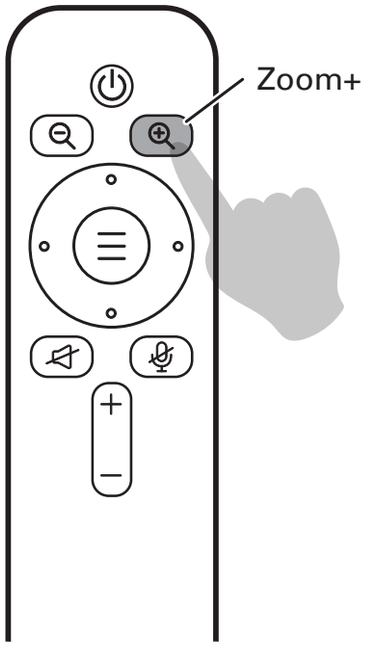




2. After the image is zoomed in, you can move the image viewing angle Up / Down (Tilt) and Left / Right (Pan).

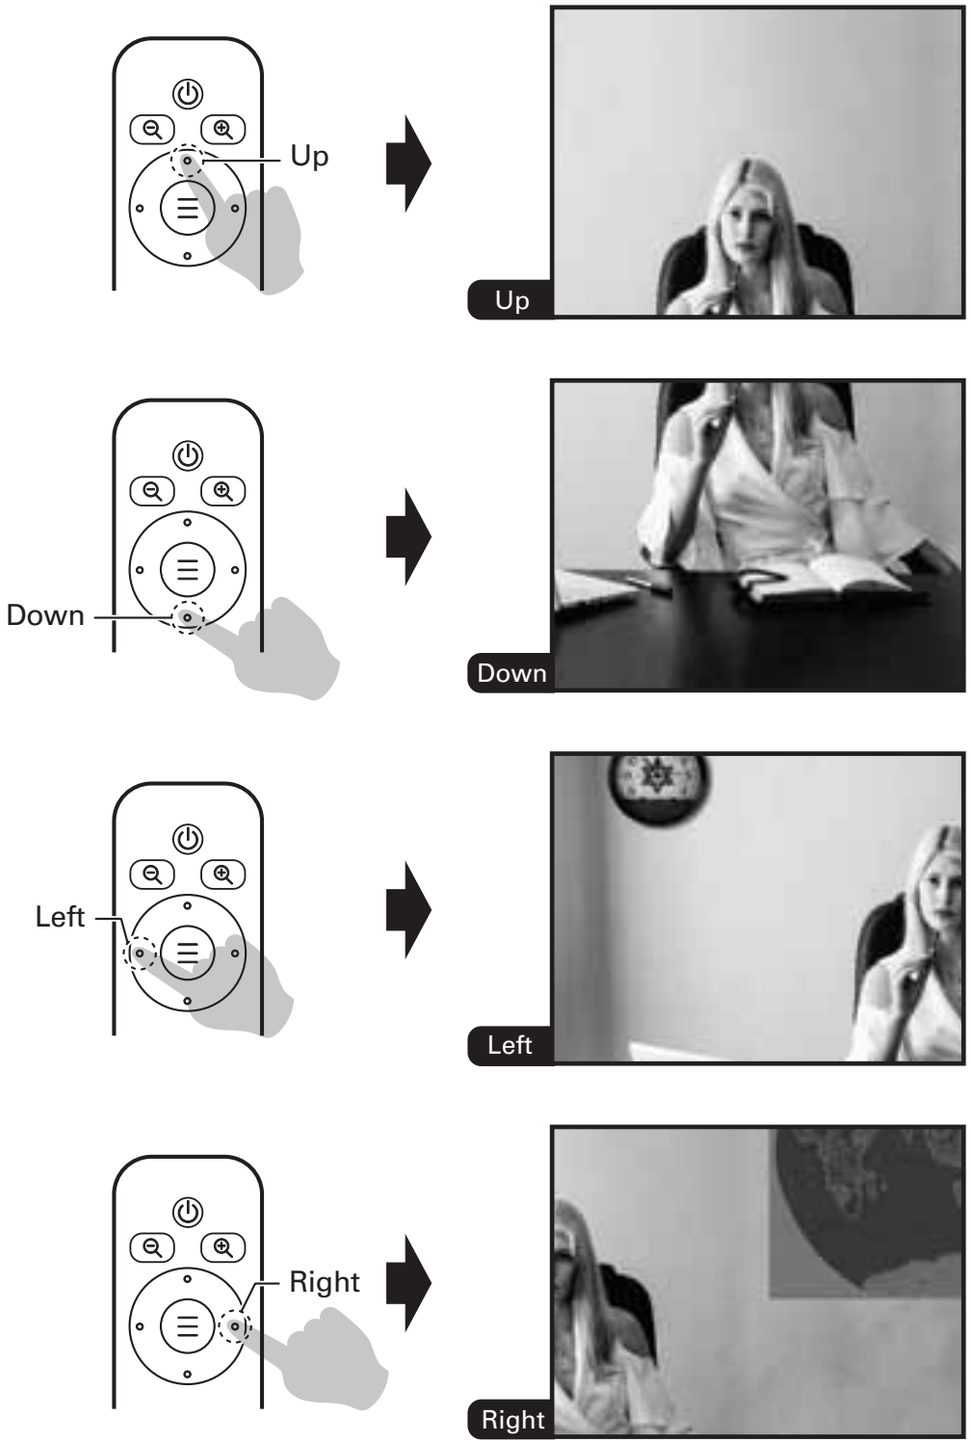

Picture in Picture (PIP)

After the image is zoomed in, you can see the full out-zoomed image in a small overlay frame (PIP).

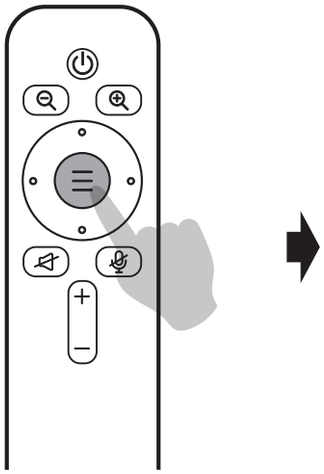




1. Press “Camera OSD Menu (Middle)”, select “Image”.



2. Select “PIP” to “On”. Picture in Picturefunction turns on, users can see smallpicture-in-picture window at the bottom of right.

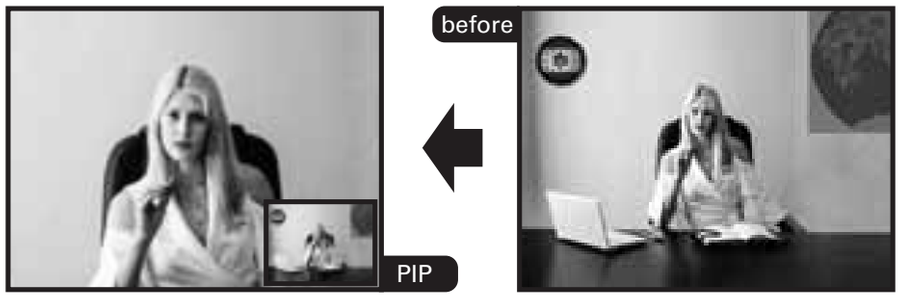



On-Screen-Display (OSD) menu

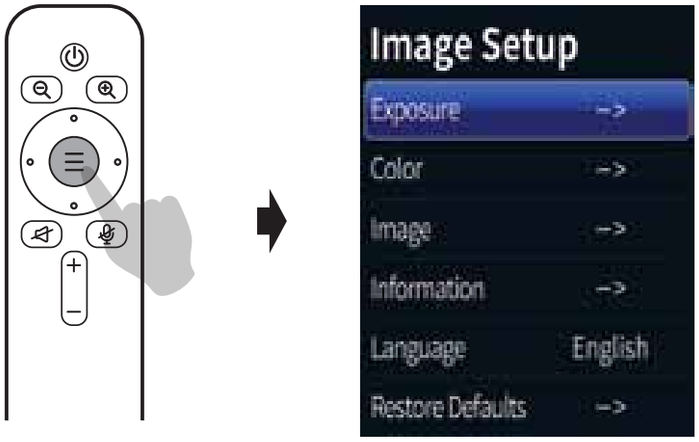


Image Setup

►Exposure

Brightness: Adjust image brightness ····· Adjustable Value: 0-255; Default: 64
Backlight: Adjust the backlight ····· Optional: Off / On; Default: Off
AE: Adjust the exposure settings ····· Optional: Auto/ Shutter; Default: Auto
Shutter: Shutter speed ····· Optional: 1/10000-1/25; Default: 1/25
Flicker: Anti-flicker adjustment ····· Optional: 50/60; Default: 50
Back: Back to previous menu

►Color

Hue: Adjust image hue ····· Optional: 0-100; Default: 50
Saturation: Adjust image saturation ····· Optional: 0-100; Default: 50
Sharpness: Adjust image sharpness ····· Optional: 0-127; Default: 50
WB: Select white balance mode ····· Optional: Auto/Manual; Default: Auto
Color Temp: Adjust color temperature ····· Optional: 1500-15000; Default: 5000
Back: Back to previous menu

►Image

Image Flip: Mirror and rotate image ····· Optional: Off/All/Flip/Mirror; Default: Off
Frame: Select image frame ····· Optional 30/25; Default: 30
Image Mode: Select image style ····· Optional Normal/Clear/Bright/Beauty Default: Normal

PIP: Picture in picture function, ---------- Optional: Off/On;
Default: Off

Back: Back to previous menu

►Information

Version:Firmware version info.
Model: Camera model info.
Date: Firmware version date.
*The information may vary according to product updates.

►Language

OSD menu language.

►Restore Defaults

Restore camera parameters to default values.

1. No Pan/Tilt movement function while OSD Menu on screen.
2. Shutter can only be adjusted if it is selected as Shutter in the AE menu.

Sandberg®

Support

http://helpdesk.sandberg.world

Warranty

There is a five-year warranty on your Sandberg product. Please read the warranty terms and register your new Sandberg product at www.sandberg.world/warranty

5
Years
Warranty



For information on handling electronic waste, see www.sandberg.world/weee