v-moda

S-80

ON-EAR BLUETOOTH® HEADPHONES

USER MANUAL

CAUTION

If serial number on the product, the manual cover or bottom of packaging is missing or defaced, please return to retailer immediately.

READ ME

Before using this product, carefully read the safety and warranty information in the booklets provided. Please then keep the documents where they can be available for immediate reference. To acquire a full printable version of the manual, please visit www.v-moda.com/manuals

Qualcomm®
aptX™ HD

1YR WARRANTY

IMMORTAL LIFE PROGRAM

IMPORTANT NOTES

* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to www.v-moda.com.
* Use a standard USB AC adaptor (5V /over 500mA) for charging.
* This product is equipped with a lithium-ion battery.
* Even if you do not use this product for an extended period of time, you should charge it once every three months to prevent the internal lithiumion battery from degrading.
* Ambient temperature range during charging: 5–35°C
* However, in order to take full advantage of the rechargeable lithium-ion battery's performance, we recommend that you charge it in a temperature range of 10–30°C.
* Take care not to pinch your fingers when opening or closing the headphones.
* Charge the device using the included USB cable. Do not use the included USB cable with any other device.

ABOUT THE HEADPHONES

Welcome to V-MODA, the ultimate referral point for the music lover's lifestyle.
We sincerely hope you enjoy our headphones, the perfect blend of timeless style, modern ergonomics, and state-of-the-art technology.

S-80 is a cutting-edge true wireless on-ear headphone which doubles as a personal speaker, with award-winning V-MODA sound and inspired design ensuring you have a premium audio experience perfect for any and every occasion. It takes V-MODA customization to a whole new level, enabling you to customize how your headphones sound via the V-MODA app just as much as how they look, with brand-new magnetic shields allowing you to change your look as easily as changing your t-shirt.


S-80 is the first V-MODA headphone to be built with swivel earcups, allowing you to comfortably wear them around your neck in between sessions, or activate them as a personal stereo. To complete the firsts of S-80's revolutionary design, its customization features magnetic shields which can be laser engraved or color printed with your own logo, design or monogram, with a plethora of base shield colors to choose from making it easy to be bold and express your own personal style to the full.


Built to work with the V-MODA app, enjoy a personalized audio experience with S-80 for over 20 hours as a headphone and 10 hours as a personal stereo on a single charge. The in-app EQ tool puts you in control of your sound for whatever you're listening to: keep or adjust an expertly tuned preset or create your own sound signature from scratch.

Control your audio, answer calls and access voice assistants with an intuitive interface designed to make life flow a little more seamlessly. While soft to the touch with a 100% premium PU leather exterior, S-80 is extremely durable thanks to a metal-build core and flexible headband. Memory foam cushions complete the S-80's incredibly comfortable design to make it perfect for 'all day, every day' wear.

PACKAGE CONTENTS




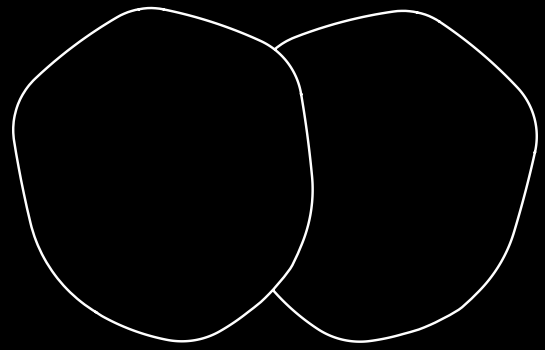


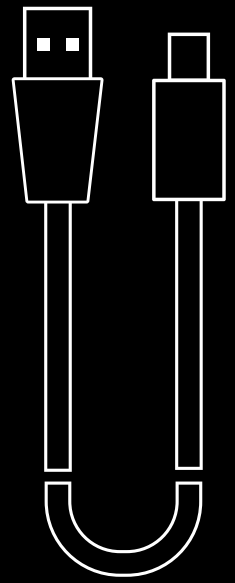

1. S-80 On-Ear Headphones
2. Pair of Shields
3. USB-C Charging Cable


USING YOUR HEADPHONES

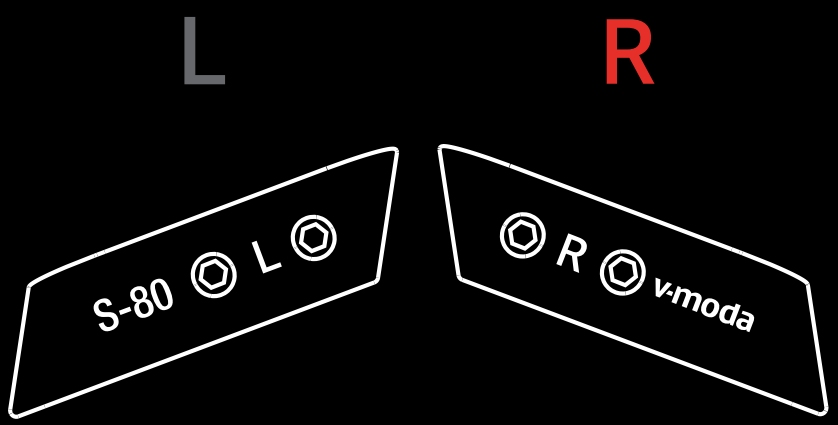

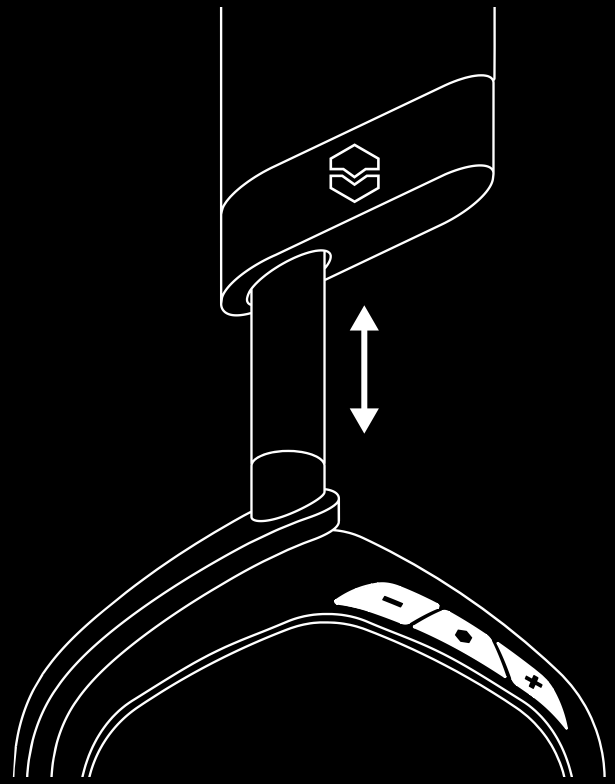

1. Very important: Place earcups on corresponding ear. “L” on left ear, “R” on right ear


2. Push hair back, extend the earcups from headband until they fit comfortably on ear, creating a snug fit to ensure highest sound quality and comfort

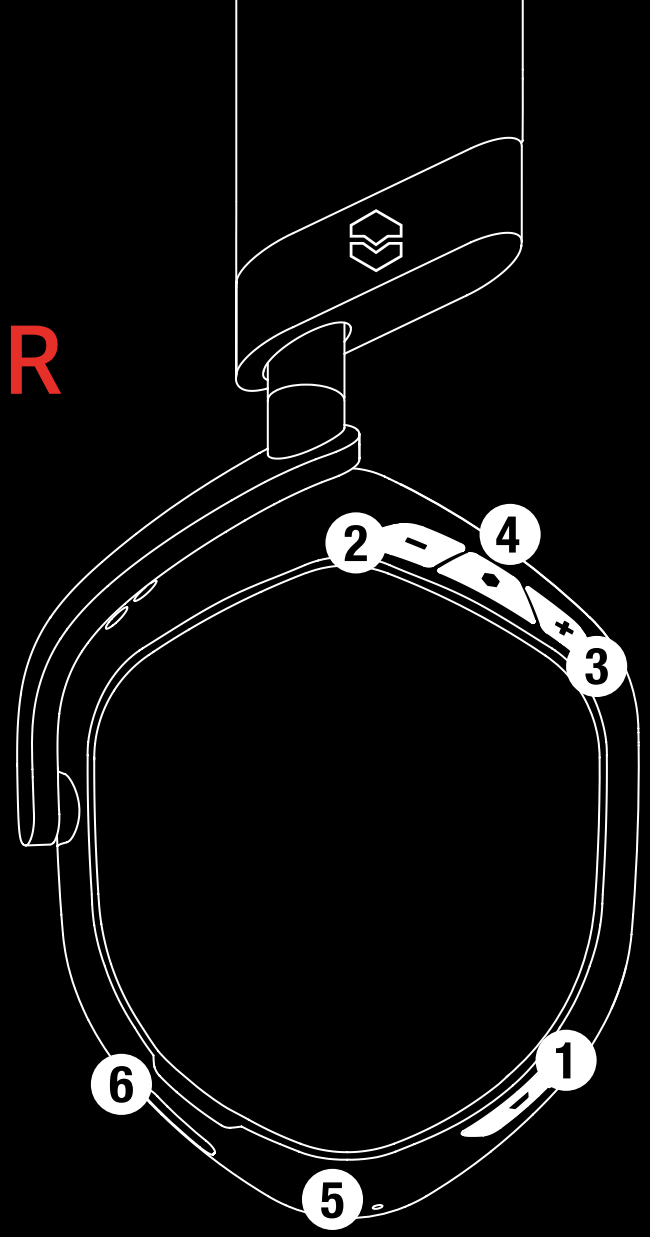

1. Power Button / LED Indicator
2. Volume Down
3. Volume Up
4. Multi-function Button
5. Microphone
6. Charge Port

TO USE AS A NECK SPEAKER

Turn the L/R side ear cups to the front gently until they stop

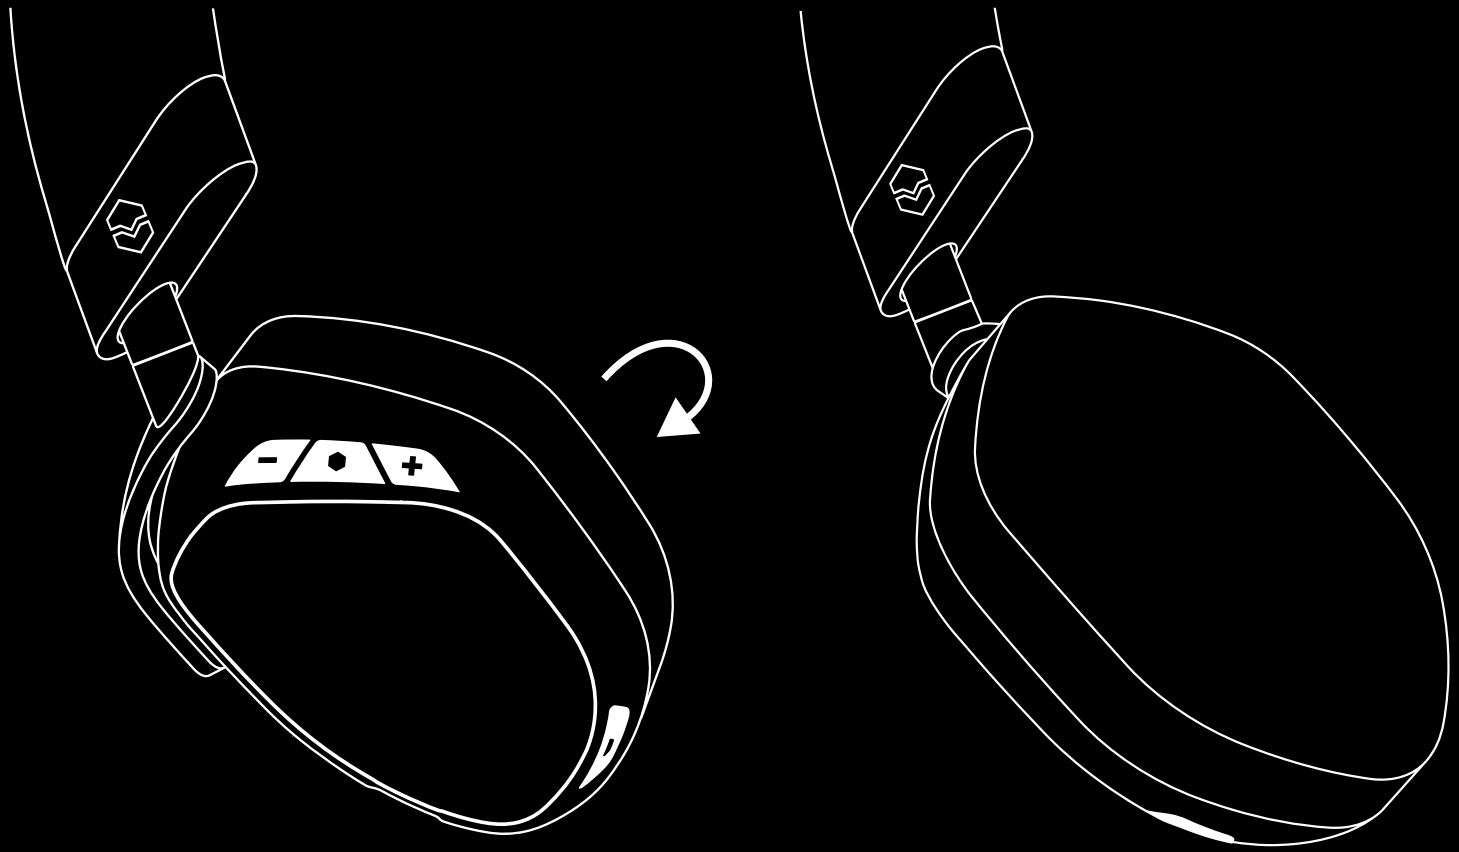

GETTING STARTED

1. Ensure the headphones are charged and within 1m of the device you want to pair it with
2. Press and hold the Power button for 5 seconds to turn the headphones on
3. Once the blue LED starts to blink twice per second, release the button. It will begin to search for a nearby device
4. Open the Bluetooth settings on your device
5. When **“V-MODA S-80”** appears in the “new Bluetooth devices” section on your device, select it to pair

Get the V-MODA app on Google Play or the App Store.
It is recommended to charge the battery before using your headphones for the first time.

STEP BY STEP GUIDE

1. Before proceeding to the next step, make sure to follow the **“GETTING STARTED”** instructions immediately above this section

2. ON/OFF

   a. To turn headphones on, press and hold the Power button for 1 second
   b. The LED indicator will illuminate blue if a device is paired
   c. To turn headphones off, press and hold the Power button for 3 seconds until you hear the Power Off sound

3. PAIRING A SECOND DEVICE

   a. Ensure the headphones are switched off, charged and within 1m of the device
   b. Activate Bluetooth in the settings of your new device
   c. Press and hold the Power button for 5 seconds until you hear the pairing sound to turn the headphones on and enter secondary pairing mode (sonar sound)

d. When **“V-MODA S-80”** appears in the “new Bluetooth devices” section on your device, select it to pair

❹ MULTIPOINT

Note: The headphones' memory can hold up to 2 devices. You will only need to re-pair a device if the headphones are reset or if you pair a 3rd device. Pairing a 3rd device will overwrite the first device paired.

a. Ensure that the first pairing and secondary pairing procedures have been completed
b. To switch between devices via multipoint, ensure that both of your paired devices have Bluetooth activated
c. Turn the headphones off and then on again
d. Select **“V-MODA S-80”** in the Bluetooth settings of the device you want to play audio from
e. Press “Play” to play audio from your selected device
f. The headphones will now switch its active connection to your selected device You may only listen to audio from one device at a time

❺ MULTIFUNCTION BUTTON

Answer a call	Press once
Refuse incoming call	Press and hold for 1-2 seconds then release
Play and pause audio	Press once
Skip to next song	Press twice
Go to previous track	Press three times
Summon voice assistant	Press and hold for three seconds*


*Depending on your devices, there may be restrictions on the use of the voice assistant.

6 VOLUME BUTTONS

Volume Up	Press + button
Volume Down	Press – button
Reset paired device history	Press and hold "+" and "-" at the same time for 5 seconds

7 TO USE AS A NECK SPEAKER

Wear the headphones on your neck with ear cups facing front to use it as a neck speaker.

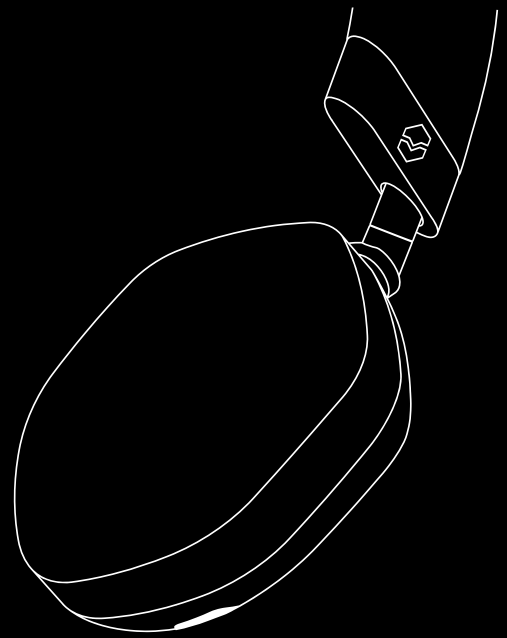

To use as a neck speaker
Turn the L / R side ear cups to the front gently until they stop. Adjust volume with "+" and "-" button.
*Equalizer will be set as a "SPEAKER"

To turn the volume up further (LOUD MODE)
If you set in a "Loud Mode", the volume will be boosted.

LOUD MODE

Press and hold "MULTIFUNCTION" and "+" at the same time for 3 seconds
Note: Do not use it on your ears when S-80 is in a Loud Mode to protect your ears.

For safe use, S-80 volume turns up when the ear cups are facing forward.
When ear cups are positioned back to headphone position, the volume turns down.
*Equalizer setting will be "HEADPHONE"

To turn back to normal volume mode (LOW MODE)

LOW MODE

Press and hold "MULTIFUNCTION" and "-" at the same time for 3 seconds
*When S-80 power is turned on, it is set as a Low Mode.

Loud Mode	Press and hold "MULTIFUNCTION" and "+" at the same time for 3 seconds
Low Mode	Press and hold "MULTIFUNCTION" and "-" at the same time for 3 seconds

❽ CHARGING

Connect the USB-C charging cable to charge headphones
To prevent malfunction or equipment failure, turn the volume down and turn the headphone off before connecting to a power source

Low Battery	Power button red LED with 2 beeps
Headphones are now charging	Power button fading red LED
Charging complete	Power button solid blue LED

❾ RESET PAIRED DEVICE HISTORY

a. Press and hold Volume Up and Volume Down for 5 seconds until you hear the reset sound
b. The Power button LED will blink blue to confirm the reset

GETTING STARTED WITH THE APP

1. Get the **“V-MODA HEADPHONE EDITOR”** app from Google Play or the App Store and download/install the app to your device

2. Pair the headphones with your device settings

   Go to **GETTING STARTED** and follow the procedure

   If you're using an already-paired mobile device:

   CONNECTING (PAIRED DEVICES)
   a. To turn headphones on, press and hold the power button for 1 second
   b. The LED indicator will illuminate blue if a device is paired

3. Open and activate **“V-MODA HEADPHONE EDITOR”** app

   If you see **“V-MODA S-80”** on the screen, select it to connect. Tap "pairing" if the app screen asked you for pairing. When the update software is available, you will receive a notification to update the software.

If the headphones update cannot be completed, please note the following and update again

- Fully charge the headphones and your device
- Move the device closer to the headphones
- Move away from any possible interference (wireless routers, other Bluetooth devices, microwaves etc.)
- Close any application on your device that is not in use and disable Wi-Fi

In case, you cannot connect

After closing the app and disconnect Bluetooth, try the following procedures:

a. Delete V-MODA S-80 from Bluetooth device list of your device
b. Clear headphones' device paired history by following **STEP BY STPE GUIDE** and **RESET PAIRED DEVICES HISTORY**
c. Retry the pairing by following the pairing procedure
d. Even after trying this procedure if you are not able to connect, reboot your device and try pairing procedure again

TROUBLESHOOTING

If you are experiencing trouble with your headphones, please refer to the troubleshooting guidelines below. If the problem persists, please contact the V-MODA Support Team or the nearest Roland service center.

❶ CANNOT PAIR WITH A BLUETOOTH DEVICE

CAUSE	SUGGESTIONS
The headphones are not turned on	Press and hold the Power button for 1 second to turn headphones on
The headphones are not in pairing mode	Press and hold the Power button for 5 seconds to enter pairing mode
The device's Bluetooth is not enabled	Enable Bluetooth connection on the device
The headphones paired devices history is full	Perform the "Reset paired device history" procedure

CAUSE	SUGGESTIONS
Other	• Turn headphones off and on again • Try to pair with another device to make sure that both the headphones and your Bluetooth device are working properly

❷ NO AUDIO OR LOW QUALITY AUDIO FROM AUDIO SOURCE

CAUSE	SUGGESTIONS
The headphones are not turned on	Press and hold the Power button for 1 second to turn headphones on
The battery level is extremely low	Charge the headphones
The audio source is not playing any track	Make sure the audio source is playing

CAUSE	SUGGESTIONS
The volume on the device is muted or turned down	Make sure the volume on the device is not muted or turned down
The audio device or the file you are listening to has problems	Check that the audio device or the audio file you are listening to do not have any issues
EQ settings in the V-MODA app are not set properly	Go the V-MODA app and set your EQ preference in the Sound settings menu
Other	• Reboot the source device • Turn headphones off and on again • Reset paired devices history of the headphones • Try streaming from another device or select another track • Move the device closer to the headphones

CAUSE	SUGGESTIONS
Other	• Move away from any possible interference (wireless routers, other Bluetooth devices, microwaves etc.) • Close any application on your device that is not in use and disable Wi-Fi

3 AUDIO AND VIDEO DO NOT MATCH

CAUSE	SUGGESTIONS
Technological limitation on the device or the selected file	Try streaming from another device or select another track / file

❹ HEADPHONES WILL NOT CHARGE

CAUSE	SUGGESTIONS
The charging cable is not functioning properly	Make sure the charging cable is functioning properly or try a different one
The charging source is not functioning properly	Make sure the charging source is functioning properly or try a different one
The USB plugs are not firmly connected into their sockets	Make sure both USB plugs are firmly connected into their sockets
The computer you are using to charge is not turned on	Make sure your computer's USB port is activated and turn on your computer

5 HEADPHONES ARE NOT RESPONDING

CAUSE	SUGGESTIONS
A software error has occurred	Charge the headphones and then turn on

6 RAPIDLY FLASHING RED LIGHT

CAUSE	SUGGESTIONS
A charging error occurred	Could the ambient temperature be above 35°C (95°F)? • Charging might stop for a while in order to protect the rechargeable lithium-ion battery. Use the unit in the recommended ambient temperature range of 10–30°C (50–86°F) • If the indicator continues blinking fast red even though you are charging in the recommended temperature range, contact the V-MODA Support Team or your dealer or nearest Roland service center

©2022 V-MODA. All rights reserved.

V, V-MODA and the V-MODA logo are registered trademarks of V-MODA.
Patents: roland.cm/patents

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.
and any use of such marks by V-MODA is under license.

Qualcomm aptX is a product of Qualcomm Technologies, Inc. and/or its subsidiaries.
Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries.
aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries.

Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries.

Google Play and the Google Play logo are trademarks of Google LLC.

Other trademarks and trade names are those of their respective owners.

Roland Corporation U.S.
5100 S. Eastern Ave, Los Angeles, CA90040-2938

ISSUES WITH THE PRODUCT

For any issues relating to your V-MODA product,
please contact our Support Team directly.

VISIT

www.v-moda.com/support

EMAIL

support@v-moda.com

CALL

+1 888.866.3252

v-moda

REGISTER NOW AT

www.v-moda.com/register

