
JIMMYJANE

DEIMOS

JJ10705

INSTRUCTIONAL MANUAL

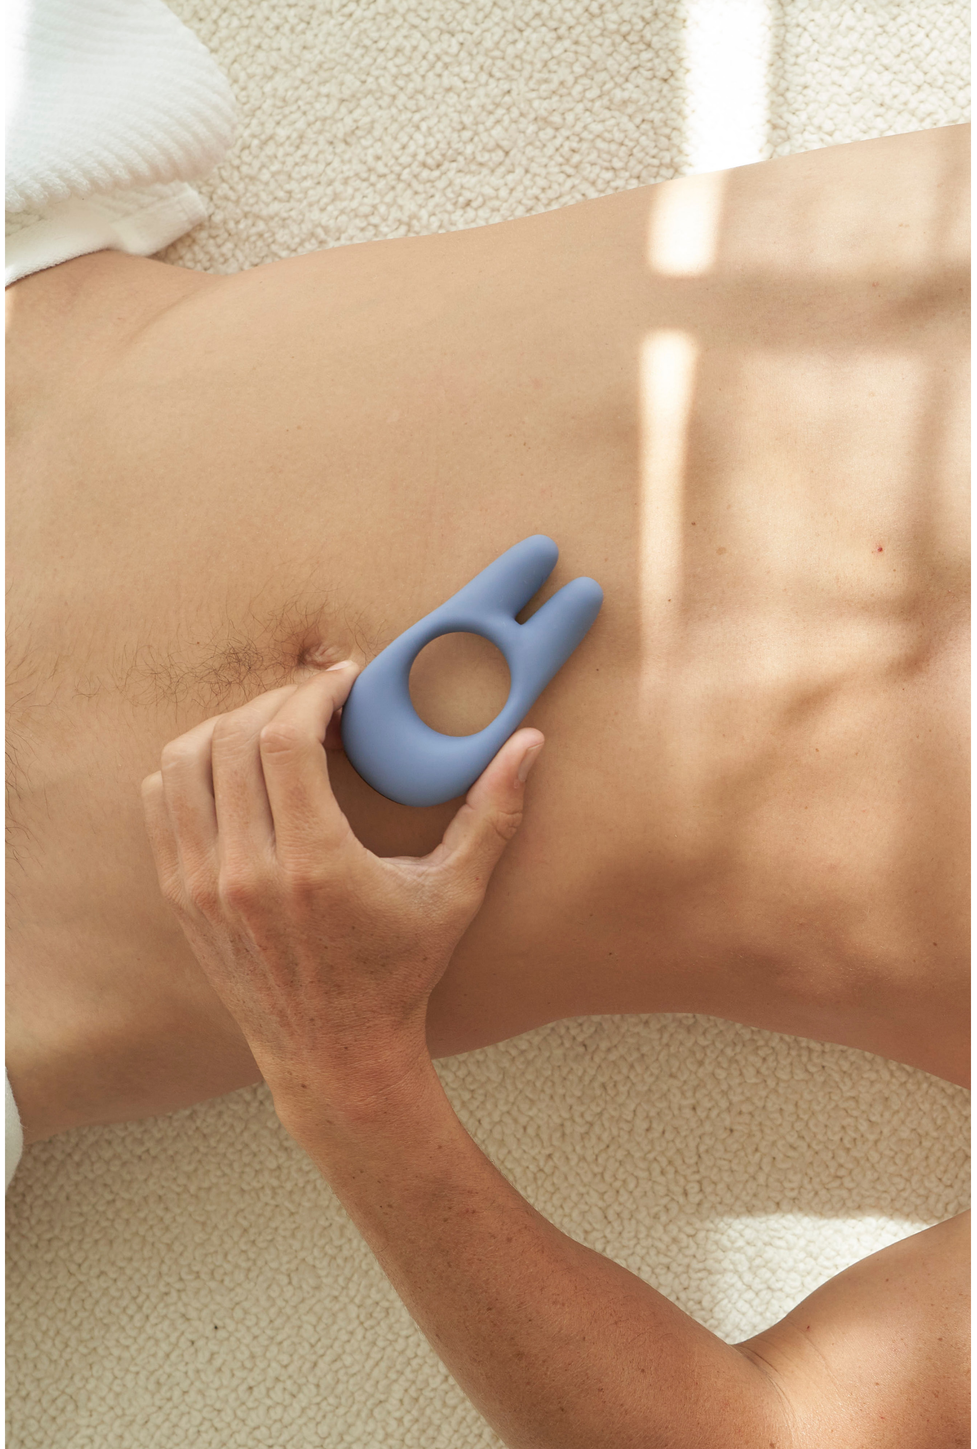

INCLUDES

(1) DEIMOS C-RING
(1) WIRELESS REMOTE
(1) USB CHARGING CABLE

PRODUCT FEATURES & BENEFITS

HIGH-TECH PLEASURE MEETS INTUITIVE DESIGN WITH OUR VIBRATING SILICONE DEIMOS C-RING. COMPLETE WITH TWO POWERFUL VIBRATING MOTORS (ONE IN EACH FLEXIBLE EAR) OFFERING SEVEN VIBRATION MODES AND THREE INTENSITY LEVELS FOR MAXIMUM CLITORAL STIMULATION. TRY OUT THE REMOTE CONTROL FOR SPONTANEOUS COUPLES' PLAY.

- Designed to comfortably restrict for harder and longer erections while providing clitoral and shaft stimulation
- Two powerful motors, one in each flexible ear
- Remote control to maximize couples' play
- Choose between seven high-performing vibration modes and three intensity levels
- One hour of continuous run time per charge
- Super soft silicone and ABS Plastic
- Used by men and couples
- Waterproof and washable safe with a rechargeable USB cord



INSTRUCTIONS

POWER / STANDBY MODE

To place the vibrating c-ring into standby mode, press and hold the power button on the c-ring for 3 seconds. The LED will light up and stay solid. You may now use the vibration buttons on the c-ring or the remote. To turn off standby mode, press and hold the power button on the c-ring for 3 seconds.

VIBRATION


Once in standby mode - Press the vibration button on the c-ring or remote to turn on the vibrating motor. The LED on the c-ring will light up, the motor will start, and the LED will turn off after 2 seconds. Each press of the button will cycle through the ten modes of vibration and the LED will change in sync with each mode and then turn off after 2 seconds. Press and hold the button on the c-ring or remote for three seconds to turn off.

POWER OFF

To stop all functionality, press and hold the power button on the c-ring or remote for 3 seconds. Please note, standby mode can only be turned off via the power button on the c-ring. Caution - To prevent the battery from draining, always turn off standby mode after use (by pressing and holding the power button on the c-ring for 3 seconds. The LED will be off in standby mode).

FUNCTIONS

FEATURES 10 FUNCTION VIBRATIONS
3 SYNCED CONSTANT SPEEDS + 7 PATTERNS

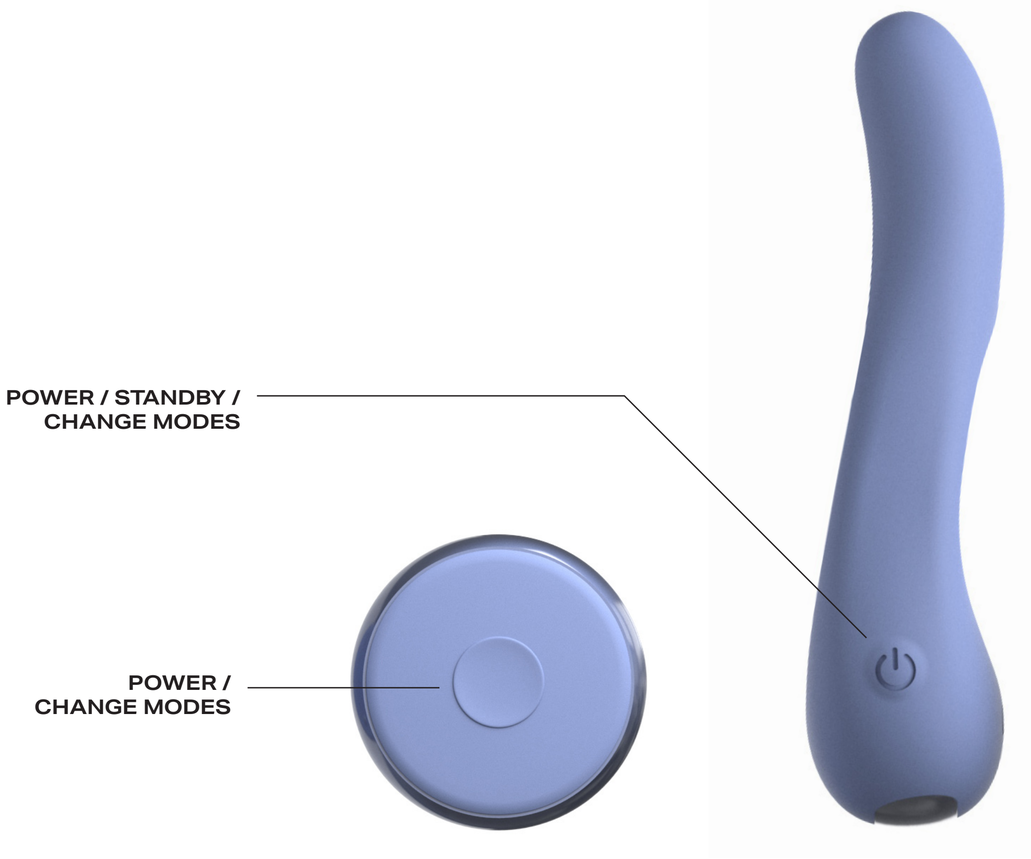

PRODUCT SPECS

USB CHARGING // LITHIUM BATTERY // WATERPROOF // SILICONE


C-RING SIZE
Length: 4.1 in. (10.5 cm)
Width: 2.2 in. (5.5 cm)

REMOTE SIZE
Diameter: 1.5 in. (3.9 cm)
Depth: 0.5 in. (1.2 cm)
Weight: 0.8 oz. (24 g)

CHARGING
C-Ring - 2 hours
Remote - 2 hours

RUN TIME
C-Ring - ~60 minutes
Remote - 10 hours

IPX RATING
KEGEL TRAINER - IPX7 - FULLY WATERPROOF
Protected against the effects of temporary water submersion at a depth of one meter, for 30 minutes.
REMOTE - IPX0 - NOT WATERPROOF

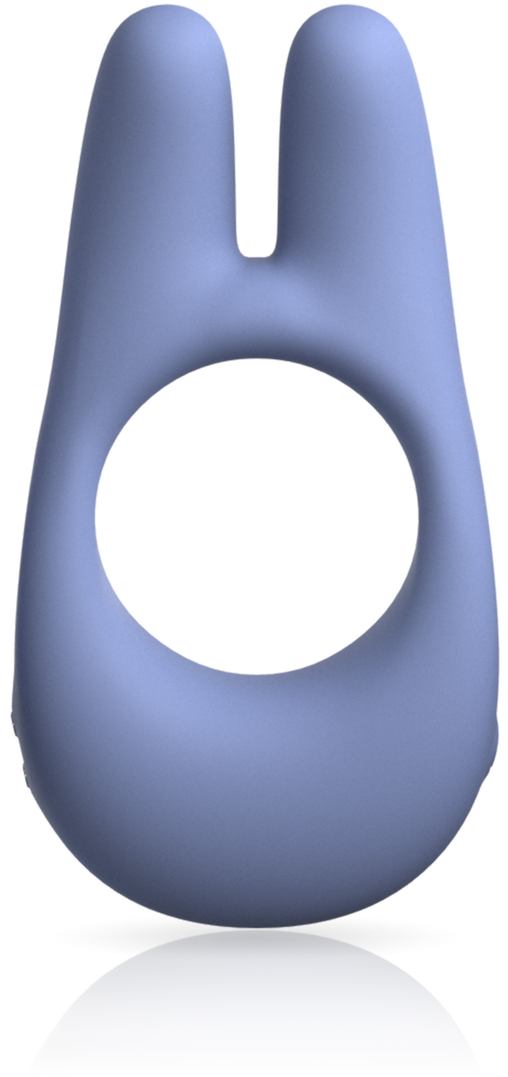

CHARGING INSTRUCTIONS

CONNECTING MAGNETIC CHARGER

Connect the JimmyJane Magnetic USB Charging Cord to the magnetic charging points on the c-ring or the remote. The LED will blink while the c-ring or remote are charging, and will stay solid once fully charged.

This product is only compatible with the JimmyJane Magnetic USB Charging Cord.

- Always ensure both points connect and do not touch any other metal item.
- Do not attempt to charge during use.
- Do not charge near water.



CARE INSTRUCTIONS

C-Ring:
Spray an antibacterial cleaner like JimmyJane Antibacterial Toy Cleaner on your c-ring before use. Wipe with a clean, dry cloth and let it air dry. Repeat after use and store in a cool, dry place.

Remote:
The wireless remote is NOT waterproof. To clean, lightly spray an antibacterial cleaner like JimmyJane Antibacterial Toy Cleaner onto a cloth, wipe the remote clean, then use a dry cloth to dry the surface.



WARNING

THIS MASSAGER IS FOR NOVELTY PURPOSES ONLY, IS NOT INTENDED FOR THERAPEUTIC PURPOSES AND IS RECOMMENDED FOR EXTERNAL USE ONLY. PROLONGED USE FOR MORE THAN 30 MINUTES OR FREQUENT USE OF MORE THAN TWICE DAILY IS NOT ADVISED OR RECOMMENDED. THIS MASSAGER IS INTENDED FOR ADULT USE ONLY. USE WATER-BASED LUBRICANTS ONLY.

THIS APPLIANCE IS NOT INTENDED FOR USE BY CHILDREN OR PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES.
TO AVOID ELECTRIC SHOCK, DO NOT USE CHARGER NEAR WATER. DO NOT USE ON SWOLLEN OR INFLAMED AREAS OF SKIN.
DISCONTINUE USE IF DISCOMFORT OCCURS. DO NOT USE ON NECK OR SPINE AREAS.

- Do not use with silicone lubricants because they may damage the product.
- Do not clean with products that contain alcohol, petrol, or acetone.
- Do not boil, bake, microwave, or put this product in a dishwasher since it may damage the electronic components and present a serious FIRE HAZARD.
- Do not store in extreme temperatures.
- Do not charge near water.

MAGNETIC CHARGER WARNING

- WARNING - Do not allow the magnetic charge cord to attach to any magnetic / metallic surface while it is plugged in.
- Only use this cord with JimmyJane products.
- Before charging, make sure charger is free from water or lubricant residue.
- Do not charge near water.
- Product will not charge if it is too hot (115 degrees Fahrenheit/+46 degrees Celsius). Once the temperature of product reaches a safe level, charging will begin automatically.

LITHIUM BATTERY WARNING

- Rechargeable Lithium Ion batteries are potentially hazardous and can present a serious FIRE HAZARD if damaged, defective, or improperly used.

JIMMYJANE PAIRINGS

- Magnetic USB Charging Cord
- Intimate Lubricant
- Sensation Lubricant
- Toy Lubricant
- Antibacterial Toy Cleaner

DISPOSAL OF OLD ELECTRONIC EQUIPMENT

THE CROSSED-OUT DUSTBIN (WEEE) SYMBOL INDICATES THAT THIS PLEASURE OBJECT SHOULD NOT BE TREATED AS HOUSEHOLD WASTE, BUT RATHER BE BROUGHT TO THE APPROPRIATE COLLECTION POINT FOR RECYCLING OF ELECTRICAL AND ELECTRONIC EQUIPMENT.

PATENTS: WWW.JIMMYJANE.COM/PAGES/PATENTED-TECHNOLOGIES

WARRANTY: WWW.JIMMYJANE.COM/PAGES/JIMMYJANE-WARRANTY

JIMMYJANE