

18826 Gerüsteständer



KÖNIG & MEYER


Stands For Music

- Vielseitig:** für Mischpulte, Monitore, Keyboards, Verstärker
Verstellbar: Höhe: 595 -1015 mm, in 15 Stufen verstellbar
 Breite: bis zu 800 mm
Mobil: unkomplizierter Auf- und Abbau, ohne Werkzeuge
 Transportfreundliches Packmaß: B x T x H: 105 x 395 x 595 mm
Stabil: Langlebige Stahlkonstruktion; Tragkraft 50 kg
K&M-Qualität: solide Verarbeitung, Leichtgängigkeit, hochwertiger
 Oberflächenschutz,
 rutschfeste verstellbare Gummiauflagen schützen die Geräte,
 Ausgleichsparkettschoner für Bodenunebenheiten

Vielen Dank, dass Sie sich für dieses Produkt entschieden haben. Diese Anleitung informiert Sie über alle wichtigen Schritte bei Aufbau und Handhabung. Wir empfehlen, sie auch für den späteren Gebrauch aufzubewahren.

SICHERHEITSHINWEISE

- max. Belastbarkeit 50 kg.
- auf geeigneten, d.h. tragfähigen und ebenen Untergrund achten.
- die beiden Auflagearme müssen auf die gleiche Höhe eingestellt werden.
- die Standfestigkeit hängt u.a. von der Aufstellbreite ab und sollte mind. 250 mm betragen, wobei je nach a. Last (Gewicht, Ausdehnung), b. Untergrund (Ebenheit), c. Umgebung (Publikumsverkehr etc.) größere Abstände (max. 800 mm) angemessen sein können. Ggf. mit geeigneter Auflageplatte arbeiten.
- sicherstellen, dass die Klemmbolzen (siehe Pos. 10) der Höhenverstellung stets eingerastet sind.
- die Möglichkeit das Produkt zusammenzuklappen und zu verstellen, birgt naturgemäß Einklemmgefahren. Dies betrifft insbesondere die Scheren zur Einstellung der Breite. Bitte beachten Sie den Warnhinweis (6).
- Umsichtige und aufmerksame Handhabung bei Aufbau, Betrieb und Abbau sind daher unverzichtbar.
- die Parkettschoner sind aus hochwertigem Material und so weit wie möglich frei von Weichmachern. Zum Schutz von ganz besonders empfindlichen Böden (z.B. bestimmte Parkettsorten) sollte ggf. eine rutschfeste Unterlage verwendet werden.

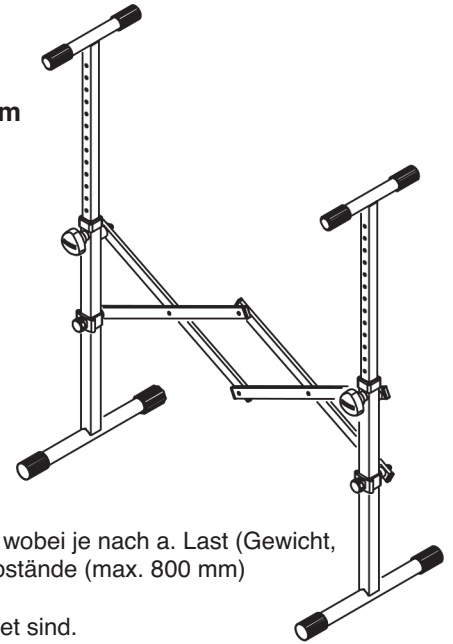

AUFSTELLANLEITUNG


Das Stativ ist bereits komplett vormontiert.
 Das Aufstellen ist zudem sehr einfach und erfordert keine Werkzeuge.

1. Ständer so aufstellen, dass sich die Auflagerohre (350 mm) oben und die Fußrohre (395 mm) unten befinden.
2. Rändelschraube (unten) etwas losdrehen
3. Seitenwangen auseinanderziehen bis zur gewünschten Breite (max. 800 mm):
 HINWEIS: Je größer der Abstand, desto besser für die Standfestigkeit des Ständers. Wir empfehlen, keine Distanzen von unter 250 mm einzu stellen.
 Ggf. raten wir dazu, eine Auflageplatte zu verwenden (siehe Sicherheitshinweise)
4. Rändelschraube (unten) nun wieder festziehen
5. Bei Bodenunebenheiten den Ausgleichparkettschoner entsprechend verdrehen (+/-).


Das ZUSAMMENKLAPPEN erfolgt in umgekehrter Reihenfolge.

6. **WARNUNG: NICHT** in den SCHERENBEREICH greifen, da hier Quetschgefahr besteht. Beim Verschieben der Seitenwangen diese deshalb unbedingt immer an den Auflagerrohren (3) anfassen.

STATIV AUFSTELLEN

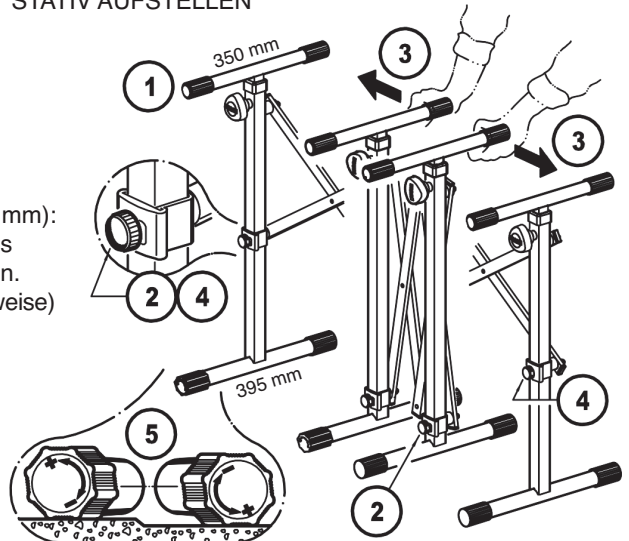

PACKSTÜCK → empfohlene MINDESTBREITE → stufenlose Verstellung → MAXIMALE BREITE

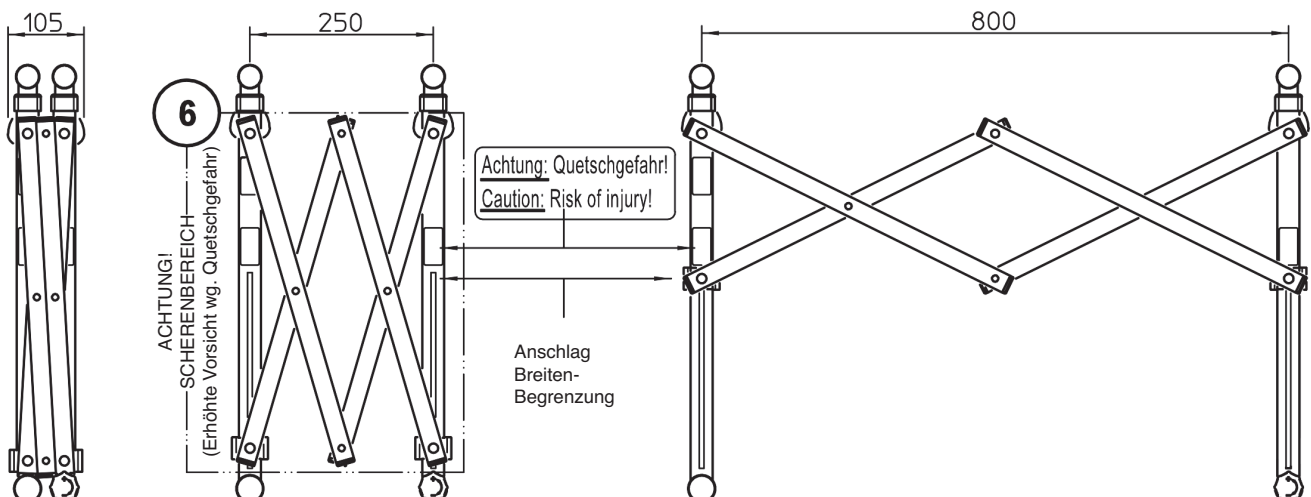

BENUTZERHINWEISE / FUNKTIONEN


HÖHE EINSTELLEN

Die Auflagerohre sind 15-fach höhenverstellbar:
min. 595 - 625 - 655 - 685 - 715 - 745 - 775 - 805 -
835 - 865 - 895 - 925 - 955 - 985 - max. 1015 mm.

BEACHTEN:

Beide Auflagen auf gleiche Höhe einstellen und Sicherungsbolzen stets eingerastet lassen.

ABMESSUNGEN

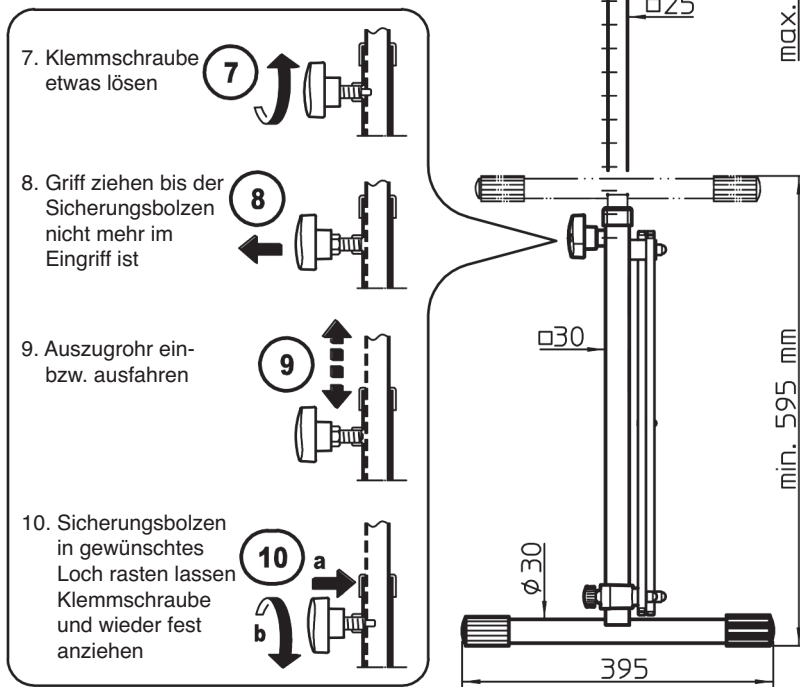

PRÜFEN, INSTANDHALTEN, REINIGEN

- bei Wartungsarbeiten auf evtl. Gefährdungen achten (Anstoßen, Einklemmen)
- zur Reinigung am besten ein leicht feuchtes Tuch und ein nicht scheuerndes Reinigungsmittel benutzen

FEHLERSUCHE (F) und BESEITIGUNG (B)

- | | |
|--|---|
| F: Stativ wackelt auf dem Boden | B: Ausgleichparkettschoner einstellen |
| | B: Boden auf Unebenheiten überprüfen |
| F: Höhe/Breite des Stativs passt nicht | B: Einstellungen ändern (siehe Abmessungen) |
| F: Gerät wackelt auf Stativ | B: Gerätunterseite auf Unebenheiten überprüfen, Einstellungen des Stativs verändern |
| F: Gerät liegt nicht auf Gummis auf | B: Vordere Gummiringe nach hinten verschieben. |

TECHNISCHE DATEN / SPEZIFIKATIONEN


Material	Stahlrohre - pulverbeschichtet, schwarz Schrauben, Muttern, Bolzen - verzinkt, vernickelt Parkettschoner, Gummiauflagen - TPE, Sh.59A schwarz Griffe, Buchsen - Kunststoff: PA, PE, Fiber
Traglast	max. 50 kg
Abmessungen	Breite: max. 800 mm, Höhe: 595-1015 mm Auflagerohr: Ø 25 x 350 mm, Fußrohr: Ø 30 x 395 mm
Eigengewicht	5,6 kg
Verpackung	Karton: 670 x 400 x 120 mm

AUFLAGEN ANPASSEN

Die Abstände der Gummiauflagen können in gewissem Maße dem jeweiligen Gerät angepasst werden.
11. Dazu die vorderen Gummiauflagen nach hinten schieben.


BEACHTEN:

Aus Schutz vor Verlust sitzen die Gummis relativ fest auf den Rohren. Das Verschieben erfordert meist etwas Kraftaufwand.

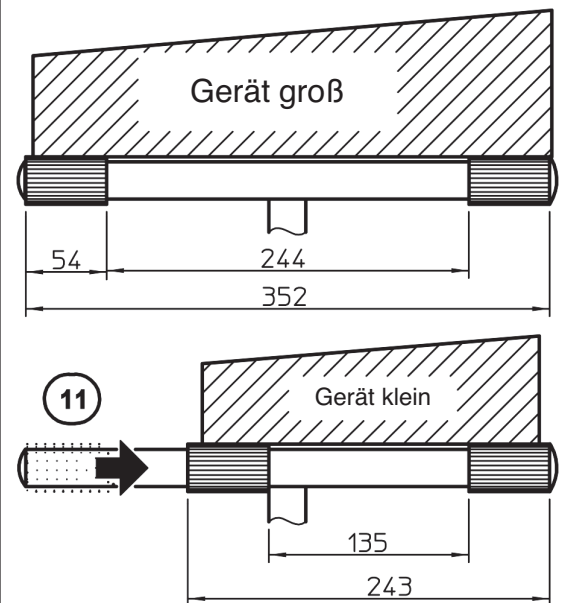

TRANSPORTSTELLUNG

Umkarton-Maße

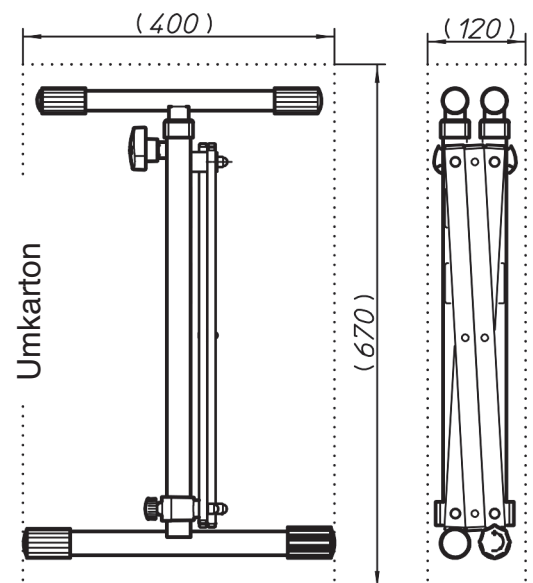

18826 Equipment Stand



KÖNIG & MEYER


Stands For Music

- Versatile:** for sound mixers, monitors, keyboards, amplifiers
- Adjustable:** height: 595 -1015 mm, adjustable in 15 steps
width: up to 800 mm
- Mobile:** uncomplicated setup and disassembly, without tools, easy to transport
packaging dimensions: W x D x H: 105 x 395 x 595 mm
- Stable:** long lived steel construction, load bearing weight 50 kg
- K&M-Quality:** solid workmanship, smooth handling
anti-slip adjustable rubber top for keyboards
balancing end caps for uneven surfaces

Thank you for choosing this product. This instruction manual informs you about the important steps to set up and handle the product. We recommend to keep the manual in a separate place for a possible later use.

SAFETY NOTES

- maximum Load 50 kg.
- be sure that the surface will bear the load and is suitable and level.
- both support arms must be adjusted to the same height.
- the stability is dependent upon the setup width and it should be at least 250 mm, however depending on a the load (weight, extension), b. uneven surfaces (evenness), c. environment (at a public event etc.)
Larger distances (max. 800 mm) can be required. If needed, work with the suitable support table.
- ensure that the clamp bolts (see Pos. 10) catch when adjusting the height.
- the fact that the product is collapsible and adjustable, can result in the risk of pinching/wedging. This particularly affects the cross legs (scissor legs) used to set the stand width. Please be sure to pay attention to warning (6).
- Careful and attentive handling during setup, operation, and disassembly is indispensable.
- the end caps are made of high quality material and to the extent possible free of softening agents.
To protect particularly delicate floors (possibly certain wood floor types) a slip resistant pad should be used, if needed.

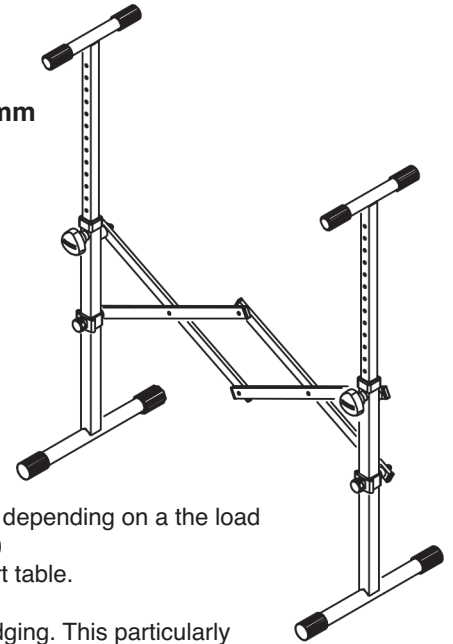

SETUP INSTRUCTIONS


The stand is completely pre-assembled.
Setup is very easy and does not require tools.

1. Setup the stand such that the support tube (350 mm) are up top and the feet tubes (395 mm) are on the bottom.
2. Loosen the knurled screws (below) a bit
3. Pull the sides i.e. legs apart to the desired width (max. 800 mm):
NOTE: The greater the distance, the better the stability of the stand. We recommend, not to use any distance that is less than 250 mm. If needed, we recommend the use of a suitable support table (please refer to Section: SAFETY NOTES).
4. Re-tighten the knurled screws (below)
5. In the case of uneven surfaces adjust the balancing end caps (+/-).


To collapse the stand, please follow the instructions in reverse order.

6. **WARNING: DO NOT** place your hands in the cross legs (scissor legs) area to avoid the risk of pinching or wedging your fingers or hands. When pushing the stand legs together, be sure to do so by placing your hands on the support tube (3).

STAND SETUP

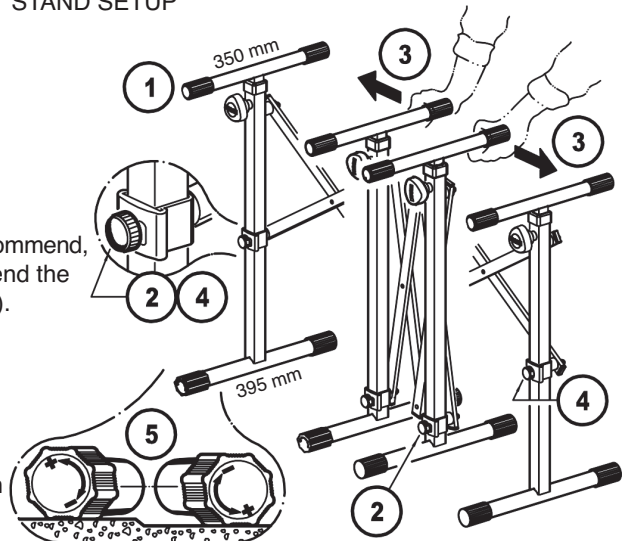

PACKAGE → recommended MINIMUM WIDTH ————— stepless adjustment —————→ MAXIMUM WIDTH

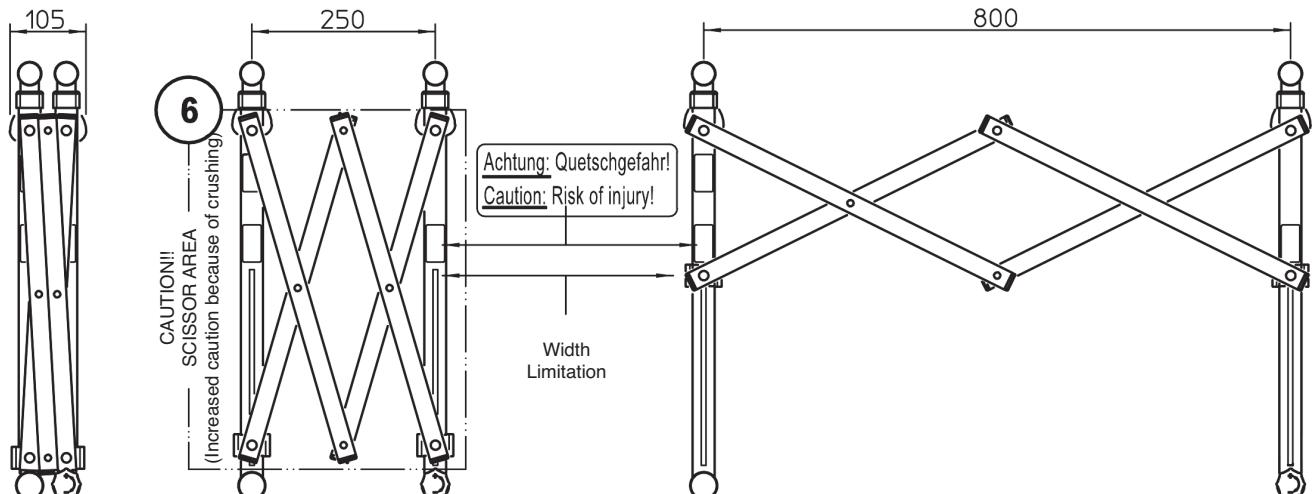

USAGE NOTES / FUNCTION


HEIGHT ADJUSTMENT

The support tubes have 15 height adjustments:
min. 595 - 625 - 655 - 685 - 715 - 745 - 775 - 805 -
835 - 865 - 895 - 925 - 955 - 985 - max. 1015 mm.

ENSURE:

That both support arms are adjusted to the same height and that the locking bolts are always in place (the locking bolts catch).

DIMENSIONS

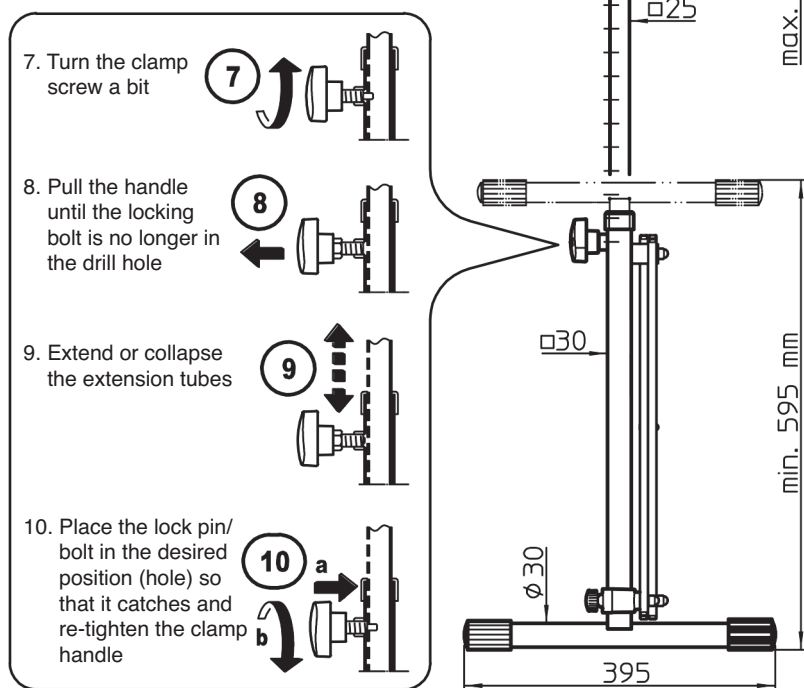

CHECK, MAINTENANCE, CLEANING

- In the event of workstation maintenance pay attention to possible risks (bumped, pinched, wedged)
- To care for the product use a damp cloth and a non-abrasive cleaning agent

FAULT-FINDING (F) and REPAIR (R)

- | | |
|---|---|
| F: Stand is not stable | R: Adjust balance end caps |
| F: Height/width of the stand does not fit | R: Check surface/floor for uneven surfaces |
| F: Equipment is not firmly placed on the stand (unstable) | R: Change setting (see dimensions) |
| F: The keyboard is not placed on the rubber base | R: Check bottom of equipment for uneven surfaces. Adjust the stand settings |
| | R: Push the front rubber rings to the back |

TECHNICAL DATA / SPECIFICATIONS

Material	Steel Tubes - powder coated, black Screws, nuts, bolts - galvanized, nickel plated End caps, rubber base/top - TPE, Sh. 59A black Handles, connectors - plastic; PA, PE, fiber
Load	max. 50 kg
Dimensions	width: max. 800 mm, height: 595-1015 mm support tube: $\varnothing$ 25 x 350 mm, foot tube: $\varnothing$ 30 x 395 mm
Weight	5.6 kg
Packaging	Box: 670 x 400 x 120 mm


ADJUST BASES

The distances between the rubber bases can be adjusted to the dimensions of the instrument.

- Just push the rubber bases in the front to the back until the correct distance has been selected.

ENSURE:

That the rubber base is attached to the tubes tightly, to ensure that they are not lost. Moving the stand requires strength.

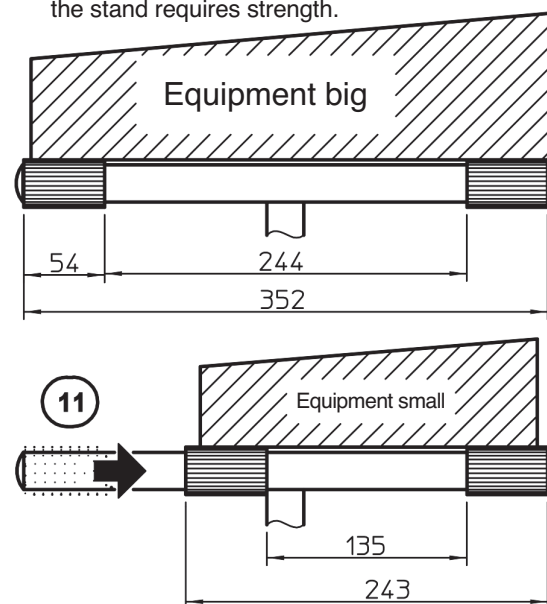

TRANSPORTATION SETTINGS

Box Dimensions

