
BARBERBOSS

QR-2082

Importer: Elite Capital Limited
Address: Studio 4 Clarks Courtyard, 145 Granville Street,
Birmingham, B1 1SB. United Kingdom.
Website: barberboss.co.uk
Email: care@barberboss.co.uk

User Manual

QR-2082

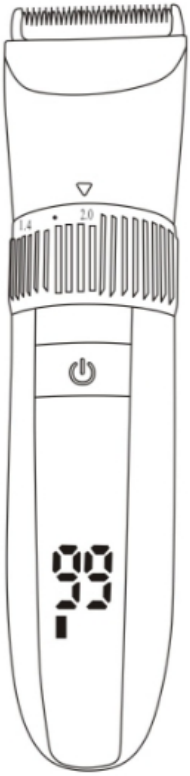





Ceramic blade with acute angle



5-speed fine-tuning for the blade

Components

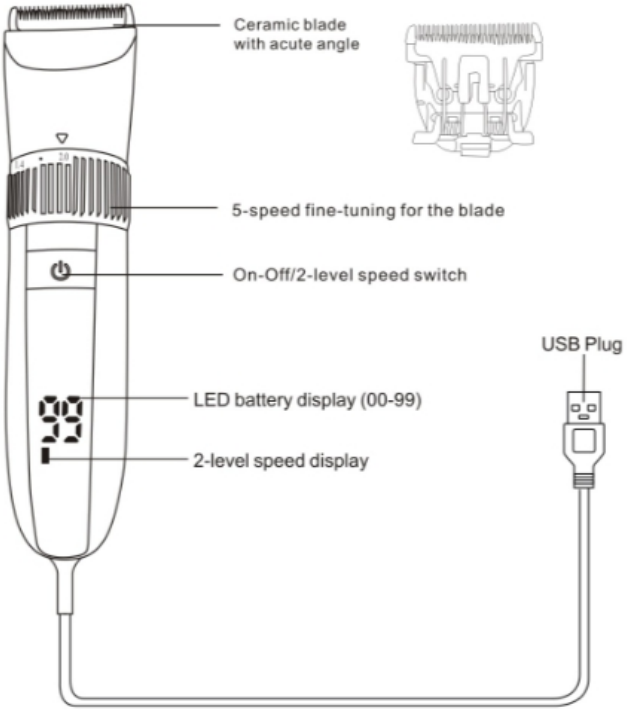
Ceramic blade
with acute angle
5-speed fine-tuning for the blade
On-Off/2-level speed switch
USB Plug
LED battery display (00-99)
2-level speed display

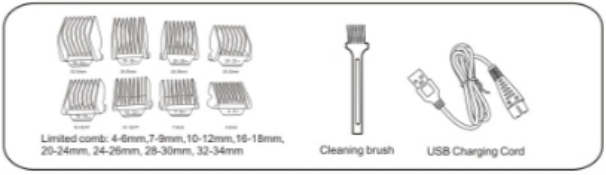
Limited comb: 4-6mm,7-9mm,10-12mm,16-18mm,
20-24mm, 24-26mm, 28-30mm, 32-34mm
Cleaning brush
USB Charging Cord

Parameters

Professional Hair Clipper	Motor	Operating voltage: 3.7V
		Centering material: anti-wear brass
	Battery	Charging time: about 3 hours
		Operating time with full charge: about 180 minutes
USB charging		DC 5V1A (not include usb adapter)

LED



1. Battery percentage display (00-99)

How to Charge


1. Plug the charging cable into the clipper, plug usb into 5V1A usb adapter (computer/PC/power bank/car charger).
2. The digital LED dynamically display charging status.
3. Plug the adapter plug into an electrical outlet after confirming that the clipper is power off.

Fixed Length Function


1.Guide Combs Function

Different size attachment combs work as guide combs meet all your different trim hair lenghth requirements also work as guard combs make haircut safe and easy.

2. Select the appropriate gurads

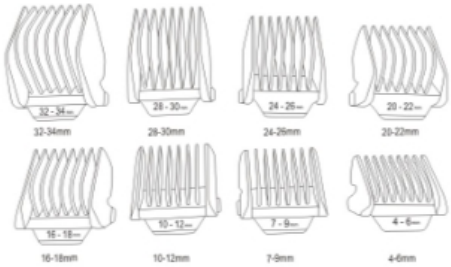

3. Fine tune the blade

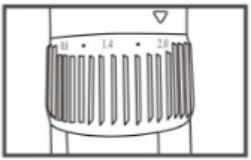

Moving the button left and right to adjust the blade (0.8mm-2.0mm)



Guards installation:

Like the picture, hold both sides and push when butting the button positions. (Notes: the comb should not be loose or easy to fall off after being butted.)

Guards dismantle

Remove the butted positions with hands on its both sides and then remove the comb.

Blade Removal & Installation

Blade Removal




- Like the picture, press down the moving blade with the thumb and then remove the blade.




- Please hold with the other hand to avoid the blade falling off.

Blade Installation

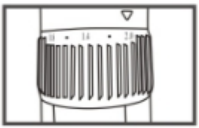

- Adjust the adjusting ring to 2.0 mm before installing the blade

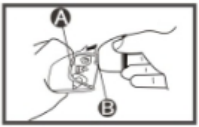

- Direct the blade (B) at the hair clipper's slot (A) and plug in



- Push the blade down until it clicks

Cleaning & Maintenance


Taper Blade Cleaning



1.Clear up the blade with cleaning brush.




2.The blade can be removed out for cleaning.

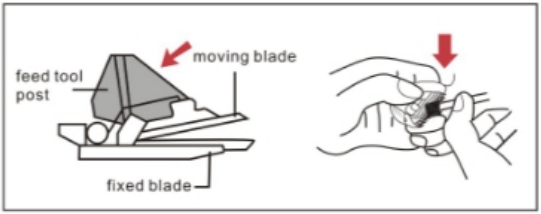

The moving blade can be turned back on, and then cleaning the hair between the moving blade and the fixed blade.


Precautions For Use

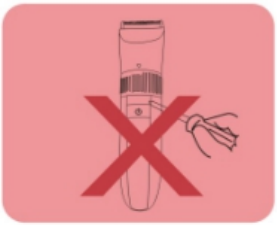



1. Please do not dissemble the product.
2. Product is IPX4 washable, it can be put under the faucet, but don't put the product into water.



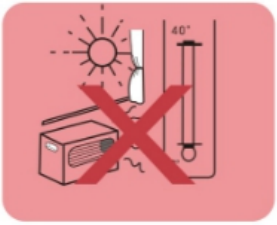

3. Please DON'T use the alcohol/petrol/toluene to clean or maintain it.
4. Do not charge the product under environment above 40℃ or below 0℃.

※The product can produce little heat during using or charging, which is normal.

※Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.

Trouble Shooting

Problem	Possible cause	Solution
The cutting is uneven	The guiding comb does not touch the skin when you move the appliance through the hair/beard.	Make sure the flat part of the guiding comb is always fully in contact with the skin when you move the appliance through the hair.
	You only move the appliance in one direction.	Not all hairs grow in the same direction, move the appliance in different directions (upwards, downwards and across).
	The setting of guiding comb is changed during trimming.	Check the setting of the guiding comb on the dial. If you push the appliance too hard onto the scalp, you may accidentally changed the setting of the guiding comb.
	The comb is not assembled correctly.	Detach the comb and reattach it.
	The cutting performance decreases when the cutting blade and the guiding comb are dirty	Clean the cutting blade and the guiding comb.
The appliance doesn't work when switched on	The rechargeable battery is empty.	Charge the appliance. Make sure that the charging cable is inserted into the appliance properly and the supply unit is connected to the wall socket properly.

Environmental Protection and Recycling

Technical Characteristics

Model:QR-2082
Voltage: 5V
Power: 3W
Charging Time: Appr. 3 hours
Running Time: Appr. 180 minutes

Safe Appliance Disposal

- At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer ptoviding this service. Disposing of a household appliance separately avoids possible negatice consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to berecovered to obtain significant savings in energy and resources.

- As a reminder of the needs to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

