



- EN User manual
- NL Gebruiksaanwijzing
- FR Manuel de l'utilisateur
- DE Benutzerhandbuch
- ES Manual del usuario
- IT Manuale dell'utente
- PT Manual do utilizador
- SV Bruksanvisning
- PL Instrukcja obsługi




Steam Station- 3000 W

01.323090.01.001



IN NEED OF ACCESSORIES? VISIT WWW.PRINCESSHOME.EU/NL-NL/CUSTOMERSERVICE/ACCESSORIES-SPAREPARTS FOR ACCESSORIES AND SPARE PARTS TO EXTEND YOUR ITEM!

© Princess | Swardenstraat 65 | 5048 AV Tilburg | The Netherlands | www.princesshome.eu

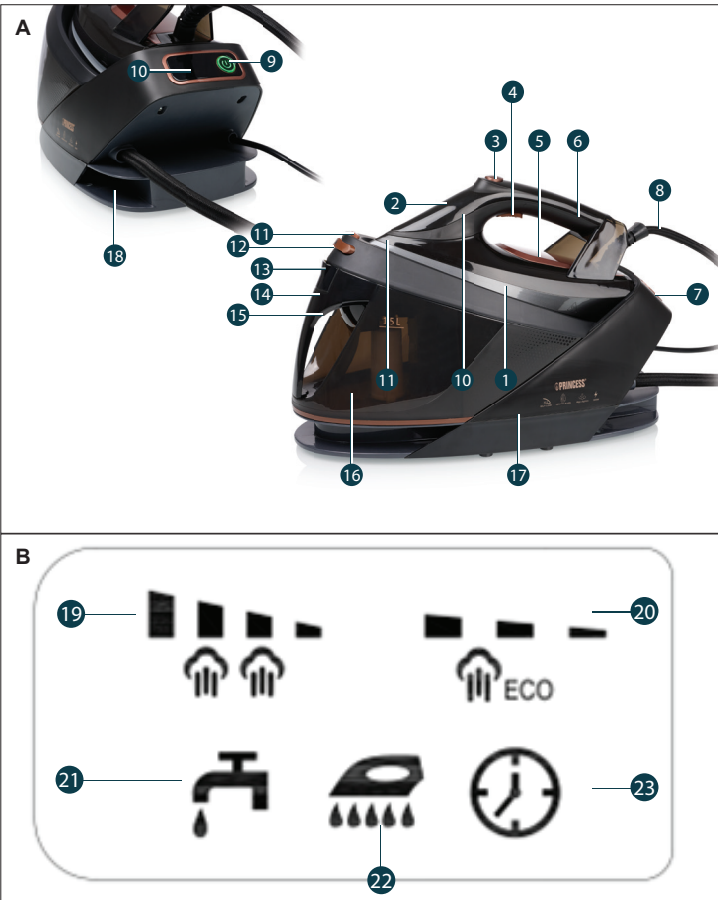

Steam Station - 3000W

FOREWORD

About this document

This user manual contains all the information for correct, safe, and efficient use of the appliance.

Ensure you have fully read and understood the instructions in this user manual before you use the appliance.

Always store this user manual in a safe place near the appliance for future reference.

Original instructions

This manual is originally written in English. All other languages are translated documents.

Support

For spare parts and more information about the appliance, please visit www.princesshome.eu/en-gb

General symbols	
Symbol	Description
	Signal word used to indicate a potentially hazardous situation which, if not avoided, could result in death or serious injury.
	Signal word used to indicate a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.
	Signal word used to address practices not related to physical injury.
	Indicates additional information or emphasis on an instruction.
	Applicable in France: The product or packaging can be recycled and components must be disposed of separately. Follow the local regulations.
	Applicable in Italy: The product or packaging can be recycled and components must be disposed of separately. Follow the local regulations.
	This product complies with conformity requirements of the applicable European regulations or directives.
	The Green Dot is the registered trademark of Der Grüne Punkt – Duales System Deutschland GmbH and is protected as a trademark worldwide. The logo may only be used by customers of DSD GmbH holding a valid trademark usage contract or by engaged waste management companies within the Federal Republic of Germany. This also applies to reproduction of the logo by third parties in a dictionary, an encyclopaedia or an electronic database containing a reference manual.
	The universal recycling symbol, logo, or icon is an internationally recognized symbol used to designate recyclable materials. The recycling symbol is in the public domain and is not a trademark.

APPLIANCE DESCRIPTION

Intended use

This appliance is intended for indoor use only.

This appliance is intended exclusively for domestic, non-commercial use.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels, and other residential type environments;
- bed and breakfast type environments.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Only use the appliance as described in this user manual.

Any use of the appliance other than described in this user manual is regarded as misuse and may cause injury or damage to the appliance and void the warranty.

Technical specifications

Appliance name	Steam Station - 3000W
Article number	01.323090.01.001
Power supply	220 – 240 V~ 50 Hz
Power consumption in use	3000 W

Main parts (see image A)

- 1 Soleplate
- 2 Top cover
- 3 Control button
- 4 Steam button
- 5 Iron panel
- 6 Handle
- 7 Rear cover
- 8 Steam pipeline
- 9 Base control button
- 10 Display
- 11 Unlock button
- 12 Lock button
- 13 Water inlet cover
- 14 Water tank handle
- 15 Separation button
- 16 Water tank
- 17 Base
- 18 Wire tunnel

Display (see image B)

- 19 Big steam regulator
- 20 Small steam regulator
- 21 Water level indicator
- 22 Self cleaning button
- 23 Auto shut-off

SAFETY

Safety symbols

Symbol	Description
	Indication for a hot surface. Contact may cause burns. Do not touch.

Safety precautions

⚠ WARNING

Safety hazard due to unintended use:

- Only use the appliance as described in this user manual.
- Never use the appliance if there are visible signs of damage or defects. Always replace a damaged or defective appliance immediately.
- Never make any adjustments to the appliance. Adjustments may affect safety, warranty and proper operation.
- Electric irons must use steaming water, not tap water or other liquids.
- When adding water to the water tank, the water level shall not exceed the maximum water level

Electric shock hazard due to short-circuiting:

- Never immerse the base unit in water or any other liquid.
- Don't fold the handle when the device is plugged.
- Never use the appliance if there are visible signs of damage or defects to the appliance or power cable. Always replace a damaged or defective appliance or power cable immediately or contact customer service.
- Always avoid spillage on the power cable.
- Never open the appliance. The appliance may only be opened for maintenance by an authorised technician.
- Never replace the power cable yourself. Always let the manufacturer, its service agent or a similarly qualified person replace the power cable.
- Never lift the appliance by the power cable. Lifting the appliance by the power cable may damage the power cable. Only lift the appliance by holding the base.
- Always unplug the power cable when the appliance is not in use or unattended, and before cleaning.
- Always check if the voltage stated on the type plate of your appliance matches your mains voltage before use.

Fire hazard due to overheating:

- Never leave the appliance unattended when in use. Only use the appliance under supervision. Switch off the appliance and remove the power cable from the power outlet when you leave the room.
- Never use the appliance with a programmer, timer, separate remote control system or any other device that switches the appliance on automatically.

Fire hazard due to short-circuiting:

- Never use the appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- Never drop the appliance and avoid bumping. Excessive vibrations can lead to loosened connections and can influence proper functioning of the appliance. Stop using the appliance if the appliance has been dropped.

Choking hazard due to plastic packaging:

- Never let children play with the packaging material. Always keep the packaging material out of the reach of children.

⚠ CAUTION

Burning hazard due to heat:

- Children should be supervised to ensure that they do not play with the appliance.
- Never touch the steam outlet when using the product. The steam outlet is hot during use.
- Please cover the steam head with the steam head cover when using the lint remover.
- Never open the water reservoir during use. Hot water may spill out. Let the appliance cool down completely before opening the water reservoir.
- Never aim the steam head towards people or other living creatures. The ejected steam is hot.
- Always let the appliance cool down completely before storing.

NOTICE

Risk of damaging the appliance:

- Never use aggressive chemical cleaning agents that can damage the appliance when cleaning the appliance.
- Electric Kettle
- Never place the appliance near a heat source.
- Always keep the power cable away from the ejected steam and hot parts of the product.
- Never fill the water reservoir with other liquids than water.
- Never fill the water reservoir to the brim to prevent overflowing.
- Always remove the water reservoir before using the lint remover.
- Always remove the steam head cover before using the appliance.
- Always use the appliance in an upright position. Never tilt or move the appliance horizontally, this may cause leakage of water.

- Never store the appliance with water in the water reservoir. Always empty the water reservoir after use and before storing.

Risk of damaging fabric:

- Always test the steamer on a small part of fabric of the garment to be steamed to check if the temperature is correct for the fabric.
- Always use the appliance on a smooth and flat surface.
- Never apply pressure when moving the lint remover head over the fabric.
- Never use the lint remover on loose threads, buttons, zips, or embroideries.

BEFORE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- A small amount of smoke and/or odor may occur upon use due to the release of manufacturing oils.

USE

Temperature setting

- This product is capable of sensing the temperature of the bottom plate through NTC and cooperating with the electronic plate for temperature control.
- After energizing the product, it will enter into standby state. Long press (2 seconds) the control button on the iron **A9** or long press (2 seconds) the control button on the base **A6** to enter the heating state.
- This product is set to maintain a constant temperature with a single temperature setting, within a plate temperature range of 135°C to 165°C.
- The flat iron control button indicator light **A9** flashes to indicate that the iron is heating, and remains steadily lit to indicate that the product has reached the right temperature.
- The heating time of this product is relatively long. It is recommended to fully heat the product (2 minutes) before steam operation.

Fill or refill the water tank **A10**

1. Remove the water tank **A10** from the machine by holding the handle of the water tank **A14** and pressing the separation button **A15**, the water tank can be extracted from the base.
2. Fill the water tank **A10** with water and press it down firmly until it locks. The water tank is securely locked when you hear a clear locking sound.

Dry iron

- Connect the iron to the rated power supply, then press and hold either the iron control button **A9** or the base control button to enter the working state.
- After the product has heated up, it is ready for ironing.
- Do not press the steam switch button **A4** when the iron is dry.

Steam iron

1. Remove the water tank **A10** from the machine by holding the handle of the water tank **A14** and pressing the separation button **A15**, the water tank can be extracted from the base.
2. Fill the water tank **A10** with water and press it down firmly until it locks. The water tank is securely locked when you hear a clear locking sound.
3. Long press the base control button **A6**, and the device will start heating up.
4. After starting the product, it defaults to small steam **B20**. It is recommended to use small steam for 2 minutes before switching to large steam **B10**.
5. Select the appropriate steam level for each fabric. Press and hold the steam button **A4** for 20 seconds, and steam will be released from the bottom plate.
6. Please lock **A10** the steam button **A4** when steam ironing is needed for a long time. Manual control is recommended when steam ironing is needed for a short time.

Self-clean

1. Long press (2s) the iron control button **A9** and the iron steam button **A4** to automatically enter the cleaning state. The cleaning indicator lights up.
2. Make sure there is enough water in the tank **A10** when using the cleaning function
3. Press the steam button **A4** to activate the pump, allowing you to clean the bottom plate of the iron. Release the steam button to stop the pump.
4. Press and hold the iron control button **A9** and the steam button **A4** for 2 seconds to switch back to low steam mode.

Auto shut-off

1. The product automatically enters the power off state after working for 10 minutes
2. When the product enters the state of power failure, the buzzer will give six short sounds and the **auto shut off indicator B22** will flash
3. Press the control button **A9** on the iron or the iron steam button **A4** or the control button on the base **A6** and press any one of the keys to return to working condition.

Water Shortage Indicator

1. When operating in steam mode, if no steam is released from the bottom plate for about 1 minute, the product will automatically enter a water shortage state.
2. Once the product enters the water shortage state, the water level indicator **B21** will remain steadily lit, and the water pump will stop working.
3. To resume operation, fill the water tank **A10** to the maximum level as required, lock the water tank in place, release the steam button **A4** on the iron, and press the steam button again to restore the working state.

CLEANING AND MAINTENANCE

- Always switch off and disconnect the appliance from the power source when cleaning and maintaining the appliance.
- Make sure the appliance is cooled down completely before cleaning and maintaining the appliance.
- Never use chemical cleaning agents that can damage the appliance when cleaning the appliance.
- When there are impurities in the steam of the electric iron soleplateplate **A1**, please use a bamboo stick to remove them
- Clean the appliance after each use.
- Place the electric iron on the base **A17** and push the lock button **A12** to secure it. Next, place the power cord and steam pipe **A6** into the two grooves on the base. Hold the iron with one hand to position the appliance as desired.

DISPOSAL

- The crossed out wheeled bin symbol means that this product shall not be disposed of with normal household waste. Electronic and Electrical Equipment not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances. Please dispose of responsibly at an approved waste or recycling facility.

Gebruikshandleiding

Steam Station - 3000W

VOORWOORD

Over dit document

Deze gebruikshandleiding bevat alle informatie voor een juist, veilig en doelmatig gebruik van het apparaat.

Lees en begrijp de aanwijzingen in deze gebruiksaanwijzing volledig voordat je het apparaat gebruikt.

Bewaar deze gebruiksaanwijzing steeds op een veilige plaats in de buurt van het apparaat voor toekomstige raadpleging.

Oorspronkelijke instructies

Deze handleiding is oorspronkelijk geschreven in het Engels. Alle andere talen zijn vertaalde documenten.

Ondersteuning

Voor onderdelen en meer informatie over het apparaat kunt u terecht op www.princesshome.eu/nl-nl

Algemene symbolen

Symbool	Beschrijving
	Signaalwoord dat gebruikt wordt om een mogelijk gevaarlijke situatie aan te geven die, als deze niet vermeden wordt, ernstige verwondingen of de dood tot gevolg kan hebben.
	Signaalwoord dat gebruikt wordt om een mogelijk gevaarlijke situatie aan te geven die, als deze niet vermeden wordt, lichte of matige verwondingen kan veroorzaken.
	Signaalwoord gebruikt voor het benoemen van praktijken niet gerelateerd aan fysiek letsel.
	Wijst op aanvullende informatie of het benadrukken van een instructie.
	Van toepassing in Frankrijk: Het product of de verpakking kan worden gerecycled en de onderdelen moeten apart worden weggegooid. Volg de plaatselijke regelgeving.
	Van toepassing in Italië: Het product of de verpakking kan worden gerecycled en de onderdelen moeten apart worden weggegooid. Volg de plaatselijke regelgeving.

	Dit product voldoet aan de conformiteitseisen van de toepasselijke Europese verordeningen of richtlijnen
	The Green Dot is het geregistreerde handelsmerk van Der Grüne Punkt - Duales System Deutschland GmbH en is een wereldwijd beschermd handelsmerk. Het logo mag uitsluitend worden gebruikt door klanten van DSD GmbH die in het bezit zijn van een geldig handelsmerkgebruikscontract of door aangewezen afvalverwerkingsbedrijven binnen de Bondsrepubliek Duitsland. Dit geldt ook voor de reproductie van het logo door derden in een woordenboek, een encyclopedie of een elektronische databank meteen naslagwerk.
	Het universele recyclingsymbool, -logo of -pictogram is een internationaal erkend symbool dat wordt gebruikt om recyclebare materialen aan te duiden. Het recyclingsymbool behoort tot het publieke domein en is geen handelsmerk.

BESCHRIJVING APPARAAT

Beeoogd gebruik

Dit apparaat is uitsluitend bedoeld voor gebruik binnenshuis.

Dit apparaat is uitsluitend bedoeld voor huishoudelijk, niet-commercieel gebruik. Dit apparaat is bedoeld om gebruikt te worden in huishoudelijke en soortgelijke toepassingen zoals:

- personeelskeukenbereiken in winkels, kantoren en andere werkomgevingen;
- boerderijen;
- door klanten in hotels, motels en andere types residentiële omgevingen;
- omgevingen van het type bed and breakfast

Dit apparaat is niet bedoeld voor gebruik door personen (waaronder kinderen) met verminderde lichamelijke, zintuiglijke of geestelijke vermogens, of gebrek aan ervaring en kennis, tenzij zij onder toezicht staan of instructies hebben gekregen betreffende het gebruik van het apparaat van een persoon die verantwoordelijk is voor hun veiligheid.

Gebruik het apparaat alleen zoals beschreven in deze gebruiksaanwijzing.

Elk gebruik van het apparaat anders dan beschreven in deze gebruiksaanwijzing wordt beschouwd als verkeerd gebruik en kan letsel of schade aan het apparaat veroorzaken en de garantie ongeldig maken.

Technische specificaties	
Naam apparaat	Steam Station - 3000W
Artikelnummer	01.323090.01.001
Voeding	220 – 240 V~ 50 Hz
Stroomverbruik tijdens gebruik	3000 W

Belangrijkste onderdelen (zie afbeelding A)

- 1 Strijkzool
- 2 Bovenklep
- 3 Bedieningsknop
- 4 Stoomknop
- 5 Uzeren paneel
- 6 Handgreep
- 7 Achterklep
- 8 Stoompijplijn
- 9 Bedieningsknop basis
- 10 Display
- 11 Ontgrendelingsknop
- 12 Vergrendelingsknop
- 13 Watertoevoerleip
- 14 Handgreep waterreservoir
- 15 Ontgrendelingsknop
- 16 Waterreservoir
- 17 Voet
- 18 Draadtunnel

Scherf (zie afbeelding B)

- 19 Grote stoomregelaar
- 20 Kleine stoomregelaar
- 21 Waterniveau-indicator
- 22 Zelfreinigingsknop
- 23 Automatische uitschakeling

VEILIGHEID

Veiligheidssymbolen

Symbol	Beschrijving
	Aanwijzing voor een heet oppervlak. Contact kan brandwonden veroorzaken. Niet aanraken.

Veiligheidsvoorzorgsmaatregelen

⚠ WAARSCHUWING

Veiligheidsgevaar door onbedoeld gebruik:

- Gebruik het apparaat alleen zoals beschreven in deze gebruiksaanwijzing.
- Gebruik het apparaat nooit als er zichtbare tekenen van schade of gebreken zijn. Vervang een beschadigd of defect apparaat altijd onmiddellijk.
- Breng nooit aanpassingen aan het apparaat aan. Afstellingen kunnen de veiligheid, garantie en goede werking beïnvloeden.
- Elektrische strijkijzers moeten gedestilleerd water gebruiken, geen kraanwater of andere vloeistoffen.
- Bij het toevoegen van water aan het waterreservoir mag het waterniveau niet hoger zijn dan het maximale waterniveau

Gevaar voor elektrische schokken door

kortsluiting:

- Dompel de basiseenheid nooit onder in water of een andere vloeistof.
- Klap de handgreep niet in wanneer de stekker in het stopcontact zit.
- Gebruik het apparaat nooit als er zichtbare tekenen van schade of gebreken zijn aan het apparaat of de netsnoer. Vervang een beschadigd of defect apparaat of netsnoer altijd onmiddellijk of neem contact op met de klantenservice.
- Zorg er altijd voor dat er niet op de stroomkabel gemorst wordt.
- Maak het apparaat nooit open. Het apparaat mag alleen door een erkende technicus geopend worden voor onderhoud.
- Vervang nooit zelf de voedingskabel. Laat de voedingskabel altijd vervangen door de fabrikant, diens service-agent of een even gekwalificeerde persoon.
- Til het apparaat nooit op aan de voedingskabel. Als je het apparaat aan de voedingskabel optilt, kun je de voedingskabel beschadigen. Til het apparaat alleen op door de voet vast te houden.
- Haal de elektriciteitskabel altijd uit het stopcontact wanneer het apparaat niet in gebruik of onder toezicht is, en voordat u het reinigt.
- Controleer altijd vóór het gebruik of de spanning vermeld op het typeplaatje van uw apparaat overeenkomt met uw netspanning.

Brandgevaar door oververhitting:

- Zet het apparaat altijd op een stabiele, vlakke, hitte- en vochtbestendige ondergrond. Laat het apparaat nooit onbeheerd achter als het in gebruik is. Gebruik het apparaat alleen onder toezicht. Zet het apparaat uit en haal de voedingskabel uit het stopcontact als je de kamer verlaat.
- Gebruik het apparaat nooit met een programmeerapparaat, timer, aparte afstandsbediening of een ander toestel dat het apparaat automatisch inschakelt.

Gevaar voor elektrische schokken door

kortsluiting:

- Gebruik het apparaat nooit in de onmiddellijke nabijheid van een bad, een douche of een zwembad.

