
BaByliss®

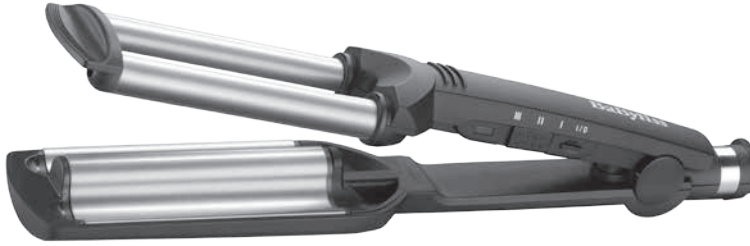

WAVE ENVY

Model 2337U

BaByliss®

WAVE ENVY

The BaByliss Wave Envy styler easily creates gorgeous, long lasting waves by simply pressing the hair between the ceramic plate and barrels.

FEATURES

- Up to 200°C high heat performance
- Ceramic plate and barrels
- 3 temperature settings: 200°C, 180°C and 160°C
- Fast heat up
- On/off button
- On indicator light
- Cool tip
- 2.5m swivel cord
- Auto shut off
- Heat protection mat
- 3 year guarantee

SAFETY CAUTIONS

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

WARNING! THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

WARNING! Do not use this appliance near water contained in basins, bathtubs or other vessels.



- Do not use this appliance in the bathroom.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of lead damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- During use do not place the appliance on any heat

sensitive surface, even when using the heat mat provided.

- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- In the event of the appliance left switched on, the appliance will automatically shut off after 72 minutes. If you wish to continue using the appliance after this time, simply press the button marked ‘I/0’ to turn the power on.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Allow appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage. Instead, coil loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).

INSTRUCTIONS FOR USE

General

- Place the styler on a flat, level surface, on top of the heat protection mat. Do not place the styler on any heat sensitive surface.
- Press the button marked 'I/0' to switch the styler on and allow the styler to heat up.
- The LED indicator light will flash until optimum temperature has been reached. Once it has reached the temperature selected, the LED light will stop flashing.
- Divide dry hair into sections and comb through.
- Take a section of hair and place it between the top barrels and bottom plate of the styler.
- The styler should be positioned mid way down the hair section.
- Clamp the hair between the top barrels and bottom plate by pressing the styler together.
- Hold in place for 5-8 seconds. Take care to avoid the hot surfaces of the styler coming into contact with the skin, in particular the eyes, ears, face and neck.
- Release the styler from the hair and gently slide down to the next section. Re-position the styler to overlap the last wave created, to ensure a continuous wave effect in the hair.
- Continue this action down the entire hair section, towards the ends of the hair.
- Repeat as necessary.
- After use, press the 'I/0' button to turn the styler off and unplug from the mains.
- Allow the styler to cool completely before storing away.

HELPFUL HINTS AND TIPS

- Once all the hair has been styled, take random sections from the top layer and position the styler slightly higher up from the first wave created, this will create a natural looking style.
- For a voluminous look, clamp the hair between the barrels close to the root on the bottom sections only. As you move to the top section, position the styler mid-way down the hair section.

- After styling, break up the waves with your fingers and add serum to the hair.

Heat Protection Mat
During use do not place this appliance on any heat sensitive surface, even when using the heat mat provided. After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat mat provided and allow to fully cool down. Continue to keep it out of the reach of children as it will remain hot for several minutes.

Auto Shut Off
This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 72 minutes continuously, then it will automatically switch off. If you wish to continue using the appliance after this time, simply press the button marked 'I/0' to turn the power on.

CARE & MAINTENANCE
To help keep your appliance in the best possible condition follow the steps below:
- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

UK GUARANTEE
This BaByliss appliance is guaranteed for consumer use for 3 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through the Conair UK After Sales Service. The Conair Group Ltd reserve the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance, contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

SAFE DISPOSAL



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL
BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the ⏚ symbol.

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 5A fuse. If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 5A fuse must be fitted.