



Kühlschrank

10027671 10027672
10027673

KLARSTEIN

Sehr geehrter Kunde,

Wir gratulieren Ihnen zum Erwerb Ihres Klarstein Gerätes. Lesen Sie die folgenden Anschluss- und Anwendungshinweise sorgfältig durch und befolgen Sie diese, um möglichen technischen Schäden vorzubeugen. Für Schäden, die durch Missachtung der Sicherheitshinweise und unsachgemäßen Gebrauch entstehen, übernehmen wir keine Haftung.

Inhaltsverzeichnis

Sicherheitshinweise 2
Installation 2
Inbetriebnahme 3
Energiespartipps 3
Fehlersuche und Fehlerbehebung 4
Anschlussdiagramm 4
Hinweise zur Entsorgung 4
Konformitätserklärung 4

Sicherheitshinweise

- Lesen Sie sich alle Hinweise sorgfältig durch und bewahren Sie die Bedienungsanleitung zum Nachschlagen gut auf.
- Falls das Netzkabel beschädigt ist, muss es vom Hersteller oder einem autorisierten Fachbetrieb oder einer ähnlich qualifizierten Person ersetzt werden.
- Kinder, physisch und körperlich eingeschränkte Menschen sollten das Gerät nur benutzen, wenn sie vorher von einer Aufsichtsperson ausführlich mit den Funktionen und den Sicherheitsvorkehrungen vertraut gemacht wurden.
- Achten Sie darauf, dass Kinder nicht mit dem Gerät spielen.
- Um sicherzugehen, dass das Gerät ordnungsgemäß funktioniert halten Sie sich genau an die Installations- und Bedienhinweise in dieser Anleitung.

Installation


- Dieses Gerät muss frei stehen und ist nicht zum Einbau in Wände geeignet.
- Stellen Sie das Gerät auf einen Untergrund, der das Gewicht bei voller Beladung aushält. Benutzen Sie die verstellbaren Füße an der Unterseite, um kleine Unebenheiten auszugleichen.
- Das Gerät darf nicht Schränke eingebaut werden, an deren Vorderseite sich Türen befinden.
- Oben, hinten und an den Seiten des Geräts müssen 10 cm Platz bleiben, damit die Luft ausreichend zirkulieren und den Kompressor kühlen kann.
- Halten Sie das Gerät fern von direkter Sonneneinstrahlung und Hitzequellen, wie Öfen, Heizungen und ähnlichem. Direkte Sonneneinstrahlung wirkt sich auf die Acrylbeschichtung aus, während Hitzequellen den Stromverbrauch erhöhen. Auch eine extrem kalte Umgebung könnte sich negativ auf den Betrieb des Geräts auswirken.
- Stellen Sie das Gerät nicht in feuchten Räumen auf.
- Die Stromversorgung des Gebäudes muss einen Hauptschalter mit einem Kontaktabstand von mindestens 3 mm zwischen den einzelnen Polen umfassen, um bei Störungen eine Unterbrechung des Stromkreises zu ermöglichen. Falls Sie sich nicht sicher sind ob ihre Steckdose den Anforderungen genügt fragen Sie einen Elektriker.
- Nachdem Sie den Netzstecker eingesteckt lassen Sie das Gerät 2-3 Stunden herunterkühlen bevor Sie die Fächer mit Lebensmitteln füllen.

Inbetriebnahme

So stellen Sie die Temperatur ein

Das Gerät verfügt über einen Drehschalter, mit dem Sie die Temperatur im Innenraum einstellen können. Der Drehschalter befindet sich oben rechts im Innenraum.

- Wenn Sie das Gerät zum ersten Mal benutzen drehen Sie den Schalter auf „5“.
- Insgesamt können Sie zwischen 5 Stufen wählen: von 0 (Aus) bis 5 (sehr kalt). Drehen Sie die Temperatur nach 24-48 Stunden auf die gewünschte Stufe herunter. Für den Hausgebrauch empfehlen wir Ihnen die Stufe „3“ oder „4“ zu wählen. Um das Gerät auszuschalten drehen Sie den Schalter auf „0“.

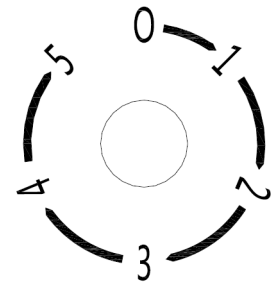

HINWEIS: Wenn Sie das Gerät auf „0“ stellen wird zwar der Kühlkreislauf, der Strom wird dadurch aber nicht abgeschaltet. Falls Das Gerät ausgesteckt wurde, es einen Stromausfall gab, oder das Gerät ausgeschaltet wurde warten Sie 3-5 Minuten, bevor Sie es wieder in Betrieb nehmen. Falls Sie es vorher probieren, wird das Gerät nicht starten.

Energiespartipps

- Stellen Sie das Gerät im kühlssten Bereich des Raums auf und halten Sie es fern von Hitze produzierenden Geräten und direktem Sonnenlicht.
- Lassen Sie Nahrungsmittel auf Raumtemperatur abkühlen, bevor sie sie in den Kühlschrank stellen. Überladen sie das Gerät nicht, damit der Kompressor nicht unnötig lange läuft.
- Wickeln Sie Nahrungsmittel sorgfältig ein und wischen Sie die Behälter trocken, bevor Sie sie darin platzieren, um die Reifbildung zu verringern.
- Legen Sie keine Aluminiumfolie, Wachspapier oder Papiertücher auf die Ablageflächen. Andernfalls kann das Gerät nicht optimal arbeiten, da die kalte Luft nicht richtig zirkulieren kann.
- Verteilen Sie die Lebensmittel so im Kühlschrank, dass Sie sie schnell finden und die Tür dafür nur kurz öffnen müssen. Nehmen Sie alle benötigten Lebensmittel auf einmal aus dem Gerät und schließen Sie die Tür danach umgehend.


Fehlersuche und Fehlerbehebung

Viele Fehler können Sie einfach selbst beheben. Bevor Sie sich an den Kundenservice wenden gehen sie zunächst die folgende Liste durch. Falls Sie den Fehler nicht selbst beheben können, kontaktieren Sie den Kundendienst. Bevor Sie anrufen, notieren Sie sich bitte das Modell, die Seriennummer und das Kaufdatum des Geräts. Der Kundendienst benötigt diese Informationen.

Problem	Mögliche Ursache
Das Gerät läuft nicht.	Der Netzstecker ist nicht eingesteckt.
	Der Hauptschalter ist aus oder eine Sicherung ist durchgebrannt.
	Der Drehschalter steht auf „0“.
Das Gerät geht ständig an und aus.	Die Raumtemperatur ist heißer als normal.
	Es wurde eine große Menge Nahrungsmittel hinzugefügt.
	Die Tür wurde zu oft geöffnet.
	Die Tür wurde nicht richtig geschlossen.
	Sie Temperatur ist falsch eingestellt.
	Die Türdichtung versiegelt nicht richtig.
	Die Abstände nach außen wurden nicht eingehalten.

Problem	Mögliche Ursache
Das Gerät vibriert.	Versichern Sie sich, dass das Gerät gerade steht.
Das Gerät macht auffällig laute Geräusche.	Das gurgelnde Geräusch kann durch die Zirkulation des Kältemittels entstehen und ist in diesem Fall normal.
	Auch durch Ausdehnung und Zusammenziehen der Wände können Geräusche verursacht werden.
	Das Gerät steht nicht gerade.
Die Tür schließt nicht richtig.	Das Gerät steht nicht gerade.
	Die Tür wurde umgedreht und nicht richtig angebracht.
	Die Türdichtung ist dreckig oder krumm.
	Regale, Behälter oder Körbe sitzen nicht richtig.

Anschlussdiagramm

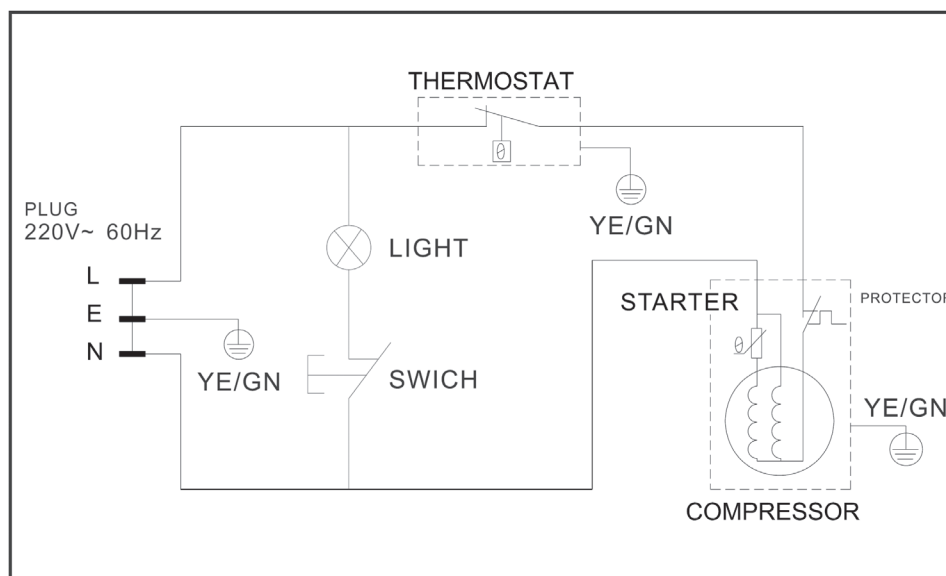

Hinweise zur Entsorgung



Beindet sich die linke Abbildung (durchgestrichene Mülltonne auf Rädern) auf dem Produkt, gilt die Europäische Richtlinie 2012/19/EU. Diese Produkte dürfen nicht mit dem normalen Hausmüll entsorgt werden. Informieren Sie sich über die örtlichen Regelungen zur getrennten Sammlung elektrischer und elektronischer Gerätschaften. Richten Sie sich nach den örtlichen Regelungen und entsorgen Sie Altgeräte nicht über den Hausmüll. Durch die regelkonforme Entsorgung der Altgeräte werden Umwelt und die Gesundheit ihrer Mitmenschen vor möglichen negativen Konsequenzen geschützt. Materialrecycling hilft, den Verbrauch von Rohstoffen zu verringern.

Konformitätserklärung

Hersteller: Chal-Tec GmbH, Wallstraße 16, 10179 Berlin.



Dieses Produkt entspricht den folgenden Europäischen Richtlinien:
 2009/643/EG (EVPG)
 2014/30/EU (EMV)
 2011/65/EU (RoHS)
 2014/35/EU (LVD)

Dear Customer,

Congratulations on purchasing this Klarstein equipment. Please read this manual carefully and take care of the following hints on installation and use to avoid technical damages. Any failure caused by ignoring the mentioned items and cautions mentioned in the operation and installation instructions are not covered by our warranty and any liability.

Contents

Safety Instructions	5
Installation	5
Getting Started	6
Energy Saving Tips	6
Troubleshooting	6
Wiring Diagram	7
Environment Concerns	7
Declaration of Conformity	7

Safety Instructions

- Read all instructions before using the APPLIANCE.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instruction.

Installation


- This appliance is designed to be free standing only, and should not be recessed or built-in.
- Place your unit on a floor that is strong enough to support the unit when it is fully loaded.
- To level your unit, adjust the leveling legs at the bottom of the unit.
- This appliance is NOT designed to be installed inside of a cabinet where the front is covered by any type of door.
- Allow 10 cm of space between the top, back and sides of the unit, which allows the proper air circulation to cool the compressor and condenser.
- Locate the unit away from direct sunlight and sources of heat (stove, heater, radiator, etc.).
- Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the unit in moist areas.
- Plug the unit into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized Avanti Products service center.
- After plugging the appliance into a wall outlet, allow the unit to cool down for 2-3 hours before placing food in the APPLIANCE compartment.

Getting Started

Setting the Temperature Control

Your unit has only one control for regulating the temperature in the compartment. The temperature control is located at the upper right hand side of the compartment.

- The first time you turn the unit on, set the temperature control to „5“.
- The range of the temperature control is from position 0 to „5“. After 24 to 48 hours, adjust the temperature control to the setting that best suits your needs. The setting of „3“ or „4“ should be appropriate for home or office use.
- To turn the appliance off, turn the temperature control to „0“.

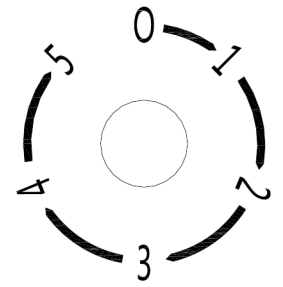

NOTE: Turning the temperature control to „0“ position stops the cooling cycle but does not shut off the power to the unit. If the unit is unplugged, has lost power, or is turned off, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the unit will not start.

Energy Saving Tips

- The unit should be located in the coolest area of the room, away from heat producing appliances, and out of the direct sunlight.
- Let hot foods cool to room temperature before placing in the unit. Overloading the unit forces the compressor to run longer.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the unit. This cuts down on frost build-up inside the unit.
- Unit storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the unit less efficient.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.


Troubleshooting

Certain problems can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed underneath. If you are unable to identify or solve the problem, contact your local Service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine, the Service Center will require this information.

Problem	Possible Cause
Unit does not operate.	Not plugged in.
	The circuit breaker tripped or a blown fuse.
	The unit temperature control is set at „0“ position.
Turns on and off frequently.	The room temperature is hotter than normal.
	A large amount of food has been added to the unit.
	The door is opened too often.
	The door is not closed completely.
	The temperature control is not set correctly.
	The door gasket does not seal properly.
	The unit does not have the correct clearances.

Problem	Possible Cause
Vibrations.	Check to assure that the unit is level.
The unit seems to make too much noise.	The rattling noise may come from the flow of the refrigerant, which is normal.
	As each cycle ends, you may hear gurgling sounds caused by the flow of the refrigerant in your unit.
	The unit is not level.
The door will not close properly.	The unit is not level.
	The door was reversed and not properly installed.
	The gasket is dirty or bent.
	The shelves, bins, or baskets are out of position.

Wiring Diagram

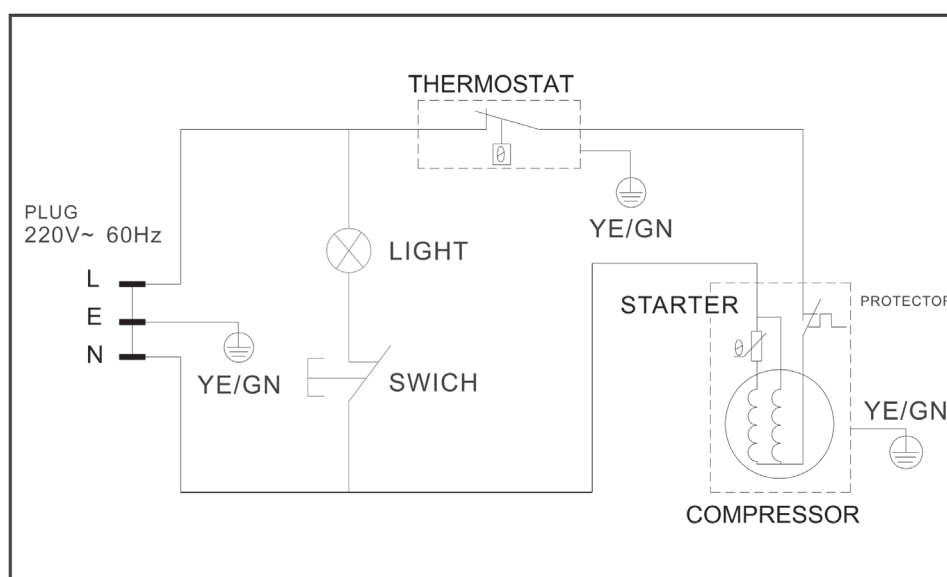

Environment Concerns



According to the European waste regulation 2002/96/EG this symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council or your household waste disposal service.

Declaration of Conformity

Producer: Chal-Tec GmbH, Wallstraße 16, 10179 Berlin.



This product is conform to the following European Directives:
 2009/643/EG (ErP)
 2014/30/EU (EMC)
 2011/65/EU (RoHS)
 2014/35/EU (LVD)