SENCOR® SHP 8900BK



EN ▪ Hair clipper

Translation of the original manual

Copyright © 2021, Fast ČR, a.s.

Revision 01/2021

EN

Hair Clipper

Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

General warnings

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- The parts of the appliance that need to be mounted or stood upright, must be mounted or stood upright in such a way that they cannot fall into water.

ELECTRICAL SAFETY

- Before connecting the power adapter to a power socket, check that the voltage on its rating label corresponds to the voltage in the power socket to which you wish to connect it. Do not use an extension cord.
- Connect the appliance only to a properly grounded socket.



Attention:
Only use the appliance with the original power adapter that came with it. In order to avoid a dangerous situation from arising, never use a different type of power adapter.

- Do not disconnect the power adapter from the power socket by pulling on the power cord. This could damage the power adapter or the power socket. Disconnect the power adapter from the power socket by pulling on the plug.
- Never use the power adapter supplied with this appliance for any other purposes.
- Keep the power adapter and its power cord dry.
- Do not place the power cord of the power adapter over sharp objects. Make sure that the power cord does not hang over the edge of a table and that it is not touching a heated surface.
- Do not wind the power cord of the power adapter around the handle of the appliance.
- Do not connect and disconnect the power adapter cord to and from the power socket with wet hands.
- Store, charge and use the appliance at an ambient temperature of 15 °C to 35 °C. Do not charge the appliance for longer than is necessary for it to fully charge. Once it is charged, disconnect it from the power source.
- Do not expose the appliance to temperatures higher than 50 °C. Otherwise, the built-in battery could be damaged.
- The appliance is equipped with a built-in long-life battery that can only be removed at a professional service centre. Never attempt to remove it from the appliance yourself.

Copyright © 2021, Fast ČR, a.s.

Revision 01/2021



Attention:
Never disassemble the appliance for the purpose of removing the battery. Never short circuit the appliance or throw it into a fire. Incorrect use, risks releasing toxic substances or causing a fire or explosion.

- Do not charge, use or store the appliance or leave it lying in a bathroom or in locations where it could fall into a bath, wash basin or other containers filled with water.
- In the event that the appliance falls into water, under no condition reach for it, rather, immediately disconnect the power adapter from the power socket. Never use an appliance or power adapter that was submerged in water. Hand it over to an authorised service centre for inspection.



Warning:
Do not use the appliance in the bath or shower. Do not clean it under a water tap, do not spray it with water or any other liquid or submerge it in water or any other liquid.

SAFETY DURING USE

- This hair clipper is intended for home use only and is designed for cutting human hair, beards and nose and ear hair. The hair clipper is not intended for commercial purposes or for trimming animal fur.
- Only use the hair clipper on dry clean hair, beards or nose and ear hair. Do not use it on wet or just washed hair or on beards on which a shaving foam or gel, etc. is applied.
- Use the hair clipper and its accessories in accordance with the instructions contained in this user's manual.
- Use only the original accessories supplied with this hair clipper.
- The hair clipper and its power adapter must only be used in indoor areas. Do not use it outdoors.
- Do not use the hair clipper in rooms where aerosol sprays are used or where oxygen is administered.
- Do not expose the hair clipper and its accessories to the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessively dusty environments.
- Do not place the hair clipper and its accessories near heaters, open fires or other sources of heat.




Warning:
Keep the hair clipper dry.

- Before every use, check that the selected comb attachment is not damaged. Never use a hair clipper with a damaged comb attachment.
- The hair clipper may heat up during use or when it is charged. This is completely normal.
- Keep the hair clipper at a safe distance from eyes.
- Always turn off the hair clipper and disconnect it from the power socket when not using it, when leaving it without supervision and before attaching, removing or replacing an attachment and before cleaning, maintenance or storage. Store the hair clipper and its power adapter in a dry environment.
- Keep the hair clipper clean. Perform cleaning and maintenance according to the instructions in chapter Cleaning and maintenance.
- Do not perform any maintenance on the hair clipper other than cleaning the individual components as described in chapter Cleaning and maintenance.
- Never use a hair clipper or power adapter that is damaged in any way.
- Do not use the hair clipper if it has fallen on the floor, if it was submerged in water, if it is not functioning correctly or if it is damaged in any other way.
- In order to prevent a hazardous situation arising, do not repair the hair clipper or any of its accessories yourself or modify it in any way. For all repairs, contact an authorised service centre. By tampering with the product you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.


Copyright © 2021, Fast ČR, a.s.

A

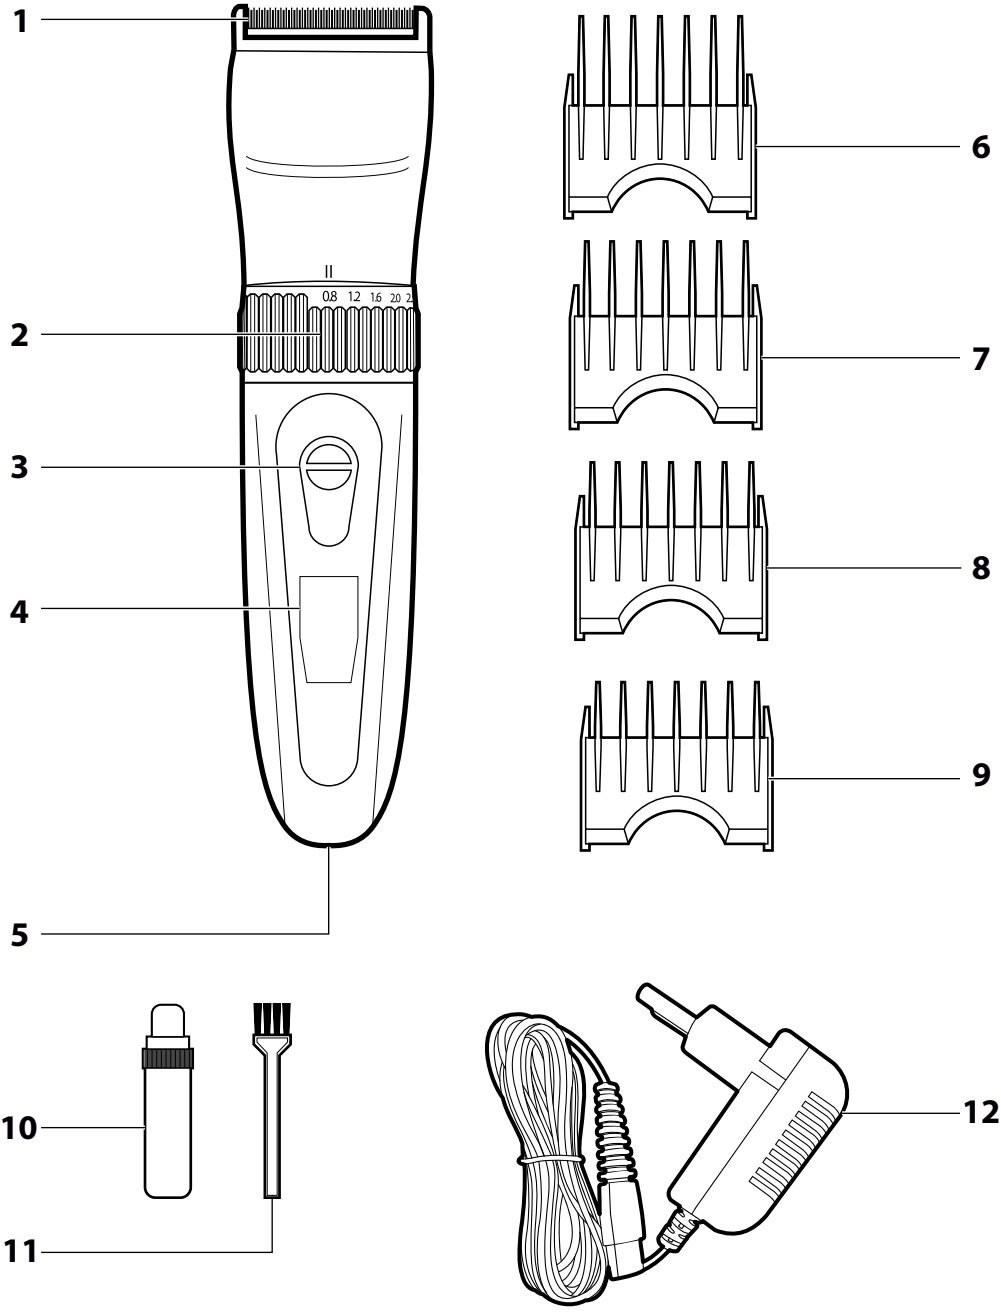


Copyright © 2021, Fast ČR, a.s.


B

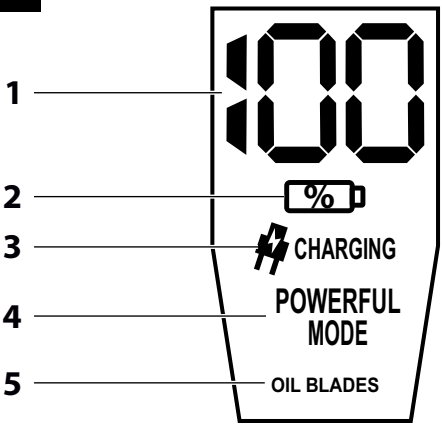


C

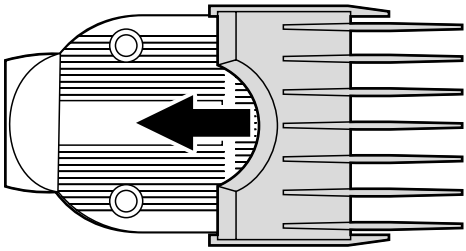

D

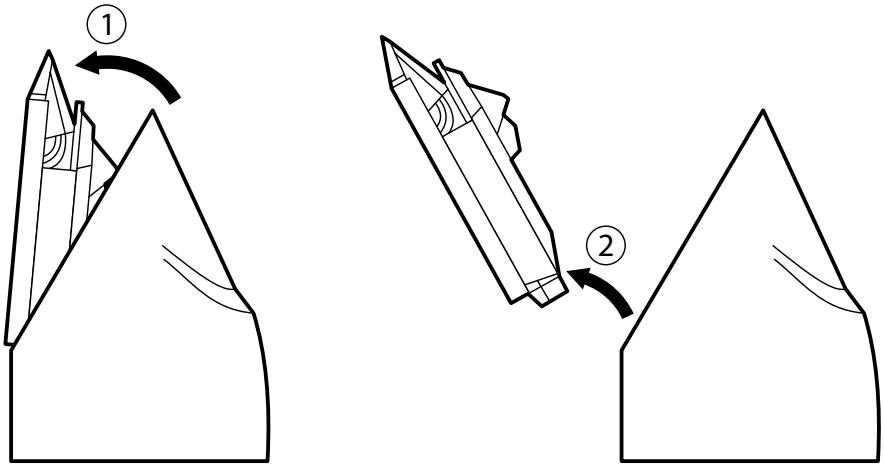

E

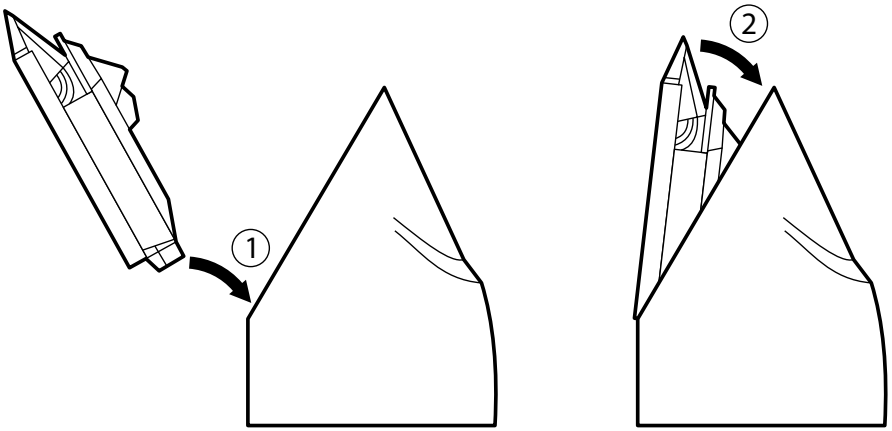

Copyright © 2021, Fast ČR, a.s.

EN Hair Clipper
User's manual

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use. In the event that you hand this appliance over to somebody else, make sure to also include this user's manual.
- Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all its parts. We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE HAIR CLIPPER AND ITS ACCESSORIES

A1 Cutting unit
A2 Clipping height regulator with range 0.8 / 1.2 / 1.6 / 2.0 / 2.5 mm
Adjusts the distance between the moving blade and fixed blade
A3 On/Off button
Position 0: Off
Position 1: Standard hair cut
Position 2: Turbo mode for higher power when clipping thicker hair
A4 LED display
A5 Power cord connection socket
A6 Comb attachment size 12 mm
A7 Comb attachment size 9 mm
A8 Comb attachment size 6 mm
A9 Comb attachment size 3 mm
A10 Oil for lubricating the cutting unit
A11 Cleaning brush
A12 Power adapter

B1 Current battery power level indicator
B2 Low battery power level / charged battery indicator
B3 Charging indicator
B4 Turbo mode indicator
B5 Cutting unit lubrication required indicator

PURPOSE OF USE

- The hair clipper is suitable for cutting clean, dry or very lightly dampened hair or beards. The hair clipper is not intended for cutting freshly washed hair, clipping synthetic hair or animal fur.
- The hair clipper is intended for domestic use and is not intended for business activities or other professional areas of use.

CHARGING THE HAIR CLIPPER

- The hair clipper is equipped with a built-in battery enabling cordless operation of the hair clipper. Before first use or after not using it for a long time, first allow the hair clipper battery to fully recharge. Low battery power level is indicated by the flashing of indicator **B2**.
- Check that the hair clipper is turned off. Insert the power adapter plug into the socket on the hair clipper and plug the power adapter into a power socket.
- The battery will start charging when connected to mains power. Indicator **B2** will be lit and the display will show symbol **B3** with the text CHARGING. The charging time differs depending on the current battery power level.
- When the battery is fully charged, indicator **B2** and symbol **B3** will be permanently lit. Disconnect the power adapter.



Attention:
Do not leave the hair clipper connected to the power grid for longer than is necessary to charge it.

- A fully charged hair clipper battery will provide up to 180 minutes of cordless operation. Then it is necessary to charge the battery again.

DIRECT DRIVE TECHNOLOGY

- The hair clipper is equipped with **DIRECT DRIVE** technology, which enables it to be used immediately upon being connected to the mains power socket even when the battery is completely flat. It is thus not necessary to wait for the battery to charge to a minimum level. The hair clipper can be connected to a power socket and it can continue operation.

RECOMMENDATIONS FOR EXTENDING THE LIFETIME OF THE BATTERY

- In order for the built-in battery to serve you as long as possible, charge, use and store the hair clipper in a dry environment at an ambient temperature of 15- 35 °C. Lower or higher temperatures have a negative impact on the lifespan of the battery.
- Do not wait for the battery to become completely flat. It is better to charge the battery before it is completely flat.
- When the hair clipper is not used for an extended period of time, charge it at least once every 6 months.

OPERATION

LUBRICATING THE CUTTING UNIT

- To ensure the correct movement of the cutting unit, it is recommended to lubricate the cutting unit before first use and several uses afterwards.
- Apply two drops of lubricating oil on to the cutting unit and spread it out evenly. Wipe off excess oil using a clean, dry cloth.



Attention:
Store the lubricating oil away from fire sources and out of children's reach.
Do not ingest the lubricating oil and prevent it from coming into contact with the eyes. If contact with the eyes does occur, rinse them out with cold water and if necessary seek medical help.

PREPARATION BEFORE THE HAIRCUT

- Only use the hair clipper on dry clean hair or lightly dampened hair. Do not use it on wet and freshly washed hair or hair with gel applied on to it, etc. Trim beards when they are dry without the use of shaving gels or foams.



Attention:
Do not use the hair clipper if you have open wounds, cuts or blisters on your skin.

- Before starting any styling of hair or beards, acquaint yourself with the operating instructions.
- You can use the hair clipper to clip your own or other people's hair. When clipping somebody else's hair, seat them so that their head is at the level of your chest. This will provide for a comfortable cutting position. Before cutting hair, thoroughly comb out the hair in the growth direction.
- Cover your neck and shoulders or that of the person whose hair you will be cutting with a towel to limit cut hair from falling on clothes.
- Prior to every use, check that the cutting unit is clean.
- Prior to every use, check the cutting unit and the comb attachment for damage. Never use a hair clipper with a damaged cutting unit or comb attachment.



Attention:
The maximum continuous operating time of the hair clipper is 30 minutes, so do not leave it running for longer. If the hair clipper was in continuous operation for 30 minutes, allow it to cool down for at least 30 minutes before turning it on again. At lower loads, a cooling time of 3 to 5 minutes is usually sufficient.

CUTTING WITHOUT THE COMB ATTACHMENT

- You may use the hair clipper without a comb attachment, for example, to trim beards very close to the skin or to trim the neckline or the area around the ears.



Attention:
The blades of the cutting unit will cut off all hair, beards or nose and ear hair that comes into contact with them, therefore be especially careful when handling the hair clipper while it is running.

- Set the appropriate cutting height by turning the regulator **A2**. If you are using the hair clipper for the first time, it is recommended to first try a longer cut and only thereafter adjust the setting to a shorter cut.
- Turn the hair clipper on and off using switch **A3**.
- When you have finished using the hair clipper, always clean it according to the instructions in chapter Cleaning and maintenance.

CUTTING THE COMB ATTACHMENT

- The hair clipper comes with comb attachments **A6** to **A9** for various cutting heights. Select one of the attachments and attach it to the cutting unit.



Attention:
Put a comb attachment on to the cutting unit before turning on the hair clipper and always turn the hair clipper off before removing it.

- Insert the attachment all the way by applying pressure on the cutting unit from above, see fig. C. Always check that the attachment is properly attached.
- Set the appropriate cutting height by turning the regulator **A2**. If you are using the hair clipper for the first time, it is recommended to first try a longer cut and only thereafter adjust the setting to a shorter cut.
- Turn the hair clipper on and off using switch **A3**.
- When you have finished using the hair clipper, always clean it according to the instructions in chapter Cleaning and maintenance.

TURBO MODE

- Slide the switch **A3** to position 2 to set the Turbo mode, whereby the motor speed increases and even thick hair can be clipped effectively. The mode is indicated by the text TURBO on the display.

Copyright © 2021, Fast ČR, a.s.

Revision 01/2021

ADVICE AND TIPS

- When using a comb attachment, start cutting with the largest cutting height and then gradually reduce the set hair cutting height.
- Record the used height setting for certain hairstyles so that you do not need to spend time adjusting it the next time.
- It is most effective to cut counter to the direction of hair growth.
- Because hair grows in various directions, it is also necessary to move the hair clipper in various directions (upwards, downwards or crosswise).
- Repeat individual passes so that you cut also the hair that you did not cut in the previous passes.
- Ensure that the flat part of the comb attachment is in full contact with the scalp. This will ensure an even haircut result.
- To achieve good results on curly, sparse or long hair, you can try using a comb to lead the hair towards the hair clipper.
- Trim beards by slowly moving counter to the growth direction of the beard, going from the bottom upwards. When trimming beards using a comb attachment, keep in mind that the comb attachment must be in constant contact with the skin in order to ensure an even cut. After reattaching an attachment on to the cutting unit, do not forget to set the cutting height again.
- Regularly clean away hair and whiskers from the cutting unit. In the event that a large amount of hair or whiskers accumulates in the cutting blade, take it off the hair clipper and blow or tap the hair or whiskers out of it.

CLEANING AND MAINTENANCE

- Turn the hair clipper off prior to cleaning it. Never clean the hair clipper when it is charging and connected to the power supply.
- Regular cleaning after every use will ensure its proper operation.



Attention:
This hair clipper is not designed to be washed under a water tap. Do not spray the hair clipper or its power adapter with water or any other liquid or submerge it in water or any other liquid.

CLEANING THE CUTTING UNIT

- If the comb attachment is mounted on the cutting unit, remove it.
- Use the cleaning brush **A11** to remove all hair and whiskers from the cutting unit.
- Remove the cutting unit from the hair clipper according to figure **D**. First release the cutting unit by applying pressure against the cutting blades in the direction from the handle (1) and then slide out its bottom part from the cut-out in the handle (2).



Attention:
The edges of the cutting unit are sharp, pay increased attention when handling them.

- Use a brush to remove all hair or whiskers from the cutting unit and from the inner area of the hair clipper underneath the cutting unit.
- After cleaning it, attach the cutting unit back on to the handle of the hair clipper **A6**, see figure **E**. Insert the tab on the underside of the cutting unit into the cut-out in the handle of the hair clipper (1) and then push the cutting unit against the hair clipper (2) until you hear an audible click.

CLEANING THE COMB ATTACHMENT

- Clean a used comb attachment using a brush or rinse it under running lukewarm water. After washing it, carefully wipe it with a soft, dry cloth and then allow it to dry naturally.

CLEANING THE HAIR CLIPPER

- The hair clipper unit can be cleaned using a clean dry cloth. In the event that it is very dirty, you can use a lightly dampened cloth. Then thoroughly wipe the cleaned surface dry.
- To clean the power adapter, use a clean, dry cloth.
- For cleaning, do not use brushes with hard bristles, cleaning products with an abrasive effect, solvents, etc. Otherwise, the cleaned surface may be damaged.

LUBRICATING THE CUTTING UNIT

- To ensure correct movement of the cutting unit, it is recommended to regularly lubricate the cutting unit.
- If a comb attachment is mounted on the cutting unit, remove it. Apply two drops of lubricating oil on to the cutting unit and spread it out evenly. Wipe off excess oil using a clean, dry cloth.



Attention:
Store the lubricating oil away from fire sources and out of children's reach.
Do not ingest the lubricating oil and prevent it from coming into contact with the eyes. If contact with the eyes does occur, rinse them out with cold water and if necessary seek medical help.



Note:
After using up the supplied oil, you can use an oil that does not contain acids, e.g. sewing machine oil.

STORAGE

- When you have finished using it, you can store the hair clipper with all its accessories in a suitable location out of children's reach. Keep the hair clipper away from extreme temperatures, direct sunlight and excessive humidity. Do not use in an overly dusty environment.

TECHNICAL SPECIFICATIONS

Hair clipper

Built-in battery	Li-ion, 3,6 V, 2 500 mAh
Dimensions (width × depth × height)	191 × 49 × 45 mm
Weight	172 g
Noise level	72 dB(A)
Electrical shock protection class	III

Power adapter

Input	100-240 V AC, 50/60 Hz, 0.3 A
Output	5 V/DC, 1.2 A, 6 W
Safety class for electrical shock protection	IP20

The declared noise emission level of the appliance is 72 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

Explanation of technical terminology
Safety class for electrical shock protection:
IP20 – The appliance is constructed in such a way that it is not possible for any dangerous live parts of the appliance to come into contact with the human body and at the same time the appliance is protected against the damaging effects of water that could enter into the appliance.



Product with protection class III: product is designed for separated/safety extra-low voltage. Electrical shock protection is provided by separated/safety extra-low voltage.

Changes to text and technical parameters are reserved.

DISPOSAL OF USED BATTERIES

Prior to handing over the hair clipper at a specialised collection facility, it is necessary to ensure that the built-in battery is removed. Battery removal will be performed at the authorised service centre. In the event that the product has been disassembled for the purpose of ecological disposal then it must not be reassembled.



This symbol indicates that used batteries do not belong in ordinary municipal waste. Hand over used batteries to designated collection points for proper disposal. Correct disposal of batteries will help prevent negative impacts on the environment and human health.

Disposal in other countries outside the European Union.
This symbol is valid in the European Union. If you wish to dispose of used batteries, request the necessary information about the correct disposal method from the local authorities or from your vendor.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand these products over to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.
Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.
In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states
If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.
This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.

CE This product meets all the basic requirements of EU directives related to it.

Copyright © 2021, Fast ČR, a.s.