
BARBERBOSS

QR-6053

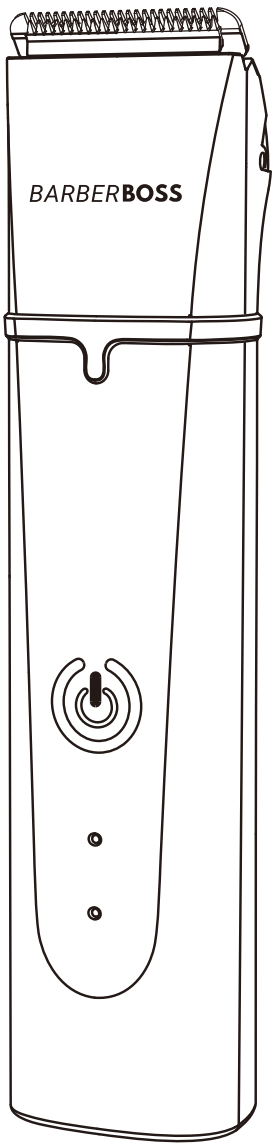

Importer: Elite Capital Limited
Address: Studio 4 Clarks Courtyard, 145 Granville Street,
Birmingham, B1 1SB. United Kingdom.
Website: barberboss.co.uk
Email: care@barberboss.co.uk


QR-6053


Welcome to BarberBoss and congratulations on your new purchase! Secure your peace of mind by activating your 12-month warranty and claiming an extra 6 months for free at www.barberboss.co.uk/barberboss-product-warranty. Beyond our warranty, you are also covered by your country's legal consumer rights, ensuring complete protection for your purchase.

Product Features

- Versatile Cutting Heads: Equipped with 3 distinct trimmer heads to meet all your grooming needs. The standard trimmer head and body groomer are perfect for hair, beard and body grooming, while the detail trimmer head is ideal for close, accurate trimming.
- Move the trimmer against the direction of hair growth, since all hair does not grow in the same direction, you need to move the device in different directions (upward, downward or across).
- Convenient Power and Charging: Battery-operated for cordless use, with a fast charge time of 2 hours providing 90 minutes of usage, all charged via a USB cable.
- Easy Cleaning: This product is waterproof. Features rinseable blades for hassle-free maintenance and optimal hygiene.

Product Structure and Accessories

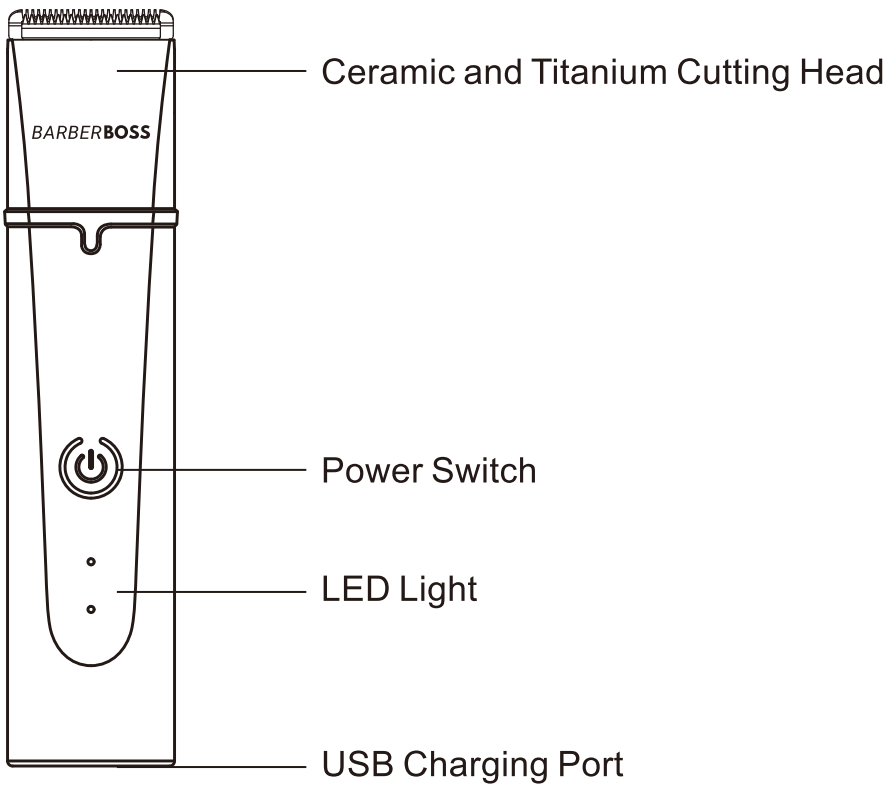

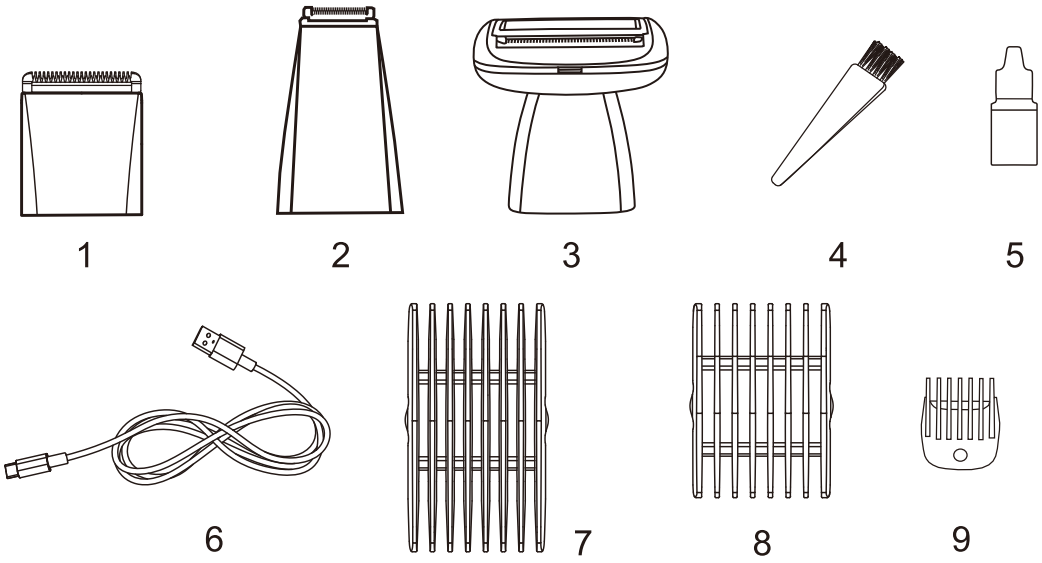

1.Standard Trimmer Head
2.Detail Trimmer Head
3.Body Groomer Head
4.Cleaning Brush
5.Lubricating Oil
6.USB Cable
7.9-12mm Guide Comb
8.3-6mm Guide Comb
9.4mm Guide Comb (For Detail Trimmer Head)

Product Details

Product Name	QR-6053 3-IN-1 GROOMING SET
Model Number	QR-6053
Charging Input	5VDC 1.0A
Charging Time	2 Hours
Usage Time	90 Minutes

What's Included

Standard Trimmer Head	x1
Detail Trimmer Head	x1
Body Groomer Head	x1
3-6mm Guide Comb(For Standard Trimmer Head)	x1
9-12mm Guide Comb(For Standard Trimmer Head)	x1
4mm Guide Comb(For Detail Trimmer Head)	x1
USB Cable	x1
Cleaning Brush	x1
Lubricating Oil	x1

Usage

Trimmer Head	Function	Area of Focus
Standard Trimmer Head	1.3inch/3.3cm head, cuts 0.5-0.8mm without comb, compatible with 3-6 and 9-12mm combs. Safe blades for easy, skin-friendly hair cutting.	Long hair areas, face, hair & beard trimming.
Detail Trimmer Head	0.79inch/0.9cm head, cuts 0.5-0.8mm without comb, comes with a guide comb for easy, precise grooming.	Detail trimming, beard, stubble, moustache, sideburns, eyebrow.
Body Groomer Head	Unique skin protector system for close shaving at 0.5mm. Stretch skin for easier trimming.	Body and face grooming.

Instructions For Use

1.Power On/Off:

- Press the ON/OFF button. When the LED light activates, the trimmer head starts running.
- Press the ON/OFF button again to turn off the trimmer and stop the trimmer head running.

2.Removing and Attaching the Trimmer Head:

- Note: Do not apply excessive pressure as this damages the trimmer head and may cause injury.
- To Remove: Hold the trimmer with one hand and simply pull the head out of the body in the opposite direction (Figure 1).
- To Attach: Align the head with the trimmer body, and click it into place (Figure 2).

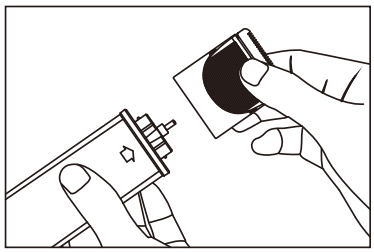


Figure 1

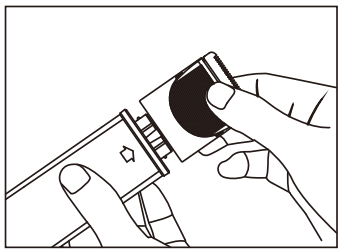


Figure 2

3.Assembly and Use of Guide Comb Attachment:

- Attaching the Comb: Align the guide comb with the trimmer head (Figure 3). Firmly push the comb downward with your palm until it's securely in place.
- Detaching the Comb: Gently press the end of the guide comb upward using your thumb. Continue pressing until the comb fully detaches and then remove it (Figure 3).

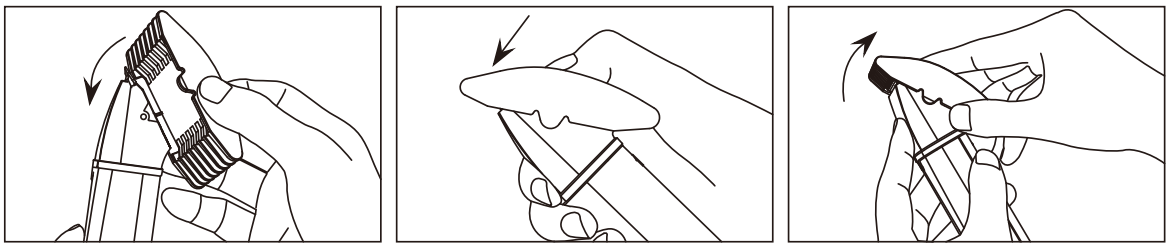


Figure 3

4.How to Charge

- Connect the provided USB cable directly to the device (Figure 4). Then plug the USB into a 5V1A USB adapter. The product must be charged via a laptop/ computer/power bank USB port. After charging remove the power plug from the USB outlet and then remove the USB out of the product.
  - Charge the product fully before you use it for the first time and after a long period of disuse.
  - Make sure the device is switched OFF before charging and no combs are attached.
  - While charging, the LED light will turn red, and it will change to green once charging is complete.
  - A full charge takes 2 hours, providing up to 90 minutes of operation. For optimal performance, it's best to use the device when fully charged.

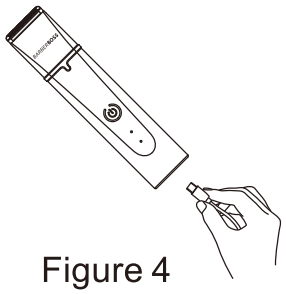


Figure 4

Tips

- For the best results, trim the hair when it is dry. Wet hair can clog the trimmer and result in uneven trimming.
- Begin with a longer guard attachment to avoid trimming too close to the skin initially. You can gradually move to shorter lengths as needed.
- For a smooth, irritation-free trim, use gentle, steady strokes without pressing too hard, and stretch the skin taut with your free hand, gently pulling and folding the ear away when trimming around it.

- When using the trimmer for sensitive areas, be gentle and avoid inserting the device too far. Use slow and steady motions, allowing the trimmer to cut the hairs without force. This helps prevent irritation and potential injuries.
- Regularly clean your trimmer with the provided cleaning brush to maintain performance and hygiene.
- For versatile grooming, use the trimmer on various areas including the beard, head, and body, ensuring to move the device against the direction of hair growth for a closer and smoother trim.

Cleaning & Maintenance

Please note: While this product is waterproof, we advise against leaving it submerged or exposed to water for extended durations. To maintain optimal performance and longevity, make sure that the product is thoroughly dried before its next use, and note that while both the guide comb and trimmer head can be rinsed under water for easy cleaning, it is crucial to ensure these parts are completely dry before reattaching or storing.

Cleaning

1.Before cleaning, ensure the hair trimmer is switched OFF and disconnected from any charging cables.
2.After each use, rinse the cutting blade with clean water as explained below and wipe the trimmer's body with a dry cloth, ensuring it remains moisture-free. Do not use solvents or abrasive cleaning agents.
3.For cleaning hair trapped in the cutting blade:

- Detach any combs and then the cutting blade itself.
- Utilise the brush provided to sweep away hair from the machine's head and the cutting blade (Figure 5).
- Rinse the blade under running water, then leave to dry before reattaching.
- Reattach the cutting blade to the trimmer, ensuring the locating bar aligns with the slot.

4.To maintain optimal blade performance, periodically apply the suggested lubricating oil.
5.Replace worn-out cutting blades or combs as needed.
6.Do not disassemble or modify the trimmer on your own. This could lead to product damage or personal harm. Should any repairs or professional maintenance be necessary, reach out to the manufacturer.

Maintenance

1.To ensure a long-lasting and effective performance, apply lubricating oil after each use by following these steps:

- Apply a thin layer of the provided lubricating oil evenly across the cutting blade, following the direction of the arrows.
- After waiting a few moments, activate the trimmer to allow the lubricating oil to thoroughly coat the cutting surfaces of the blade. (Figure 6)

2.Throughout its operation, frequently utilise the included brush to clear away any residual hair from the cutting blade. This routine maintenance promotes optimal performance and prolongs the product's lifespan.

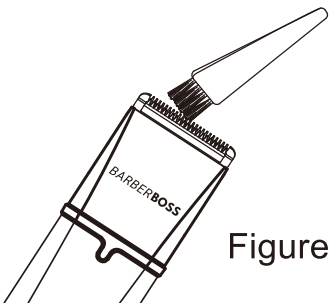


Figure 5



Figure 6

Precautions

Charging:

- Ensure the hair trimmer is powered off before connecting the charging cable. Avoid forcefully pulling on the power supply wire or the device.
- Always attach the power cord to the product first, then to the power outlet.
- Only use a charger rated at 5V 1A with either CCC or CQC certification.
- Prevent overcharging by unplugging the device once the designated charging time is reached.
- Always keep the product away from water sources while charging, and avoid charging it near baths, sinks, or any liquid containers.
- Do not charge on soft surfaces like beds and bedding, especially in enclosed spaces. Should the product overheat during charging, disconnect it immediately.
- Avoid charging in high-temperature areas or near open flames to mitigate fire risks.
- If the power cord becomes damaged, replace it using only compatible cords or components purchased directly from the manufacturer. Always use the model and specification of the charging cable provided by the original manufacturer.
- Do not use the device if either the battery or charging cable shows signs of damage.
- Charge, use and store the product between 4.44°C (40°F) and 35°C (95°F).

Usage:

- Always power off the device prior to cleaning or performing maintenance.
- Do not use the device if any of its components or accessories are damaged.
- If the device experiences any malfunction or damage, immediately power it off and avoid unauthorised disassembly.
- Do not open, modify, pierce, damage or dismantle the product unless you are removing the battery following our guidance under 'safe appliance disposal.

- While this product is waterproof, we advise against leaving it submerged or exposed to water for extended durations. Ensure that the product is thoroughly dried before its next use to maintain its optimal performance and longevity.
- We recommend avoiding storage in damp or humid areas, especially if the product has been in contact with water, as this could potentially lead to rust formation. Ensure the product is completely dry before storing to maintain its condition and functionality.

Safety:

- This appliance is not designed for use by individuals with physical, sensory, or mental disabilities and requires supervision by a responsible adult if used by any vulnerable individuals.
- For children above 8 years of age, supervision is recommended to ensure safe operation, as this appliance is not a toy. Always store the device out of reach of unsupervised children to prevent any accidental harm.
- Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Exercise caution around the sharp cutting blade.
- Exercise caution around the ears; a slip might result in injury. Ensure the sharp blade doesn't touch the ears. Pull the ear away gently while cutting around it.

Troubleshooting:

Question	Causes	Solutions
The appliance does not switch on	Low battery	Charge with 5VDC 1.0A, ensure the cable is inserted properly to both the appliance and USB port
The appliance is not cutting properly	Hair winding	Clean the blade and comb with the brush provided and swill under water
	Comb not inserted correctly	Detach the comb and reattach it following the instructions above
	Not cutting hairs	Ensure the product has a full charge for optimum performance, use the trimmer in all directions to get all hairs
Charge fault	Incorrect input voltage or damaged charger/USB charging cable	Ensure that the voltage matches 5VDC 1.0A or replace the USB charging cable
Cutting blade heating	Long-time continuous use	Drip lubricating oil into the cutting blade after the hair trimmer is powered off

Environmental Protection and Recycling

Safe Appliance Disposal

At the end of its working life, the battery must not be disposed of as urban waste. It must be taken to a special authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal. This enables the constituent materials to be recovered to obtain significant savings in energy and resources.

As mentioned, the built-in rechargeable battery in this product contains substances that could be harmful to the environment. To ensure the responsible disposal and recycling of the device, please follow your country's rules for the separate collection of electrical products and batteries, or refer to the following steps:

1.Activate the device's power switch and let it run until it stops functioning, ensuring the battery is entirely drained.

2.Before disassembling the device and removing its battery, always ensure the device is powered off and disconnected from any power sources.



3.Once the battery has been extracted, never reconnect the hair trimmer to its charger. Additionally, be cautious to avoid causing a short circuit between the battery's positive and negative terminals.

4.Then follow local authority guidelines to dispose of the removed battery.

Accessories

Need replacement parts? Lost something? Accessories can be purchased via our website www.barberboss.co.uk/shop.

Customer Service

For assistance visit our website: www.barberboss.co.uk or email us at care@barberboss.co.uk. You can also call or WhatsApp us on 0800 612 6688. Or head to our YouTube for some helpful tips/guides www.youtube.com/@BarberBossUK.