

QR-7536

Welcome to BarberBoss and congratulations on your new purchase! Secure your peace of mind by activating your 12-month warranty and claiming an extra 6 months for free at www.barberboss.co.uk/barberboss-product-warranty. Beyond our warranty, you are also covered by your country's legal consumer rights, ensuring complete protection for your purchase.

Product Structure and Accessories

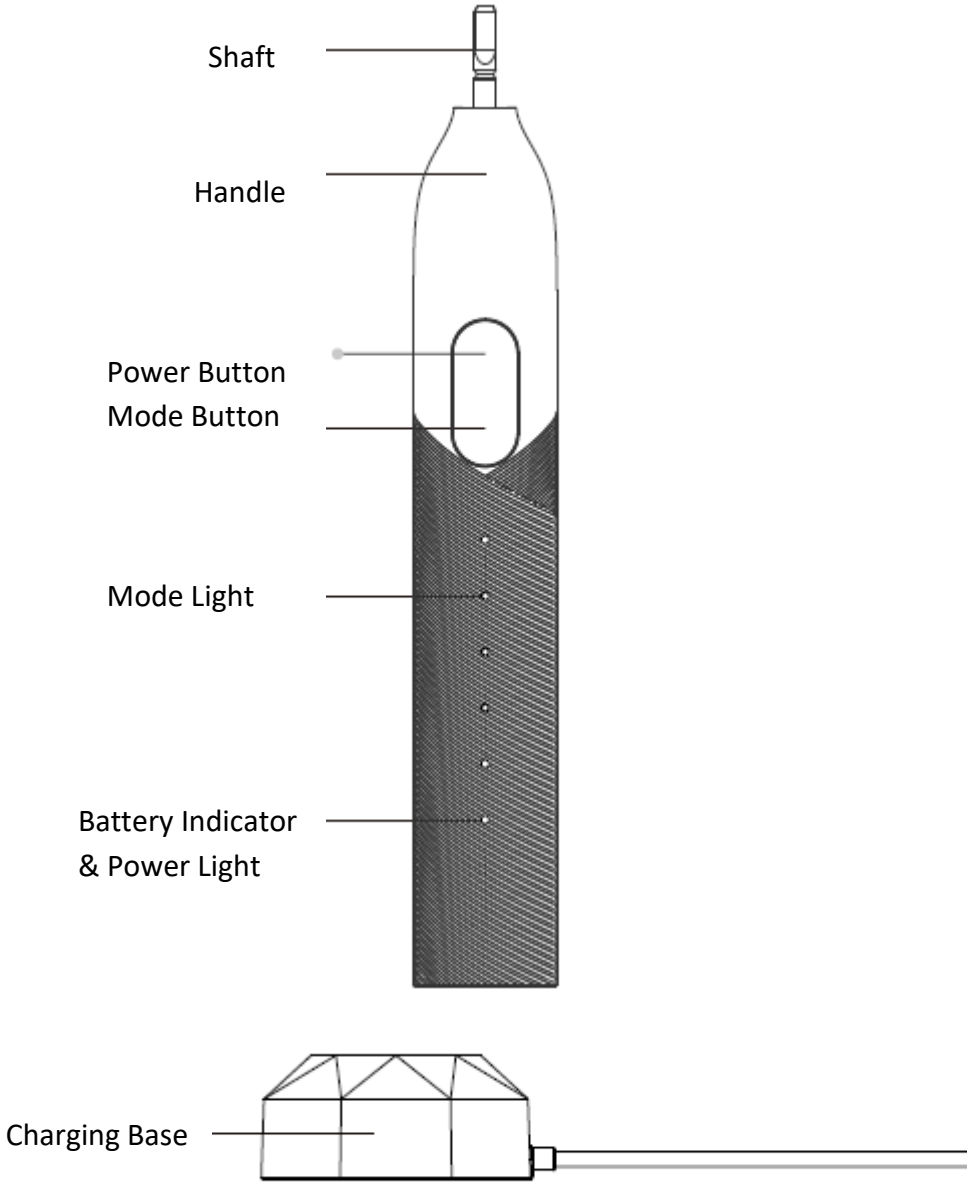

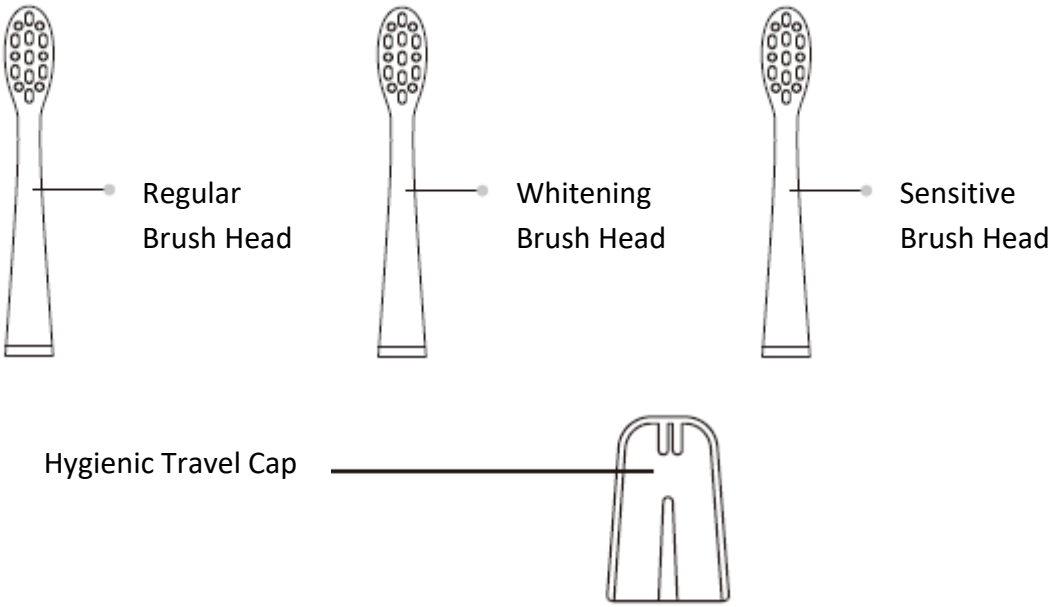

Product Details

Product Name	QR-7536 Sonic Toothbrush
Model Number	QR-7536
Charging Input	5VDC 0.5A
Battery	1200mAh Li-ion
Charging Time	10 Hours
Usage Time	Up to 60 days


What's Included

Toothbrush	x1
Regular Brush Head	x2
Whitening Brush Head	x2
Sensitive Brush Head	x2
Hygienic Travel Cap	x6
Charging Base	x1
Travel Case	x1

Brush Head: Function and Usage

	Usage	Recommended Replacement Interval
Regular Brush Heads	Medium hardness, W-shaped design, ideal for daily cleaning for most users.	Every 3 months
Whitening Brush Heads	Charcoal-infused, soft bristles with tapered tips for effective interdental cleaning and whitening.	Every 3 months
Sensitive Brush Heads	Extra-soft bristles, perfect for gentle care of sensitive teeth and gums.	Every 3 months

Brushing Modes

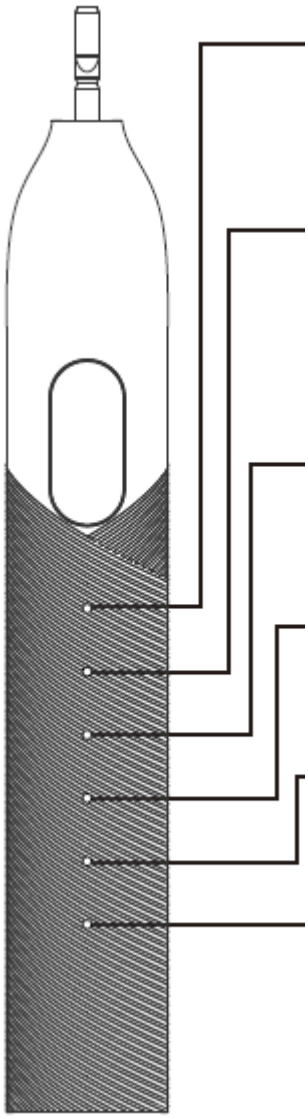

Sensitive mode 2 mins
Extra gentle mode for sensitive teeth and gums. Recommended mode for beginners.

Clean mode 2 mins
Designed to target and remove plaque for a deep, thorough clean (default mode).

Gum Care mode 2 mins
Long amplitude vibration for gum massage.

White mode 2.5 mins
Sonic vibration with alternate amplitudes to remove plaques and stains and whiten teeth.

Polish mode 2 mins
Strong vibration for teeth whitening and polish.

Charging Light

Instructions For Use


1. How to charge:

To charge your toothbrush, plug the charging cord into a 5V USB adapter and place the handle on the charging base. Ensure the toothbrush is switched off before charging. The charging light will flash while charging and remain on for 30 seconds once fully charged.

- Initial Use: Fully charge the toothbrush before first use and after long periods of disuse.
- Low Power Indicator: When the battery drops below 3.5V, the motor will vibrate three times, indicating it is time to charge. The device will stop working if the battery falls below 3.0V.
- Charging Time: A full charge takes about 10 hours, providing up to 60 days of use. For best results, use the device when it is fully charged. If the product is not in use for an extended period, be sure to charge it every 6 months to maintain battery health.

2. How to use:


- Prepare the Brush: Wet the bristles and apply a small amount of toothpaste.

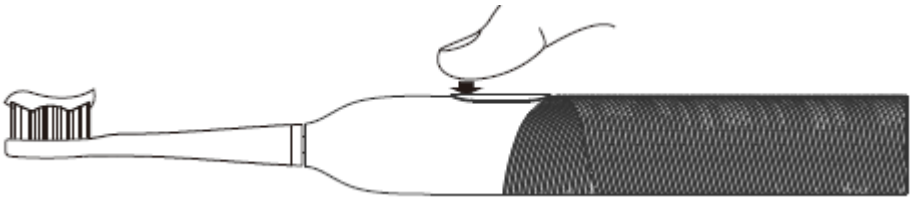


- Position the Brush: Gently place the toothbrush bristles against your teeth without applying too much pressure.



- Power On: Press the power button to turn on the toothbrush, then use the mode button to select your preferred brushing mode. Move the brush slowly across different areas of your teeth for effective cleaning. A 30-second quad pacer will remind you to switch to the next section of your mouth, ensuring thorough coverage.

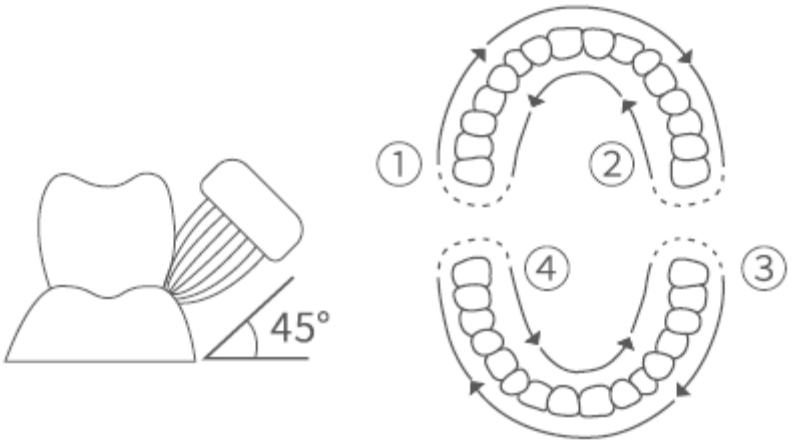

- Rinse your brush head and handle with water after each use. Wipe the entire surface of the handle with a soft tissue or cloth.

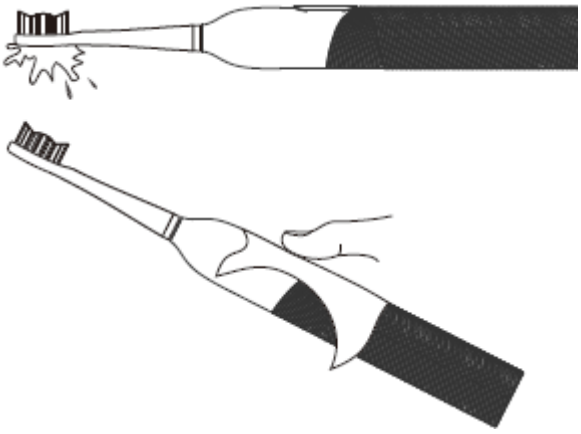


3. Smart Timer:
   The toothbrush features a QuadPacer that briefly changes vibration every 30 seconds to remind you to move to the next section of your teeth, ensuring a thorough clean. It is equipped with a 2-minute smart timer and will automatically turn off after the recommended brushing time. If you wish to stop brushing before the timer ends, simply press the power button to turn it off manually.

4. Pressure Sensor:
   This electric toothbrush is equipped with a smart pressure sensor that automatically adjusts its vibration to protect your gums and teeth:


- **No Pressure**: When no or low pressure is detected, the toothbrush operates with a light vibration.
- **Optimal Pressure**: When the brush head senses brushing pressure, it automatically provides a steady vibration for effective cleaning.
- **High Pressure**: If you press too hard, the toothbrush activates a continuous vibration alert, signalling you to reduce the pressure and protect your gums.

5. How to install the brush head:

- Align the brush head so the bristles face the same direction as the front of the handle.
- Firmly press the brush head down onto the metal shaft until fully attached.
- It's normal to see a small gap (0.3-1.2mm) between the brush head and the handle.

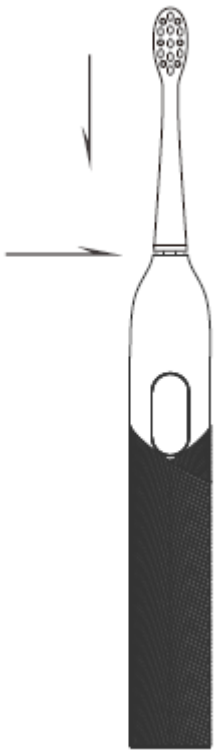

*Weekly Maintenance: Rinse the top of the brush handle and the bottom of the brush head once a week to maintain cleanliness and performance.

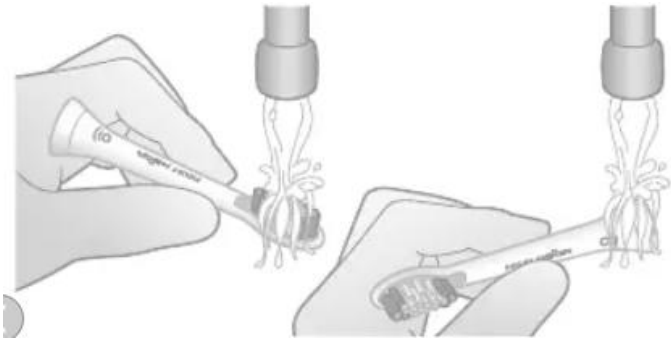

6. Brush head replacement reminder:
   The toothbrush handle monitors the total brushing time with each brush head. As a reminder, the fifth mode light (Polish) will flash rapidly at 0.25-second intervals when it's time to replace the brush head.

Resetting the Brush Head Usage Counter: After replacing the brush head, you can reset the usage counter by following these steps:

1. Ensure the toothbrush is powered off.
2. Press and hold the power button for 5 seconds.
3. All indicator lights will flash three times to confirm the reset is complete.

Cleaning & Maintenance

Please note: Although this appliance is waterproof (IPX7 Rating), do not use it while warm/hot bathing or shower. It cannot be effectively protected from hot water or steam. To maintain optimal performance and longevity, make sure that the product is cleaned and thoroughly dried before its next use.

- Before cleaning, make sure the device is turned OFF and unplugged from the charger.
- After each use, remove the brush head and rinse it thoroughly. Rinse the handle, especially the brush head connection, at least once a week to maintain cleanliness.

Precautions

Charging:

- Ensure the device is powered off before unplugging it from the charger. Avoid forcefully pulling on the power supply wire or the device.
- If the USB cable accidentally falls into water, unplug the adapter first before retrieving the product.
- Do not unplug the adapter with wet hands.
- Do not plug this device into a voltage system that is different from the voltage system specific on the device or charger.
- Prevent overcharging by unplugging the device once the designated charging time is reached.
- Always keep the product away from water sources while charging, and avoid charging it near baths, sinks, or any liquid containers.

- Ensure the product is completely dry before charging.
- Do not charge on soft surfaces like beds and bedding, especially in enclosed spaces. Should the product overheat during charging, disconnect it immediately.
- Avoid charging in high-temperature areas or near open flames to mitigate fire risks.
- Avoid damaging, breaking, or modifying the USB cable. Do not stretch, bend or twist the USB cable excessively, and do not place heavy objects on it or trap it between objects.
- If the power cord becomes damaged, replace it using only compatible cords or components purchased directly from BarberBoss Website.

Usage:

- This product is designed solely for cleaning your teeth, gums and tongue. Use this product only for its intended use as described in this user manual or as recommended by your dental professional.
- This brush is safe to use on braces (brush heads wear out sooner when used on braces) and dental restorations (fillings, crowns, veneers).
- This appliance is a personal care device and is not intended for use on multiple patients in a dental practice or institution.
- Do not use the product if you lose the brush head.
- Do not use other brush heads than the ones recommended by BarberBoss.
- Do not press the brush head too firmly against your teeth or gums, or it may cause injury.
- People suffering from tooth or gum pain may not be able to use the appliance and should consult their dentist before use.
- Do not insert any foreign object into any opening on the product.
- Do not use the product outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use iodine, saline (salt solution), or water insoluble concentrated essential oils in this product. Use of these can reduce performance and shorten lifespan of the product. Use of these products may void warranty.
- Remove any oral jewellery prior to use of this product.
- Always power off the device prior to cleaning or performing maintenance.
- If the device experiences any malfunction or damage, immediately power it off and avoid unauthorised disassembly.
- This device is waterproof (IPX7 Rating) however, do not immerse the product in water to prevent malfunctioning, fire, electric shock or explosion.
- Ensure the product is completely dry before storing to maintain its condition and functionality.
- We recommend storing the product in a cool, dry place, away from damp, humid environments and high temperatures. Avoid exposing the product to fire or extreme heat. For safety, always charge and store the device away from heat sources, open flames, and direct sunlight.

Safety:

- The appliance can be used by children above 8 years of age however supervision is recommended to ensure safe operation. Always store the device out of reach of unsupervised children to prevent any accidental harm.

- Children should not play with the device as this appliance is not a toy.
- Keep the appliance, cable, brush heads, hygienic travel cap out of reach of children under 8 years. The accessory is small enough to be swallowed and can be logged in the throat.
- Do not clean any parts (brush head, travel cap, handle, charger, or travel case) in the dishwasher, or use isopropyl alcohol, vinegar, bleach, or household cleaners, as these may cause damage or discoloration. Avoid using essential oils on the brush heads to prevent damage.

Troubleshooting

Question	Causes	Solutions
No response when powered on	Low battery	Connect to adapter charger to charge
Indicator light not showing	Low battery	Recharge the device
No response when charging	Bad charging cable interface	Replace charging cable
Lasts only few minutes even after full charge	Dead battery	Contact service centre for support
	Insufficient charging time	Charge the unit for at least 10 hours
	Charging cord damaged	Try charging the device with new charging cable
	Adapter broken	Try the new adapter

Environmental Protection and Recycling

Safe Appliance Disposal

At the end of its working life, the battery must not be disposed of as urban waste. It must be taken to a special authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal. This enables the constituent materials to be recovered to obtain significant savings in energy and resources.

As mentioned, the built-in rechargeable battery in this product contains substances that could be harmful to the environment. To ensure the responsible disposal and recycling of the device, please follow your country's rules for the separate collection of electrical products and batteries, or refer to the following steps:

1. Activate the device's power switch and let it run until it stops functioning, ensuring the battery is entirely drained.
2. Before disassembling the device and removing its battery, always ensure the device is powered off and disconnected from any power sources.
3. Once the battery has been extracted, never reconnect the device to its charger. Additionally, be cautious to avoid causing a short circuit between the battery's positive and negative terminals.
4. Then follow local authority guidelines to dispose of the removed battery.



Accessories

Need replacement parts? Lost something? Accessories can be purchased via our website www.barberboss.co.uk/shop.

Customer Service

For assistance visit our website: www.barberboss.co.uk or email us at care@barberboss.co.uk. You can also call or WhatsApp us on 0800 612 6688 (Or +44800 612 6688 If contact from outside the UK). Alternatively, head to our YouTube for some helpful tips/guides www.youtube.com/@BarberBossUK.

