

B200 SE Multiple Spot Cleaner

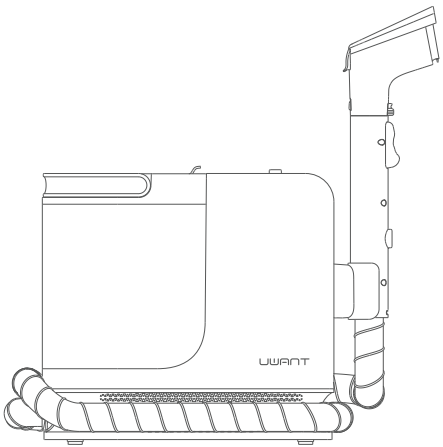

Please read this manual carefully before use and keep it properly for future reference.

UWANT

EN User manual ---------- 01

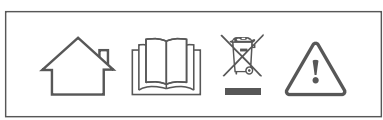

⚠ **Before using this product, please read all safety precautions. Install the machine step by step according to the instructions. Any operation that deviates from the instructions may result in product damage or serious personal injury. This product is intended for use in regular household settings and is not suitable for industrial or outdoor use. When using electrical equipment, basic safety measures should be followed, including the following:**


- The product is not suitable for individuals with physical, sensory, or intellectual impairments, or for individuals lacking experience and common sense (including children) unless they are supervised or guided by a guardian to ensure safe use of the product.
- Do not immerse the product in water or any other liquids.
- Do not touch the plug or any live insulated parts of the product with wet hands to avoid the risk of electric shock.
- If the plug or wires are damaged, stop using the product and immediately contact our professional service personnel for replacement to prevent harm.
- Keep long hair, loose clothing, fingers, and other body parts away from the air passage and moving parts of the product. Do not aim the vacuum nozzle or accessory brushes at your eyes, ears, or put them into your mouth.
- Do not insert metal shavings, needles, wires, or any other objects into the gaps of the product to avoid electric shock or injury. Apart from professional technicians, no one else should disassemble, repair, or modify the product.
- Unplug the product when not in use to avoid electric leakage, fire, malfunctions, etc.
- If any abnormalities are found during the use of the product, immediately disconnect the power and contact our after-sales service for assistance.
- After using the product, promptly clean the wastewater tank,

maintain unobstructed airflow paths, and prevent blockage that may reduce suction power and cause motor overheating, there by affecting the product's lifespan.


- After using the machine, store it in a dry place. Do not fill the water tank to avoid affecting the overall lifespan of the machine.
- This product is suitable for localized cleaning of various fabric household products such as sofas, mattresses, carpets, etc. It may not achieve optimal results when used on other surfaces for cleaning.
- During use, add the cleaning and fragrance liquid provided or specified by our company in the designated proportions to prevent excessive foaming, which may penetrate into the motor and reduce its lifespan.
- Do not shake the machine from side to side while it is running to prevent wastewater from entering the motor and reducing its lifespan.
- A small amount of water remaining inside the machine is normal.
- After turning off the water spray button, there may be a delay in the water spray turning off, which is a normal phenomenon.
- Do not place the brush head in a bucket or on a surface with a large amount of accumulated water, as it may cause over-suction and lead to water leakage at the bottom of the machine.
- It is recommended to empty the wastewater tank and organize it after each use. If the frequency of use is low, clean and dry the water tank and wastewater tank before storage to prevent bacterial growth and odor in the water.
- All technical and data information provided in this product manual is obtained by our company or designated third-party testing agencies. The final interpretation right belongs to our company.


- Product component names

⚠ Note: The pictures in the instruction manual are for reference only. The actual product in the packaging box shall prevail.

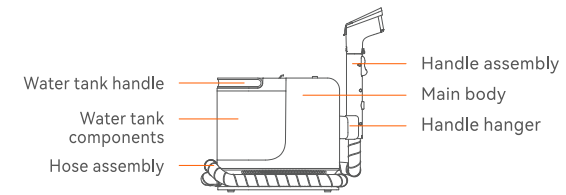

①Host

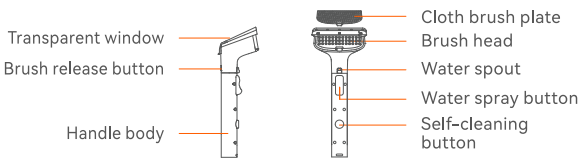



②Handle and other components

⚠ Notice:


- It is recommended to clean local stains on sofas, mattresses, carpets, etc.
- If you need to remove the brush head, make sure the host is turned off, press the water spray button (or self-cleaning button) to release the internal water pressure, and then press the brush head release button on the handle to remove the brush head.

- Brush head installation




- Align the brush head with the handle and insert it into place. When you hear a click, the brushhead is assembled into place. Pull the brush head in the opposite direction and it will not release.

- Replace the brush plate




- Move the buckle position of the bristles brush plate according to the picture, take out the bristles brush plate , and replace the cloth brush plate (the cloth brush plate is mainly used for cleaning hard surface objects).

- Handle hanger installation




- Insert the handle hanger into the machine and press the handle hanger downward. When a click sound is heard, the assembly is in place.

- Wire rack installation




- Insert the wire hanger into the whole machine, and then press the wire hanger downwards until you hear a click, indicating that the assembly is in place.

- Water tank filling, installation and removal

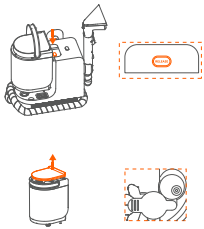

- First press the water tank release button and lift the water tank handle at the same time to lift the water tank;
- Remove the water tank cover, move the clean water tank plug to one side, and inject clean water(Please do not add water over 60°C to avoid machine damage). The water level should not exceed the MAX line;


- Water tank filling, installation and removal




- Install the water tank onto the machine and press the water tank down until you hear a click, indicating that the water tank is installed in place.

⚠ Note: If you add cleaning solution, you need to add it according to the standard proportion to avoid adding too much and causing a lot of foam.

- Start the machine

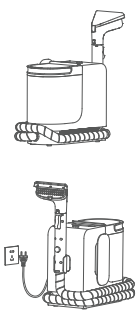


- Please confirm that the water tank components are installed in place, that there is an appropriate amount of water in the clean water tank, and that the brush head is assembled in place;
- Take out the power cord from the hanging rack and insert the plug into the socket. At this time, the machine is in standby mode;
- Press the power button and the machine starts running;
- When starting to clean, hold the brush head close to the surface to

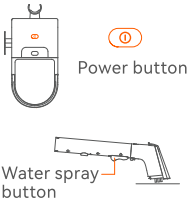

be cleaned, press and hold the water spray button to spray the area to be cleaned, and repeatedly clean and suction until it is clean. Please make sure that the suction port on the brush head fully fits the cleaning surface when suctioning to achieve the best cleaning effect.

IV Maintenance

- Machine self-cleaning

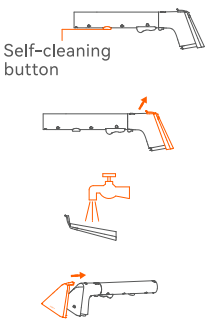


- Make sure there is an appropriate amount of clean water in the clean water tank, press and hold the self-cleaning button to self-clean the brush head and hose;
- Push the transparent cover handle in the direction of the arrow to remove the transparent window;
- If there are stains remaining on the inner surface of the transparent window, you can clean it under the faucet;
- After cleaning and drying the transparent cap, put the transparent cap back on the brush head.

- Wastewater tank cleaning




- After using the machine, press the water tank release button and lift the water tank handle at the same time to lift the water tank;
- Put the water tank into the sink, use your fingers to move the water tank cover and remove the water tank cover;

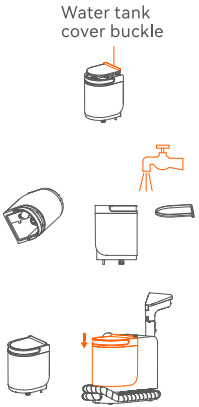


- Hold the handle of the water tank with one hand, lift the bottom of the water tank with the other hand, and pour out the wastewater;
- If the inner wall of the wastewater tank and the water tank cover are dirty, use the faucet to flush the wastewater tank and the water tank cover respectively until they are rinsed clean;
- After the water tank and water tank cover are washed and dried, put the water tank cover back into the water tank. Do not miss or twist the sealing ring of the water tank cover (missing or twisting the sealing ring will lead to the inability to absorb water normally);
- Install the water tank vertically into the main unit, press the water tank downwards and hear a click, indicating that the water tank is installed in place.

⚠ Note: Before cleaning the wastewater tank, unplug the power cord and let the machine stop working.

- Storage

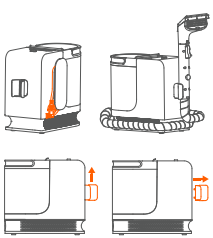

- After use, wrap the power cord around the hanging rack to complete the storage of the power cord;
- Wrap the hose, place the handle assembly in the handle hanger position, and store it in a ventilated and dry place;
- If it is not used for a long time, you can remove the handle hanger and wire hanger, first move the handle hanger upward, then move the



handle hanger to the right, then remove the handle hanger and store it in a ventilated and dry place;

- First move the wire hanging rack upward, then move the wire hanging rack to the right to remove the wire hanging rack and store it in a ventilated and dry place.

⚠ Note: If the machine will not be used for a long time, it is recommended to disassemble the accessories and store them in a ventilated and dry place.

V Failure analysis


Before contacting the service department, please check the following points:

Common problem	Possible Causes	Solution
The suction power of the brush head is reduced	Wastewater tank full	Please dump the wastewater in the wastewater tank
	The water tank cover is not installed in place or the sealing ring of the water tank cover is missing or misplaced.	Please check whether the water tank cover is installed in place and whether the sealing ring of the water tank cover is missing or misplaced.
	The air inlet of the brush head is blocked	Please check whether the air inlet is blocked and clean it
No water comes out from the water spout	Water tank is short of water	Please add water
	The water tank is not installed properly	Press down on the top of the water tank to install the water tank in place (see page 4 for details on water tank filling, installation and removal steps)
	The water filling plug is not installed in place	Please install the water filling plug in place
	Water spout blocked	Please contact the after-sales center
Water leakage from pipe or machine	Missing or damaged waterway seals	Please contact the after-sales center

Water tank leaking	Missing waterway seal	Please contact the after-sales center
	Water tank seal is not installed properly or is twisted	Please check whether the water tank sealing ring is installed in place (see the installation and removal steps of the water tank for details)
	Add water beyond the MAX line	The water level should be lower than the MAX line

If there are other faults, special tools are required, so you must go to the designated maintenance point for repair and replacement.

VI Circuit schematic

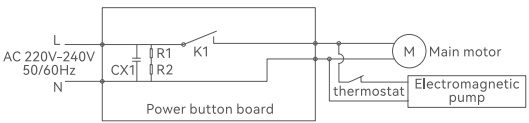

VII Product spec

Product Name	Product Model	Rated Voltage	Rated Frequent	Rated Power
Multiple spot cleaner	B200 SE	220-240V	50/60Hz	450W

VIII Name and Content of Hazardous Substances

Part name	Hazardous substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Plastic components	○	○	○	○	○	○
Hardware components	○	○	○	○	○	○
Motor components	X	○	○	○	○	○
Water pump components	X	○	○	○	○	○
PCB components	○	○	○	○	○	○
Water pump components	X	○	○	○	○	○
 Sign of Restricted Use of Hazardous Substances	Environmentally friendly use period of 10 years: It means that the harmful substances contained in this product will not leak or mutate, and the user's normal use of this product under the conditions described in the product manual will not cause serious pollution to the environment or serious damage to personal property; Arrow recycling mark: It means that this product can be recycled. After the use period has expired or it cannot work properly after repair, it should not be discarded casually. Please hand it over to regular recycling organizations or companies with qualifications to handle waste electrical and electronic products.					

This table is prepared in accordance with the provisions of SJ/11364:

O: Indicates that the content of hazardous substances in all homogeneous materials of this part is below the limit requirements specified in GB/T26572.

X: Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit requirements specified in GB/T26572.

Note: This product complies with RoHS environmental protection requirements; currently there is no mature technology in the world that can replace or reduce the lead content in electronics, ceramics and copper alloys. The environmentally friendly use period marked on this product refers that the harmful substances or elements contained in the product will not leak.

UWANT

Suzhou Jiandan Youwei Technology Co.,Ltd

Address: Room 1518,Building B Kaiping Business Center No.11666 East Taihu Avenue, EastTaihu Lake Eco-tourism Resort Wujiang District 215000 Suzhou City Jiangsu Province China.