Wireless 2D Barcode Scanner
Instructions

Model 179768



manhattan®
Life just got easier.™

manhattanproducts.com

Important: Read before use. • Importante: Leer antes de usar.

Copyright @ 2020
This manual is copyrighted, with all right reserved. Under the copyright laws, this manual may not, in whole or in part, be copied, photocopied, reproduced, translated or converted to any electronic medium or machine readable form without prior written consent of maker.

Note: Due to product improvement programs, specifications and features are subject to change without prior notice.

Table of Contents

Table of Contents **3**
Chapter 1 General Description **9**
Chapter 2 Introduction **11**
Chapter 3 Main Configuration **13**
A. Programming Flow chart *13*
B. Main Page of Configuration *14*
C. Imager Decoding Setting *17*
Chapter 4 Interface Selection **18**
Chapter 5 Reading Mode Selection **21**
Chapter 6 Reading Surface Selection **25**
A. Reading Surface *26*
Chapter 7 RS232 Parameters **27**
B. Setup Baud Rate *28*
B. Setup Data Bits *30*
C. Setup Stop Bits *31*
D. Setup Parity *32*
E. Handshaking *33*
Chapter 8 Keyboard Parameters **35**
A. Upper/Lower Case *36*
B. Caps Lock Detection *37*
C. Send Character by ALT Method *37*
D. Select Numeric Pad *38*
Chapter 9 Output Characters **39**
A. Select Terminator *40*
B. Time-out Between Characters *42*
Chapter 10 Symbology Selection **44**

A. 1D Symbology Selection 45
B. 2D Symbology Selection 55
Chapter 11 UPC/EAN/JAN.....61
A. Reading Type 62
B. Supplemental Setup..... 66
C. Check digit Transmission 68
Chapter 12 Code 39 72
A. Type of Code 73
B. Check Digit Transmission..... 74
C. Output Start/Stop Character 75
D. Decode Asterisk 75
E. Setup Code Length..... 76
Chapter 13 Code 128.....78
A. Reading Type 79
B. Check Digit Transmission..... 81
C. Append FNC2 82
D. Setup Code Length..... 83
Chapter 14 Interleaved 25 85
A. Check Digit Transmission..... 86
B. Setup Number of Characters 87
C. Brazillian Banking Code 88
D. Setup Code Length..... 89
Chapter 15 Industrial 25 91
A. Reading Type 92
B. Check Digit Transmission..... 93
C. Setup Code Length..... 94
Chapter 16 Matrix 25 96
A. Check Digit Transmission..... 97

B. Setup Code Length *98*
Chapter 17 Codabar/NW7 100
A. Start/Stop Characters *101*
B. Transmission Type of Start/Stop *102*
C. Setup Code Length *105*
Chapter 18 Code 93 107
A. Check Digit Transmission *108*
B. Setup Code Length *109*
Chapter 19 Code 11 111
A. Check Digit Transmission *112*
B. Setup Code Length *114*
Chapter 20 MSI/PLESSEY.....116
A. Check Digit Transmission *117*
B. Setup Code Length *118*
Chapter 21 Telepen.....120
A. Type of Code *121*
B. Check Digit Transmission *122*
C. Setup Code Length *123*
Chapter 22 GS1 DataBar 125
A. GS1 DataBar Omnidirectional *126*
B. GS1 DataBar Limited *128*
C. GS1 DataBar Expanded *130*
Chapter 23 Aztec.....131
A. Setup Code Length *132*
Chapter 24 Data Matrix 134
A. Setup Code Length *135*
B. Reading Type *137*
Chapter 25 PDF417 139

A. Setup Code Length..... 140
Chapter 26 Micro PDF417 (Optional) 142
A. Setup Code Length..... 143
Chapter 27 QR Code.....145
A. Setup Code Length..... 146
A. Reading Type..... 148
Chapter 28 Micro QR Code.....150
A. Setup Code Length..... 151
Chapter 29 Han Xin Code (Optional) 153
A. Setup Code Length..... 154
Chapter 30 Grid Matrix (Optional) 156
A. Setup Code Length..... 157
Chapter 31 Language Selection 159
Chapter 32 Bar Code ID.....166
A. Identifier Format 167
B. User Define Code ID..... 168
Chapter 33 Accuracy 185
Chapter 34 Beep 187
A. Beep Tone..... 188
B. Beep Duration..... 189
C. Silent Time Between Beeps..... 190
D. Beep Options 191
Chapter 35 Sensitivity of Continuous Reading ...193
A. Quick Setting 194
B. Avoid Same Code Double Reading..... 195
C. Same Code Delay Interval..... 196
Chapter 36 Indicator/Aimer/Illumination 198
A. Indicator 199

B. Aimer *199*
C. Illumination *200*
D. Automatic Illumination Brightness *201*
E. Illumination Brightness *202*
F. Indicator After Good Read *203*
G. Indicator Flashing *204*
H. Illumination Flashing After Good Read *205*
I. Aimer Always On *206*
Chapter 37 Image Type 207
J. Inversed Image *208*
K. Mirrored Image *209*
Chapter 38 Miscellaneous 210
A. Autosense Sensitivity *211*
B. Reverse Output Characters *212*
C. Power Saving Mode *213*
D. Time to Enter Power Saving *213*
E. Output Non-Printable Chars *214*
Chapter 39 Multi-Byte Character Output 215
A. Codepages *216*
Chapter 40 Bluetooth (For BT Scanner) 219
A. Set BT Parameter Default *220*
B. Bluetooth Profile *220*
C. Out of Range *223*
D. Cradle ID Visibility *224*
E. Auto Reconnect *225*
F. Back to Range and Send Data *226*
G. Virtual Keyboard *227*
H. Sleep Mode *228*

I. Batch Mode *229*
J. Firmware Version *231*
K. MAC Address *232*
Chapter 41 Data Editing **233**
A. IDC Composite Code *234*
Chapter 42 Customer Define Strings **235**
A. Read Strings *236*
APPENDIX A: Default Parameters **240**
APPENDIX B: Code Identifiers **246**
APPENDIX C: Decimal Value Table **249**
APPENDIX D: ASCII Characters **250**
APPENDIX E: Numeric Keypad Table **265**

Chapter 1 General Description

Thank you for purchasing this barcode scanner with an advanced and versatile decoder. The decoder works with variety of barcode types, reading devices, and computer interfaces. It discriminates over twenty different symbologies automatically.

This menu provides an easy way to configure the decoding options and interface selections by scanning bar codes listed in the menu.

FCC Approval

This device had been tested in accordance with the procedures and in compliance with Part 15 Subpart B of FCC Rules and keeps all requirements, according ANSI C63.4 & FCC Part 15 B Regulation and CISPR22 Class B.

CE Standards

The CE mark as shown here indicates this product had been tested in accordance with the procedures given in European Council Directive.

LEGISLATION AND WEEE SYMBOL

This marking shown on the product or its literature, indicates that it should not be disposed with other households wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable re-use of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase.

Chapter 2 Introduction

This document provides an easy way to program the decoding options and interface selections by scanning bar codes listed in this guide.

Important Notice

1. This document is in A6 size. Please check your printing setting before printing it out.

2. When printing barcodes for programming, the use of a high-resolution laser printer is strongly suggested for the best scan result.

3. The settings shall be updated periodically without prior notice. For the latest version, please contact your authorized distributor.

Factory Default Settings

The factory default settings are shown with **< >** and bold in the following sections.
By scanning “Set All Defaults” label, the settings will go back to the factory default settings which are shown as Appendix A.


Settings and Programming

Scan a series of selected barcode patches in this manual to affect setup and programming of 2D Image Reader. Decoding options and interface protocols can be tailored to a specific application.

Note: It may need to hide adjacent code patches with hand when doing programming scanning.

Chapter 3 Main Configuration

A. PROGRAMMING FLOW CHART

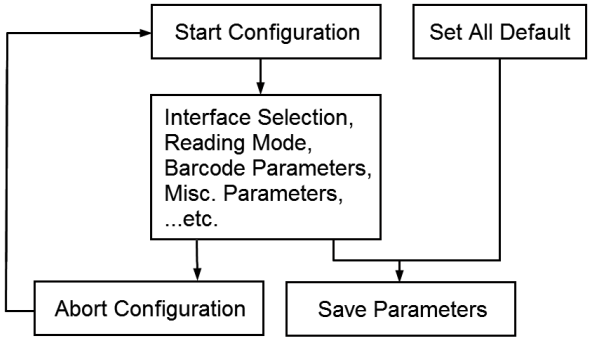

The programming flow is:

1. Scan **"Start Configuration**" to enter programming status.
2. Looping: Scan all necessary setting parameters that meet your application.
3. Scan **"Save Parameters"** to permanently save the programmed settings.
4. To exit programming status without saving the settings, scan "**Abort Configuration**".
5. To set all settings back default, scan "**Set All Default**" and "**Save Parameters**".

B. MAIN PAGE OF CONFIGURATION

Start Configuration

To enter program status, scan “Start Configuration”.

Start Configuration



%$+/3

Save Parameters

All settings will be saved and taken effect immediately. The scanner exits programming status.

Save Parameters



%$+/0

Abort Configuration

To terminate current programming status without saving the settings, scan “Abort Configuration”.

Abort Configuration



%$+/6

Set All Default

Restore factory-configured default (listed in Appendix A) by scanning “Set All Default” followed by “Save Parameters”.

Set All Default



%$+/2

Version Information

Scan this barcode without general programming procedure to display decoder version and date code.

Version Information



%$+/5

C. IMAGER DECODING SETTING

<Standard 1D & 2D Barcodes>



1D Barcodes Only



2D Barcodes Only



Chapter 4 Interface Selection

RS232 Mode



USB Mode



Virtual COM Mode



<USB HID Keyboard OFF>



USB HID Keyboard ON



Chapter 5 Reading Mode Selection

Good Read OFF

Feature: When press the trigger button, the illumination light turns on to read barcode. When the scanner reads barcode (good read), the illumination light turns off.
a. If a barcode is read, the illumination light turns off immediately.
b. If no barcode is read within a certain period, the illumination light turns off.

Trigger ON/OFF

Feature: Trigger to turn on illumination light, release to turn off light.
Normal Status: The illumination light is normally off. When press and hold the trigger button, the light turns on to read barcodes.
a. If a barcode is read, the illumination light turns off immediately.
b. If no barcode is read and the trigger button is released, the illumination light turns off.

Flash/Trigger OFF

Feature: The illumination light is flashing.
Normal Status: The illumination light always keeps flashing for reading barcodes.
a. If a barcode is read, the illumination light turns solid on for a period for another reading.
b. If no barcode is read within the period, the illumination light returns flashing.
c. When press the trigger button, the illumination light turns off. Press the trigger again, the light returns flashing.

Flash/Auto Power ON

Feature: The illumination light is flashing. It is always auto powered on to flash.
Normal Status: The illumination light always keeps flashing.
a. If a barcode is read, the illumination light turns solid on for a period for another reading.
b. If no barcode is read within the period, the light returns flashing.
c. The trigger button is disabled.

Auto Sense

Feature: Automatically detects the existing of goods.
Normal Status: The illumination light is normally off. It will switch on the illumination to decode when detects a goods in front of it under normal light environment.
a. When a barcode is detected in front of scanner, the illumination light turns on for a period for read barcodes.
b. If a barcode is read within the period, the illumination light turns off immediately
c. If no barcode is read within the period, the light turns off.
d. If pressing the trigger button, the light turns on immediately for a period for read barcodes.

Auto Sense/Aimer Detection

Feature: Automatically detects the existing of goods by Aimer.
Normal Status: The illumination light is normally off, but the Aimer keeps flushing for barcode detection under dimming or extremely low light environment.
a. When a barcode is detected in front of scanner, the illumination light turns on for a period for read barcodes.
b. If a barcode is read within the period, the illumination light turns off immediately
c. If no barcode is read within the period, the light turns off.
d. If pressing the trigger button, the light turns on immediately for a period for read barcodes.

Good Read OFF
(Default for HandHeld Models)
(Inapplicable to AutoSense Models)



%0271

Trigger ON/OFF
(Inapplicable to AutoSense Models)



%0270

Flash/Trigger OFF



%0274

Flash/Auto Power On


%0276

Auto Sense
(Default for AutoSense Models)


%09F8

Auto Sense/Aimer Detection


%09FC

Chapter 6 Reading Surface Selection

A. READING SURFACE

<General>



Screen



Mixed



Chapter 7 RS232 Parameters

B. SETUP BAUD RATE

9600



19200



38400



57600


%0Y78

<115200>


%0Y79

B. SETUP DATA BITS

7 Data Bits



<8 Data Bits>

0



C. SETUP STOP BITS

<1 Bit>



2 Bits



D. SETUP PARITY

<None>


%0YN7

Even


%0YN2

Odd


%0YN3

E. HANDSHAKING

RTS/CTS Enable



%0188

<RTS/CTS Disable>



%0180

ACK/NAK Enable


%0144

<ACK/NAK Disable>


%0140

XON/XOFF Enable


%03K4

<XON/XOFF Disable>


%03K0

Chapter 8 Keyboard Parameters

A. UPPER/LOWER CASE

<Normal>


%0330

Upper Case


%0331

Lower Case


%0332

B. CAPS LOCK DETECTION

Enable


%0X88

<Disable>


%0X80

C. SEND CHARACTER BY ALT METHOD

Enable


%03O8

<Disable>


%03O0

D. SELECT NUMERIC PAD

ON



<OFF>



Chapter 9 Output Characters

A. SELECT TERMINATOR

<CR+LF>



%7S2+

None



%7S7+

CR



%7S0+

LF



Space



HT (TAB)




STX-ETX




B. TIME-OUT BETWEEN CHARACTERS

<0 ms>



5 ms



10 ms



25 ms



50 ms


%0074

100 ms


%0075

200 ms


%0076

300 ms


%0077

Chapter 10 Symbology Selection

A. 1D SYMBOLOGY SELECTION

<UPC-A ON>



%0A44

UPC-A OFF



%0A40

<UPC-E ON>


%0BO8

UPC-E OFF


%0BO0

<EAN-13/JAN-13/ISBN-13 ON>


%0A22

EAN-13/JAN-13/ISBN-13 OFF


%0A20

<EAN-8/JAN-8 ON>


%0A11

EAN-8/JAN-8 OFF


%0A10

<CODE 39 ON>


%0EO8

CODE 39 OFF


%0EO0

<CODE 128 ON>



CODE 128 OFF



<CODABAR/NW7 ON>



CODABAR/NW7 OFF



<Interleaved 25 ON>



Interleaved 25 OFF



Industrial 25 ON



<Industrial 25 OFF>



Matrix 25 ON



<Matrix 25 OFF>



CODE 93 ON



<CODE 93 OFF>



CODE 11 ON


%0LO8

<CODE 11 OFF>


%0LO0

China Post ON


%0MO8

<China Post OFF>


%0MO0

MSI/PLESSEY ON


%0NO8

<MSI/PLESSEY OFF>


%0NO0

Telepen ON


%0TO8

<Telepen OFF>


%0TO0

GS1 DataBar Omnidirectional ON



<GS1 DataBar Omnidirectional OFF>



GS1 DataBar Limited ON



<GS1 DataBar Limited OFF>



GS1 DataBar Expanded ON



<GS1 DataBar Expanded OFF>




B. 2D SYMBOLOGY SELECTION

Select All Bar Codes




%1A/+


Aztec ON




<Aztec OFF>




<Data Matrix ON>



Data Matrix OFF



MicroPDF417 ON (Optional)




%%01D

<MicroPDF417 OFF>




%%02D

<PDF417 ON>




PDF417 OFF




<QR Code ON>



QR Code OFF




Micro QR Code ON




<Micro QR OFF>




Han Xin Code ON (Optional)



<Han Xin Code OFF>



Grid Matrix Code ON (Optional)



<Grid Matrix Code OFF>



Chapter 11 UPC/EAN/JAN

A. READING TYPE

UPCA=EAN13 ON



<UPCA=EAN13 OFF>



ISBN-10 Enable



<ISBN-13 Enable>



ISSN Enable


%0B44

<ISSN Disable>


%0B40

Decode with Supplemental


%01O0

<Auto discriminate Supplemental>


%01O8

Expand UPC-E Enable


%0BH1

<Expand UPC-E Disable>


%0BH0

EAN8=EAN13 Enable


%0AO8

<EAN8=EAN13 Disable>


%0AO0

UCC Coupon Extended Code Enable


%0DI2

<UCC Coupon Extended Code Disable>


%0DI0

GTIN Format Enable


%0X44

<GTIN Format Disable>


%0X40

B. SUPPLEMENTAL SETUP

<Not Transmit>


%0B33

Transmit Supplemental 2 Digits


%0B31

Transmit Supplemental 5 Digits


%0B32

Transmit Supplemental 2&5 Digits


%0B30

C. CHECK DIGIT TRANSMISSION

<UPC-A Check Digit Transmission ON>



UPC-A Check Digit Transmission OFF



<UPC-E Check Digit Transmission ON >


%0BI2

UPC-E Check Digit Transmission OFF


%0BI0

<EAN-8 Check Digit Transmission ON>


%0A88

EAN-8 Check Digit Transmission OFF


%0A80

<EAN-13 Check Digit Transmission ON>



EAN-13 Check Digit Transmission OFF



ISSN Check Transmission ON



<ISSN Check Transmission OFF>


%0BK0

Chapter 12 Code 39

A. TYPE OF CODE

<Standard>



Full ASCII



<Italian Pharmacy/Code 32 OFF>



Italian Pharmacy/Code 32 ON



B. CHECK DIGIT TRANSMISSION

<Do Not Calculate Check Digit>



Calculate Check Digit & Transmit



Calculate Check Digit & Not Transmit



C. OUTPUT START/STOP CHARACTER

Enable


%0E44

<Disable>


%0E40

D. DECODE ASTERISK

Enable


%0E22

<Disable>


%0E20

E. SETUP CODE LENGTH

<Variable>


%4E1+

1. Fix Length 1st Set Begin


%4E00

2. Decimal Value
(Appendix C)

3. Fix Length 1st Set Complete


%4E01

1. Fix Length 2nd Set Begin


%4E00

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Set Complete


%4E02

1. Minimum Length Begin


%2+-/

2. Decimal Value
(Appendix C)


3. Minimum Length Complete


%2C0+


Chapter 13 Code 128

A. READING TYPE


UCC/EAN-128 Enable



<UCC/EAN-128 Disable>




Code ID]C1 Enable


%0F22

<Code ID]C1 Disable>


%0F20

Group Separators (GS) Enable


%0F11

<Group Separators (GS) Disable>


%0F10

B. CHECK DIGIT TRANSMISSION

<Do Not Calculate Check Digit>



Calculate Check Digit & Transmit




Calculate Check Digit & Not Transmit




C. APPEND FNC2

ON



%0F88

<OFF>



%0F80

D. SETUP CODE LENGTH

<Variable>



%4F1+

1. Fix Length 1st Set Begin



%4F00

2. Decimal Value
(Appendix C)

3. Fix Length 1st Set Complete


%4F01


1. Fix Length 2nd Set Begin



%4F00

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Set Complete



%4F02


1. Minimum Length Begin



%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete



%2C1+

Chapter 14 Interleaved 25

A. CHECK DIGIT TRANSMISSION

<Do Not Calculate Check Digit>



Calculate Check Digit & Transmit



Calculate Check Digit & Not Transmit



B. SETUP NUMBER OF CHARACTERS

<Even>



Odd



C. BRAZILLIAN BANKING CODE

<Disable>



Enable



D. SETUP CODE LENGTH

<Variable>


%4G1+

1. Fix Length 1st Begin


%4G00

2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete


%4G01

1. Fix Length 2nd Begin


%4G00

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete


%4G02

1. Minimum Length Begin


%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete


%2C2+

Chapter 15 Industrial 25

A. READING TYPE

IATA25 ENABLE



<IATA25 DISABLE>



B. CHECK DIGIT TRANSMISSION

<Do Not Calculate Check Digit>



Calculate Check Digit & Transmit



Calculate Check Digit & Not Transmit



C. SETUP CODE LENGTH

<Variable>



%4H1+

1. Fix Length 1st Begin


%4H00

2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete


%4H01

1. Fix Length 2nd Begin


%4H00

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete


%4H02

1. Minimum Length Begin


%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete


%2C3+

Chapter 16 Matrix 25

A. CHECK DIGIT TRANSMISSION

<Do Not Calculate Check Digit>



Calculate Check Digit & Transmit



Calculate Check Digit & Not Transmit



B. SETUP CODE LENGTH

<Variable>



1. Fix Length 1st Begin



2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete




1. Fix Length 2nd Begin



2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete



1. Minimum Length Begin



2. Decimal Value
(Appendix C)

3. Minimum Length Complete



Chapter 17 Codabar/NW7

A. START/STOP CHARACTERS

ON



%0JH1

<OFF>



%0JH0

B. TRANSMISSION TYPE OF START/STOP

<A/B/C/D Start>



%04VF

<A/B/C/D Stop>



%04FF

A Start



%04V1

A Stop



%04F1

B Start



%04V2

B Stop



%04F2

C Start



%04V4

C Stop



%04F4

D Start



%04V8

D Stop



%04F8

C. SETUP CODE LENGTH

<Variable>


%4J1+

1. Fix Length 1st Begin



%4J00

2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete



%4J01

1. Fix Length 2nd Begin


%4J00

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete


%4J02

1. Minimum Length Begin


%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete


%2C5+

Chapter 18 Code 93

A. CHECK DIGIT TRANSMISSION

Do Not Calculate Check Digit



<Calculate 2 Check Digits & Not Transmit>



B. SETUP CODE LENGTH

<Variable>


%4K1+

1. Fix Length 1st Begin


%4K00

2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete



%4K01

1 .Fix Length 2nd Begin


%4K00

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete


%4K02

1. Minimum Length Begin


%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete


%2C6+

Chapter 19 Code 11

A. CHECK DIGIT TRANSMISSION

<Do Not Calculate Check Digit>



Calculate 1 Check Digit & Transmit



Calculate 1 Check Digit & Not Transmit



Calculate 2 Check Digit & Transmit




Calculate 2 Check Digit & Not Transmit



B. SETUP CODE LENGTH

<Variable>



%4L1+

1. Fix Length 1st Begin


%4L00

2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete


%4L01

1. Fix Length 2nd Begin


%4L00

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete


%4L02

1. Minimum Length Begin


%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete


%2C7+

Chapter 20 MSI/PLESSEY

A. CHECK DIGIT TRANSMISSION

<Do Not Calculate Check Digit>



Calculate Check Digit & Transmit



Calculate Check Digit & Not Transmit



B. SETUP CODE LENGTH

<Variable>


%4N1+

1. Fix Length 1st Begin


%4N00

2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete



%4N01

1. Fix Length 2nd Begin


%4N00

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete


%4N02

1. Minimum Length Begin


%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete


%2C9+

Chapter 21 Telepen

A. TYPE OF CODE

<Full ASCII Mode>



Compressed Numeric Mode



B. CHECK DIGIT TRANSMISSION

<Do Not Calculate Check Digit>



Calculate Check Digit & Transmit



Calculate Check Digit & Not Transmit



C. SETUP CODE LENGTH

<Variable>


%4T1+

1. Fix Length 1st Begin


%4T00

2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete



%4T01

1. Fix Length 2nd Begin


%4T00

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete


%4T02

1. Minimum Length Begin


%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete


%2CF+

Chapter 22 GS1 DataBar

A. GS1 DATABAR OMNIDIRECTIONAL

<Transmit Check Digit>



Don't Transmit Check Digit



<Transmit Application ID>



Don't Transmit Application ID



<Transmit Symbology ID>



Don't Transmit Symbology ID



B. GS1 DATABAR LIMITED

<Transmit Check Digit>


%0VN7

Don't Transmit Check Digit


%0VN5

<Transmit Application ID>



Don't Transmit Application ID



<Transmit SymbologyID>



Don't Transmit Symbology ID



C. GS1 DATABAR EXPANDED

< Transmit Symbology ID>



Don't Transmit Symbology ID



Chapter 23 Aztec

A. SETUP CODE LENGTH

<Variable>


%%22+

1. Fix Length 1st Begin


%%22L

2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete


%%22Y

1. Fix Length 2nd Begin


%%22L

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete


%%22Z

1. Minimum Length Begin


%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete


%2CA+

Chapter 24 Data Matrix

A. SETUP CODE LENGTH

<Variable>


%%26+

1. Fix Length 1st Begin


%%26L

2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete


%%26Y

1. Fix Length 2nd Begin



%%26L

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete



%%26Z

1. Minimum Length Begin



%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete



%2CC+

B. READING TYPE

GS1-Data Matrix Enable



<GS1-Data Matrix Disable>



Code ID]d2 Enable



<Code ID]d2 Disable>



Group Separator (GS) Enable



<Group Separators (GS) Disable>



Chapter 25 PDF417

A. SETUP CODE LENGTH

<Variable>


%%2F+

1. Fix Length 1st Begin


%%2FL

2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete


%%2FY

1. Fix Length 2nd Begin


%%2FL

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete


%%2FZ

1. Mnimum Length Begin


%2+-/

2. Decimal Value
(Appendix C)

3. Mnimum Length Complete


%2CJ+

Chapter 26 Micro PDF417 (Optional)

A. SETUP CODE LENGTH

<Variable>


%%2D+

1. Fix Length 1st Begin


%%2DL

2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete


%%2DY

1. Fix Length 2nd Begin



%%2DL

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete



%%2DZ

1. Minimum Length Begin



%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete



%2CE+

Chapter 27 QR Code

A. SETUP CODE LENGTH

<Variable>


%%2I+

1. Fix Length 1st Begin


%%2IL

2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete


%%2IY

1. Fix Length 2nd Begin



%%2IL

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete



%%2IZ

1. Minimum Length Begin



%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete



%2CG+

A. READING TYPE

GS1-QR Code Enable



<GS1-QR Code Disable>



Code ID]Q3 Enable



<Code ID]Q3 Disable>



Group Separator (GS) Enable



<Group Separator (GS) Disable>



Chapter 28 Micro QR Code

A. SETUP CODE LENGTH

<Variable>


%%2N+

1. Fix Length 1st Begin


%%2NL

2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete


%%2NY

1. Fix Length 2nd Begin


%%2NL

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete


%%2NZ

1. Minimum Length Begin


%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete


%2CH+

Chapter 29 Han Xin Code (Optional)

A. SETUP CODE LENGTH

<Variable>


%%2L+

1. Fix Length 1st Begin


%%2LL

2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete


%%2LY

1. Fix Length 2nd Begin



%%2LL

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete



%%2LZ

1. Minimum Length Begin



%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete



%2CI+

Chapter 30 Grid Matrix (Optional)

A. SETUP CODE LENGTH

<Variable>



1. Fix Length 1st Begin



2. Decimal Value
(Appendix C)

3. Fix Length 1st Complete



1. Fix Length 2nd Begin


%%2OL

2. Decimal Value
(Appendix C)

3. Fix Length 2nd Complete


%%2OZ

1. Minimum Length Begin


%2+-/

2. Decimal Value
(Appendix C)

3. Minimum Length Complete


%2CK+

Chapter 31 Language Selection

This language selection applies only to the USB HID (Human Interface Device Keyboard Emulation) devices.

<US English Keyboard >


%0ZV0

UK English Keyboard


%0ZV1

Italian Keyboard


%0ZV2

Spanish Keyboard



French Keyboard



German Keyboard



Swedish Keyboard


%0ZV6

Swiss Keyboard


%0ZV7

Hungarian Keyboard


%0ZV8

Japanese Keyboard



Belgian Keyboard



Portuguese Keyboard



Danish Keyboard



Dutch Keyboard



Turkish Keyboard



Reserved



Chapter 32 Bar Code ID

Code ID identifies the code type of a scanned bar code. This is useful when the decoder is decoding more than one code type. In addition to any single prefix already added, the code ID characters are inserted between the prefix and the decoded data.

Select no Code ID, default Code ID, AIM Code ID, or user defined Code ID to meet required application.

For default Code Identifiers and AIM Code Identifiers, see Appendix B.

A. IDENTIFIER FORMAT

ON



<OFF>



<Default Code Identifiers>



AIM Code Identifiers



B. USER DEFINE CODE ID

To set the user define code ID:

1. Scan symbology “Begin”.
2. Go to ASCII Characters in Appendix D. Scan the barcode(s) that represents the desired code ID.
3. Scan symbology “Complete”.

Note: The maximum defined characters for Code ID are 3.

1. UPC-A Begin



2. ASCII Characters
(Appendix D)

3. UPC-A Complete



1. UPC-E Begin



%91B+

2. ASCII Characters
(Appendix D)

3. UPC-E Complete



%91B0

1. EAN-13/JAN-13 Begin


%91Y+

2. ASCII Characters
(Appendix D)

3. EAN-13/JAN-13 Complete


%91Y0

1. EAN-8/JAN-8 Begin


%91Z+

2. ASCII Characters
(Appendix D)

3. EAN-8/JAN-8 Complete


%91Z0

1. CODE 39 Begin


%91E+

2. ASCII Characters
(Appendix D)

3. CODE 39 Complete


%91E0

1. CODE 128 Begin


%91F+

2. ASCII Characters
(Appendix D)

3. CODE 128 Complete


%91F0

1. CODABAR/NW7 Begin


%91J+

2. ASCII Characters
(Appendix D)

3. CODABAR/NW7 Complete


%91J0

1. Interleaved 25 Begin


%91G+

2. ASCII Characters
(Appendix D)

3. Interleaved 25 Complete


%91G0

1. Industrial 25 Begin



2. ASCII Characters
(Appendix D)

3. Industrial 25 Complete



1. Matrix 25 Begin



2. ASCII Characters
(Appendix D)

3. Matrix 25 Complete



1. CODE 93 Begin



2. ASCII Characters
(Appendix D)

3. CODE 93 Complete



1. CODE 11 Begin



2. ASCII Characters
(Appendix D)

3. CODE 11 Complete



1. China Post Begin


%91M+

2. ASCII Characters
(Appendix D)

3. China Post Complete


%91M0

1. MSI/PLESSEY Begin


%91N+

2. ASCII Characters
(Appendix D)

3. MSI/PLESSEY Complete


%91N0

1. Telepen Begin



%91T+

2. ASCII Characters
(Appendix D)

3. Telepen Complete



%91T0

1. GS1 Databar Omnidirectional Begin


%91U+

2. ASCII Characters
(Appendix D)

3. GS1 Databar Omnidirectional Complete


%91U0

1. GS1 Databar Limited Begin


%91V+

2. ASCII Characters
(Appendix D)

3. GS1 Databar Limited Complete


%91V0

1. GS1 Databar Expanded Begin



2. ASCII Characters
(Appendix D)

3. GS1 Databar Expanded Complete



1. UCC/EAN-128 Begin


%91R+

2. ASCII Characters
(Appendix D)

3. UCC/EAN-128 Complete


%91R0

1. Reserved Begin


%91S+

2. ASCII Characters
(Appendix D)

3. Reserved Complete


%91S0

1. Aztec Begin


%%03A

2. ASCII Characters
(Appendix D)

3. Aztec Complete


%%03N

1. Data Matrix Begin


%%03C

2. ASCII Characters
(Appendix D)

3. Data Matrix Complete


%%03P

1. PDF417 Begin




2. ASCII Characters
(Appendix D)

3. PDF417 Complete



1. Micro PDF417 Begin (Optional)


%%03E

2. ASCII Characters
(Appendix D)

3. Micro PDF417 Complete


%%03R

1. QR Code Begin


%%03G

2. ASCII Characters
(Appendix D)

3. QR Code Complete


%%03T

1. Micro QR code Begin



2. ASCII Characters
(Appendix D)

3. Micro QR code Complete



1. Han Xin Code Begin (Optional)




2. ASCII Characters
(Appendix D)

3. Han Xin Code Complete



1. Grid Matrix Code Begin (Optional)


%%03J

2. ASCII Characters
(Appendix D)

3. Grid Matrix Code Complete


%%03W

Chapter 33 Accuracy

ACCURACY

<1 Time>



2 Times



3 Times



4 Times



Chapter 34 Beep

A. BEEP TONE

<High>


%01J3

Medium


%01J2

Low


%01J1

Off



%01J0

B. BEEP DURATION

The value is from 1 - 255. (Default is 10). Each level=10ms, e.g. 1=10ms, 2=20ms, 10=100ms..., 255=2550ms=2.55sec.

To configure beep duration, scan:
1. Scan "Begin".
2. Go to Decimal Value Table in Appendix C. Scan barcode(s) that represents the duration value.
3. Scan "Complete".

1. Begin


%%371

2. Decimal Value (1-255)
(Appendix C)

3. Complete



%%372

C. SILENT TIME BETWEEN BEEPS

The value is from 1 - 255. (Default is 3). Each level=10ms, e.g. 1=10ms, 2=20, 3=30ms…, 255==2550ms=2.55sec.

To configure the value, scan:
1. Scan "Begin".
2. Go to Decimal Value Table in Appendix C. Scan barcode(s) that represents the value.
3. Scan "Complete"

1. Begin



2. Decimal Value (1-255)
(Appendix C)

3. Complete



D. BEEP OPTIONS

<Good Read Beep ON>



%%391

Good Read Beep OFF



%%39A

<Error Beep ON>



%%392

Error Beep OFF



%%39B

<Power up Beep ON>




%0C44

Power up Beep OFF



%0C40

<Configure Beep ON>



%%393

Configure Beep OFF



%%39C

Chapter 35 Sensitivity of Continuous Reading

A. QUICK SETTING

<Fast>



Slow



B. AVOID SAME CODE DOUBLE READING

Enable


%0244

<Disable>


%0240

C. SAME CODE DELAY INTERVAL

This is to configure the length of delay time prior to an identical barcode can be rescanned. The value is defined from 1 - 50 that represents 100ms - 5 seconds in 100ms interval. The default value is 5 (0.5 seconds). This setting is only applicable to continuous and flash reading modes.

To setup same code delay reading interval:


1. Scan "Begin".

2. Go to Decimal Value Table in Appendix C. Scan barcode(s) that represents the delay reading interval. The range is from 1 to 50. An interval represents 0.1 second. Therefore, the available range is from 0.1 to 5 seconds.

3. Scan "Complete".


Sensitivity of Continuous Reading

1. Begin



2. Decimal Value (1-50)
(Appendix C)

3. Complete



Chapter 36 Indicator/Aimer/Illumination

A. INDICATOR

<Enable>



%02O8

Disable



%02O0

B. AIMER

<Enable>



%02K4

Disable



%02K0

C. ILLUMINATION

<Enable>



Disable



D. AUTOMATIC ILLUMINATION BRIGHTNESS

<Enable>



%02H1

Disable



%02H0

E. ILLUMINATION BRIGHTNESS

This setting is activated when 'Automatic Illumination Brightness' is disabled. The brightness value is from 1 - 100. (Default is 50)

To configure fixed brightness, scan:
1. Scan "Begin".
2. Go to Decimal Value Table in Appendix C. Scan barcode(s) that represents the brightness value.
3. Scan "Complete"

1. Begin



2. Decimal Value (1-100)
(Appendix C)

3. Complete



F. INDICATOR AFTER GOOD READ

<Normal OFF>



Normal ON



G. INDICATOR FLASHING

Enable



<Disable>



H. ILLUMINATION FLASHING AFTER GOOD READ

Enable



%%3J1

<Disable>



%%3J0

I. AIMER ALWAYS ON

Enable



<Disable>




Chapter 37 Image Type

J. INVERSED IMAGE

<Disable>



Inversed Image Only



Both



K. MIRRORED IMAGE

<Disable>



%%3B3

Mirrored Image Only



%%3B4

Both



%%3B5

Chapter 38 Miscellaneous

A. AUTOSENSE SENSITIVITY

The sensitivity value is from 80 to 90. (Default is 85.)

To configure sensitivity, scan:
1. Scan "Begin".
2. Go to Decimal Value Table in Appendix C. Scan barcode(s) that represents the sensitivity value.
3. Scan "Complete"

1.Begin



2. Decimal Value (80-90)
(Appendix C)

3. Complete



B. REVERSE OUTPUT CHARACTERS

<Disable>



Enable



C. POWER SAVING MODE

<Disable>



%%3D0

Enable



%%3D1

D. TIME TO ENTER POWER SAVING

The value is from 1 to 120. (Default is 20). Each level=0.5min, e.g. 1=0.5min, 2=1min, 20=10min…, 120=60min.

1. Begin



%%3D2

2. Decimal Value (1-120)
(Appendix C)

3. Complete



%%3D3

E. OUTPUT NON-PRINTABLE CHARS

<Disable>



Enable



Chapter 39 Multi-Byte Character Output

A. CODEPAGES

Scan corresponding codepage to read multi-byte encoded barcodes. Only **ONE codepage** is activated at a time. “Send Character by ALT Methods” should be enabled simultaneously.

Scan: “Send Character by ALT Method -> (codepage)”

<None>



BIG-5 Traditional Chinese



GB2312 Simplified Chinese



Shift-JIS Japanese



%%3C3

KSC5601 Korean



%%3C4

UTF8 Traditional Chinese



%%3C5

UTF8 Simplified Chinese



%%3C6

UTF8 Japanese



UTF8 Korean



UTF8 Cyrillic



UTF8 Central European



Chapter 40 Bluetooth (For BT Scanner)

A. SET BT PARAMETER DEFAULT

BT Parameter Default.



Scan: “BT Parameter Default -> Save Parameters”

B. BLUETOOTH PROFILE

When connected via Bluetooth, select one of the following Bluetooth predefined profiles.

<SPP Master Mode>



Follow the steps below to setup the connection between scanner and cradle in SPP Master Mode.

1) Scan "**SPP Master Mode**".
2) Scan the Bluetooth **MAC address barcode** located on the bottom of cradle.
3) When the Bluetooth MAC address barcode is successfully scanned, the scanner sounds 3 short beeps with green LED flash once.
4) Wait approximately 20 seconds for BT pairing process.
5) When the connection is successful, the scanner sounds an ascending tone and with blue LED flashes slowly, and the cradle blue LED is continuous on.


SPP Slave Mode



Follow the steps below to setup the connection between scanner and host in SPP Slave Mode.

1) Scan "**SPP Slave Mode**".
2) Search the scanner by host. Enter the pin codes (default 00:00:00) to setup the pairing when prompt.
3) When paired, build up the connection by application program on host.
4) When the connection is successful, the scanner sounds an ascending tone with blue LED flashes slowly.

HID Slave Mode



Follow the steps below to setup the connection between scanner and host in HID Slave Mode.

1) Scan "**HID Slave Mode**".
2) Search the scanner by host. Enter the pin codes to setup the pairing when prompt. Go to NUMERIC KEYPAD TABLE in **Appendix E** to scan number 0-9 for pin codes.
3) When connection is successful, the scanner sounds an ascending tone with blue LED flashes slowly


C. OUT OF RANGE

When BT signal is out of transmission range, the BT connection will be lost. While “Out of Range” is enabled, the scanned data will be stored in out-of-range memory. All the stored data will be transmitted to host upon the BT is reconnected, and the data stored in out-of-range memory will be cleared. While “Out of Range” is disabled and the BT signal is out of transmission range, the scanned data will be discarded.

<Enable>



Disable



D. CRADLE ID VISIBILITY

<Enable>



Disable



E. AUTO RECONNECT

When scanner is back from out-of-BT-connection distance to BT-connection range, the scanner automatically resumes BT connection to host.

<Enable>



%A188

Disable



%A180

F. BACK TO RANGE AND SEND DATA

When scanner is back to BT connection range, it automatically resumes connection and the stored data will be sent to host. Ensure the connection quality is secured and press trigger to start sending data by setting “Trigger to Send”. The scanner automatically sends data upon the connection is resumed by setting “Auto Send”.

<Trigger to Send>



Auto Send



G. VIRTUAL KEYBOARD

When connect to iOS in HID Slave Mode, double click trigger button to pop up/dismiss the virtual keyboard.

<Enable>



Disable



H. SLEEP MODE

The scanner is equipped with sleep mode function to save battery energy when the scanner is not used for 1 minute or 10 minutes. During sleep mode, all the functions and connection will be halted until pressing the trigger button. The communication with cradle or host will be reconnected.

1 min



%A272

10 min



%A273

<OFF >



%A270

I. BATCH MODE

ON



<OFF>



"*" indicates "Quick Setting Barcode".**

The function can be executed directly by scanning barcode instead of doing the general programming process.

***Delete Last Data



***Batch Data Read



***Batch Data Clear



J. FIRMWARE VERSION

Display the firmware version of scanner. Scan below barcodes directly without general programming process.

Scanner



Cradle



K. MAC ADDRESS

Display the firmware version of scanner. Scan below barcodes directly without general programming process.

Scanner MAC Address



Cradle MAC Address



Chapter 41 Data Editing

A. IDC COMPOSITE CODE

The scanned data can be edited by Intelligent Data Composer (IDC) as required output format. The data editing rules can be generated by IDC as a composite QR code. Simply scan this QR code to apply all editing rules to output data.

<Disable>



%%3A0

Enable



%%3A1

Chapter 42 Customer Define Strings

A. READ STRINGS

The customers can define their own strings and simply read the following barcodes to directly output the pre-defined strings. The strings should be pre-configured by software. 10 strings are available.

Read String 0



Read String 1




Read String 2




Read String 3



Read String 4



Read String 5



Read String 6



Read String 7



Read String 8



Read String 9



APPENDIX A: Default Parameters

Interface Selection	
USB HID Keyboard Mode	Disable
Reading Surface	General
RS232 Parameter	
BAUD Rate	115200
Data Bits	8 Data Bits
Stop Bits	1 Bit
Parity	None
Handshaking	RTS/CTS Disable
	ACK/NAK Disable
	XON/XOFF Disable
Keyboard Parameter	
Upper/Lower Case	Normal
Caps Lock Detection	Disable
Send Character By ALT Method	Disable
Select Numerical Pad	OFF
Output Characters	
Terminator	CR + LF
Time-out Between Characters	0 ms
Symbologies	
1D Symbology Selection	
UPC-A	ON
UPC-E	ON
EAN-13/JAN-13/ISBN-13	ON
EAN-8/JAN-8	ON
Code 39	ON
Code 128	ON
Codabar/NW7	ON
Interleaved 25	ON
Industrial 25	OFF

Matrix 25	OFF
CODE 93	OFF
CODE 11	OFF
China Post	OFF
MSI/PLESSEY	OFF
Telepen	OFF
GS1 DataBar Omnidirectional	OFF
GS2 DataBar Limited	OFF
GS2 DataBar Expanded	OFF
2D Symbology Selection	
Aztec	OFF
Data Matrix	ON
PDF417	ON
MicroPDF417 (Optional)	OFF
QR Code	ON
Micro QR Code	OFF
Han Xin Code (Optional)	OFF
Grid Matrix (Optional)	OFF
UPC/EAN/JAN	
UPCA=EAN13	Disable
ISBN-10	Disable
ISBN-13	Enable
ISSN	Disable
Auto discriminate Supplemental	Enable
Expand UPC-E	Disable
EAN8=EAN13	Disable
UCC Coupon Extended Code	Disable
GTIN Format	Disable
Supplemental	Not Transmit
Check Digit Transmission	
UPC-A Check Digit Transmission	ON
UPC-E Check Digit Transmission	ON
EAN-8 Check Digit Transmission	ON

EAN-13 Check Digit Transmission	ON
ISSN Check Transmission	OFF
Code 39	
Italian Pharmacy/Code 32	OFF
Check Digit Transmission	Not Calculate Check Digit
Output Start/Stop Character	Disable
Decode Asterisk	Disable
Code 128	
UCC/EAN-128	Disable
']C1' Code	Disable
Group Separators (GS)	Disable
Check Digit Transmission	Not Calculate Check Digit
Append FNC2	OFF
Interleaved 25	
Check Digit Transmission	Not Calculate Check Digit
Number of Character	Even
Brazilian Banking Code	Disable
Industrial 25	
IATA25	Disable
Check Digit Transmission	Not Calculate Check Digit
Matrix 25	
Check Digit Transmission	Not Calculate Check Digit
CODABAR/NW7	
Start/Stop Characters	OFF
Start/Stop Transmission Type	A/B/C/D Start
	A/B/C/D Stop
Code 93	
Check Digit Transmission	Calculate 2 Check Digits & Not Transmit
CODE 11	
Check Digit Transmission	Not Calculate Check Digit
MSI/PLESSEY	
Check Digit Transmission	Not Calculate Check Digit

Telepen	
Type of Code	Full ASCII Mode
Check Digit Transmission	Not Calculate Check Digit
GS1 DataBar	
GS1 Databar Omnidirectional	
Transmit Check Digit	Enable
Transmit Application ID	Enable
Transmit Symbology ID	Enable
GS1 Databar Limited	
Transmit Check Digit	Enable
Transmit Application ID	Enable
Transmit Symbology ID	Enable
GS1 Databar Expanded	
Transmit Symbology ID	Enable
Aztec	
Data Matrix	
GS1-Data Matrix	Disable
Code ID]d2	Disable
Group Separator (GS)	Disable
PDF417	
Micro PDF417 (Optional)	
QR Code	
GS1-QR Code	Disable
Code ID]Q3	Disable
Group Separator (GS)	Disable
Micro QR Code	
Han Xin (Optional)	
Grid Matrix (Optional)	
Code Length for All Symbologies	Variable
Language Selection	US English Keyboard
Bar Code ID	
Identifier Format	OFF
Code Identifiers-Default/AIM	Default

Accuracy	1 Time
Beep	
Beep Tone	High
Beep Duration	10=100ms
Silent Time Between Beeps	3=30ms
Good Read Beep	ON
Error Beep	ON
Power up Beep	ON
Configure Command Beep	ON
INDICATOR/AIMER/ILLUMINATION	
Indicator	Enable
Aimer	Enable
Illumination	Enable
Automatic illumination Brightness	Enable
Illumination Brightness	Default 50
Indicator After Good Read	Normal OFF
Indicator Flashing	Disable
Illumination Flashing After Good Read	Disable
Aimer Always ON	Disable
Image Type	
Inversed image	Disable
Mirrored image	Disable
Miscellaneous	
Autosense Sensitivity	85
Reverse Output Characters	Disable
Power Saving Mode	Disable
Time to Enter Power Saving	20=10min
Output Non-Printable Chars	Disable
Multi-Byte Character Output	None
Bluetooth (For BT Scanner)	
Bluetooth Profile	SPP Master Mode
Out of Range	Enable

Cradle ID Visibility	Enable
Auto Reconnect	Enable
Back to Range and Send Data	Trigger to Send
Virtual Keyboard	Enable
Sleep Mode	OFF
Batch Mode	OFF

APPENDIX B: Code Identifiers

1. Default Code Identifiers

Code ID	Bar Code Type
A	UPC-A
B	UPC-E
C	EAN8/JAN8
D	EAN13/JAN13
E	Code 39
F	Code 128
G	Interleaved 25
H	Industrial 25
I	Matrix 25
J	Codabar
K	Code 93
M	China Post
N	MSI/Plessey
T	Telepen
U	GS1-Databar Omnidirectional

V	GS1-Databar Limited
W	GS1-Databar Expanded
R	UCC/EAN128
XA	Aztec
XB	Aztec Mesas
XC	Data Matrix
XD	Maxicode
XE	Micro PDF417
XF	PDF417
XG	QR Code
XH	Micro QR Code
XI	Han Xin Code

2. AIM Code Identifiers

Each AIM Code Identifier contains the three-character string]cm where:
] = Flag Character (ASCII 93)
c = Code Character
m = Modifier Character

AIM Code Character

Code Character	Bar Code Type
A	Code 39, Code 39 Full ASCII, Code 32
C	Code 128
d	Data Matrix
E	UPC/EAN
e	RSS Family
F	Codabar
G	Code 93
H	Code 11
I	Interleaved 2 of 5
L	PDF417, Micro PDF417, Micro PDF417
M	MSI
Q	QR Code
S	Discrete 2 of 5, IATA 2 of 5
X	Bookland EAN, Trioptic Code 39, US Postnet, US Planet, UK Postal, Japan Postal, Australian Postal, Dutch Postal

APPENDIX C: Decimal Value Table

0



1



2



3



4



5



6



7



8



9



APPENDIX D: ASCII Characters

NULL



00

SOH



01

STX



02

ETX



03

EOT



04

ENQ



05

ACK



06

BEL



07

BS



08

HT



09

LF



0A

VT



0B

FF



0C

CR



0D

SO



0E

SI



0F

DLE



10

DC1



11

DC2



12

DC3



13

DC4



14

NAK



15

SYN



16

ETB



17

CAN



18

EM



19

SUB



1A

ESC



1B

FS



1C

GS



1D

RS



1E

US



1F

SPACE



20

!



21

“



22

#



23

$



24

%



25

&



26

‘



27

(



28

)



29

*



2A

+



2B

’



2C

-



2D

.



2E

/



2F

0



30

1



31

2



32

3



33

4



34

5



35

6



36

7



37

8



38

9



39

:



3A

;



3B

<



3C

=



3D

>



3E

?



3F

@



40

A



41

B



42

C



43

D



44

E



45

F



46

G



47

H



48

I



49

J



4A

K



4B

L



4C

M



4D

N



4E

O



4F

P



50

Q



51

R



52

S



53

T



54

U



55

V



56

W



57

X



58

Y



59

Z



5A

[



5B

\



5C

]



5D

^



5E

_



5F

`



60

a



61

b



62

c



63

d



64

e



65

f



66

g



67

h



68

i



69

j



6A

k



6B

l



6C

m



6D

n



6E

o



6F

p



70

q



71

r



72

s



73

t



74

u



75

v



76

w



77

x



78

y



79

z



7A

{



7B

|



7C

}



7D

~



7E

DEL



7F

APPENDIX E: Numeric Keypad Table

The table is for Bluetooth PIN code input.

0		**1**	
2		**3**	
4		**5**	
6		**7**	
8		**9**	
Enter			

Start Configuration



%$+/3

Save Parameters



%$+/0

Abort Configuration



%$+/6

Set All Default



%$+/2

Version Information



%$+/5

V3.0

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT

DISPOSAL OF ELECTRIC AND ELECTRONIC EQUIPMENT (Applicable In The European Union And Other European Countries With Separate Collection Systems)



ENGLISH: This symbol on the product or its packaging means that this product must not be treated as u unsorted household waste. In accordance with EU Directive 2012/19/EU on Waste Electrical and E Electronic Equipment (WEEE), this electrical product must be disposed of in accordance with the user's l local regulations for electrical or electronic waste. Please dispose of this product by returning it to your local point of sale or recycling pickup point in your municipality.

DEUTSCH: Dieses auf dem Produkt oder der Verpackung angebrachte Symbol zeigt an, dass dieses Produkt nicht mit dem Hausmüll entsorgtwerden darf. In Übereinstimmung mit der Richtlinie 2012/19/EU des Europäischen Parlaments und des Rates über Elektro- und Elektronik-Altgeräte (WEEE) darf dieses Elektrogerät nicht im normalen Hausmüll oder dem Gelben Sack entsorgt werden. Wenn Sie dieses Produkt entsorgen möchten, bringen Sie es bitte zur Verkaufsstelle zurück oder zum Recycling-Sammelpunkt Ihrer Gemeinde.

ESPAÑOL: Este símbolo en el producto o su embalaje indica que el producto no debe tratarse como residuo doméstico. De conformidad con la Directiva 2012/19/EU de la UE sobre residuos de aparatos eléctricos y electrónicos (RAEE), este producto eléctrico no puede desecharse se con el resto de residuos no clasificados. Deshágase de este producto devolviéndolo a su punto de venta o a un punto de recolección municipal para su reciclaje.

FRANÇAIS: Ce symbole sur Ie produit ou son emballage signifie que ce produit ne doit pas être traité comme un déchet ménager. Conformément à la Directive 2012/19/EU sur les déchets d'équipements électriques et électroniques (DEEE), ce produit électrique ne doit en aucun cas être mis au rebut sous forme de déchet municipal non trié. Veuillez vous débarrasser de ce produit en Ie renvoyant à son point de vente ou au point de ramassage local dans votre municipalité, à des fins de recyclage.

POLSKI: Jeśli na produkcie lub jego opakowaniu umieszczono ten symbol, wówczas w czasie utylizacji nie wolno wyrzucać tego produktu wraz z odpadami komunalnymi. Zgodnie z Dyrektywą Nr 2012/19/EU w sprawie zużytego sprzętu elektrycznego i elektronicznego (WEEE), niniejszego produktu elektrycznego nie wolno usuwać jako nie posortowanego odpadu komunalnego. Prosimy o usuniecie niniejszego produktu poprzez jego zwrot do punktu zakupu lub oddanie do miejscowego komunalnego punktu zbiórki odpadów przeznaczonych do recyklingu. **ITALIANO**: Questo simbolo sui prodotto o sulla relativa confezione indica che il prodotto non va trattato come un rifiuto domestico. In ottemperanza alla Direttiva UE 2012/19/EU sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE), questa prodotto elettrico non deve essere smaltito come rifiuto municipale misto. Si prega di smaltire il prodotto riportandolo al punto vendita o al punto di raccolta municipale locale per un opportuno riciclaggio.

WARRANTY INFORMATION • GARANTIEINFORMATIONEN • GARANTÍA • GARANTIE • GWARANCJI • GARANZIA

USA & CANADA: manhattanproducts.us
DEUTSCHLAND: manhattanproducts.de
EUROPE & APAC: manhattanproducts.eu
ITALIA: manhattanproducts.it
EN MÉXICO: manhattanproducts.mx | Póliza de Garantía Manhattan — Datos del importador y responsable ante el consumidor IC Intracom México, S.A.P.I. de C.V. • Av. Interceptor Poniente # 73, Col. Parque Industrial La Joya, Cuautitlán Izcalli, Estado de México, C.P. 54730, México. • Tel. (55)1500-4500 La presente garantía cubre los siguientes productos contra cualquier defecto de fabricación en sus materiales y mano de obra.

A. Garantizamos los productos de limpieza, aire comprimido y consumibles, por 60 dias a partir de la fecha de entrega, o por el tiempo en que se agote totalmente su contenido por su propia función de uso, lo que suceda primero.
B. Garantizamos los productos con partes móviles por 3 años.
C. Garantizamos los demás productos por 5 años (productos sin partes móviles), bajo las siguientes condiciones:
    1. Todos los productos a que se refiere esta garantía, ampara su cambio físico, sin ningún cargo para el consumidor.
    2. El comercializador no tiene talleres de servicio, debido a que los productos que se garantizan no cuentan con reparaciones, ni refacciones, ya que su garantía es de cambio físico.
    3. La garantía cubre exclusivamente aquellas partes, equipos o sub-ensambles que hayan sido instaladas de fábrica y no incluye en ningún caso el equipo adicional o cualesquiera que hayan sido adicionados al mismo por el usuario o distribuidor.

Para hacer efectiva esta garantía bastará con presentar el producto al distribuidor en el domicilio donde fue adquirido o en el domicilio de IC Intracom México, S.A.P.I. de C.V., junto con los accesorios contenidos en su empaque, acompañado de su póliza debidamente llenada y sellada por la casa vendedora (indispensable el sello y fecha de compra) donde lo adquirió, o bien, la factura o ticket de compra original donde se mencione claramente el modelo, número de serie (cuando aplique) y fecha de adquisición. Esta garantía no es válida en los siguientes casos: Si el producto se hubiese utilizado en condiciones distintas a las normales; si el producto no ha sido operado conforme a los instructivos de uso; o si el producto ha sido alterado o tratado de ser reparado por el consumidor o terceras personas.

REGULATORY STATEMENTS

FCC Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of Federal Communications Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna; increase the separation between the equipment and the receiver; connect the equipment to an outlet on a circuit different from the receiver; or consult the dealer or an experienced radio/TV technician for help.

CE

ENGLISH: This device complies with the requirements of CE RED 2014/53/EU, 2014/30/EU and/or 2014/35/EC. The Declaration of Conformity for is available at:

DEUTSCH: Dieses Gerät enspricht der CE RED 2014/53/EU, 2014/30/EU und / oder 2014/35/EC. Die Konformitätserklärung für dieses Produkt finden Sie unter:

ESPAÑOL: Este dispositivo cumple con los requerimientos de CE RED 2014/53/EU, 2014/30/EU y / o 2014/35/EC. La declaración de conformidad esta disponible en:

FRANÇAIS: Cet appareil satisfait aux exigences de CE RED 2014/53/EU, 2014/30/EU et / ou 2014/35/EC. La Déclaration de Conformité est disponible à :

POLSKI: Urządzenie spełnia wymagania CE RED 2014/53/EU, 2014/30/EU I / lub 2014/35/EC. Deklaracja zgodności dostępna jest na stronie internetowej producenta:

ITALIANO: Questo dispositivo è conforme alla CE RED 2014/53/EU, 2014/30/EU e / o 2014/35/EC. La dichiarazione di conformità è disponibile al:

manhattanproducts.com

North America
IC Intracom America
550 Commerce Blvd. Oldsmar, FL 34677, USA

Asia & Africa
IC Intracom Asia 4-F
No. 77, Sec. 1, Xintai 5th Rd. Xizhi Dist., New Taipei City 221, Taiwan

Europe
IC Intracom Europe
Löhbacher Str. 7, D-58553 Halver, Germany

All trademarks and trade names
are the property of their respective owners.
Alle Marken und Markennamen sind Eigentum Ihrer jeweiligen Inhaber.
Todas las marcas y nombres comerciales son propiedad de sus respectivos dueños.
Toutes les marques et noms commerciaux sont la propriété de leurs propriétaires respectifs.
Wszystkie znaki towarowe i nazwy handlowe należą do ich właścicieli.
Tutti i marchi registrati e le dominazioni commerciali sono di proprietà dei loro rispettivi proprietari.



manhattanproducts.com

I trademarks and trade names are the property of their respective owners.
© IC Intracom. All rights reserved. Manhattan is a trademark of IC Intracom, registered in the U.S. and other countries.

MH_179768_UM_1120_REV_5.01