
VORTEX 240

MANUAL


www.antec.com

ACCESSORIES


A  Intel Backplate x1	B  Intel Backplate x2	C  AMD Backplate x2	D  Backplate x2
E  x4	F  x4	G  x4	H  x8
I  x4	J  x8	K  x1	L  x1
M  x1	N  x1	O  x4	P  x2
Q  x1			

INTEL PLATFORM INSTALLATION


Intel 115X / 1200 / 1700

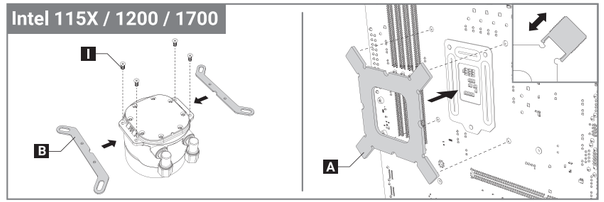


Intel 115X / 1200

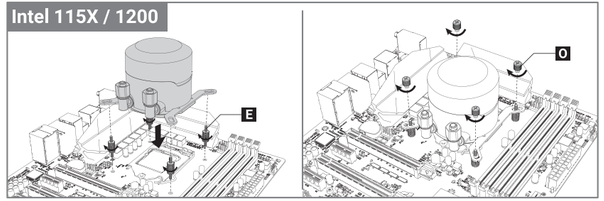

Intel 1700

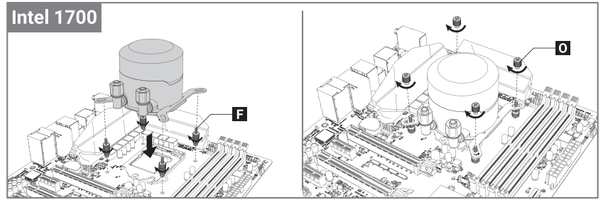



Intel 20XX

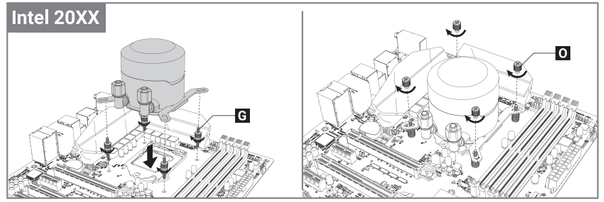

AMD PLATFORM INSTALLATION


AMD AM3 / AM4

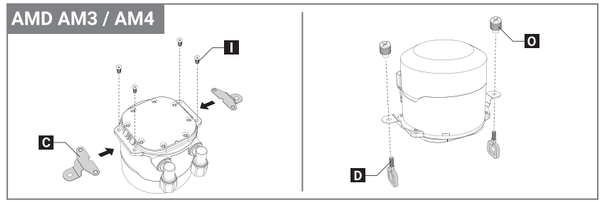

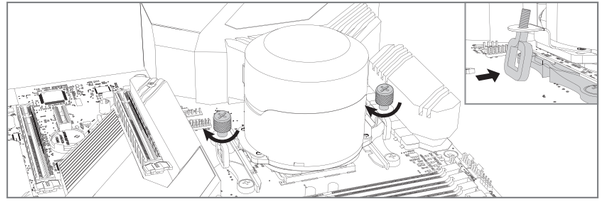


INSTALL THE PUMPHEAD & FAN

Install the Pumphead

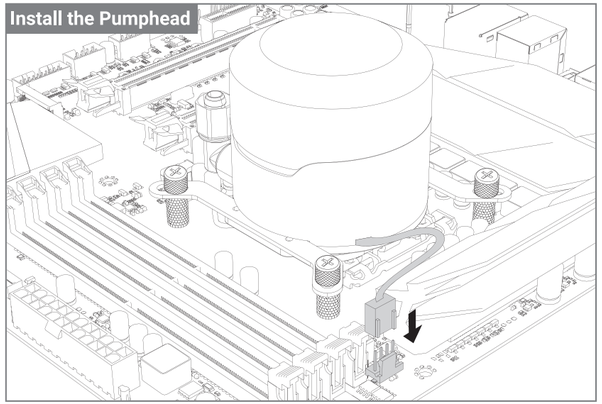


Connect the Fan to the Motherboard

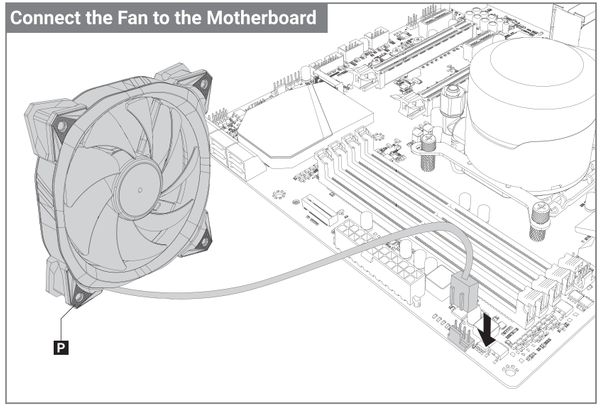


RADIATOR INSTALLATION

Fan Installation

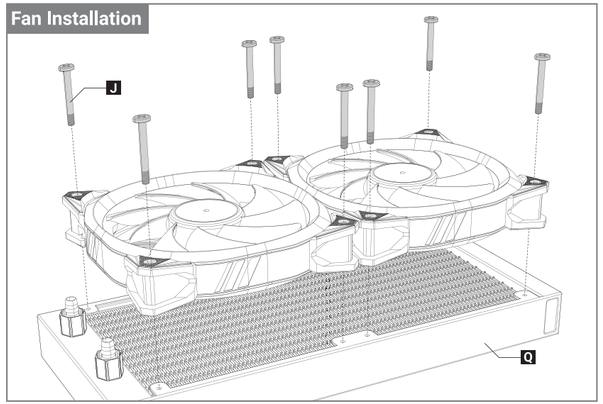


Radiator Installation

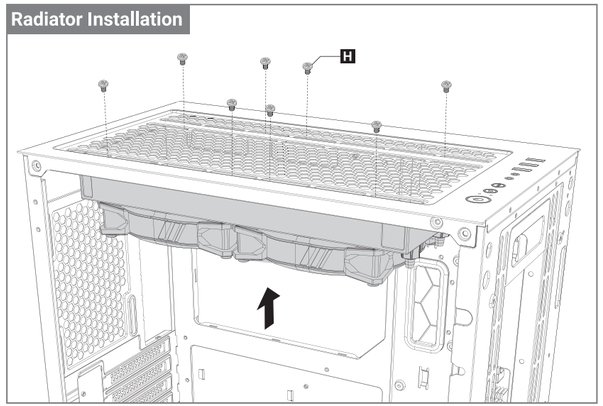


CONTROLLER

Controller Description

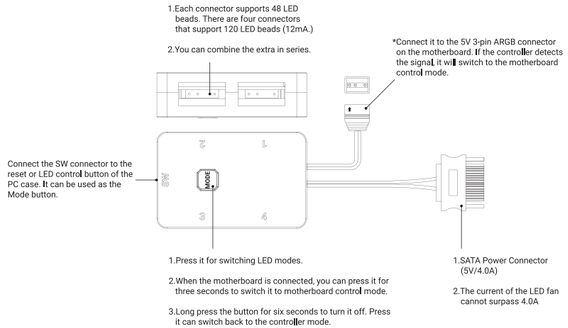

Controller Installation

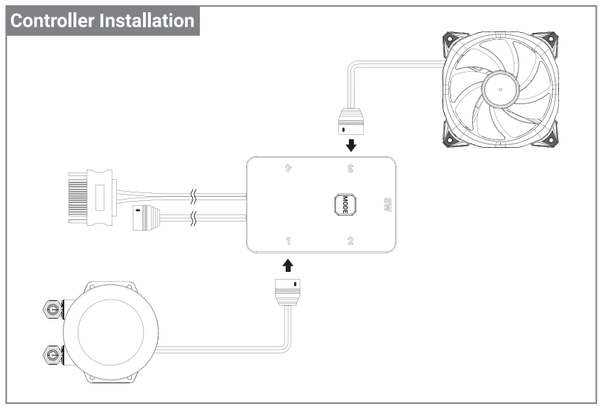

Antec®

BELIEVE IT

www.Antec.com

All rights reserved. Specifications are subject to change without prior notice. Actual products and accessories may differ from illustrations. Omissions and printing errors excepted. Content of delivery might differ in different countries or areas. Some trademarks may be claimed as the property of others.

V2.2

©1986 – 2022 Antec, Inc. All rights reserved.