封面

100mm

140mm

Xiaomi

Hair Clipper User Manual · 01
Xiaomi Haarschneidemaschine Benutzerhandbuch · 19
Manuale utente Xiaomi Hair Clipper · 37
Manuel d'utilisation de Xiaomi Hair Clipper · 55
Manual de usuario de Xiaomi Hair Clipper · 73
Maszynka do strzyżenia włosów Xiaomi Instrukcja obsługi · 91

Pflege und Wartung

▲WARNUNG

Vor der Reinigung und Wartung muss das Ladekabel abgezogen und die Haarschneidemaschine ausgeschaltet werden.

I. Reinigung des Messerkopfes und des Gehäuses

1. Nehmen Sie den Messerkopf ab.
2. Verwenden Sie die Reinigungsbürste, um alle Haare vom Messer zu entfernen.
3. Spülen Sie den Messerkopf und das Gehäuse separat ab, um alle Haare zu entfernen.
4. Mit einem Tuch abwischen und an der Luft trocknen lassen.
5. Bringen Sie den Messerkopf wieder an der Haarschneidemaschine an und bewahren Sie ihn an einem sicheren Ort auf.

Read this manual carefully before use, and retain it for future reference.

Precautions

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

Europe-EU declaration of conformity

We Shenzhen Kokmama Technology Co., Ltd., hereby, declares that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: http://www.mi.com/global/service/support/declaration.html

WEEE Disposal and Recycling Information

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

▲WARNINGS

- This appliance contains built-in lithium-ion battery.
- Do not disassemble, impact, crush the battery or throw it into fire.
- If there is severe swelling, do not continue to use.
- Do not leave the battery in high temperature environment.
- For the purposes of recharging the battery only use the detachable supply unit provided with this appliance.
- Use only with <A52D-050100-A1> supply unit.
- This appliance contains batteries that are non-replaceable.
- The appliance is intended for trimming purposes only.
- Cutting blades may become hot after prolonged use.

CAUTIONS

If the battery has leaked and you accidentally touch it, rinse the area with plenty of water and seek medical attention immediately.

Suitable for cleaning under an open water tap.

Product Overview

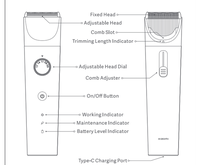



Assembly & Disassembly

I. Assembling the comb

To install a comb, insert the numbered end into the slot until it clicks into place.



II. Removing the comb

As shown in the image, hold the top of the comb and pull it upwards to remove it.



Note

You can also attach and remove the thinning comb as shown above.

III. Attaching the blade head

1. Using the dial, set the adjustable head to 1.7 mm.



2. To install the blade head, align clip (A) on the blade head with slot (B) on the clipper, then firmly press the blade head until it clicks into place.



IV. Removing the blade head

Turn off the power and hold the clipper with the front facing up, as shown in the image. Place your thumb against the blade head and push firmly to remove it.



Note

Connect the clipper to a power source and wait a few seconds before turning it on again. If the battery is depleted before charging, please wait a few minutes before turning it back on.

CAUTIONS

1. To avoid dropping or breaking the blade head, push with one hand and use the other hand to catch it when removing it.
2. If the blade head is damaged, it can cause hair to get stuck or the blade head to not work, so please replace the blade head as soon as possible.
3. When in use, the blade head will heat up slightly. This is normal and does not affect use.
4. The service life of the blade head depends on the frequency of use and maintenance.

How to Use

Charging

1. Before charging, make sure the clipper is turned off.
2. Plug the charging cable into the charging port on the clipper, and use the provided power adapter to charge the clipper. The battery level indicator will blink white slowly when charging and will remain white once fully charged.
3. It should take about 2.5 hours to fully charge the clipper.
4. The fully charged clipper should run for about 180 minutes.
5. If the battery is running low, the battery level indicator will flight up red. You can continue to use the clipper after connecting it to a power source.

Note

Connect the clipper to a power source and wait a few seconds before turning it on again. If the battery is depleted before charging, please wait a few minutes before turning it back on.

CAUTIONS

1. To avoid dropping or breaking the blade head, push with one hand and use the other hand to catch it when removing it.
2. If the blade head is damaged, it can cause hair to get stuck or the blade head to not work, so please replace the blade head as soon as possible.
3. When in use, the blade head will heat up slightly. This is normal and does not affect use.
4. The service life of the blade head depends on the frequency of use and maintenance.

On/Off button

Operation	Clipper status
Press	On/off

Indicators

Clipper status	Indicator status
On	Always white
Off	Off
Blade head needs oil.	Always white
Blade head is working normally.	Off
Sufficient battery	Always white
Low battery	Always red
Battery is depleted.	Blinks red 3 times then turns off
Charging	Blinks white slowly
Fully charged	Always white

Using the comb

1. Use a comb to brush the hair in the direction of the hair growth.
2. Choose a suitable comb and attach it to the clipper.
3. As shown in the image, slide the comb adjuster up and down to change the trimming length. The number shown by the trimming length indicator is the length of the hair left after trimming.
4. Place the teeth of the comb on the scalp and move the clipper slowly against the direction of hair growth.



Slide to adjust the trimming length

Note

1. Start trimming at a longer length, and gradually reduce the setting until you reach the desired length.
2. Use a higher speed setting when trimming thick or coarse hair and a lower speed setting when trimming finer hair.
3. When using a comb, it is recommended to set the adjustable head dial to 0.3 mm, otherwise the final hair length may be different from the selected comb length.
4. The length of the hair after trimming will differ slightly from the trimming length.

CAUTIONS

1. Before using the clipper, make sure that the hair is clean and dry. Do not use the clipper on wet, freshly washed hair.
2. Be careful when trimming for the first time. Do not move the clipper too fast and make sure to move it smoothly and gently.
3. In the case of broken skin, infection or swelling on the scalp, do not use the clipper to prevent any secondary injury.

Select the adjustable comb or thinning comb depending on the desired hairstyle.

	3–21 mm Adjustable Comb	It achieves a length of 3–21 mm after trimming, has seven lengths to choose from and is best suited for shorter hairstyles.
	23–41 mm Adjustable Comb	It achieves a length of 23–41 mm after trimming, has seven lengths to choose from and is best suited for medium-length hairstyles.
	Thinning Comb	For trimming layers and ends



Move the clipper against the direction of hair growth



Go over multiple times with different lengths

Note

1. Using a comb helps prevent trimming hair too short by accident and controll the overall length of the hairstyle.
2. Since hair tends to grow in different directions, the clipper must be moved in different directions (upwards/downwards/across) to keep it going against the direction of hair growth.
3. Trim repeatedly across the whole head to ensure the clipper contacts all the hair to be trimmed.
4. Make sure the top of the comb stays in contact with the scalp to get an even trim.
5. For better results on curly, sparse or longer hair, brush the hair in the moving direction of the clipper.
6. Clean hair from the combs and blade heads to avoid them getting clogged and affecting the clipper's performance.
7. If the neck hole in the barber cape is too big or small, use a clip to adjust it.



Thinning comb is close to the blade head



Push with your thumb to remove the thinning comb

CAUTIONS

1. The adjustable combs will trim all hair in an area to the same length, while the thinning comb will only trim half the hair of this area. Make sure you understand this difference.
2. It is not recommended to use the thinning comb on very short hair.
3. Make sure to only use the thinning comb once in each area, otherwise all the hair in this area might get cut short.

▲WARNING

Cutting blades may become hot after prolonged use.

Using the adjustable head

1. When trimming the contours of the neck and sideburns, there's no need to use a comb. Instead, change the length of the adjustable head.
2. Rotate the adjustable head dial to change the length of the blade head. The number pointed by the arrow above the dial is the length of the hair left after trimming.
3. When trimming the contours of the neck and sideburns, it is recommended to move the clipper slowly with its back facing up.



Setting the adjustable head



Trimming the contours of the neck and sideburns

Care & Maintenance

▲WARNING

Before cleaning and maintenance, the charging cable must be unplugged and the clipper must be turned off.

I. Cleaning the blade head and body

1. Remove the blade head.
2. Use the cleaning brush to remove any hair from the blade.
3. Rinse the blade head and body separately to remove all the hair.
4. Wipe with a cloth and leave to air dry.
5. Reattach the blade head to the clipper and store in a safe place.





CAUTIONS

- Rinse the blade head with clean water. Do not use salt water or hot water. Do not soak the clipper in water. After cleaning, be sure to dry the blade head to prevent the spring from getting rusted.
- Only clean the clipper with a soft cloth dipped in tap water or soapy water. Do not use paint thinner, gasoline, alcohol, or other chemicals.
- Never wash the charging cable.
- Never take apart the adjustable head or any other parts for cleaning, as they may not be able to be reassembled.
- The appliance is intended for trimming purposes only.

II. Maintaining the blade head

As shown in the images, make sure to add lubricating oil (sold separately) to the spots shown before each use and after cleaning. Add 1–2 drops to each of the six spots shown.



Adding oil to the blade head

Adding oil to the motor

Environmental Protection

When disposing of the clipper, do not throw it out with your household waste. Instead, take it to a governmentdesignated recycling center, as this helps protect the environment.

▲WARNINGS

- The instructions for disassembling the battery are for reference only when discarding the clipper and should not be followed for maintenance.
- Before removing the battery, make sure to unplug the charging cable and drain the battery.
- The product will no longer be usable once the battery is removed.

Removing the battery

1. After turning the clipper off, pry open the bottom cover with a flat-head screwdriver, and unscrew the screws on the bottom and inside the blade head slot.



2. Use a flat-head screwdriver to pry out the on/off button, the adjustable head dial, and the comb adjuster, then push the inner part out from the bottom.



3. Unscrew the fixing screws, then pry open the clip. Cut the metal tabs attaching the two ends of the battery to the circuit board.



Specifications

Name	Xiaomi Hair Clipper
Model	LFQ04KL
Charging Time	2.5 hours
Working Voltage	3.7 V ⎓
Working Power	3 W
Rated Input	5 V ⎓ 1 A
Net Weight	266 g
Item Dimensions	47 × 45 × 182 mm

Power Adapter

Information Published	Value and Precision
Manufacturer's Name	Jiangxi Jian Aohai Technology Co., Ltd.
Model Identifier	A52D-050100-A1
Input Voltage	100–240 V ~
Input Frequency	50/60 Hz
Rated Output Voltage	5 V ⎓
Rated Output Current	1 A
Nominal Output Power	5 W
Average Active Efficiency	73.62%
Efficiency at Low Load (10%)	68.32%
No-load Power Consumption	0.075 W

Troubleshooting

Issues	Possible Causes	Solutions
The comb is wobbly.	The comb is not properly installed.	Reinstall the comb.
The motor is not working.	The battery is depleted.	Charge the battery.
	The motor is damaged.	Contact the after-sales service.
Hair isn't cut smoothly or is getting caught.	Using an unsuitable comb	Choose a different comb.
	Blade head isn't lubricated.	Add lubricating oil to the blade head.
	Battery level is low.	Charge the battery.
The blade head doesn't move or shakes abnormally.	The blade head is damaged.	Replace the blade head.
	The blade head is not properly installed.	Reinstall the blade head.
	There are foreign objects in the blade head.	Clean the blade head.
Charging errors	The motor is damaged.	Contact the after-sales service.
	The charging cable is damaged.	Replace the charging cable.
	The battery is damaged.	Contact the after-sales service.
Working noise issues	The blade head is not properly installed.	Reinstall the blade head.
	The blade head is damaged.	Replace the blade head.
	The motor is damaged.	Contact the after-sales service.

WARRANTY NOTICE

THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY HAVE OTHER RIGHTS CONVEYED BY LAWS OF YOUR COUNTRY, PROVINCE OR STATE, INCLUDED, IN SOME COUNTRIES, PROVINCES OR STATES, CONSUMER LAW MAY IMPOSE A MINIMUM WARRANTY PERIOD, OTHER THAN AS PERMITTED BY LAW, XIAOMI DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU MAY HAVE. FOR A FULL UNDERSTANDING OF YOUR RIGHTS WE INVITE YOU TO CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

1. LIMITED PRODUCT WARRANTY

XIAOMI warrants that the Products are free from defects in materials and workmanship under normal use and care in accordance with the respective Product user manual, during the Warranty Period.

The duration and conditions related to the legal warranties are provided by respective local laws. For more information about the consumer warranty benefits, please refer to Xiaomi's official website https://www.mi.com/en/service/warranty.

Xiaomi warrants to the original purchaser that its Xiaomi Product will be free from defects in materials and workmanship under normal use in the period mentioned above.

Xiaomi does not guarantee that the operation of the Product will be uninterrupted or error free.

Xiaomi is not liable for damages arising from non-compliance with the instructions related to the use of the Product.

2. REMEDIES

If a hardware defect is found and a valid claim is received by Xiaomi within the Warranty Period, Xiaomi will either (1) repair the product at no charge, (2) replace the product, or (3) refund the Product, excluding potential shipping costs.

3. HOW TO OBTAIN WARRANTY SERVICE

To obtain warranty service, you must deliver the Product, in its original packaging or similar packaging providing an equal degree of Product protection, to the address specified by Xiaomi. Except to the extent

prohibited by applicable law, Xiaomi may require you to present proofs or proof of purchase and / or comply with registration requirements before receiving warranty service.

4. EXCLUSIONS AND LIMITATIONS

Unless otherwise stipulated by Xiaomi, this Limited Warranty applies only to the Product manufactured by or for Xiaomi and identifiable by the trademark, trade name or Xiaomi's or "Mi" logo.

This Limited Warranty does not cover: (a) Damage due to acts of nature or God, for example, lightning strikes, tornadoes, flood, fire, earthquake or other external causes; (b) Negligence; (c) Commercial use; (d) Alterations or modifications to any part of the Product; (e) Damage caused by use with non-Xiaomi products; (f) Damage caused by accident, abuse or misuse; (g) Damage caused by operating the Product outside the permitted or intended uses described by Xiaomi or with improper voltage or power supply; or (h) Damage caused by service (including upgrades and expansions) performed by anyone who is not a representative of Xiaomi.

It is up to you to keep backup any data, software, or other materials you may have stored or preserved on the product. It is likely that the data, software or other materials in the equipment will be lost or reformatted during the service process, Xiaomi is not responsible for such damage or loss.

No Xiaomi reseller, agent, or employee is authorized to make any modification, extension, or addition to this Limited Warranty. If any term is held to be illegal or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

Except as prohibited by laws or otherwise promised by Xiaomi, the aftersales services shall be limited to the country or region of the original purchase.

Products which were not duly imported and/or were not duly manufactured by Xiaomi and/or were not duly acquired from Xiaomi or a Xiaomi's official seller are not covered by the present warranties. As per applicable law you may benefit from warranties from the non-official retailer who sold the product. Therefore, Xiaomi invites you to contact the retailer from whom you purchased the product.

The present warranties do not apply in Hong Kong and Taiwan.

5. IMPLIED WARRANTIES

Except to the extent prohibited by applicable law, all implied warranties (including warranties of merchantability and fitness for a particular purpose) will have a limited duration up to a maximum duration of this limited warranty. Some jurisdictions do not allow limitations on the duration of an implied warranty, so the above limitation will not be applied in these cases.

6. DAMAGE LIMITATION

Except to the extent prohibited by applicable law, Xiaomi shall not be liable for any damages caused by accidents, incidence, especialize consequential damages, including but not limited to loss of profits, revenue or data, damages resulting from any breach of express or implied warranty or condition, or under any other legal theory, even if Xiaomi has been informed of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of special, indirect, or consequential damages, so the above limitation or exclusion may not apply to you.

7. XIAOMI CONTACTS

For customers, please visit the website:
https://www.mi.com/en/service/warranty/
The contact person for the after-sale service may be any person in Xiaomi's authorized service network, Xiaomi's authorized distributors or the final vendor who sold the products to you. If in doubt please contact the relevant person as Xiaomi may identify.

Manufactured for: Xiaomi Communications Co., Ltd.
Manufactured by: Shenzhen Kokmama Technology Co., Ltd.
Address: Room 705, Building 1, Xinyi Lingyu R&D Center, No.30, Hongfeng North 2nd Road, Zone 68, Xingdong Community, Xin'an Street, Bao'an District, Shenzhen City, Guangdong Province, China
For further information, please go to www.mi.com
Para obtener más información, visítenos en www.mi.com/global/service/userguide
User Manual Version: V1.0

Lesen Sie dieses Handbuch vor der Verwendung sorgfältig durch und bewahren Sie es auf, um zukünftig die Informationen nachlesen zu können.

Vorsichtsmaßnahmen

- Dieses Gerät ist nicht für die Nutzung durch Personen (inklusive Kinder) mit eingeschränkten körperlichen, sensorischen oder mentalen Fähigkeiten, oder für Personen mit einem Mangel an Erfahrung und Wissen geeignet, es sei denn, diese werden beaufsichtigt oder erhalten von einer Person, die für die Sicherheit dieser Personen) verantwortlich ist, eine Anleitung bezüglich der Bedienung des Gerätes.
- Kinder sollten beaufsichtigt werden, damit sichergestellt ist, dass diese nicht mit dem Gerät spielen.
- Die Reinigung und Benutzerwartung darf von Kindern nur unter Aufsicht vorgenommen werden.

Europa- EU-Konformitätserklärung

Wir Shenzhen Kokmama Technology Co., Ltd., bestätigen hiermit, dass dieses Gerät mit den geltenden Verordnungen und europäischen Normen sowie etwaigen Ergänzungen in Einklang steht. Der vollständige Wortlaut der EU-Konformitätserklärung ist unter der folgenden Internetadresse abrufbar:
http://www.mi.com/global/service/support/declaration.html

WEEE-Informationen zur Entsorgung und zum Recycling

Alle mit diesem Symbol gekennzeichneten Produkte sind Elektroschrott und Elektrogeräte (WEEE entsprechend EU-Richtlinie 2012/19/EU) und dürfen nicht mit unsortiertem Haushaltsmüll vermischt werden. Schützen Sie stattdessen Ihre Mitmenschen und die Umwelt, indem Sie Ihre zu entsorgenden Geräte an eine dafür vorgesehene, von der Regierung oder örtlichen Behörden bestimmte Sammelstelle zum Recyceln von Elektroschrott und Elektrogeräten bringen. Eine ordnungsgemäße Entsorgung und Recycling helfen, negative Auswirkungen auf die Gesundheit von Umwelt und Menschen zu vermeiden. Wenden Sie sich bitte an den Installateur oder lokale Behörden, um Informationen zum Standort und den allgemeinen Geschäftsbedingungen solcher Sammelstellen zu erhalten.

▲WARNUNGEN

- Dieses Gerät enthält einen eingebauten Lithium-Ionen-Akku.
- Zerlegen Sie den Akku nicht, durchstechen oder zerdrücken Sie ihn nicht und setzen Sie ihn keinem Feuer aus.
- Bei starken Schwellungen sollten Sie die Verwendung nicht fortsetzen.
- Der Akku darf nicht längerenTemperaturen ausgesetzt werden.
- Zum Aufladen des Akkus darf ausschließlich das im Lieferumfang dieses Geräts enthaltene abnehmbare Netzteil verwendet werden.
- Es darf nur das Netzgerät <A52D-050100-A1> verwendet werden.
- Dieses Produkt enthält Akkus, die nicht ausgewechselt werden können.
- Das Gerät ist nur für Trimmzwecke bestimmt.
- Die Schneidmesser können nach längerem Gebrauch heiß werden.

VORSICHTSMASSNAHMEN

Wenn der Akku ausgelaufen ist und Sie ihn versehentlich berühren, spülen Sie die Stelle mit reichlich Wasser aus und suchen Sie sofort einen Arzt auf.

Geeignet für die Reinigung unter einem offenen Wasserhahn.

Produktübersicht

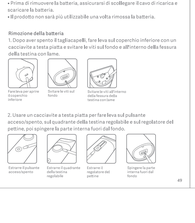



Montage und Demontage

I. Zusammenbau des Kammes

Um einen Kamm zu montieren, führen Sie das numerierte Ende in den Schlitz ein, bis es einrastet.



II. Abnehmen des Kammes

Halten Sie den Kamm oben fest und ziehen Sie ihn nach oben, um ihn zu entfernen (siehe Abbildung).

Note

Sie können den Ausdünnungskamm auch wie oben gezeigt anbringen und abnehmen.

III. Anbringen des Messerkopfes

1. Stellen Sie den verstellbaren Kopf mit dem Einstellrad auf 1,7 mm ein.

2. Um den Messerkopf anzubringen, richten Sie die Klammer (A) am Messerkopf auf den Schlitz (B) an der Haarschneidemaschine aus und drücken Sie dann den Messerkopf fest, bis er einrastet.



IV. Entfernen des Messerkopfes

Schalten Sie den Strom aus und halten Sie den Haarschneidemaschine mit der Vorderseite nach oben in der Abbildung gezeigt. Legen Sie Ihren Daumen gegen den Messerkopf und drücken Sie ihn fest, um ihn zu entfernen.



Note

Verwenden Sie die Haarschneidemaschine an eine Stromquelle an und warten Sie ein paar Sekunden, bevor Sie sie wieder einschalten. Wenn der Akku vor dem Aufladen leer ist, warten Sie bitte ein paar Minuten, bevor Sie ihn wieder einschalten.

VORSICHTSMASSNAHMEN

1. Lösen Sie vorsichtig die Schrauben und nehmen Sie dann den Clip auf. Schneiden Sie die Metallbleschen ab, mit denen die beiden Enden des Akkus an der Platine befestigt sind.

Verwendung

Aufladen

1. Vergewissern Sie sich vor dem Aufladen, dass die Haarschneidemaschine ausgeschaltet ist.
2. Stecken Sie das Ladekabel in den Ladeanschluss der Haarschneidemaschine und verwenden Sie das mitgelieferte Netzteil, um die Haarschneidemaschine aufzuladen. Der Akkuladestanzeiger blinkt während des Ladevorgangs langsam weiß und bleibt weiß, wenn er vollständig geladen ist.
3. Es sollte etwa 2.5 Stunden dauern, um die Haarschneidemaschine vollständig aufzuladen.
4. Die vollständig geladene Haarschneidemaschine sollte etwa 180 Minuten lang laufen.
5. Wenn der Akku zur Neige geht, beuchtet der Akkuladestandsanzeiger rot auf. Sie können die Haarschneidemaschine weiter verwenden, nachdem Sie sie an eine Stromquelle angeschlossen haben.

Note

Schalten Sie die Haarschneidemaschine an eine Stromquelle an und warten Sie ein paar Sekunden, bevor Sie sie wieder einschalten. Wenn der Akku vor dem Aufladen leer ist, warten Sie bitte ein paar Minuten, bevor Sie ihn wieder einschalten.

Ein/Aus-Taste

Vorgang	Haarschneidemaschine-Status
Drücken	Einlass

Anzeigen

Haarschneidemaschine-Status	Anzeigerstatus
Ein	Immer weiß
Aus	Aus
Messerkopf braucht Öl.	Immer weiß
Messerkopf arbeitet normal.	Aus
Ausreichend Akku	Immer weiß
Niedriger Akkustand	Immer rot
Akku ist erschöpft.	Blinkt 3 mal rot und schaltet sich dann aus
Aufladen	Blinkt langsam weiß
Voll aufgeladen	Immer weiß

Verwendung des Kamms

1. Verwenden Sie einen Kamm, um das Haar in Haarwuchsrichtung zu bürsten.
2. Wählen Sie einen geeigneten Kamm und befestigen Sie ihn an der Haarschneidemaschine.
3. Schieben Sie, wie in der Abbildung gezeigt, den Kammversteller nach oben und unten, um die Trimmlänge zu ändern. Die von dem Trimmlängenanzeiger angezeigte Zahl ist die Länge des nach dem Trimmen verbleibenden Haares.
4. Setzen Sie die Zähne des Kammes auf die Kopfhaut und bewegen Sie die Haarschneidemaschine langsam gegen die Haarwuchsrichtung.

Schieben, um die Trimmlänge einzustellen

Note

1. Vergewissern Sie sich vor der Verwendung der Haarschneidemaschine, dass das Haar sauber und trocken ist. Verwenden Sie die Haarschneidemaschine nicht bei nassem, frisch gewaschenem Haar.
2. Seien Sie vorsichtig, wenn Sie das Haar zum ersten Mal trimmen. Bewegen Sie die Haarschneidemaschine nicht zu schnell und achten Sie darauf, dass Sie sie gleichmäßig und sanft bewegen.
3. Im Falle von Hautverletzungen, Infektionen oder Schwellungen auf der Kopfhaut verwenden Sie die Haarschneidemaschine nicht, um eine Sekundärverletzungen zu vermeiden.

VORSICHTSMASSNAHMEN

1. Vergewissern Sie sich vor der Verwendung der Haarschneidemaschine, dass das Haar sauber und trocken ist. Verwenden Sie die Haarschneidemaschine nicht bei nassem, frisch gewaschenem Haar.
2. Seien Sie vorsichtig, wenn Sie das Haar zum ersten Mal trimmen. Bewegen Sie die Haarschneidemaschine nicht zu schnell und achten Sie darauf, dass Sie sie gleichmäßig und sanft bewegen.
3. Im Falle von Hautverletzungen, Infektionen oder Schwellungen auf der Kopfhaut verwenden Sie die Haarschneidemaschine nicht, um eine Sekundärverletzungen zu vermeiden.
4. Die Länge des Haares nach dem Trimmen weicht geringfügig von der Trimmlänge ab.

How to Use

Charging

1. Before charging, make sure the clipper is turned off.
2. Plug the charging cable into the charging port on the clipper, and use the provided power adapter to charge the clipper. The battery level indicator will blink white slowly when charging and will remain white once fully charged.
3. It should take about 2.5 hours to fully charge the clipper.
4. The fully charged clipper should run for about 180 minutes.
5. If the battery is running low, the battery level indicator will flight up red. You can continue to use the clipper after connecting it to a power source.

Note

Connect the clipper to a power source and wait a few seconds before turning it on again. If the battery is depleted before charging, please wait a few minutes before turning it back on.

CAUTIONS

1. To avoid dropping or breaking the blade head, push with one hand and use the other hand to catch it when removing it.
2. If the blade head is damaged, it can cause hair to get stuck or the blade head to not work, so please replace the blade head as soon as possible.
3. When in use, the blade head will heat up slightly. This is normal and does not affect use.
4. The service life of the blade head depends on the frequency of use and maintenance.

Verwendung des Kammes

1. Kämmen Sie das Haar in Haarwuchsrichtung.
2. Wählen Sie einen geeigneten Kamm und befestigen Sie ihn an der Haarschneidemaschine.
3. Schieben Sie, wie in der Abbildung gezeigt, den Kammversteller nach oben und unten, um die Trimmlänge zu ändern. Die von dem Trimmlängenanzeiger angezeigte Zahl ist die Länge des nach dem Trimmen verbleibenden Haares.
4. Setzen Sie die Zähne des Kammes auf die Kopfhaut und bewegen Sie die Haarschneidemaschine langsam gegen die Haarwuchsrichtung.

Schieben, um die Trimmlänge einzustellen

Note

1. Beginnen Sie das Trimmen mit einer längeren Länge und reduzieren Sie die Einstellung schrittweise, bis Sie die gewünschte Länge erreicht haben.
2. Verwenden Sie eine höhere Geschwindigkeitseinstellung, wenn Sie dickes oder grobes Haar trimmen, und eine niedrigere, wenn Sie feineres Haar trimmen.
3. Wenn Sie einen Kamm verwenden, wird es sich, das Einstellrad des verstellbaren Kopfes auf 0,3 mm einzustellen, da sonst die endgültige Haarlänge von der gewählten Kammlänge abweichen kann.
4. Die Länge des Haares nach dem Trimmen weicht geringfügig von der Trimmlänge ab.

VORSICHTSMASSNAHMEN

1. Vergewissern Sie sich vor der Verwendung der Haarschneidemaschine, dass das Haar sauber und trocken ist. Verwenden Sie die Haarschneidemaschine nicht bei nassem, frisch gewaschenem Haar.
2. Seien Sie vorsichtig, wenn Sie das Haar zum ersten Mal trimmen. Bewegen Sie die Haarschneidemaschine nicht zu schnell und achten Sie darauf, dass Sie sie gleichmäßig und sanft bewegen.
3. Im Falle von Hautverletzungen, Infektionen oder Schwellungen auf der Kopfhaut verwenden Sie die Haarschneidemaschine nicht, um eine Sekundärverletzungen zu vermeiden.
4. Die Länge des Haares nach dem Trimmen weicht geringfügig von der Trimmlänge ab.

Bewegen Sie die Haarschneidemaschine gegen die Haarwuchsrichtung

Mehrmals mit verschiedenen Längen übergehen

Note

1. Die Verwendung eines Kammes verhindert, dass das Haar versehentlich zu kurz geschnitten wird, und hilft, die Gesamtlänge der Frisur zu kontrollieren.
2. Da das Haar dazu neigt, in verschiedene Richtungen zu wachsen, muss die Haarschneidemaschine in verschiedene Richtungen (nach oben/unten/quer) bewegt werden, damit sie gegen die Haarwuchsrichtung läuft.
3. Trimmen Sie den gesamten Kopf mehrmals, damit die Haarschneidemaschine alle zu schneidenden Haare erfasst.
4. Achten Sie darauf, dass die Spitze des Kammes in Kontakt mit der Kopfhaut bleibt, um einen gleichmäßigen Schnitt zu erzielen.
5. Für bessere Ergebnisse bei lockigem, schütterem oder längerem Haar bürsten Sie das Haar in die Bewegungsrichtung der Haarschneidemaschine.
6. Reinigen Sie die Kämme und Messerköpfe von Haaren, damit sie nicht verstopfen und die Leistung der Haarschneidemaschine beeinträchtigen.
7. Wenn das Halsloch im Barbervorhang zu groß oder zu klein ist, verwenden Sie eine Spange, um es anzupassen.



Einstellen des verstellbaren Kopfes



Trimmen der Konturen von Nacken und Koteletten

Pflege und Wartung

▲WARNUNG

Vor der Reinigung und Wartung muss das Ladekabel abgezogen und die Haarschneidemaschine ausgeschaltet werden.

I. Reinigung des Messerkopfes und des Gehäuses

1. Nehmen Sie den Messerkopf ab.
2. Verwenden Sie die Reinigungsbürste, um alle Haare vom Messer zu entfernen.
3. Spülen Sie den Messerkopf und das Gehäuse separat ab, um alle Haare zu entfernen.
4. Mit einem Tuch abwischen und an der Luft trocknen lassen.
5. Bringen Sie den Messerkopf wieder an der Haarschneidemaschine an und bewahren Sie ihn an einem sicheren Ort auf.

Read this manual carefully before use