Fan Installation

Front Fan Installation

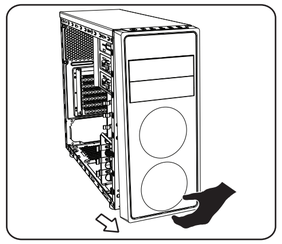

a. Remove front panel

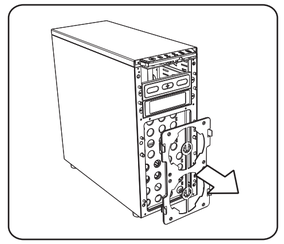

b. Remove dust filter

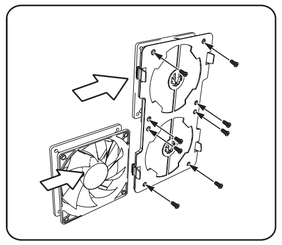

c. Secure with screws

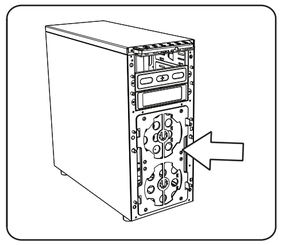

d. Replace dust filter

Fan Installation

Rear Fan Installation

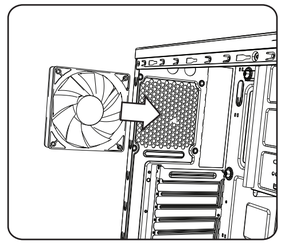

a. Install fan

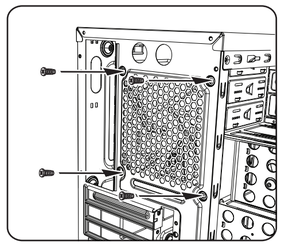

b. Secure with screws

Bitfenix Co., Ltd.
3F, No.79, Sec. 1, Xintai 5th Rd.,
Xi Zhi District, New Taipei City, Taiwan, R.O.C.
For the most updated information, please visit our official website: http://www.bitfenix.com
© 2014 BITFENIX Co., Ltd. All Rights Reserved. All trademarks are registered to their respective owners.
Ver 1.0 : 2014/02

MEMO

WWW.BITFENIX.COM