GOXTREME®
ACTION CAMS

GoXtreme® Black Manta 2
Action Cam

Operating Instructions



PDF > bit.ly/3XeiwYo

Table of contents

English

General information 5
Explanation of safety warnings 6
Product introduction 6
Intended use 7
Declaration and proven safety 7
Restrictions 7
Safety instructions 8
Operating environment 9
Radio interference and disturbance 10
Using the device under water 11
Components 14
First steps 17
- Step 1: Insert and charge the battery 17
- Step 2: Switch on the camera 18
- Step 3: Use the rear touch screen 19
- Step 4: Switch between the screens 20
- Step 5: Set your language 21
- Step 6: Format your microSD card 22
- Step 7: Set date and time 24

Change the mode 25
Further video and photo functions 29
Camera settings 32
Video settings 36
Photo settings 41
External MIC / Remote control 45

WiFi App connection.....49
Technical specifications.....52
Box contents.....55
Waste disposal.....56
Notes on the battery.....57
Declaration of conformity.....59

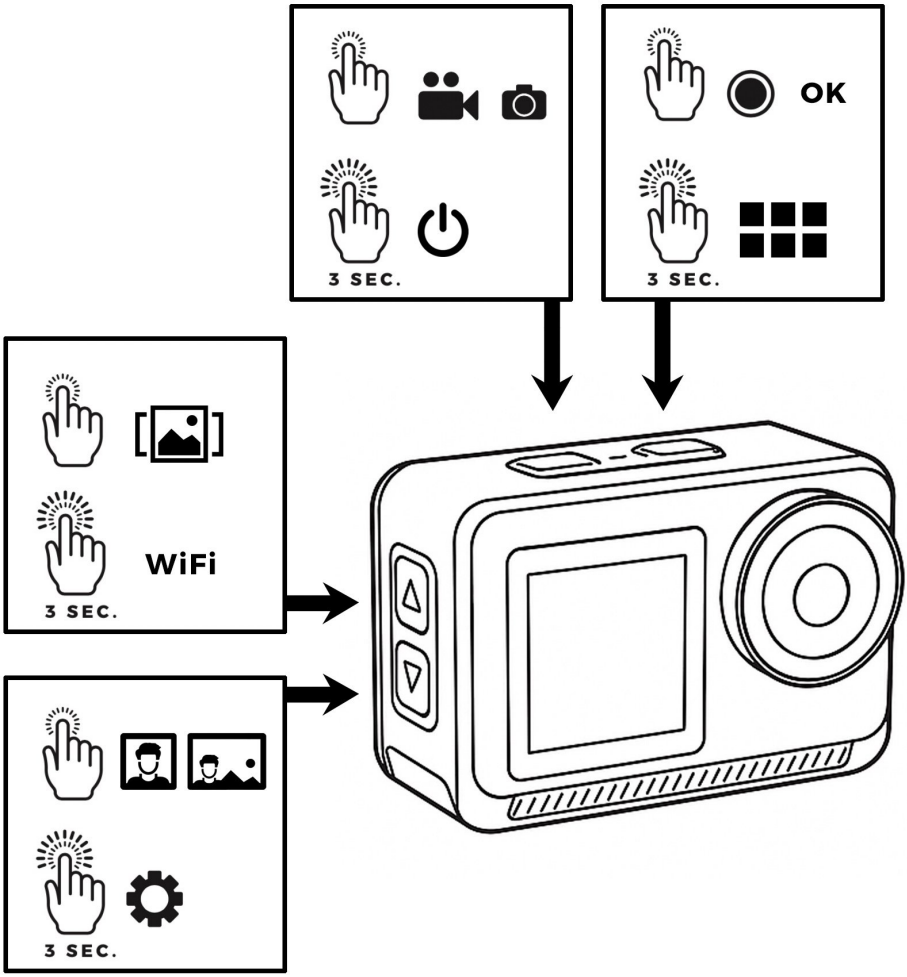
3 SEC.
OK
3 SEC.
WiFi
3 SEC.
3 SEC.

Disclaimer

Easypix makes no representations or warranties with respect to this manual and, to the extent permitted by law, expressly limits its liability for breach of any warranty that may arise from the substitution of this manual for another. In addition, Easypix reserves the right to revise this publication at any time without obligation to notify any person of such revision.

Easypix is not responsible or liable for any misuse of the information contained herein. If you have any suggestions for improvements or changes or have found errors in this publication, please let us know.

All relevant national, regional and local safety regulations must be observed when installing and using this product. For safety reasons and to ensure compliance with the documented system data, only the manufacturer may carry out repairs to components.

Failure to observe this information may result in injury or damage to the appliance.

Copyright © Easypix GmbH

All rights reserved. No part of this publication may be reproduced, distributed or transmitted in any form or by any means, including photocopying, recording or other electronic or mechanical methods, without the prior written permission of the publisher. For authorisation requests, please contact the publisher in writing.

Easypix GmbH, Em Parkveedel 11, 50733 Cologne, Germany
support@easypix.com - www.easypix.com

General information

Please read this manual and its safety instructions before using this product. Follow all instructions. This will prevent hazards that could lead to property damage and/or serious injury.

The product may only be used by persons who have fully read and understood the contents of this user manual. Make sure that every person who uses the product has read these warnings and instructions and follows them. Keep all safety information and instructions for future reference and pass them on to subsequent users of the product.

The manufacturer is not liable for damage to property or personal injury caused by incorrect handling or failure to observe the safety instructions.

Explanation of safety warnings



WARNING

"Warning" indicates a hazard with a risk which, if not avoided, may result in injury.

NOTE!

"Note" indicates information that is considered important but is not hazard-related.

Product introduction

GoXtreme Black Manta is a camera with a dual display.
The camera has a 2"/5cm screen at the back and an additional 1.3"/3.3cm screen at the front.
The rear display is a touchscreen that allows you to operate the device easily and intuitively. The front display helps you to quickly and conveniently select and frame the perfect image for your selfie shots and recordings.
The camera is waterproof up to 25 metres and has a wide range of mounts and accessories, including a wireless microphone with practical remote control function.

Intended use

The product is suitable for any type of sport.
The brackets supplied allow the camera to be attached in all possible positions: on the bike, helmet or clothing.
Please note: The remote control is not waterproof and must not be used under water.

Declaration and proven safety

The product has been tested and its safety complies with the requirements of the relevant national regulations.

Restrictions



WARNING

The product is not suitable for children under 3 years of age. Contains small parts. Choking hazard.



WARNING

Before using the product in water, make sure that all covers and fasteners on the camera are closed and sealed.
After use in salty or chlorinated water, clean the appliance with fresh water and allow it to dry.

Safety instructions



WARNING

This product is only suitable for the described purpose, the manufacturer is not liable for damage caused by improper use.



WARNING

Please read these operating instructions carefully before use.

- Always protect the device from drops, knocks and shocks.
- Keep a sufficient distance from objects that generate strong magnetic fields or radio waves to prevent them from damaging the product or impairing the sound and picture quality.
- In the unlikely event of overheating, smoke or unpleasant odours coming from the device, disconnect it from the charging cable immediately and remove the battery to prevent a fire.
- Please do not disassemble the product.
- Please dispose of waste and residues at the end of the product's life in accordance with local laws and regulations.

Operating environment

- Please remove the transparent protective film from the lens and the screen before use.
- It is normal for the housing to emit heat during use.
- The product should not be exposed to high temperature and humidity differences in order to avoid condensation inside the housing or behind the lens.
- Do not expose the product to temperatures higher than 40°C.
- Store the product in a cool (room temperature), dry and dust-free place and never expose it to high temperatures or direct sunlight for long periods.
- Protect the product from falls and impact.

Radio interference and disturbance

Radio interference can be generated by any device that emits electromagnetic signals. Due to the large number of devices transmitting and receiving radio waves, interference may be caused by superimposed radio waves.

- Do not use the product in places where the use of radio equipment is prohibited.
- If used in hospitals, health centres and medical facilities, take extra precautions and follow instructions from authorised persons to turn off the product to avoid interference with sensitive medical equipment.
- Check with your doctor or the manufacturer of your medical device (pacemaker, hearing aid, implant with electronic control, etc.) to ensure that it will not interfere with the use of the product.

Frequencies of GoXtreme Black Manta Remote Control:

Modulation type	Transmitting frequency and transmit power
GFSK	• Transmitting Frequencies: 2302 MHz – 2387 MHz • Max. Transmit Power: 8.21 dBm

NOTICE

The range in buildings can deviate greatly from the range in line of sight.
In addition to the transmitting power and the receiver characteristics, environmental influences such as air humidity or structural conditions on site play an important role for the range.

Using the device under water



WARNING

This camera is waterproof and has been tested under controlled laboratory conditions with protection class IP68 (**maximum immersion depth 25 metres for 30 minutes**). Protection against splashes, water and dust is not permanent and may be affected by normal wear and tear.

NOTE!

To ensure that the appliance is watertight, please observe the following operating and maintenance instructions carefully. The appliance is not waterproof if it is improperly operated or maintained; this is not covered by the warranty.

1. Before using underwater, make sure that the silicone pads on the waterproof cover are intact and clean. Otherwise, the waterproof integrity of the camera will be compromised and a single hair or grain of sand can cause a leak!
2. Make sure that the waterproof battery cover is firmly closed before using the camera under water. Otherwise the device will not be waterproof.
3. Avoid jumping into the water with the appliance at high speed. Otherwise, the impact may cause water to enter.

4. DO NOT use the device in a hot spring or expose the product directly to high temperatures above 40℃. High temperatures can lead to deformation of the waterproof seal on the camera housing and impair the waterproofness.

5. Protect the device from bumps and knocks. Dropping the device will damage the waterproof seal on the camera housing and the device will no longer be waterproof.

6. The microphone and the speaker opening of the device are fitted with waterproof material. Do NOT remove the waterproof material and do not drill into the holes, otherwise the device will no longer be waterproof.

7. After use, clean the appliance under running fresh water. Allow it to air dry before using it again.

8. The device is not waterproof if the battery compartment cover is not properly and securely closed.

Components



1) Lens
2) Front screen (1.3”)
3) Rear screen (2.0” touch screen)
4) Charging indicator
5) Operating indicator
6) WiFi indicator

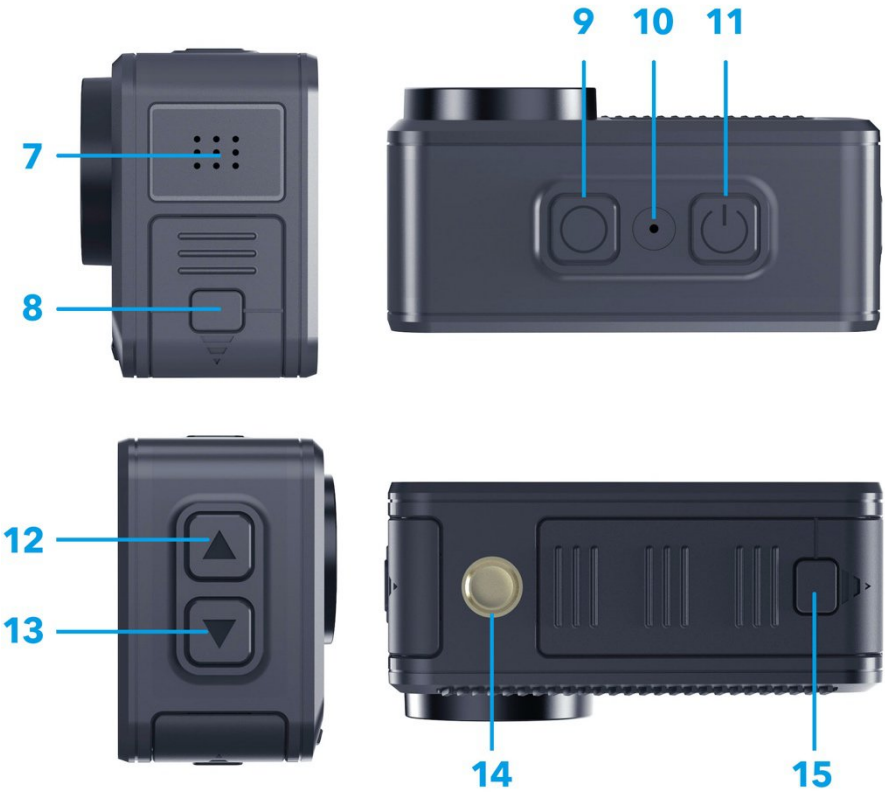

7) **Speaker**

8) **USB port under waterproof cover:**
Press and slide to open

9) **Shutter button / OK button**
- Press briefly to start or stop recording.
- Press and hold to access the video/photo functions.

10) **Internal microphone**

11) **Power button / Mode button**
    - Press briefly to switch between video and photo mode.
    - Press and hold to turn the camera on and off.

12) **Up / Playback / WiFi**
    - Press briefly to enter playback mode.
    - Press and hold to turn on the WiFi function.

13) **Down / Display change / Settings**
    - Press briefly to switch between the rear and front displays.
    - Press and hold to access the camera settings.

14) **¼" Tripod thread**

15) **MicroSD card port and battery under waterproof cover:** Press and slide to open

First steps

NOTE!

To ensure that the appliance functions optimally, please observe the following steps when using it for the first time:

➢ Step 1: Insert and charge the battery

Ensure that the battery is fully charged before first use.

- Open the battery compartment cover, insert the battery and charge it.
- Keep the device away from children while charging.
- **Make sure that the device is switched off during the charging process**.
  If the device switches on automatically when connected to a power source, please switch it off or tap "Charging" on the screen so that the battery can be fully charged.
- The device should only be charged via the USB port of a computer or a USB power supply unit with a maximum capacity of 1350mAh.
- Disconnect the USB cable connected to the device before using it.
- Charging time: 4 hours with 5V 1A power supply
- Depending on the setting and outside temperature, the battery life is up to 130 minutes at 1080p.

- Before using the device as a dashcam, remove the battery and use a 5V/1A car charger.

NOTE! **The charge status indicator lights up while the battery is charging. The charge status indicator goes out when the battery is fully charged.**

➢ Step 2: Switch on the camera

- Press and hold the on/off button for approx. 3 seconds to switch on the appliance.
- To switch off the appliance, press and hold the on/off button again for approx. 3 seconds.

➢ Step 3: Use the rear touch screen

The rear screen of the camera is a touchscreen.
You can therefore operate the device conveniently by touching the screen.

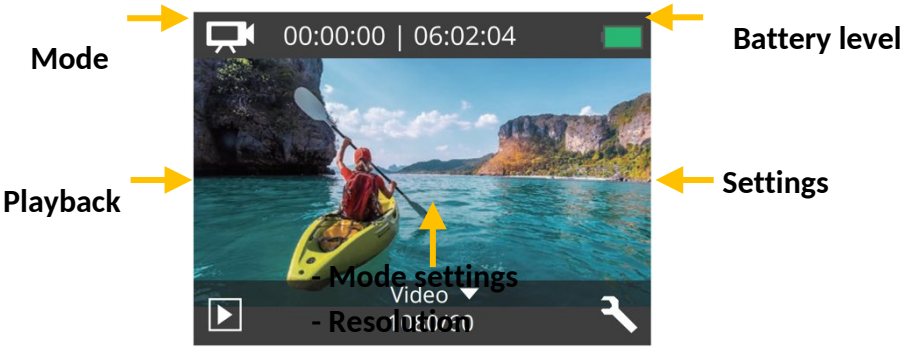

➢ Step 4: Switch between the screens

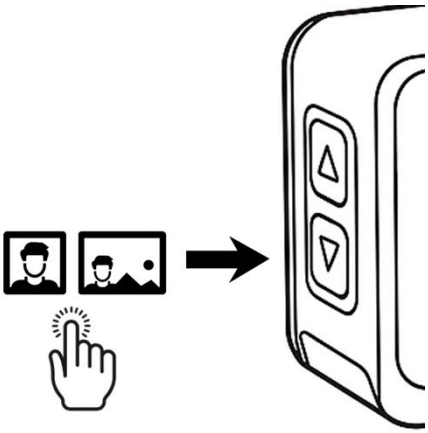

To switch between the screens, please press briefly the down-button.

The front display helps you to conveniently select the perfect image section for your selfie shots.

NOTE!

- **It is not possible to switch between screens during recording.**
- **The front and rear screens cannot be used at the same time.**
- **The front screen is not a touchscreen.**

➢ Step 5: Set your language

The device is set to English by default.
This allows you to set your desired language:

→ → **Select language**

1. click on the **tool icon at the** bottom right of the screen **.**

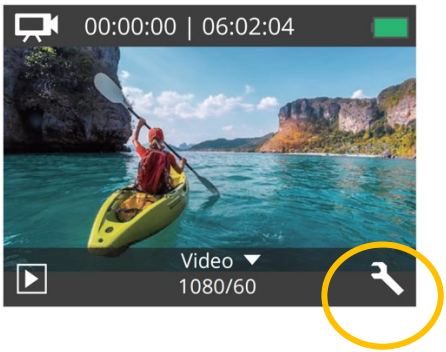

2. then click on the **settings** icon.

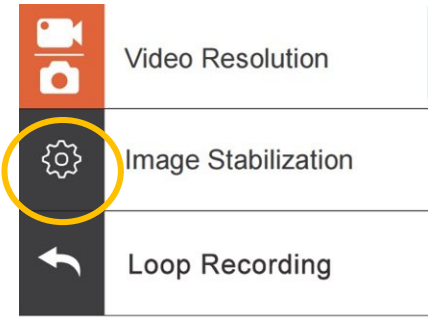

3. In the settings menu, you can scroll to the "**Language**" sub-menu with your finger.

4. Select your language.

➢ Step 6: Format your microSD card

NOTE!

- **Please ensure that your memory card is formatted in the device before you use the card for the first time.**

- No MicroSD card is included in the scope of delivery.

- For best results, we recommend the use of high-quality MicroSD cards with U3 High Speed or higher.

- **Make sure that a U3 memory card is used when recording 4K videos.** Using a card with a lower value can lead to problems with the data transfer speed due to the large file size generated by a 4K video.

- Minimum and maximum size of the microSD card: 64GB - 256GB (FAT32).

- The recording time depends on the selected

resolution.

- **ATTENTION: Formatting deletes all files on the card.**

Formatting the MicroSD card:

→ → **Format**

1. Click on the **tool icon** at the bottom right of the screen.

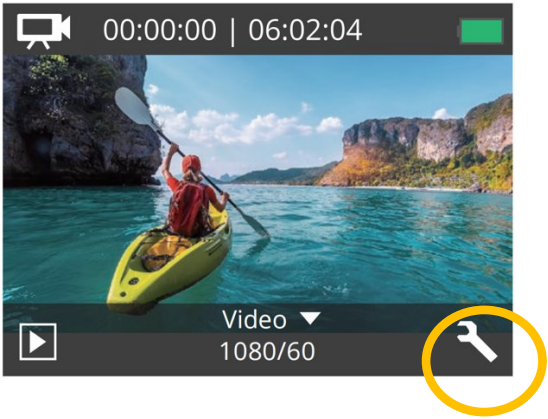

2. Then click on the **settings** icon.

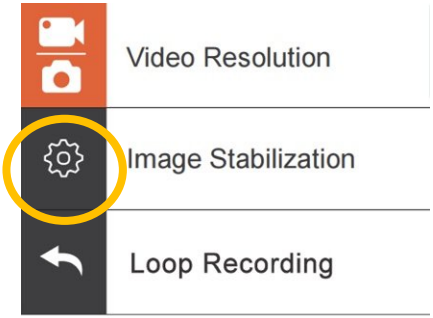

3. In the settings menu, you can scroll to the **Format card** sub-menu with your finger.

4. If you confirm the formatting there, your card will be formatted immediately and all data will be deleted.

➢ Step 7: Set date and time

1. Click on the **tool icon** at the bottom right of the screen**.**
2. then click on the **settings** icon.
3. In the settings menu, you can scroll to the **Date and time** sub-menu with your finger.
4. Enter the correct information there by clicking on the arrows.

Change the mode

Video and photo modes

Briefly press the **on/off button** or swipe your finger on the screen from left to right to switch between video and photo modes.



Playback mode

Click on the **playback icon** at the bottom left of the screen or press briefly the up-button.
You will be taken directly to playback mode and can play your videos and photos.

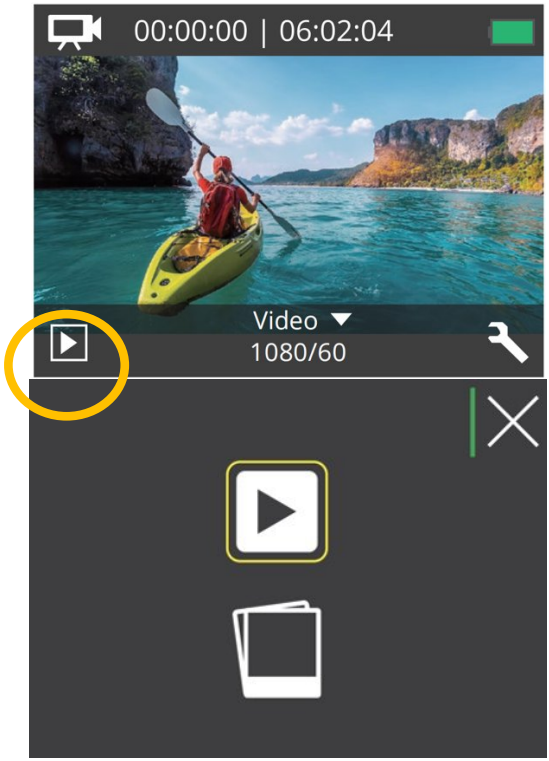

NOTE!

If the microSD card contains a lot of content, it may take a minute to load.

Play file:
To play a file, tap the video or photo icon with your finger and select the desired file using the arrow buttons.



Delete file:
To delete, select the desired file and tap the bin icon on the screen.

Playback on the computer:
To play your videos and photos on a computer, you must first transfer these files to a computer.

Connect the device to the computer using the USB cable supplied and select the "MSDC" function on the screen. This allows you to access the SD card and transfer the files to your computer.

Settings

Click on the **tool icon** at the bottom right of the screen or press and hold the down-button.
This will take you to the settings mode where you can change all settings.

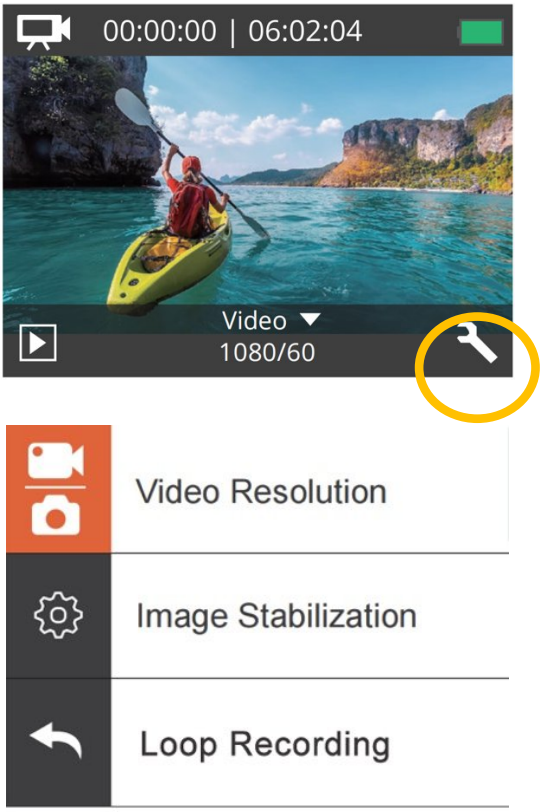

Further video and photo functions

Swipe your finger across the screen from bottom to top or click on the resolution at the bottom to activate or deactivate additional video and photo functions:

Video / Photo / Burst Photo
TimeLapse Video / TimeLapse Photo / PreRecord

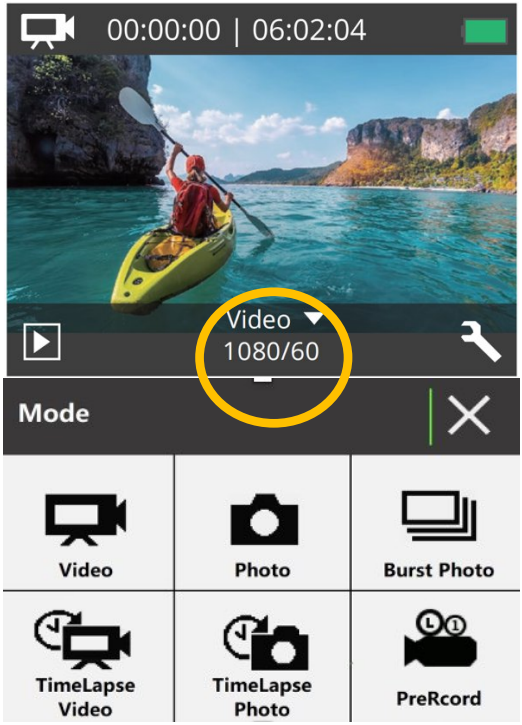

Video
Normal video recording

Photo
Normal photography

Burst photo
3 photos / 7 photos / 15 photos
With the continuous shooting function, up to 15 photos can be taken in a certain period of time.
Under **Settings** you can select the number of shots to be taken.

Please note:
If you select the continuous shooting function, the time-lapse and long exposure functions are not available.

Time lapse video
1 sec / 3 sec / 5 sec / 10 sec / 30 sec / 1 min.
With time-lapse video, a video is created from images taken at specific intervals. This option allows you to record a time-lapse event and view it immediately as a video.

Under **Settings**, you can select the time-lapse settings such as time-lapse intervals and time-lapse duration.
Please note:
- The time-lapse video is recorded without sound.
- Time-lapse videos are recorded at max. 30fps

Time lapse photo

3 Sek. / 5 Sek. / 10 Sek. / 20 Sek. / 30 Sek. / 1 Min.

The time-lapse function takes a series of photos at specific intervals. Use this mode to take photos of any activity and select the best photos later.

Under **Settings,** you can select the time-lapse settings such as time-lapse intervals and time-lapse duration.

PreRecord

If you activate the PreRecord function, the camera can start recording video a few seconds before the shutter release button is pressed.

The PreRecord function is ideal for recording spontaneous and unexpected activities.
When you press the shutter button in PreRecord mode, the camera starts recording video. Press the shutter button again to stop video recording.

Camera settings

General camera settings can be made in both video and photo mode.
Click on the **tool icon** and then on the general settings.

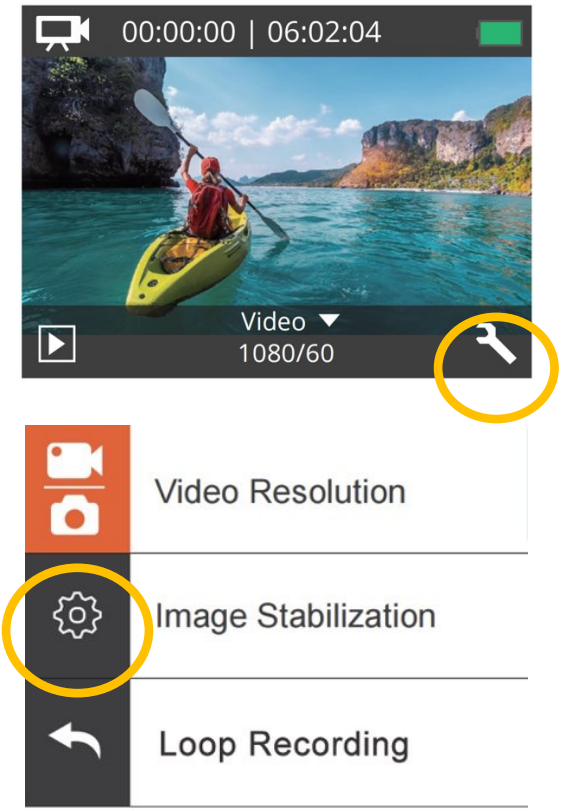

Angle
Super wide / Wide / Medium / Narrow

Dive mode
Off / On
Diving mode provides colour correction while capturing footage in clear water.

Power frequency
50 Hz / 60 Hz / Automatic

Language
Language selection

Date & time
Setting the date and time

Wireless connections
Activates or de-activates the connection between the device and remote control as well as the external microphone.

Driving mode
If you activate drive mode and connect the camera to a car charger (not included), the camera automatically starts recording when you start your vehicle's engine. The camera switches off and stops recording when you switch off the vehicle's engine again.

Please note:
- You must use a car charger with a 5V 1A output.
- If you are using the camera as a dashcam, we recommend that you switch on the video loop, driving mode and screen saver functions at the same time.

Sounds
Shutter / beep / volume / boot-up

Rotate display
This setting determines the orientation of the screen.

Screen saver
Off / 1min / 3min / 5min
The screen saver switches the display off after a certain period of inactivity to conserve battery power. To switch the display back on, press any button on the camera.

Auto power off
Off / 1min / 3min / 5min
This function switches the camera off after a certain period of inactivity to save the battery.

Format card

To keep your micro SD card in good condition, you should reformat it regularly. Reformatting deletes all content on the card. So make sure you back up your photos and videos beforehand.

Reset

Reset cameras to factory settings.

Version

System info

Video settings

Switch the device to video mode.
Click on the **tool icon** to access the video settings.

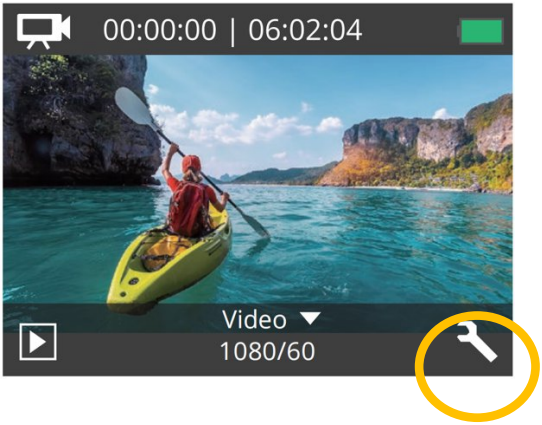

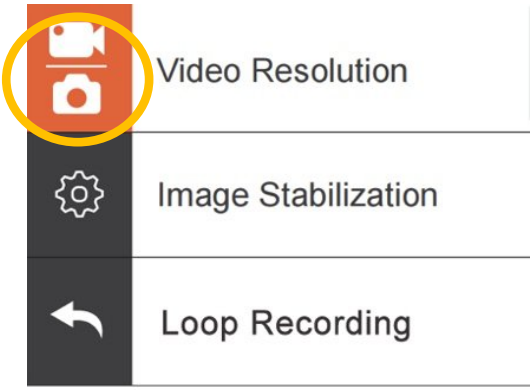

Video resolution

6K 25fps, 5K 30fps, 4K 60fps, 4K 30fps,
2.7K 60fps, 2.7K 30fps, 2K 30fps (9:16), 1080P 60fps (9:16),
1080P 120fps, 1080P 60fps, 1080P 30fps,
720P 240fps, 720P 120fps, 720P 60fps

Please note:
- When recording high-resolution videos such as 4K, the device may become hot and consume more power. This is normal.
- The micro SD card in FAT32 format stops recording when the storage capacity of the individual files exceeds 4 GB and will automatically start recording a new file.

Enhanced Image Stabilisation (EIS)

The device is equipped with the EIS function to recognise changes in movement. If the device tilts, moves or wobbles, the sensor uses an algorithm to compensate for the movements in order to equalise the changes and produce stable videos.

Please note:
- Image stabilisation is not supported for the following video resolutions: 1080P 120fps, 720P 240fps/120fps.
- If you switch on image stabilisation, time-lapse video and slow motion are not available.

Loop recording

1min / 3min / 5min

The camera will record multiple separate video files for the time duration chosen.
When the microSD card is full, the new files will overwrite the oldest recordings in sequence if loop recording is still activated.

Remark:
With micro SD cards in FAT32 format, recording is stopped if the storage capacity of the individual files exceeds 4 GB and recording is continued with a new file.

Exposure

-2.0 / -1.7 / -1.3/ -1.0 / -0.7 / -0.3 / 0.0 /
+0.3 / +0.7 / +1.0 / +1.3 / +1.7 / +2.0

White balance

Automatic / Shade / Daylight / Tungsten light

With automatic white balance, you can adjust the colour temperature of videos and photos so that they are optimised for cool or warm lighting conditions.

Special effects
Normal / Black & White / Retro / Negative / Warm / Cold

Distortion calibration
On / Off

Metering
Center / multi-field / spot

Slow Motion
1080P 4x / 720P 8x / 720P 4x

Fast Motion
2x / 4x / 6x / 10x /15x
Fast Motion is an action that appears to move faster than normal on the screen. This is achieved by filming the action in the camera at a slower than normal speed and then projecting it at normal speed.
Please note: Does not work with 4K 60fps.

Video file format
MP4 / MOV

Date stamp
If you activate the date stamp, the camera adds a time stamp to the videos you record.

Time Lapse Video

1 sec / 3 sec / 5 sec / 10 sec / 30 sec / 1 min.

Switch on the time-lapse video function by swiping your finger across the screen from bottom to top and activating the "Time-lapse video" function.
You can now make the time-lapse settings such as time-lapse intervals and time-lapse duration under **Settings.**

With time-lapse video, a video is created from images taken at specific intervals. This option allows you to record a time-lapse event and view it immediately as a video.

Remark:
- The time-lapse video is recorded without sound.
- Time-lapse videos are recorded at max. 30fps.

Photo settings

Switch the device to photo mode.
Click on the **tool icon to** access the photo settings.

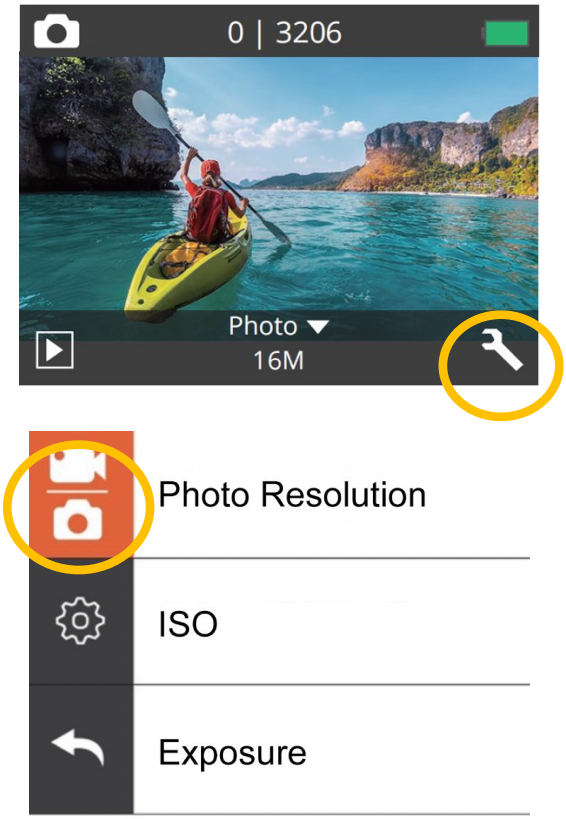

Photo resolution

64M / 48M / 30M / 20M / 16M / 14M / 12M / 8M / 5M

ISO

Automatic / 100 / 200 / 400 / 800 / 1600 / 3200

The default setting is Automatic.
ISO determines the light sensitivity of the camera.

Exposure

-2.0 / -1.7 / -1.3/ -1.0 / -0.7 / -0.3 / 0.0 /
+0.3 / +0.7 / +1.0 / +1.3 / +1.7 / +2.0

White balance

Automatic / Shade / Daylight / Tungsten light

With automatic white balance, you can set the colour temperature of videos and photos so that they are optimised for cool or warm lighting conditions.

Special effects

Normal / Black & White / Retro / Negative / Warm / Cold

Distortion calibration

On / Off

Quality

High / Medium / Low

Sharpness

High / Medium / Low

Long exposure

In the normal photo mode:
1 sec. / 2 sec. / 5 sec. / 8 sec. / 30 sec. / 60 sec.

Metering

Centre-weighted / multi-field / spot

Date stamp

If you activate the date stamp, the camera adds a time stamp to the videos you record.

Burst photo

3 photos / 7 photos / 15 photos
Switch on the burst photo mode by swiping your finger across the screen from bottom to top and activating the "Burst Photo" function.
You can now select the desired number of images under **Settings.**

With the burst photo function, up to 15 photos can be taken in a certain period of time.

Remark:
If you select the burst photo function, the time-lapse and long exposure functions are not available.

Time Lapse Photo

3 sec. / 5 sec. / 10 sec. / 20 sec. / 30 sec. / 60 sec.

Switch on the time-lapse photo function by swiping your finger across the screen from bottom to top and activating the "Time-lapse photo" function.
You can now make the time-lapse settings such as time-lapse intervals and time-lapse duration under Settings.

The time-lapse function takes a series of photos at specific intervals. Use this mode to take photos of any activity and select the best photos later.

NOTE!

- The micro SD card in FAT32 format stops recording when the storage capacity of the individual files exceeds 4 GB and starts recording a new file.

- The device stops recording automatically when the battery is empty. Your video is saved before the device switches off.

External MIC / Remote control

The external microphone can also be used as a remote control. This means that you can start or stop any recording using the microphone.

To do this, press the function button 1x for photos or 2x for videos. Press the button again to stop the video recording.

The external microphone also has a noise cancellation function. This reduces background noise to enable high-quality sound recording, and can be easily activated or deactivated using the on/off button on the remote control.





1) Power button

- Long press (2 sec.): Power on/off
- Short press: Sound recording in normal mode (LED lights up blue)
- Press again: Sound recording with noise suppression (LED lights up green)

2) Function button

- Press 1x: Take photo
- Press 2x: Start video recording (press again briefly to stop recording)

3) Microphone

4) Indicator LED

Charging the MIC battery

Charge the MIC by connecting the USB cable to the USB port on the bottom of the remote control.

The LED on the microphone will light up red to confirm that it is charging. Charging is complete when the LED light turns off.

NOTE! **The microphone may only be charged via a computer's USB port or a USB power supply with a maximum current of 1000 mAh.**

Connecting the MIC to the camera

1. Activate wireless connections in the camera.
To do this, go to the camera settings and activate the ‘Wireless Connections function.

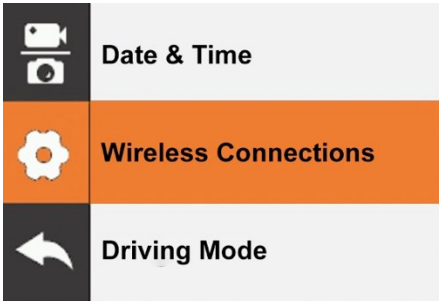

s **Settings**
s **Wireless Connections**

2. Switch on the MIC.
Press the MIC power button for approx. 2 seconds to switch on the device.
The indicator LED will light up blue.
(To switch off, press and hold the button again for 2 seconds.)

Pairing for the first connection.
To do this, press and hold the function button for 5 seconds to activate pairing with the camera.
The indicator LED will flash blue.
When pairing is successful, the LED will stop flashing and remain lit.

NOTE!

- A small microphone icon on the screen indicates that the microphone is connected.
- **The MIC is splash-proof, not waterproof!**
- **Range up to 20 metres.**

WiFi App connection

The app enables remote control of the camera via a smartphone or tablet. The functions include camera control, live preview and playback of selected content and much more.

1. Before using the WiFi function, please go to the Apple App Store or GooglePlay and install the **"iSmart DV2 "** app on your smartphone or tablet PC.

ANDROID **iOS**

2. Activate the WiFi function of the camera:
   Switch on the camera and when it is in video/photo mode, press and hold the up-button to switch on the WiFi.

3. Now open the WiFi settings on your smartphone to

select the camera from the available wireless networks.

4. The password for establishing the connection is 1234567890.

Switch-off the WiFi function:
Tap the X-symbol on the screen or press shortly the up-button.

NOTE! **Make sure that you have downloaded the correct app.**

- The WiFi bandwidth of the camera is relatively narrow.
  The signal is influenced by the distance, other signals, electromagnetic waves and other factors.
  A signal delay of 2 to 5 seconds is normal.
  The WiFi range is approximately 3 to 5 metres.

- If you use the app for the live view, only network information is displayed on the camera screen.

- When you have finished the transmission, please deactivate the WiFi function to save the battery.

- If the smartphone is close to a router, it often automatically connects to the router network (whose

password you have previously saved) and not to the camera.
Please try to connect the camera and the smartphone further away from the router so that it no longer addresses the router network.

Technical specifications

Video resolution	**6K** 25* fps (EIS) **5K** 30 fps (EIS) **4K** 60/30 fps (EIS) **2.7K** 60/30 fps (EIS) **2K** 30 fps (9:16) (EIS) **1080p** 60 fps (9:16) (EIS) **1080p** 120 fps **1080p** 60/30 fps (EIS) **720p** 240/120 fps **720p** 60 fps (EIS)
Photo resolution	64M*/48M*/30M*/ 20M/16M/14M/12M/8M/5M
Display	1.3"/3.3cm front screen 2.0"/5cm rear touchscreen
Sensor	24MP
Waterproof	Waterproof up to 25M
Microphone/Speaker	- Built-in microphone and loudspeaker - External microphone in the remote control
Wide angle	170°
Dive mode	Yes
Vehicle mode	Yes
Slow Motion	1080P 4x / 720P 8x / 720P 4x
Fast Motion	2x / 4x / 6x / 10x /15x

Time-lapse video	1 sec / 3 sec / 5 sec / 10 sec / 30 sec / 60 sec.
Time-lapse photo	3 sec. / 5 sec. / 10 sec. / 20 sec. / 30 sec. / 60 sec.
Serial images	3 photos / 7 photos / 15 photos
Loop recording	1 min. / 3 min. / 5 min.
ISO	Auto / 100 / 200 / 400 / 800 / 1600 / 3200
Long exposure	In normal photo mode: 1 sec. / 2 sec. / 5 sec. / 8 sec. / 30 sec. / 60 sec.
Exposure metering	Centre-weighted / multi-field / spot
Effects	Normal / Black & White / Retro / Negative / Warm / Cold
Screensaver	Off / 1 min. / 3 min. / 5 min.
Automatic switch-off	Off / 1 min. / 3 min. / 5 min.
White balance	Automatic / Shade / Daylight / Tungsten light
WiFi	Range approx. 3 to 5 metres
WiFi frequency	2.4 GHZ
WiFi app	iSmart DV2
Remote control + microphone	Wireless remote control with microphone function, range up to 20 metres
File formats	MP4, MOV, JPG

Interface	USB Type-C
Battery	Replaceable 1350mAh Li-ion battery
Dimensions	65 x 45 x 33 mm
External memory (Not included in the scope of delivery)	- Support for 64GB - 256GB microSD cards - Requirement: U3 card or higher

*by interpolation

Box contents

- Camera
- Remote control and microphone
- Hard case
- Adapter for brackets
- Screw adapter
- Straps
- Bike mount
- Helmet mount incl. sticker
- Two batteries
- USB cable
- User instructions EN/DE

Operating instructions in other languages are available for download at:
bit.ly/3XeiwYo or
www.easypix.info/download-manuals/download/goxtreme-black-manta-2/

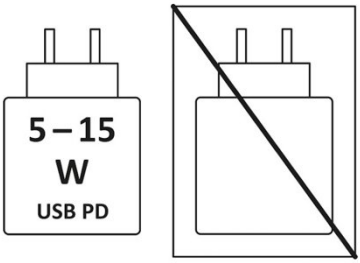

Power adapter not included.
To support EU initiatives to reduce electronic waste, this product is supplied without a power adapter.
The battery of this product can be charged via a computer or a separate power supply (5W - 15W) using the supplied USB cable.

Waste disposal



Removal of the packaging:
Dispose of the packaging according to its type. Add cardboard and paperboard to the waste paper, film and plastic packaging to the recycling collection.



Waste electrical and electronic equipment and/or batteries disposed of by users in private households in the European Union:
This symbol on the product or packaging means that it cannot be disposed of with household waste. You must take your old appliance and/or battery to the appropriate collection system for the recycling of electrical and electronic equipment and/or batteries.



For more information on recycling this appliance and/or battery, please contact your local authority, the shop where you purchased the appliance or your household waste disposal service. Recycling materials helps to conserve natural resources and ensures that they are recycled in a way that protects human health and the environment.



Notes on the battery

Maximizing battery life

While charging:

- Avoid charging battery to 100% constantly
  – ideal: max. 80%
- Do not discharge below 20% (avoid deep discharge)
- Use original cable
- Avoid overheating during charging
- Avoid using device while charging
  – switch off the device

Temperature handling:

- Do not store device/battery in direct sunlight
  or a hot car

- Store at room temperature
  (not in freezing conditions)
- Avoid using the device in extreme temperatures

Settings and usage:

- Enable the Screensaver and Auto Power Off functions
- Use Wi-Fi only when needed

When not in use:

- Charge battery to around 40-60%
- Store in a cool, dry, and dark place
- Check and recharge every 3-6 months

Long-term care:

- Use battery regularly (don’t store indefinitely)
- Inspect for swelling or damage
  (do not use defective batteries)



WARNING

- Do not disassemble, puncture, or crush the battery. Avoid short-circuiting the battery and do not expose it to high temperatures. Stop using the battery immediately if it leaks or becomes swollen.
- Keep the battery out of reach of children.
- Batteries may explode if exposed to open flames. Never throw batteries into fire.
- Dispose of used batteries in accordance with local regulations.
- Before disposing of the device, remove the battery and dispose of it separately.

Declaration of conformity

CE Declaration of Conformity

We hereby declare that the device is in compliance with the essential requirements and relevant provisions.
The full text of the **EU Declaration of conformity** can be found in German and English at:
www.easypix.info/download/pdf/doc-goxtreme-black-manta2.pdf

UKCA Declaration of Conformity

We hereby declare that the device is in compliance with the essential requirements of the Radio Equipment Regulations.
The full text of the **UKCA Declaration of conformity** can be found at:
www.easypix.info/download/pdf/doc-goxtreme-black-manta2.pdf

EASYPIX | LIFESTYLE ELECTRONICS