

PR-4852

denver.eu

05/2026

FR

Cet appareil, ses cordons et ses accessoires sont recyclables

À DÉPOSER EN MAGASIN

OU

À DÉPOSER EN DÉCHÈTERIE

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1.Do not look directly at the projector lens while the device is working to avoid eye injury.

2.This projector is not waterproof, so please keep it away from rain, moisture, and other items containing liquid, such as a vase.

3.To avoid blocking the projector vents, please do not cover the projector with a cloth, carpet, or other materials.

4.Keep the product out of the reach of children and pets to avoid chewing and swallowing.

5.The product operating and storage temperature is 0°C to 40°C. Operating or storing under or above this temperature might affect functionality.

6.Never open the product. Touching the internal electronics can cause an electric shock. Repairs or service should only be performed by qualified personnel.

7.Only charge with the supplied power cable.

8.Do not use original accessories with the product, as this may make the product's functionality abnormal

9.Regularly clean the projector vents; otherwise, dust may cause cooling malfunctions.

10.Do not use the projector in a greasy, damp, dusty, or smoky environment; oil or chemicals may cause malfunctions.


11.Please cut off the power if the projector is not in use for a long period

12.Non-professionals are forbidden to disassemble the projector for testing or maintenance.


Denver A/S reserves the rights for print errors
Denver A/S cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. If you detect any inaccuracies or omissions, please inform us at the address on the back cover.

Projector Description

1.IR sensor
2.Lens
3.Dust filter
4.Rotatable wheel
5.Power input
6.ON/OFF
7.HDMI interface
8.Indicator light
9.Audio output
10.USB-A interface

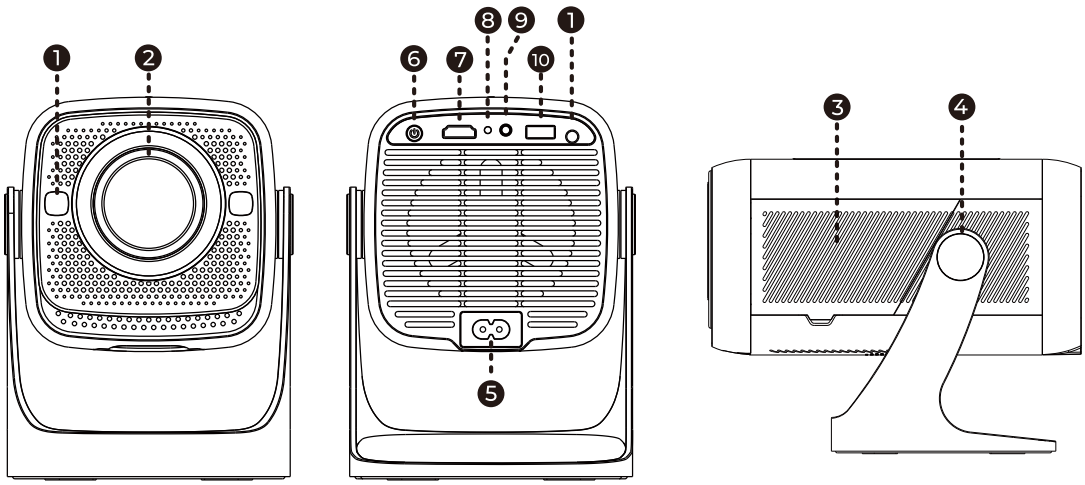


1.Home
2.Power
3.Focus –
4.Left
5.OK
6.Return
7.Menu
8.Vol –
9.Mute
10.Focus +
11.Up
12.Right
13.Down
14.Source
15.Vol +

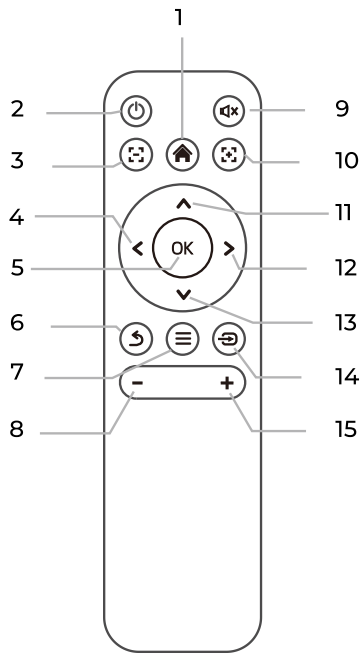


Projector Description

1. Connect the included 250 V power cable to the projector's power input, and plug the Europlug end into a stable power socket **(Power cable is included).**

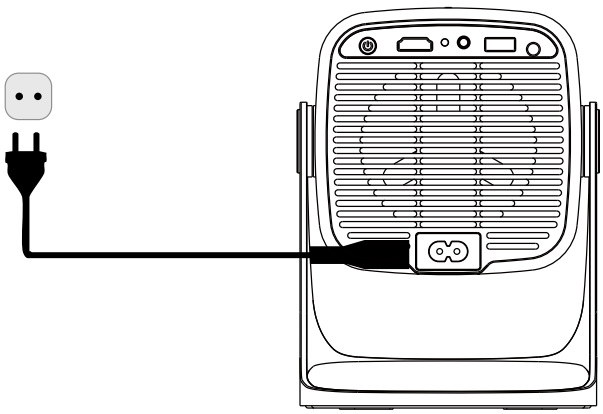

2. To power the projector on or off, short-press the power button.

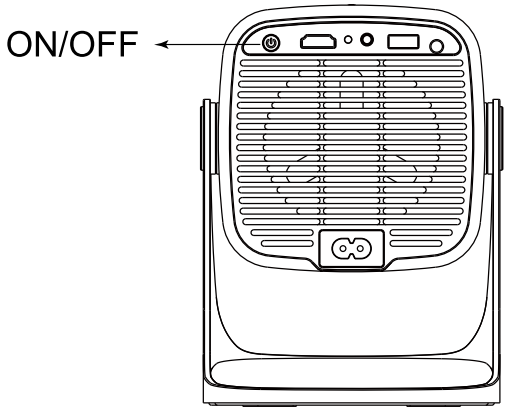


When pointing the remote control at the projector, you can also short-press the power button to turn the projector on or off (Insert 2x AAA batteries into the remote control - Batteries are not included).


Focus Adjustment

When the projector is on, adjust sharpness by pressing the Focus +/– button on the included remote control. This will be needed whenever the picture becomes blurry or the distance from the projector to the wall or screen changes.

Remember to align the projector evenly with the wall or screen to ensure a properly even image projection.

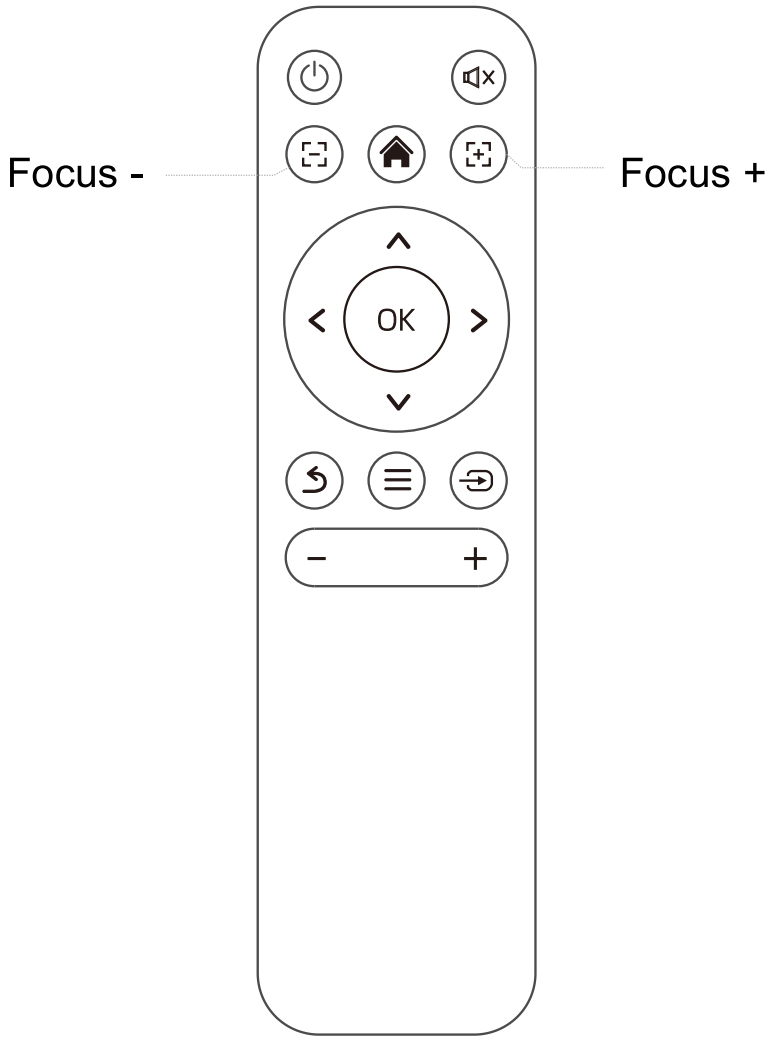

Home screen applications

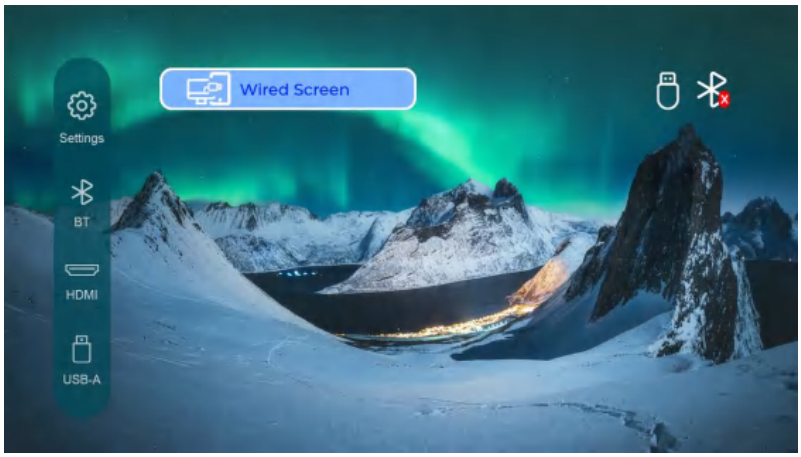

On the Home screen application page, click icons illustrated to use the different functions described below

1.HDMI:

On the home page, select HDMI.

HDMI is available for mirroring the image from your device using the included HDMI-to-HDMI or HDMI-to-USB-C cable.

All PCs can be connected to the projector via one or both of the included cables by inserting the HDMI or USB-C end of the included cables into the PC and the other HDMI end into the projector.
When the device is connected via the HDMI cable remember to press the “ HDMI” button on the home screen to enable the mirror screen effect.

Important note for USB-C phone connection via HDMI:

For mobile phones only USB-C input phones that support DP ALT MODE can mirror the phone's screen through the projector's HDMI input.

When a supported USB-C phone device is connected via the included HDMI-to-USB-C cable remember to press the “ HDMI” button on the home screen to enable mirror screen effect.

Note: that some applications and streaming services may not allow screen sharing via an HDMI cable to your PC or USB-C phone, even with DP ALT MODE support.

Important note for continuous movie watching on phone:

How to set “Never ” as the lock duration so that you can watch movies continuously.

For iPhones (ios):


Extend Auto-Lock Time
1. Go to Settings
2. Tap Display & Brightness.
3. Tap Auto-Lock
4. Set it to Never.

For Android Phones:

Extend Screen Timeout
1. Go to Settings
2. Tap Display (sometimes it's under LockScreen or Advanced)
3. Tap Screen timeout or Sleep
4. Set it to the maximum duration (e.g., 10 or 30 minutes, or "Never" if available)

Note: Be sure to turn it back later to save battery

Wired screen share

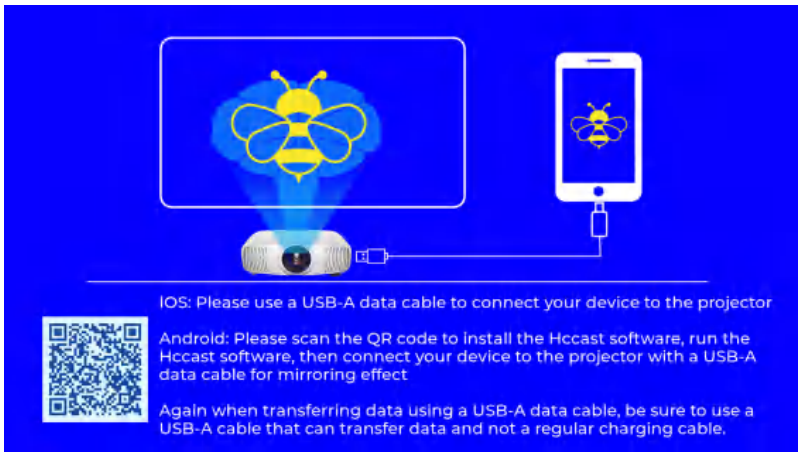

IOS:

Please use a USB-A data cable to connect your device to the projector

Android:


Scan the QR code to install the Hccast software. Run the Hccast software, then connect your device to the projector with a USB-A data cable to enable the mirroring effect.


QR code for android software to use “Wired screen”

Use a USB-A data cable to connect your Android phone to the projector. The phones's screen will appear as below.

Click" OK" to proceed to the next step, and then click "start now" to begin the mirroring your Android phone.

When transferring data using a USB-A data cable, be sure to use a USB-A cable that can transfer data and not a regular charging cable.

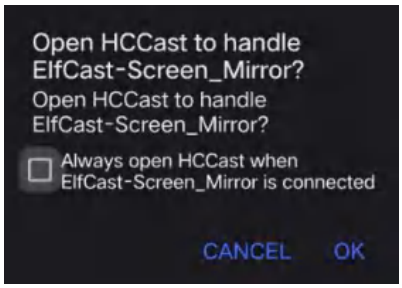

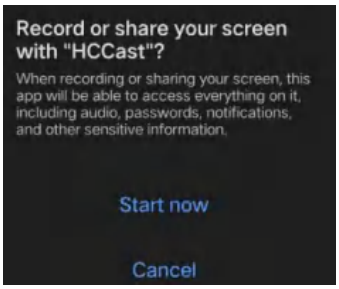

IMPORTANT NOTE: Some applications do not allow for streaming via the USB-A input wired screen function.

To use many of these applications use either the included HDMI-to-HDMI cable to connect to PC or the included HDMI-to-USB-C cable to connect to your USB-C input phone supporting DP alt mode or PC.

Follow the steps described under the HDMI point written in the start of this manual. USB- A wired screen function is therefore mainly used for easy access to the photo roll.

Use HDMI interface and included HDMI cables for access to the most functions, applications and streaming services possible t hrough your devices.

Settings:

On the SET page, you can set up the projection, picture, Bluetooth, system settings, projection, audio, time, etc.

1.Options:

Use the left and right buttons of the remote control and select "options". You can adjust many features such as language, factory reset, software upgrade, auto sleep, OSD timer, Ratio and Version info.



2.Sound setting:

Adjust the left and right buttons of the remote control and select “Sound ”. Here you can adjust Sound Mode, Balance.




3.Picture setting:

Adjust the left and right buttons of the remote control and select “ Picture ”. Here you can adjust Image Mode and Color Temperature




4.Adjust setting:

Adjust the left and right buttons of the remote control and select “Adjust”. Here you can adjust Flip,Vertical Keystone, Trapezoidal reset,Window Zoom and Zoom Screen Reset.

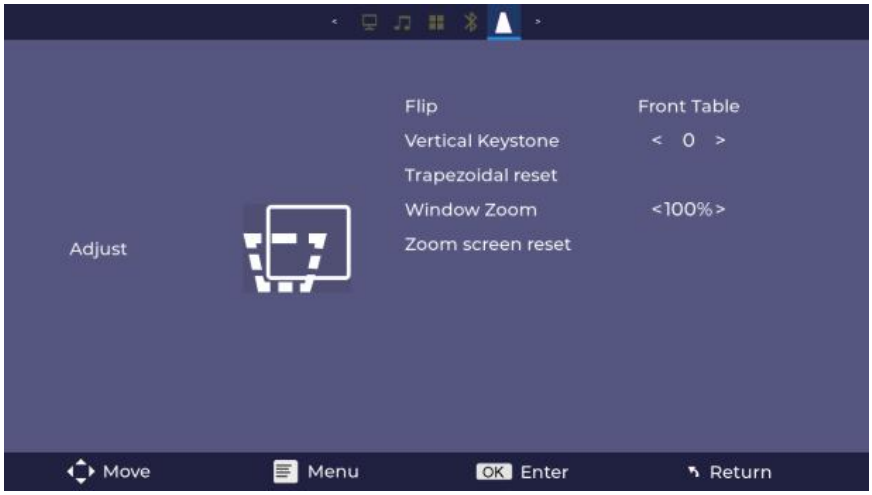


5.Bluetooth:


In home page, select Bluetooth.
Press OK button to turn Bluetooth on/off

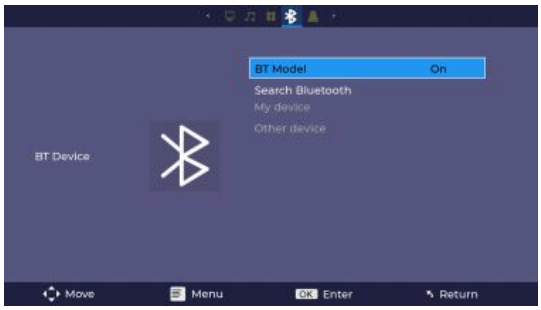


Press OK button to Search Bluetooth

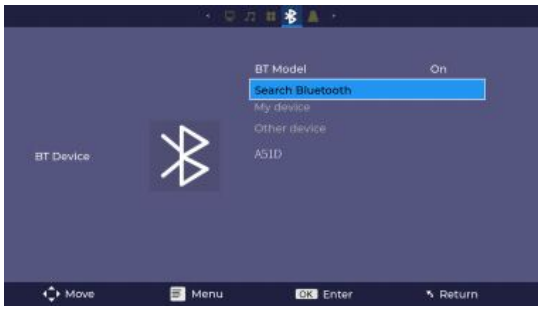

Select the connection you want among the other speaker devices by pressing the OK button.

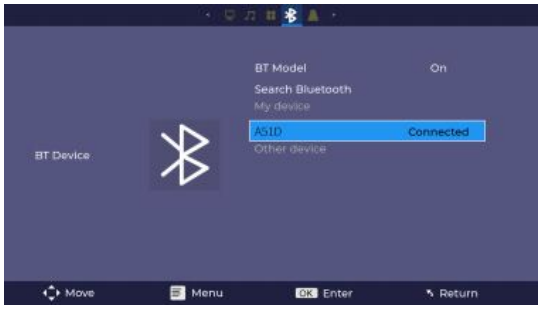


Select the connected Bluetooth device to disconnect or delete it.

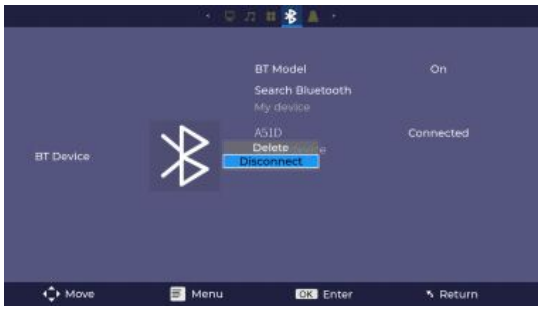

6.USB-A

On the home page, select USB-A to play media files from your USB Drive. When you insert a USB drive via the USB-A input, you can watch photos and video files.
The media function cannot be used to mirror cast from any cable. This can be done through the HDMI or wired screen function, as described at the beginning of this manual.

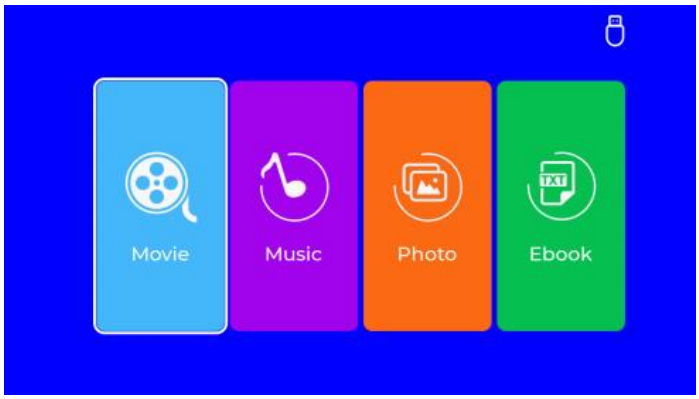

Features

Supports 4K UHD (3840x2160p)

Native 3K (2880x1620p)

ANSI Lumens: 700 ANSI

Projection distance: 1.4 - 5M

Projection size: 45 - 180 inches

Bluetooth for connecting to an external speaker

Interfaces: HDMI, USB-A, and earphone jack

HDMI interface for easy connection to Apple TV®, game consoles, TV Stick, etc.

Accessories included: HDMI- to- HDMI cable, HDMI- to- USB- C cable, power cable, and remote control (2x AAA batteries are not included)

The included HDMI- to- USB- C cable allows for connecting to a PC and USB-C input phones that support DP Alt Mode (iPhone® 15, 16, and Sony Xperia® 1 VI, etc.).

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S

Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crosse out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type PR-4852 is in compliance with Directive 2014/53/EU. The full text of the RED declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: PR-4852. Now enter product page, and RED directive is found under downloads/other downloads.

Information on standby/off mode power consumption and power management for products compliant with Commission Regulation (EU) 2023/826 can be found at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: PR-4852 and enter the page.

Max audio output power: 5W RMS

Max RF output power: 4 dBm

Bluetooth operating frequency range: 2.4GHz-2.4835GHz

Max RF output power: 4 dBM

DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark
www.denver.eu
www.facebook.com/denver.eu

Contact

Main contact point: contact.hq@denver.eu

Nordics

Headquarter
Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: +45 86 22 61 00
(Push "1" for support)

E-Mail
For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: 0900-3437623
E-Mail:support.nl@denver.eu

Spain/Portugal

DENVER SPAIN S.A
Ronda Augustes y Louis Lumiere, nº 23 – nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain
Phone: +34 960 046 883
Mail:support.es@denver.eu

Portugal:
Phone: +35 1255 240 294
E-Mail:denver.service@satfiel.com

Germany

Denver Germany GmbH Service
Service Center
Max-Emanuel-Str. 4
94036 Passau

Phone: +49 851 379 369 40

E-Mail
support.de@denver.eu

Monday - Thursday 09:00 - 16:30
Friday 09:00 - 14:00

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: +43 1 904 3085
E-Mail:denver@lurfservice.at

Poland

LetMeRepair Poland sp. z o.o.

ul. Częstochowska 140
62-800 Kalisz

Phone: 62 75 38 092
E-Mail:denver-service@letmerepair.pl

Godziny pracy: 8 – 18 (poniedziałek – piątek)

If your country is not listed above,
please write an email to
contact.hq@denver.eu

Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

22
PAP