Protect Your Source
Secure Your Data

Thecus C10GTR
Installation Guide

Thecus®

Thecus®, Creator in Storage

www.thecus.com

Thecus C10GTR Layout

Major components of the C10GTR :

Installation Procedure :

1. Ensure the motherboard is completely powered down
2. Insert the C10GTR into the PCI-E slot.
3. Insert the installation CD into your CD-ROM drive on the host PC.
4. The installation menu should launch automatically.
5. Click C10GTR Driver to install the driver.

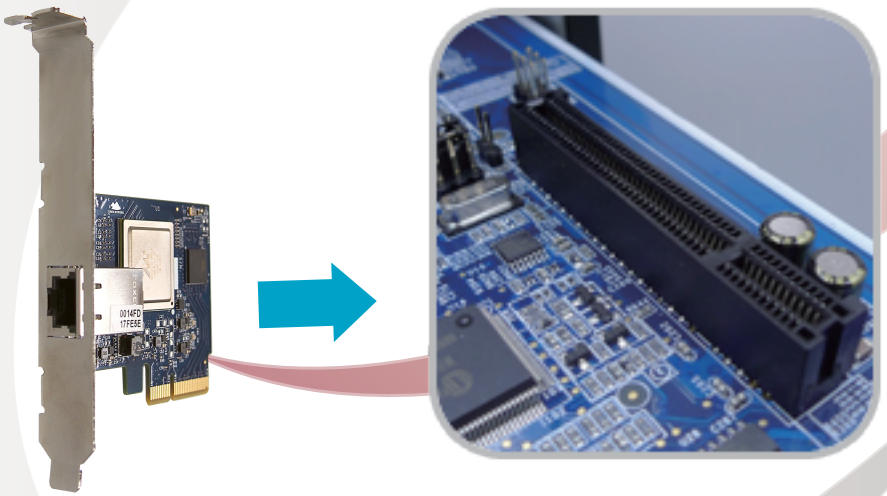

Product Specifications

1. Hardware Platform

Item	Spec
PCI Express Host Bus Interface	Compatible with PCI Express Rev2 x4, x8 slots
Interconnector	10GBase-T
Cabling Type	CAT 6a
LED indicator	LINK (Solid) / ACTIVITY (Blinking) LINK SPEED (Orange=10G / Yellow = 1G)
Power Consumption	4.95W/10G, 3.3W/1G, 2.48W/100M
Dimension	Low Profile
Operating Temperature	0 ℃ to 70 ℃
Storage Temperature:	-40℃ to 85 ℃

2. Software Functions

Item	Spec
MAC and Media Interfaces	• 10Gb/1000Mb/100Mb auto negotiation support • XAUI interface • IEEE 802.3az support (EEE) • Jumbo frame support (16K) • IEEE 802.1q VLAN support • RFC2819 RMON MIB statistics • Multicast • IEEE 802.3ad Link Aggregation support
Operating Systems Supported	• Windows® Server Server 2012, 2008R2, Windows 8, Windows 7 • Linux 2.6, Linux 3.x • VMWare 5.x • Hyper V

For more information or on-line resources, please visit http://www.thecus.com.

Copyright© 2014 Thecus Technology Corp. All rights reserved.
Thecus and other names of Thecus products are trademarks or registered trademark of Thecus Technology Corp. Other products and company names mentioned herein are trademarks of their respective companies.