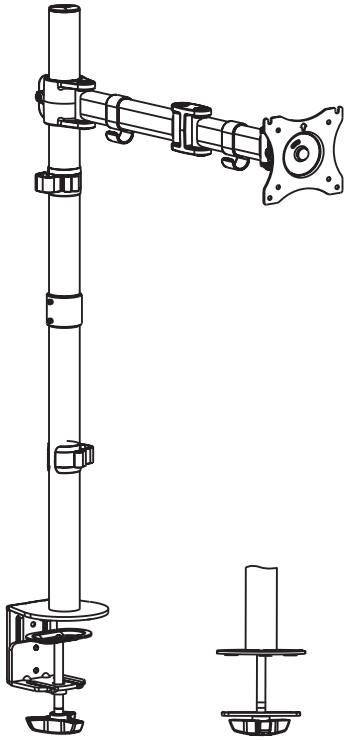


Single Monitor Extra Tall Desk Mount

STAND-V001T Series

Assembly Manual

Individual Product SKUs

STAND-V001T *STAND-V001TW*

⚠ WARNING ⚠

If you do not understand these directions, or if you have any doubts about the safety of the installation, please contact our product support team at 309-278-5303 or help@vivo-us.com for further assistance. Check carefully to make sure there are no missing or defective parts. Failure to report missing parts within 30 days may result in denial of free replacement. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



WARNING: CHOKING HAZARD
SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.



DO NOT EXCEED WEIGHT CAPACITY
FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY.

Need Help? We're Here For You

US-Based Customer Support from Trained Professionals

Monday-Friday from 7am-7pm CST
Saturday 8am-4pm CST



Email Us
help@vivo-us.com



Chat with Live Agent
www.vivo-us.com




Give Us a Call
309-278-5303 ext. 1




Assembly Video & Product Info
www.vivo-us.com/products/stand-v001t


Package Contents




A (x1)
Arm




B (x1)
Bottom Pole



C (x1)
Top Pole



D (x1)
Clamp



E (x1)
Grommet Plate



F (x1)
Pole Connector



G (x2)
Cable Clip



H (x1)
Pole Cap



I (x5)
Soft Pad



J (x1)
Support Plate

Included Hardware & Tools



S-A (x3)
M6x16mm
Screw



M-A (x4)
M4x12mm
Screw



M-B (x4)
M5x12mm
Screw



M-C (x4)
M5 Washer



T-A (x1)
3mm Allen
Wrench



T-B (x1)
4mm Allen
Wrench



T-C (x1)
5mm Allen
Wrench



T-D (x1)
6mm Allen
Wrench

Tools Needed:



Phillips Screwdriver



Drill



3/8” (10mm) Drill Bit


Weight Capacity:



Assembly Steps

STEP 1

Insert Pole Cap **(H)** into Top Pole **(C)**.

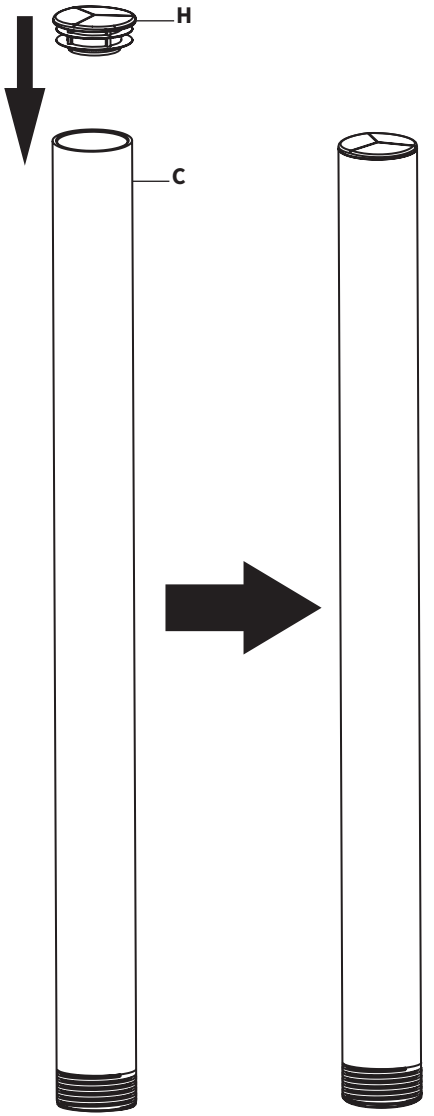



STEP 2

Option 1: Clamp Assembly

1.1 Desktop Thickness: 0.40" - 3.35" (10mm - 85mm)

Install Clamp **(D)** to Bottom Pole **(B)** using M6x16mm Screws **(S-A)** and tighten using 4mm Allen Wrench **(T-B)**. Remove the adhesive backing from Soft Pads **(I)** and place them on the underside of Clamp **(D)**.

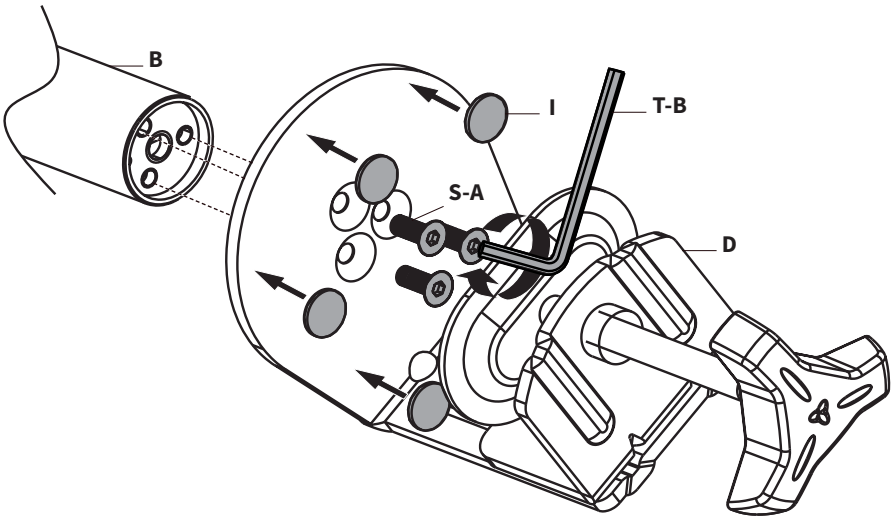

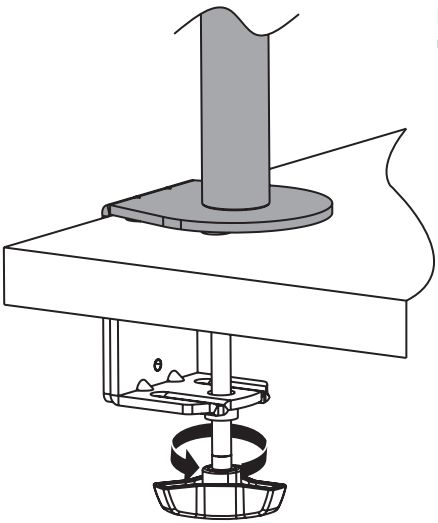


Mount Clamp to desktop and tighten the knob until secure.


Proceed to **STEP 3** on **Page 7**

Option 2: Grommet Assembly


For Desktop Thickness .39 - 2.95" (10mm - 75mm)

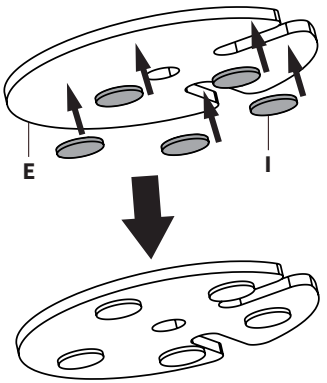


Remove the adhesive backing from Soft Pads **(I)** and place them on the underside of Grommet Plate **(E)**.

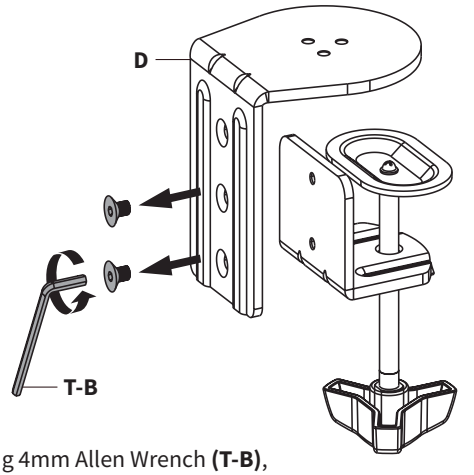


Using 4mm Allen Wrench **(T-B)**, disassemble Clamp **(D)**.

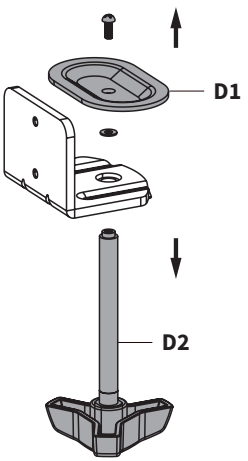

Remove Clamp Plate **(D1)** using a Phillips screwdriver. Separate Knob **(D2)**

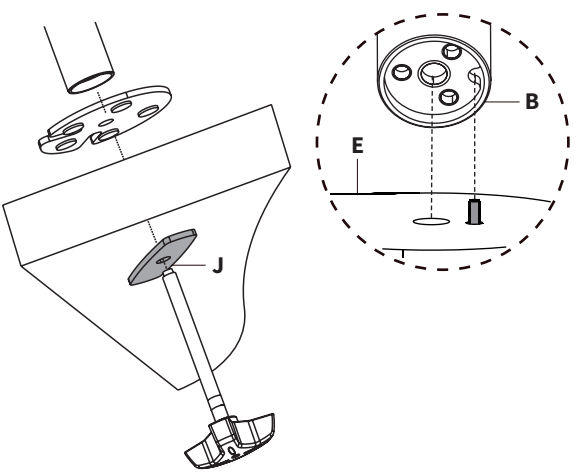

Place Bottom Pole **(B)** on top of Grommet Plate **(E)**. Secure using Knob and Support Plate **(J)**.

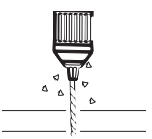



No Grommet Hole?

If you do not have an existing hole for installation, drill a hole through your desktop in your desired mounting location using a 3/8" (10mm) drill bit. The hole size must be between 0.4" and 2.25" (10 and 57mm).

STEP 3

Thread Pole Connector **(F)** into Bottom Pole **(B)**, then thread Top Pole **(C)** into Connector. Secure by tightening the set screws on Pole Connector using 3mm Allen Wrench **(T-A)**.

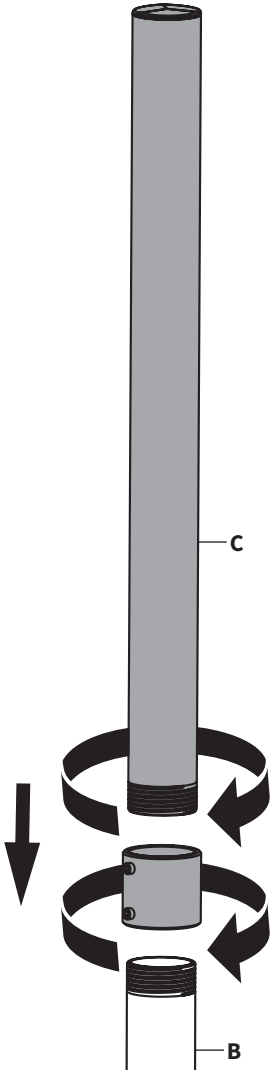

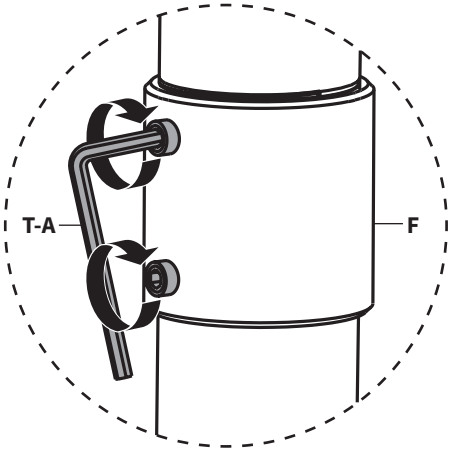




Poles Won't Thread Into Connector?


If you have trouble threading Poles **(B,C)** into the Pole Connector, slightly loosen the two **Set Screws** on the connector by using a 3mm Allen Wrench and turning counter-clockwise.

STEP 4

Loosen the **Screw** on the back of Arm **(A)** using the 5mm Allen Wrench **(T-C)**. Slide Cable Clip **(G)** and Arm down the Top Pole.

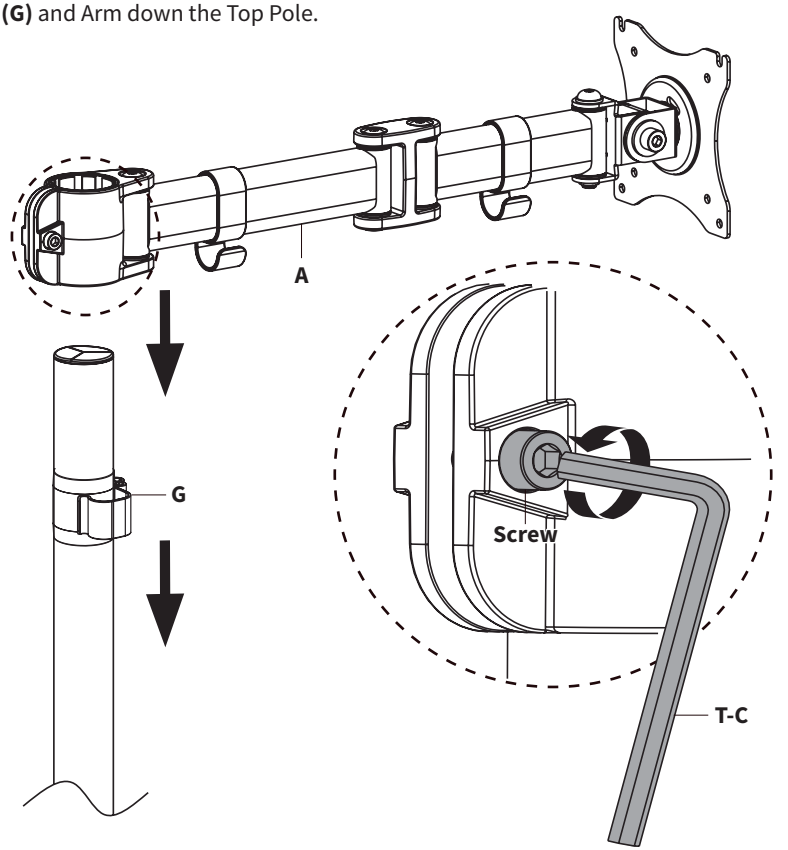


Retighten the Screw on Arm using the 5mm Allen Wrench when desired position is reached.

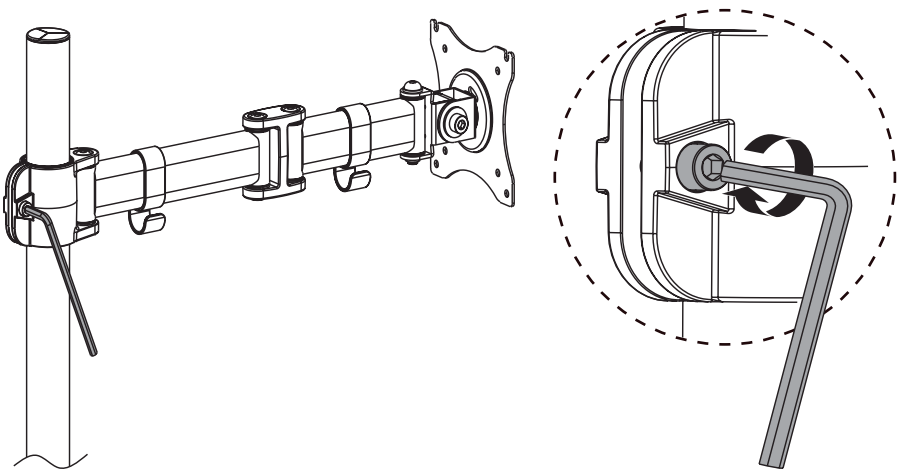


STEP 5


Install Screws **(M-A, M-B)** and M5 Washers **(M-C)** to the top of your monitor's mounting holes. Make sure to leave 3mm of thread exposed.

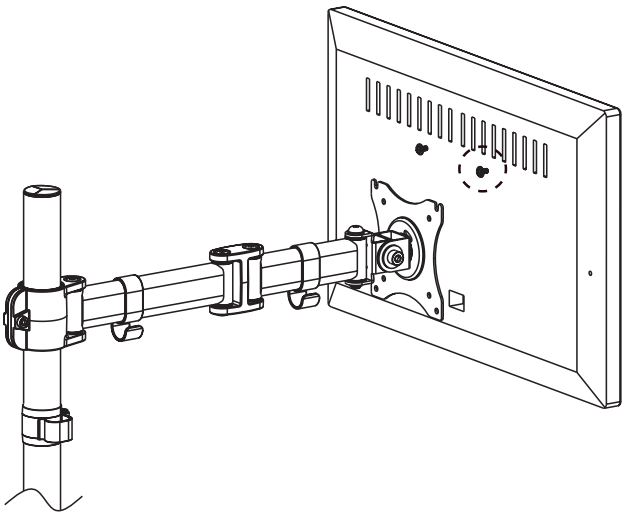





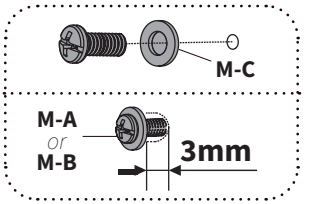

Align previously installed Screws with the top of VESA Plate. Secure using two more Screws and M5 Washers in the bottom two holes. Tighten all four screws using a Phillips screwdriver.

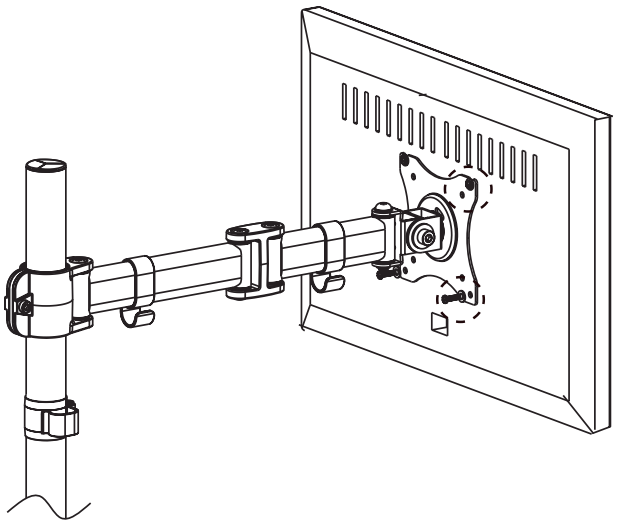


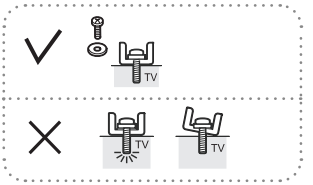


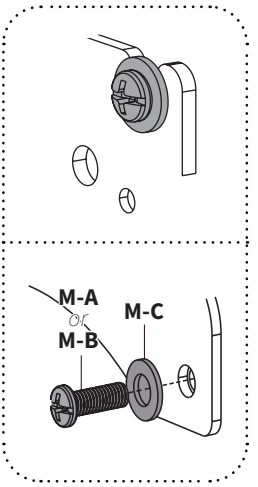

STEP 6


Store Allen Wrenches **(T-A thru T-D)** in Cable Clips **(G)**.

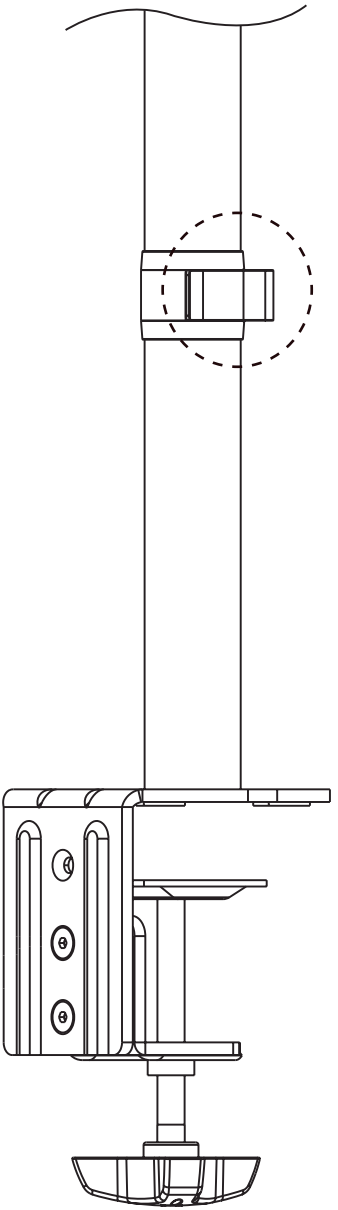

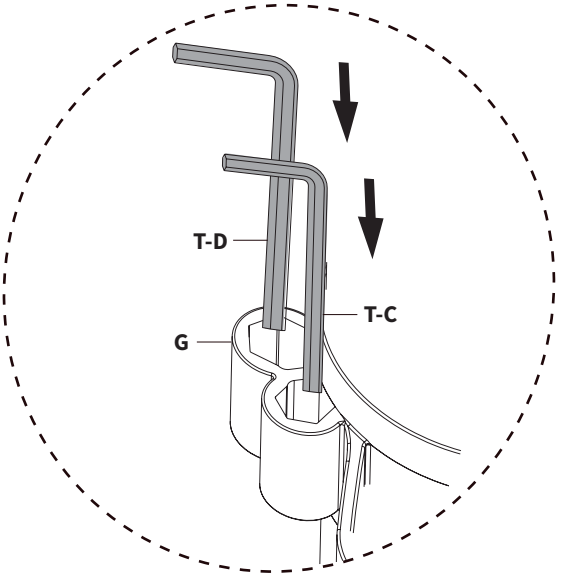


Adjustments

Tilt Tension Adjustment

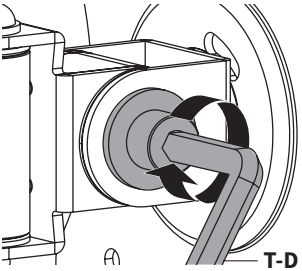


Adjust vertical tilt tension in the monitor bracket by using 6mm Allen Wrench **(T-D)**.

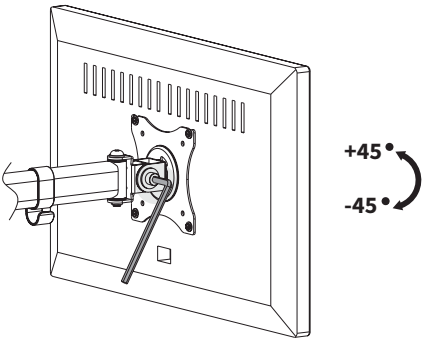

Adjust as Desired

Monitor mount can be turned to support a vertical display.

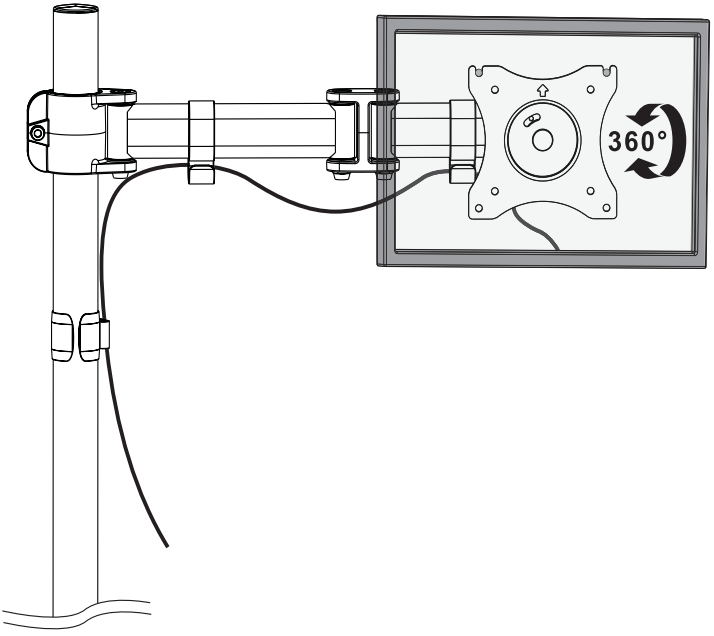

LAST UPDATED: 07/02/26
REV3.1
STAND-V001T: v2.1
STAND-V001TW: v1.1



Need Help? **We're Here For You**

Monday-Friday from 7am-7pm CST
Saturday 8am-4pm CST



Email Us
help@vivo-us.com



Chat with Live Agent
www.vivo-us.com



Give Us a Call
309-278-5303 ext. 1



VIVO-us



@vivo_us



@VIVOus



VIVO

FOR MORE GREAT VIVO PRODUCTS,
CHECK OUT OUR WEBSITE AT: WWW.VIVO-US.COM