



## Installation guide

celexon Expert Fixed Frame  
screen PureWhite

## Parts list

Before installing, please check that all parts listed are included. If anything is missing, please contact your dealer/reseller.



4 x aluminium frame segment (A)



3 x adjustable mounting brackets (B)



rubber tensioning straps (C)



4 x galvanized rods (D)



3 x screws+wall plugs (max 300x225) (E)  
4 x screws+wall plugs (min 350, max 400 cm) (F)



1 x projection fabric (G)



4 x PVC corner covers (H)

## Caution

Before installing the screen, please read the instructions carefully. We would recommend that these instructions are stored safely for future reference. The manufacturer does not take responsibility for any damage to property or personal injury resulting from improper use or installation.

Do NOT install the screen nearby or over radiators or air conditioning units as the PVC coating is a plastic material which stretches and remains damaged when subjected to heat and/or cool air.

Do NOT install the screen facing direct sunlight or blocking a window as the PVC coating might get damaged as per the reasons above.

The PVC coated fabric is very sensitive to temperature variation. We recommend to wait 2 hours for the screen to acclimatise before assembling the screen, esp when the screen has been very cold and is brought into warmer temperatures.

Do NOT treat the fabric with alcohol or acidic cleaning products. Dust with a feather duster or microfibre cloth.

Stains on the fabric cannot be erased.

**We recommend that you check every 6 months that the screws, wall plugs and brackets are in good condition and well tightened.**

**Do not stand under the projection screen.**

**Do not use the projection screen outdoors.**

## Installation instructions

### 1. Frame assembly

Place the frame segments with the tensioning fixtures/springs facing downwards onto a clean cloth to avoid any scratching of the frame. Connect the upper and lower frame parts with the corners to create a rectangle.

### 2. Fabric assembly

Please ensure that the corner covers are fitted tightly over the corners of the frame when glued on so that there are no folds or wrinkles in the fabric (see fig 1).

Spread the fabric out (observe correct side – see green sticker 'projection side' facing downwards) onto the cloth to avoid any damage. Slide the galvanized rods into the pockets of the screen fabric and position the frame centrally onto the fabric and wrap the fabric around the frame.

In order to tension the fabric, pull the tensioning straps (C) through the holes and hook them onto the respective fastening pin (fig 2). Attach them consecutively, starting in the corners and continue to attach the whole fabric.

If the fabric has a seam (only larger screens), please ensure that it is positioned in the top section of the viewing area as it will be less noticeable.

### 3. Wall mounting

The celexon Expert PureWhite screen is provided with adjustable mounting brackets (B) to allow flexibility. To attach the screen, please use the screws and wall plugs (E / F) provided.

The screens comes with a safety bracket (centre of bottom frame) to ensure the screen is completely square and to ensure safety.

The manufacturer can only ensure that the screen is installed completely square if all mounting brackets at the top and bottom are correctly attached. If other mounting brackets/methods are used, this cannot be guaranteed.

During installation, please check horizontal alignment with a spirit level.

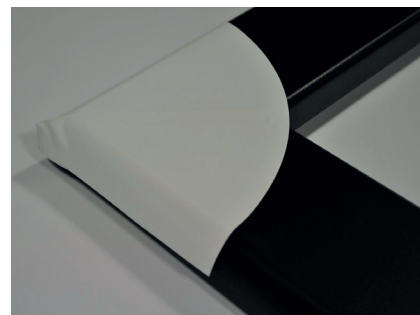


Fig. 1



Fig. 2

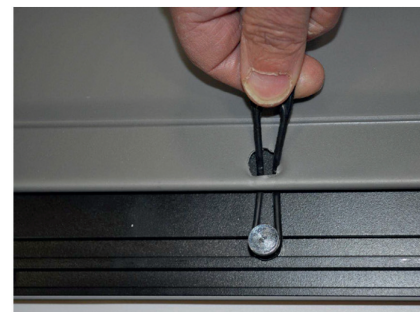


Fig. 3



Fig. 4



Fig. 5