



INSTALLATIONSANLEITUNG


- ① Entfernen Sie das Anschlussstück vor der Installation aus dem Gehäuse.

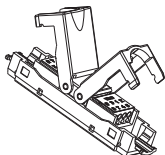


- ② Kabel in Knickschutzülle einführen, Kabelmantel 1,2 Zoll (ca. 30mm) abisolieren, Geflecht zurückklappen und Litze abisolieren.

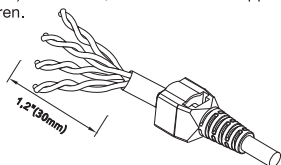


- ③ Fächern Sie alle vier verdrehten Paare auf, folgen Sie dem Farbkennzeichen und ordnen Sie jeden Leiter den entsprechenden Steckplätzen auf dem Anschlussstück zu. Schneiden Sie die Enden der Drähte ab.

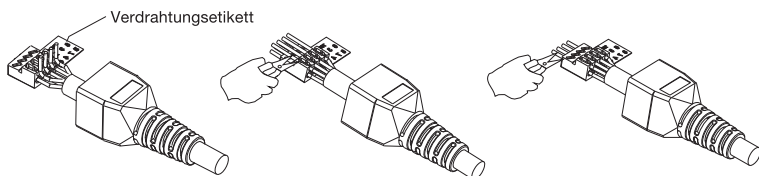


- ④ Anschlussstück in das Anschlussmodul einsetzen.

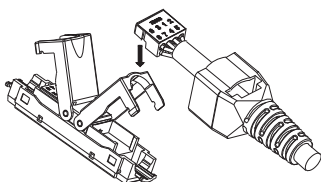

- ⑤ Benutzen Sie eine Zange, um das Anschlussstück komplett in das Modul zu drücken und so die Verbindung herzustellen.

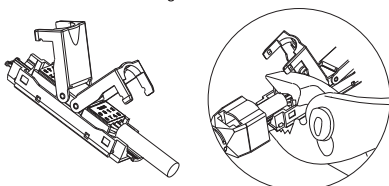

- ⑥ Schließen Sie die Modulkappe, achten Sie beim Schließen darauf, dass die zurückgefaltete Geflechschirmung mit der Gehäuselasche auf der Unterseite einen Kontakt herstellt. Stülpen Sie die Knickschutzülle über das Modulende und ziehen Sie den Kabelbinder durch die Öffnung, um einen fixierten Kontakt der Schirmung zu erreichen.

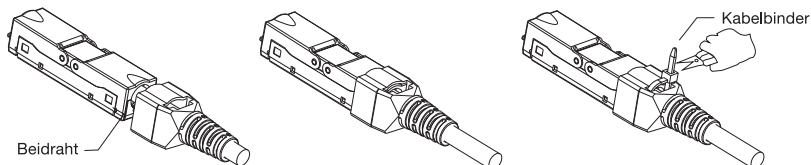


Wiederholen Sie die Schritte 1-6 für die 2. Seite des Moduls.

PIN KENNZEICHNUNG		TIA/EIA T568A	TIA/EIA T568B
	1	Weiß/Grün	Weiß/Orange
	2	Grün	Orange
	3	Weiß/Orange	Weiß/Grün
	4	Blau	Blau
	5	Weiß/Blau	Weiß/Blau
	6	Orange	Grün
	7	Weiß/Braun	Weiß/Braun
	8	Braun	Braun


Anpassung der Knickschutzülle

Schneiden Sie das Ende des Gehäuses passend zu Ihrem Kabelaußendurchmesser ab.




INSTRUCTION MANUAL


- ① Remove the wiring cap before installation.

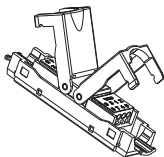


- ② Insert cable into strain relief boot, strip off 1.2 inch of cable jacket, fold back braid and drain wire.

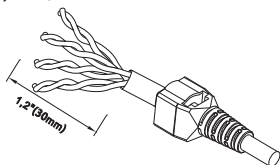


- ③ Fan out all four twisted pairs, following the color coding label and allocate each conductor into proper slots on wiring cap. Trim the ends of conductors.

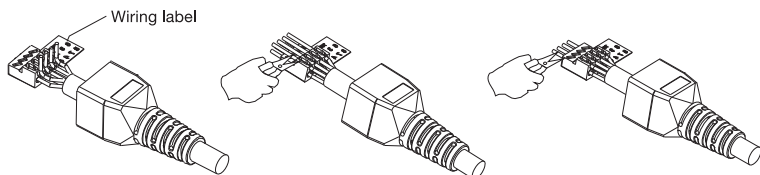


- ④ Place wiring cap on connection module.

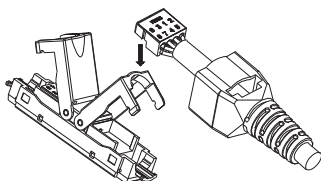

- ⑤ Place the wiring cap onto connection module, use plier to clamp wiring cap until it completely snap-in to effect the connection.

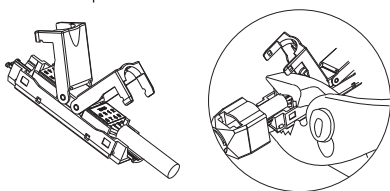

- ⑥ Close connection module cover, make sure the drain wire is in proper contact with grounding clip on connection module. Pull back strain relief boot to cover the connection module, fasten supplied cable tie to secure grounding contact.

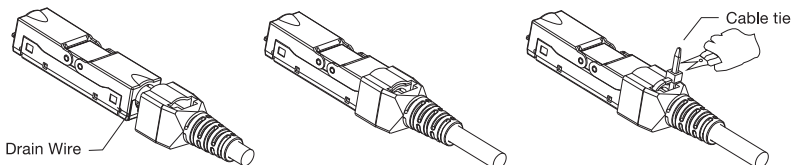

Repeat steps 1-6 for the second side of the module.

JACK PIN DESIGNATIONS		TIA/EIA T568A	TIA/EIA T568B
	1	White/Green	white/Orange
	2	Green	Orange
	3	white/Orange	White/Green
	4	Blue	Blue
	5	white/Blue	white/Blue
	6	Orange	Green
	7	White/Brown	White/Brown
	8	Brown	Brown

Boot adjustment

Cut the end of boot to fit your cable OD.

