

DLX 21 / DLX 21 mesh

DARKFLASH LUXURY ATX CHASSIS

Big / Simple / Modern / stylish

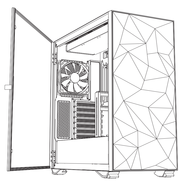

INSTALLATION GUIDE

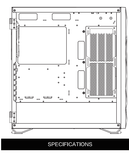


SPECIFICATIONS

Color	Black / White / Pink / Neo Mint
Steel Thickness	Chassis : 0.8mm SPCC
Motherboards	E-ATX, ATX, M-ATX, ITX
Case Dimensions	448*233*463mm
3.5" Drive Bays	H.D.D" 2 or 1 PCS
2.5" Drive Bays	S.S.D" 2 or 3 PCS
Expansion Slots	7 Slots
GPU Clearance	VGA card : 400mm length(max)
CPU Clearance	CPU radiator : 180mm height(max)
Radiator System	Top : 120 240 280 360mm water-cooling Front : 240 280 360mm water-cooling Side : 240mm water-cooling
Fan Support	Front : 120mm*3 140mm*2 Rear : 120mm*1 Bottom : 120mm*2 (without HDD bay)
I/O Ports	TYPE-C(optional) / USB3.0 / USB2.0 / HD Audio
Power Supply	Power Panel
Front Panel	Bottom, 225mm
Left Panel	Mesh+Plastic Tempered Glass

DLX 21

Big / Simple / Modern / stylish

DARKFLASH LUXURY ATX CHASSIS

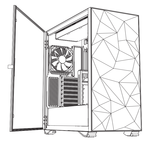

A: Accessory bag
B: Cable
C: I/O port
D: Six angle view
E: Each part disassembly
F: PSU installation
G: M/B installation
H: VGA installation
I: Fan installation
J: SSD/HDD installation
K: VGA holder installation


A



M/B / SSD screw *25
M/B iron columns*9 (pre-installed 6pcs)
Cable tie *10
PSU screw*5
VGA/ HDD screw*9
Wipe cloth*1
USB rubber cap*2
AUDIO port rubber cap*2
To fix stand off tool*1


B

Color cables connector




M/B header


C

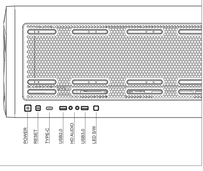


D

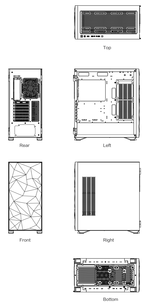

E

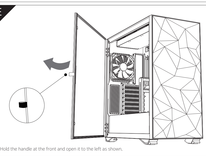


Hold the handle at the front and open it to the left as shown.

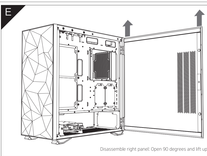


Disassemble right panel: Open 90 degrees and lift up as shown.

E

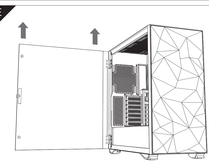


Disassemble tempered glass panel: Open 90 degrees and lift up as shown.

E

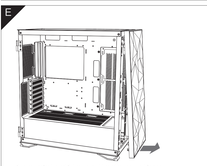


Disassemble front bezel: Put your hand at the bottom and pull it forward.

F

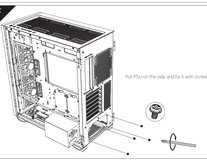


Put PSU on the side and fix it with screws.

H

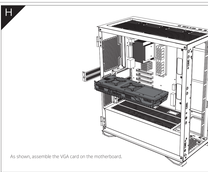


As shown, assemble the VGA card on the motherboard.

G

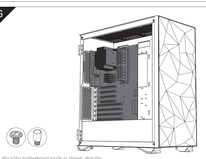


Place the motherboard inside as shown, align the screw holes and tighten the screws.
Caution! Fix the stand off before assembling the motherboard.

I

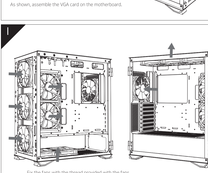


Fix the fans with the thread provided with the fans.
Caution! Let the wind flow in the direction of the arrow.

J

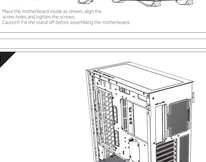


Untie the screws as shown in the picture to separate hdd bay.

J

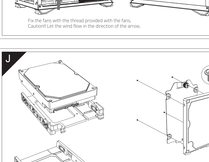


Mount the SSD or HDD on bracket.

J

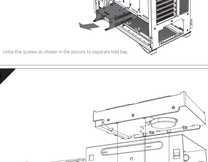


You can install HDD or SSD on top of bracket.

J

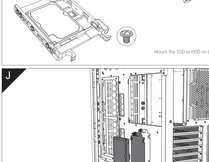

Mount the bracket with the HDD/SSD inside the chassis as shown.

K

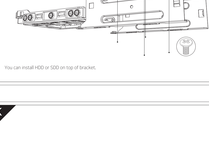

Install the VGA card holder as shown.

darkFlash

DARKFLASH INFOTECH CO., LTD.
www.darkflash.com