JONSBO
For your real needs

CR-1100


User's Manual

Chapter 1 - Parts List
第一部分 物料清单

A CPU Heat Sink CPU散热器	B Y Cable Y形转接线	C Washer 垫圈	D Positioning Screw 定位螺钉
E Stand-off 间隔柱	F Bracket Screw 扣具条固定螺丝	G Intel Bracket INTEL扣具条	H AMD Bracket AMD 扣具条
I Hex nut 六角螺母	J Thermal Grease 散热硅脂	K Wrench 六角螺母扳手	L Back Plate 背板

Chapter 2 - Intel Installation
第二部分 Intel安装


Step 1

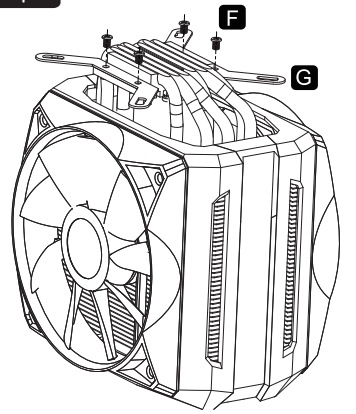

EN Place INTEL bracket on the cooler base, and then use bracket screws to fix it

CN 将INTEL支架安装到散热组上，并用螺丝拧紧


Step 2

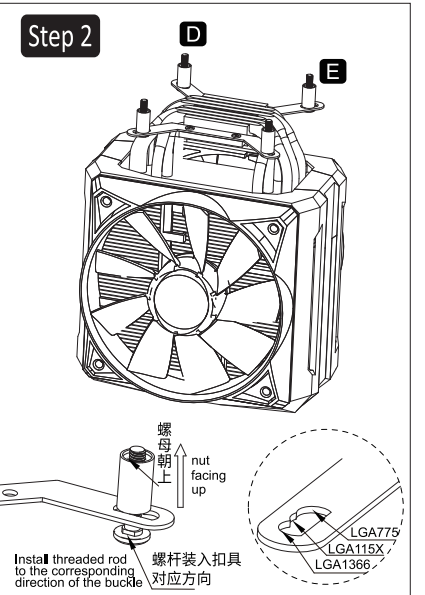

EN Install threaded rod to the corresponding holes of INTEL bracket as needed，fixing it with nut facing up

CN 根据需要将螺杆装入INTEL对应孔位内，将间隔柱拧到螺杆上固定


Step 3

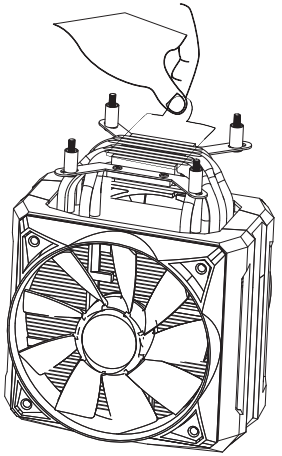

EN Apply the thermal grease evenly on to the CPU surface。Remove the protective film from the cooler base

CN 将散热膏均匀地涂在CPU表面上，并取下散热器底座上的保护膜


Step 4

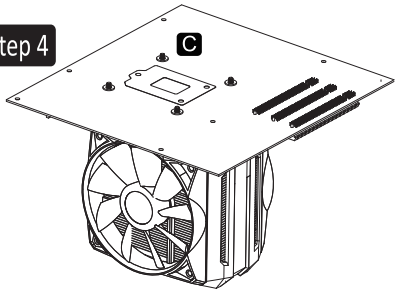

EN Pointing the holes of the motherboard to the poistioning screws of the cooler，and then assemble them together，install insulating washers


CN 将主板孔位对准散热器定位螺丝，反扣于散热组上，装入绝缘垫片

Step 5

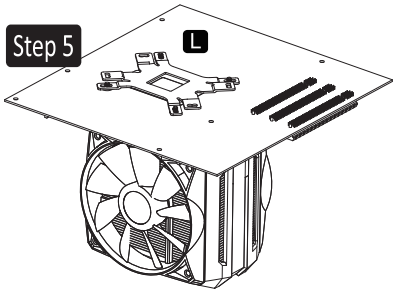

EN Install back Plate（as shown in the figure）

CN 装入背板(如图所示)

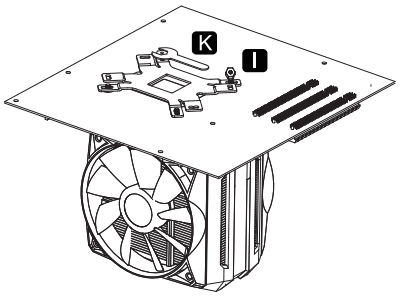


Step 6

EN Fix the coolers on the motherboard by fixing the hex nuts with the wrench

CN 用开口扳手拧紧六角螺母，将散热组固定到主板上

Step 7

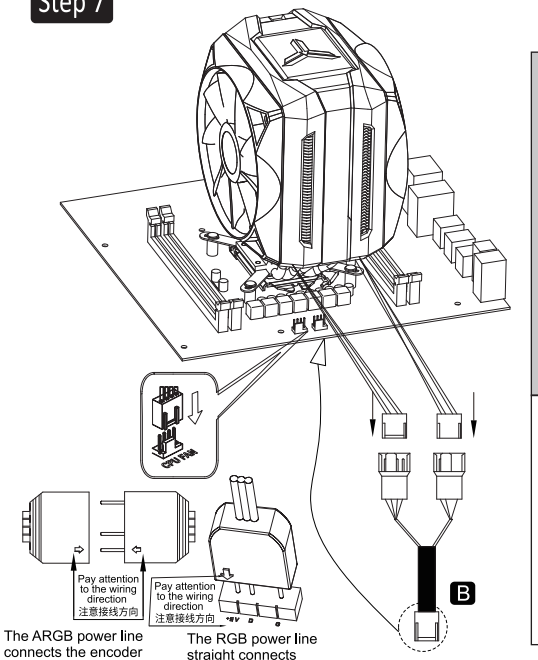

EN


Use Y cable to connect the two fans of the coolers（as shown in the figure），then connect Y Cable to the the motherboard. At the same time，connect the 5V ARGB lamp line to the host or connect it to the encoder wiring as requied

CN

使用Y线将散热组上两个风扇连接一起(如图所示)，然后将Y线与电脑主板相连，同时根据需要与主板的5V ARGB接口或控制器连接。

Chapter3-AMD Installation
第三部分 AMD安装


Step 1

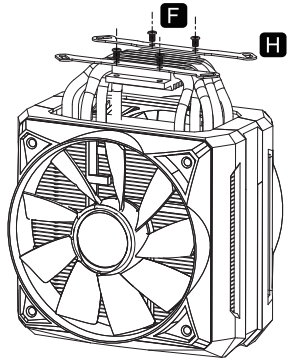

EN Instal AMD bracket on the cooler base,and then use bracket screws to fix it

CN 将AMD支架安装到散热组上，并用螺丝拧紧


Step 2

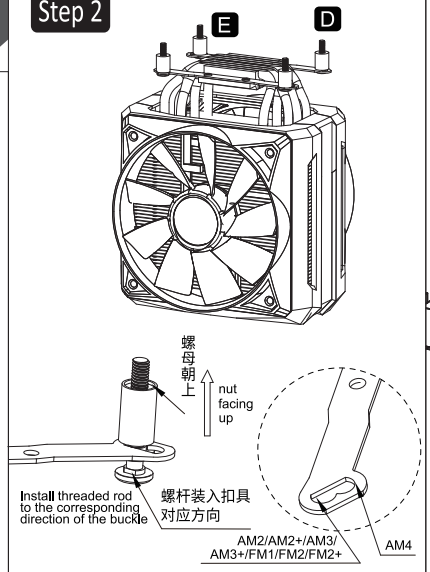

EN Install threaded rod to the corresponding holes of AMD bracket as needed,fixing it with nut facing up

CN 根据需要将螺杆装入AMD对应孔位内，将间隔柱拧到螺杆上固定


Step 3

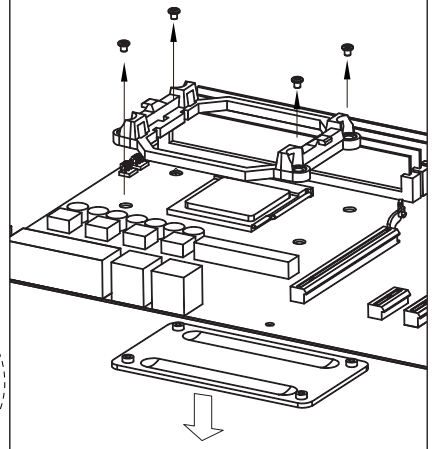

EN Please remove the original heatsink mount holder further installation

CN 请将AMD主板上的原厂散热支架移除


Step 4

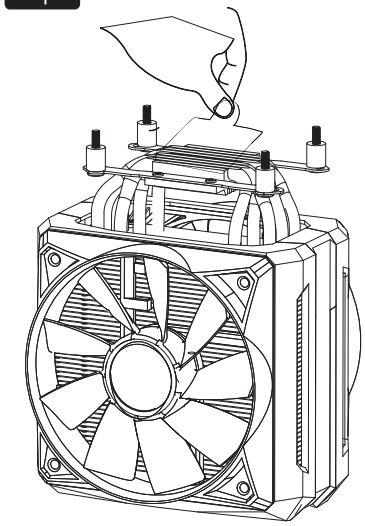

EN Please remove the protective flim before installing the cooler

CN 安装散热器前先移除保护膜


Step 5

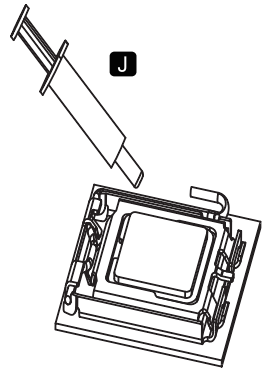

EN evenly apply the thermal grease evenly on to the CPU surface

CN 将导热膏均匀涂抹于CPU表面上


Step 6

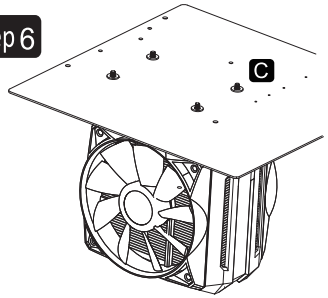

EN Pointing the holes of the motherboard to the poistioning screws of the cooler、and then assemble them together, install insulating washers


CN 将主板孔位对准散热器定位螺丝，反扣于散热组上，装入绝缘垫片

Step 7

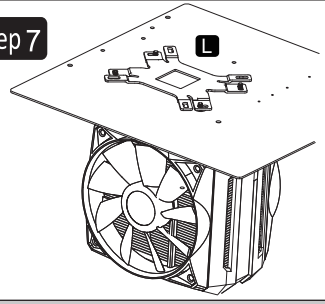

EN Install back Plate（as shown in the figure）

CN 装入背板(如图所示)

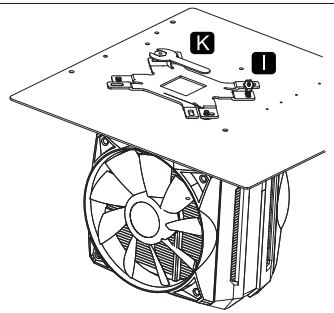


Step 8

EN Fix the coolers on the motherboard by fixing the hex nuts with the wrench

CN 用开口扳手拧紧六角螺母，将散热组固定到主板上

Step 9

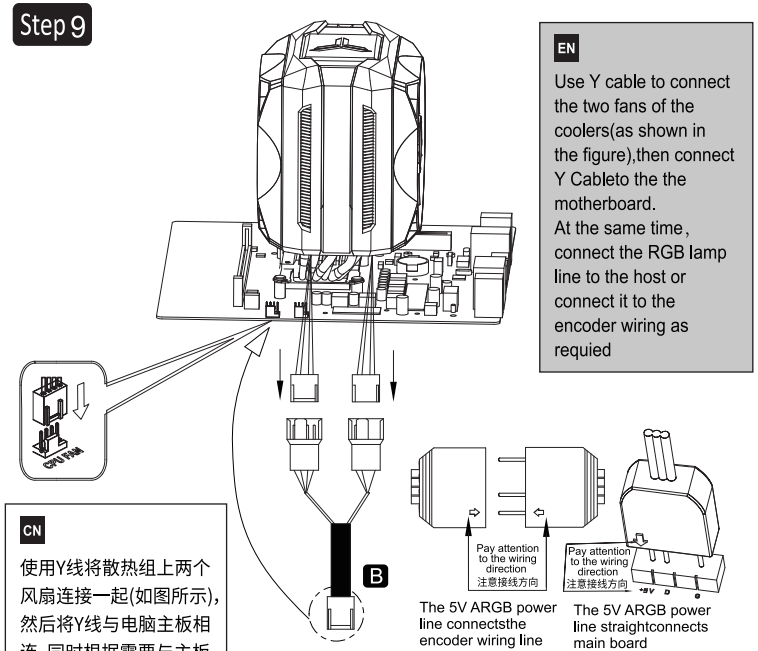

EN

Use Y cable to connect the two fans of the coolers(as shown in the figure),then connect Y Cableto the the motherboard.
At the same time, connect the RGB lamp line to the host or connect it to the encoder wiring as requied

CN

使用Y线将散热组上两个风扇连接一起(如图所示)，然后将Y线与电脑主板相连，同时根据需要与主板或编码器连接。

CR-1100

JONSBO
For your real needs

© 2017 JONSBO SHENZHEN TECHNOLOGY CO., LTD. All right reserved. Specifications are subject to change without prior notice. Some trademark may be claimed as the property of others.