


ALR120 user manual





(1-3 spare parts)






(4 silver frame install: first step combine the two piece of short silver frame with the connection parts.)

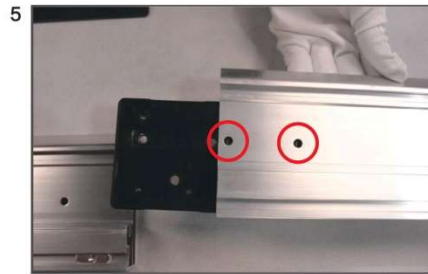


(5-8 align with the holes on both side and fasten with the screw)

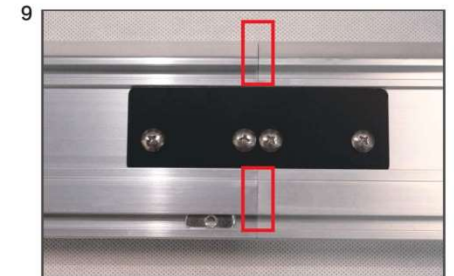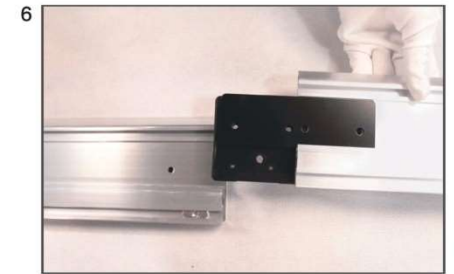


(9 Please note the silver frame is no gap (show in pic))

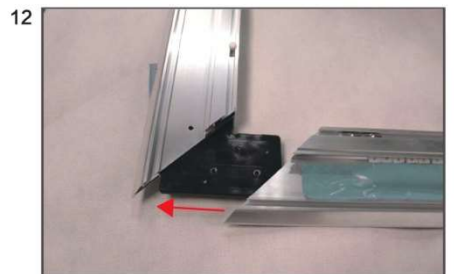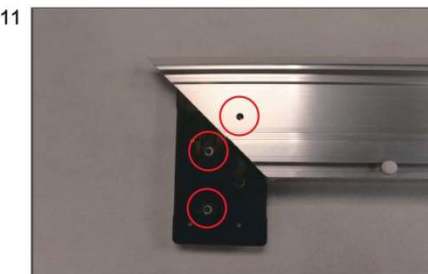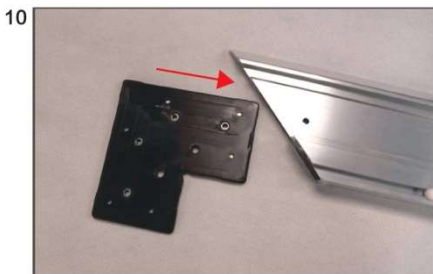

(10-12 corner parts connection: put the corner parts inside the silver frame and connect another one, align the holes as well **Please note that when install the remain two corner parts, it should be installed at the same time**)

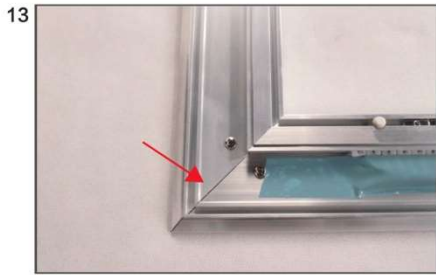

(13 Make sure no gap)

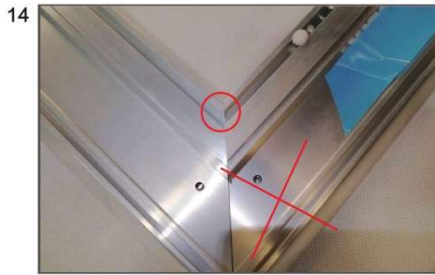


(14 wrong example: splicing position of the silver frame is not accurate . That will cause wave when install the fabric.)





(15 support bar install: insert the plastic buckle on both sides)



(16 show as pic)

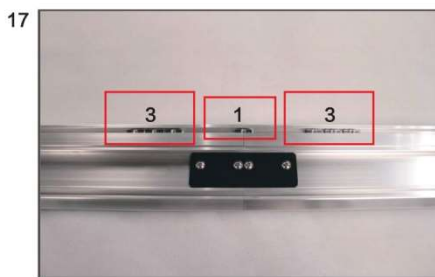

(17-19 there are 7 nuts inside the silver frame, the one in the middle is for the support bar, so it will be 3pcs on both sides.show as pic, fasten with a screw)

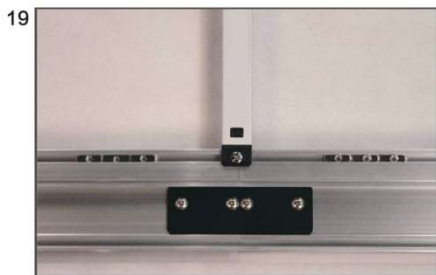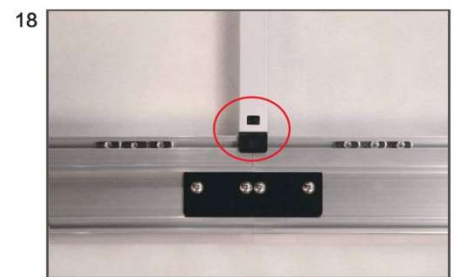


(20 Fabric install part: unfold the form on the ground,(flat ground))




(21-22 unfold the fabric: fabric face down, show as pic)




(23 pull the fabric on both sides at the same time, to make sure the fabric is basically flat)

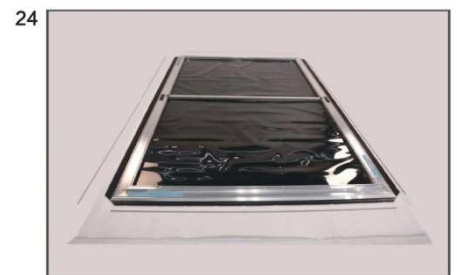



(24 put the silver frame on the fabric)

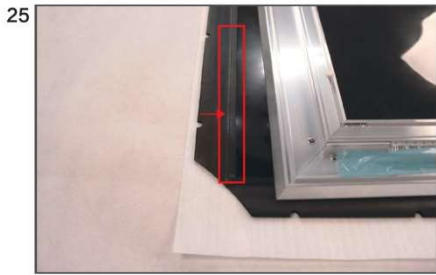

(25 Note:There is dotted lines on all four sides of the fabric)

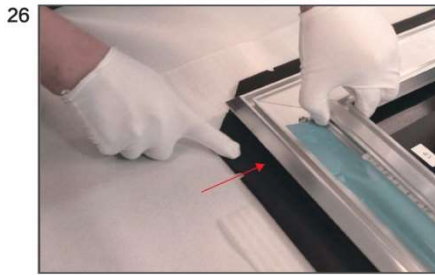

(26-27 **The silver frame must be aligned with the dotted line on all four sides.** (very important step to make sure the fabric is flat after installation) show as pic)

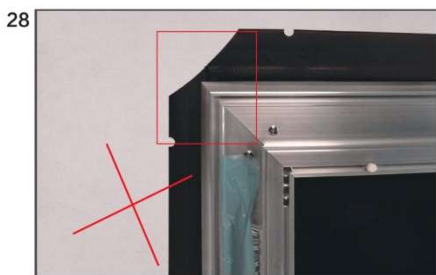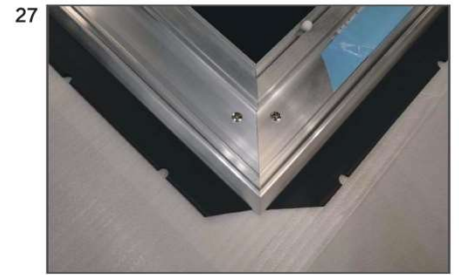


(28 Wrong example: the silver frame is not aligned with the dotted line)




(29 check again on 4 sides, you won't see the front viewing area of the fabric. prove the dotted line is aligned good. (show as pic))



(30-31 insert the tension rod on four sides, and make sure the tension rods are totally hide inside the edge of fabric)

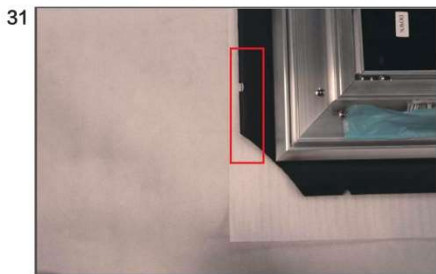

(31 Note:There is dotted lines on all four sides of the fabric)

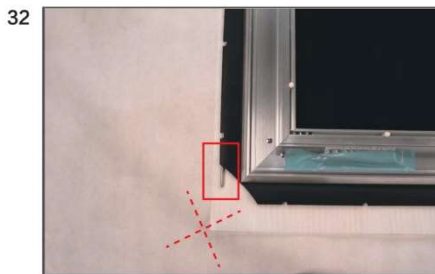


(32 Wrong example: you can see the tension rod from outside)



(33 remove the tape on 4 sides)



(34 Algin all the spring to the holes of the fabric. Make sure it is on the same line)

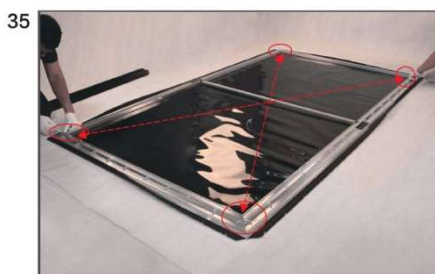

(35 Spring installtion steps: first install the corner springs (follow the steps show as pic))




(36-37 Make sure the springs is align the holes of the fabric. **Two person** Please install the two springs which is closing to the corners. **at the same time** (show as pic))



37



38

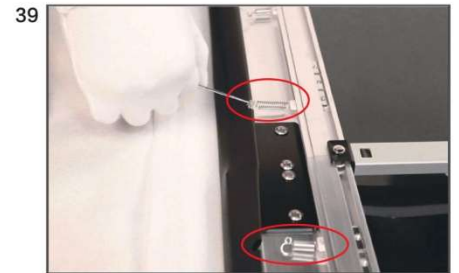

39

(38-39 And then install the middle springs on two sides **at the same time**(show as pic))




40

(40 and then Two person install the remain springs on the contrast way **at the same time**(show as pic))




41

(41 after springs finish installtion, please check the surface of screen, make sure it's flat.and then move to next step(show as pic))

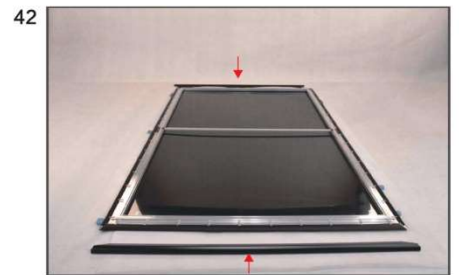


42

(42 install the left&right decorative frame first(should put the blue foam under the edge of long frame of the screen) to make the screen floating.then you can install the decorative easily)

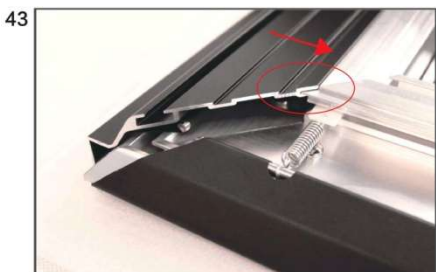

43

(43 The decorative frame is install in the slot show as pic)

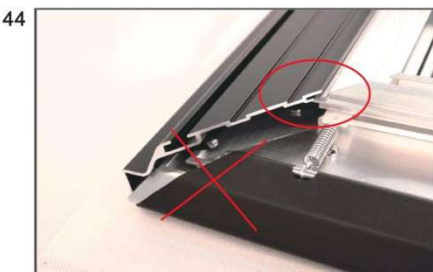

44

(44 wrong example: the decorative frame is not in the slot of silver frame)



45


(45-47 Then we can install the black fasten parts. Please install 4 corner sides first)



46




47

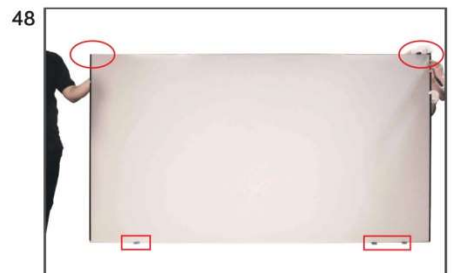

48


(48 Put the blue foam and lift the screen up, ready to install the decorative corner and long decorative frame)

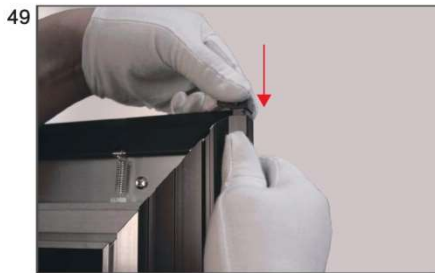

(49-50 decorative corner insert in the short decorative frame first,both sides (show as pic))




(51-52 Install the long decorative frame **from middle and slide it** to the decorative corner (show as pic) **Note:**it's easy to install the first one, another one might need to loose the screw of black fasten parts on the short decorative frame to install)

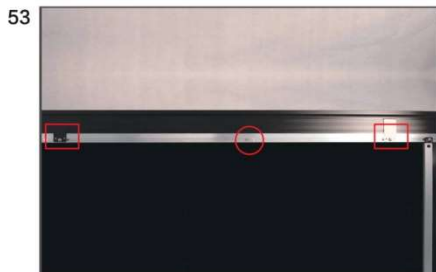


(53 please leave the middle nut of three there,the remain nuts screw with the black fasten parts)




(54 reverse the screen and do the same last step again)

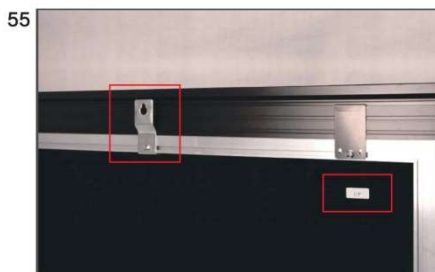


(55 two steps above, the remaining middle nut, it's for the hanging plate. Make sure the screen is on "up" side)

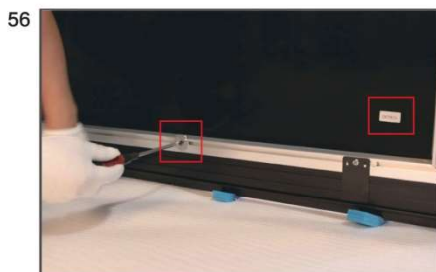

(56 Please install the magnet chip on the other side of the middle nuts)

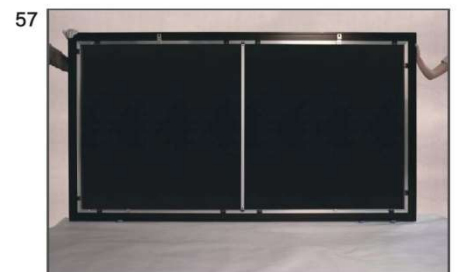

(57 BACK VIEW after installation)

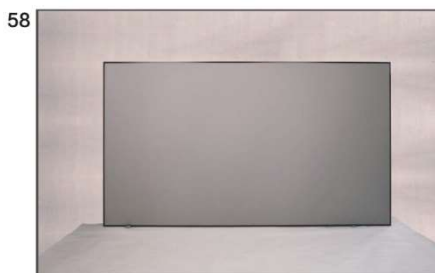

(58 FRONT VIEW after instllation)

