双面印刷，之字形折叠，112*112MM

THERMALRIGHT
low Temperature high Performance

安装说明

Peerless Assassin 120 SE V2
系列

！安装前请先去除铜底保护膜

www.thermalright.com

配件清单

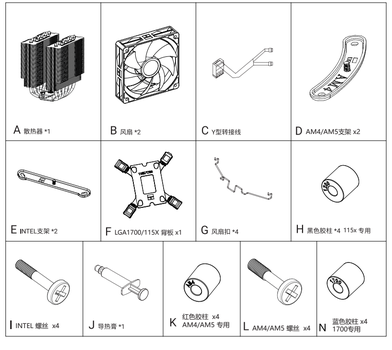

AMD AM4/AM5

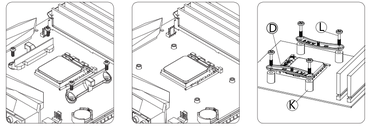

移除AMD原装塑胶支架，保留背板;使用AM4/AM5螺丝将支架锁紧到主板原配背板

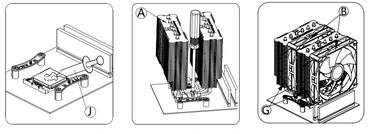

涂好导热膏，然后用螺丝刀锁好主体，再用风扇线扣固定风扇

INTEL 115X/1200



将背板【F】推到115X位置放置在主板背面,然后正面放置胶柱【H】,扣具【E】，再用螺丝【I】固定住扣具。

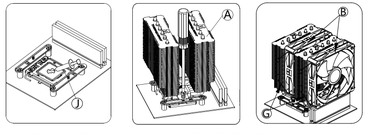

涂好导热膏，然后用螺丝刀锁好主体，再用风扇线扣固定风扇

INTEL 1700/1851



将背板【F】推到1700位置放置在主板背面,然后正面放置胶柱【N】,扣具【E】，再用螺丝【I】固定住扣具。

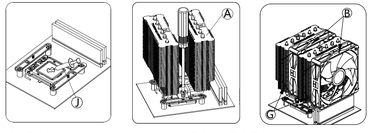

涂好导热膏，然后用螺丝刀锁好主体，再用风扇线扣固定风扇

风扇接线

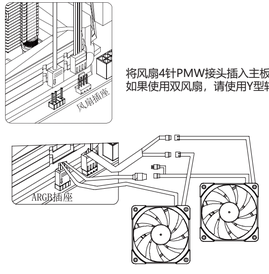

将风扇4针PMW接头插入主板CPU FAN插座，如果使用双风扇，请使用Y型转接线。

如果风扇有ARGB灯效，请将ARGB 3针(5V) 插入主板对应ARGB灯效插座或者控制器，多风扇之间可串联同步。

THERMALRIGHT
low Temperature high Performance

INSTALLATION GUIDE

Peerless Assassin 120 SE V2
Series

Please remove protective sticker before install

www.thermalright.com

Parts List

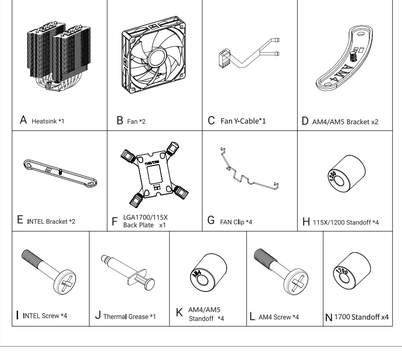

AMD AM4/AM5

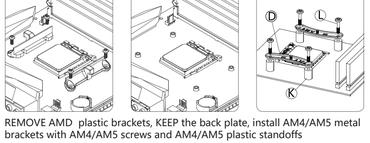

REMOVE AMD plastic brackets, KEEP the back plate, install AM4/AM5 metal brackets with AM4/AM5 screws and AM4/AM5 plastic standoffs

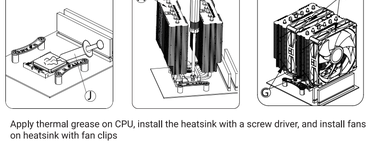

Apply thermal grease on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips

INTEL 115X/1200

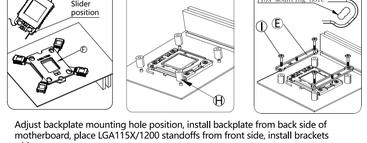

Adjust backplate mounting hole position, install backplate from back side of motherboard, place LGA115X/1200 standoffs from front side, install brackets with screws.

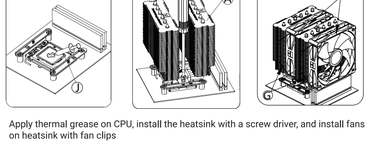

Apply thermal grease on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips

INTEL 1700/1851

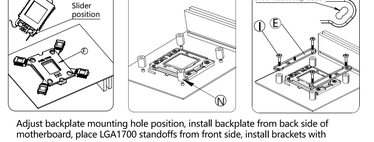

Adjust backplate mounting hole position, install backplate from back side of motherboard, place LGA1700 standoffs from front side, install brackets with screws.

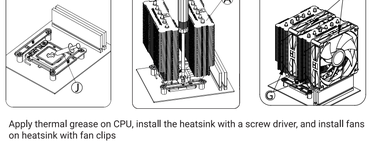

Apply thermal grease on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips

Fan Wiring

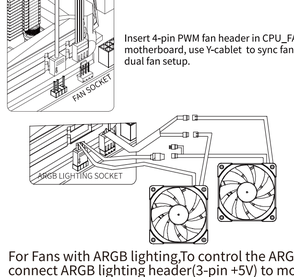

Insert 4-pin PWM fan header in CPU_FAN socket on motherboard, use Y-cablet to sync fan speed for dual fan setup.

For Fans with ARGB lighting,To control the ARGB lighting , connect ARGB lighting header(3-pin +5V) to motherboard ARGB lighting socket or ARGB lighting controller,lighting effects can be sync by connecting fan lighting headers with each other