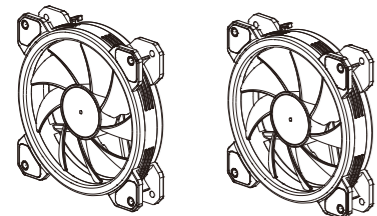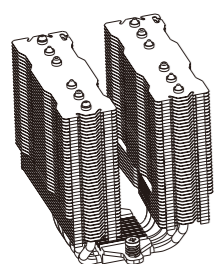# QUICK START GUIDE

Installation Parts
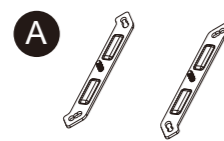
2 x 120mm ARGB PWM Fan

1 x Heatsink
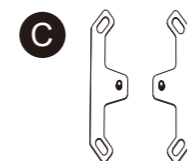
1 x Intel Mounting Set
A

4 x Stand-Off Intel
B

1 x AMD Mounting Set
C

1 x Universal Backplate
D
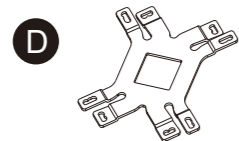
4 x Thumbscrew
E

4 x Screw
F

4 x Spacer
G

4 x Washer
H
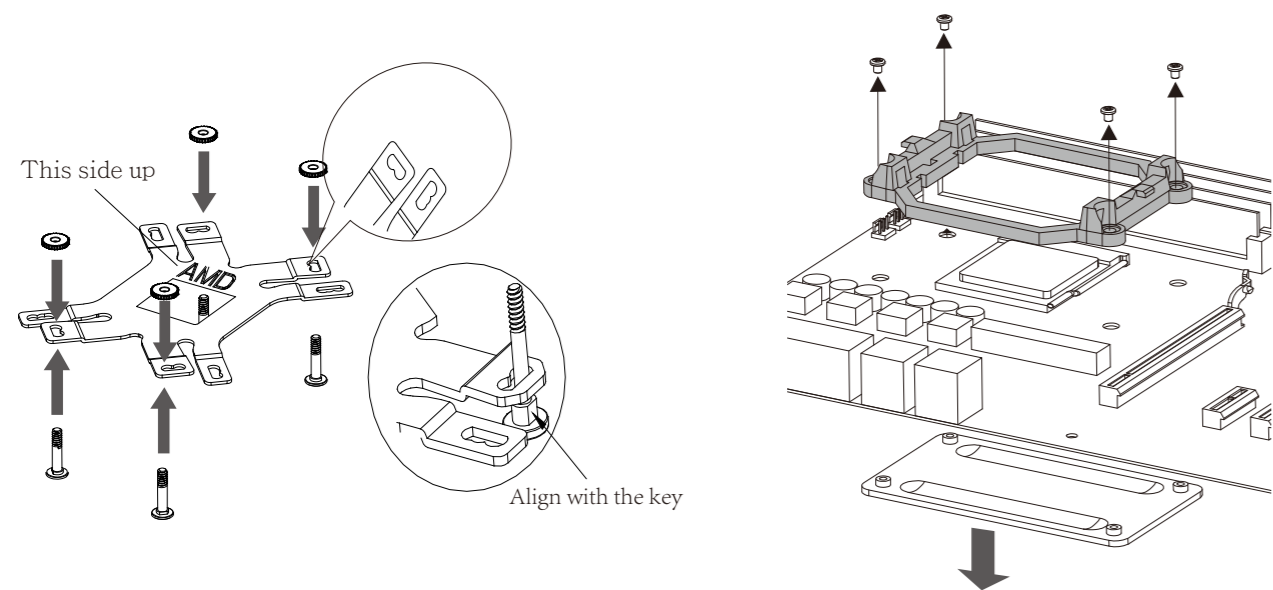
1 x PWM Splitter
I

2 x Fan Mount Set
J

1 x GC-Extreme 1g - Thermal Paste
K

Installation Instructions

1 Insert 4 x Screw F into the screw holes of Universal Backplate D and fasten 4 x Washer H as shown.

2 Unscrew and remove the standard AMD socket bracket and motherboard backplate.

This side up

Align with the key

3 Insert the Universal Backplate assembly from the motherboard backside and put 4 x Spacer G onto 4 x Screw F.
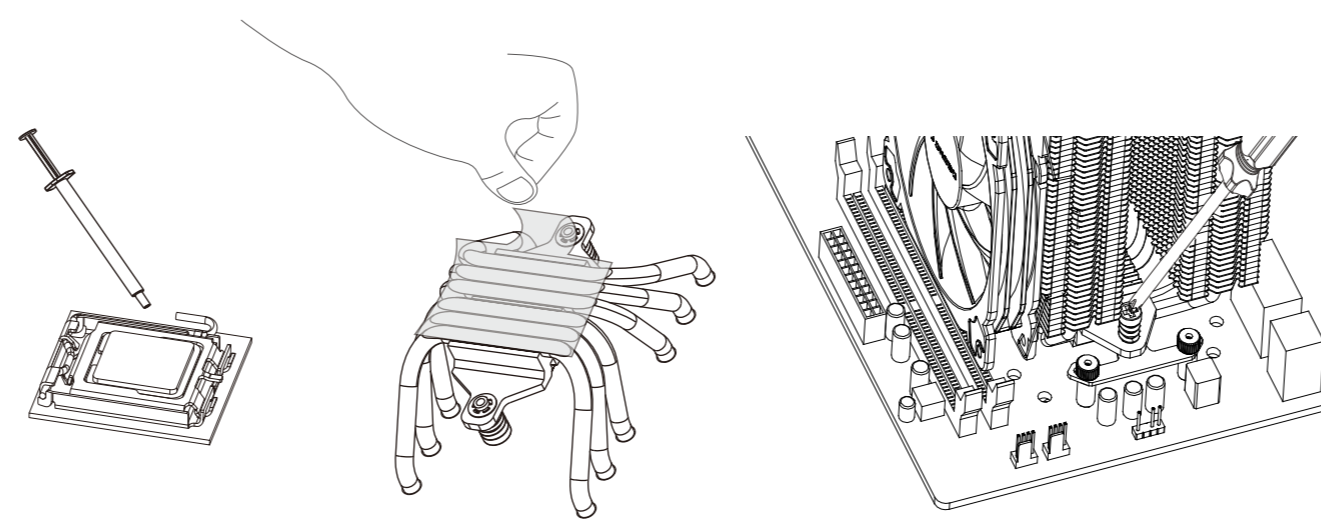
**4** Insert the 2 brackets of AMD Mounting Set C and tighten 4 x Thumbscrew E on top as shown.

Thumbscrew E
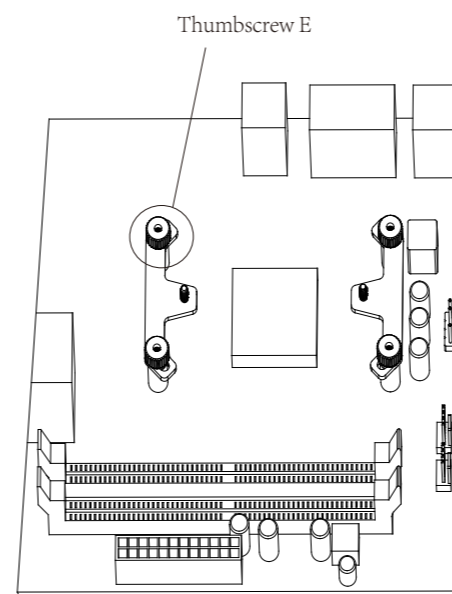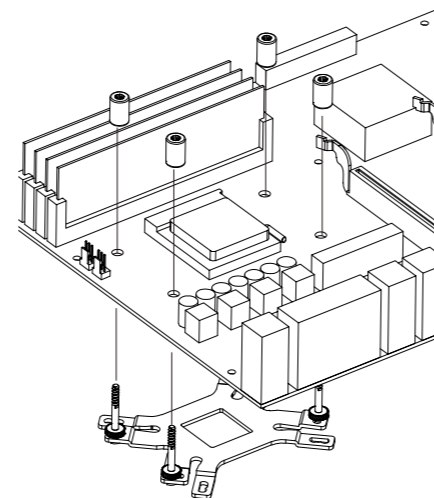
5 Apply Thermal Paste K on CPU surface (a small amount in centre is suffucient).

6 Peel off the protective film from the heatsink base.

7 Place the heatsink on top of CPU. Tighten the spring-screws with a screwdriver as shown.

8 Mount 2 x 120mm Fan by inserting 2 x Fan Mount Set J into the fan mounting holes and buckling in heatsink grooves.
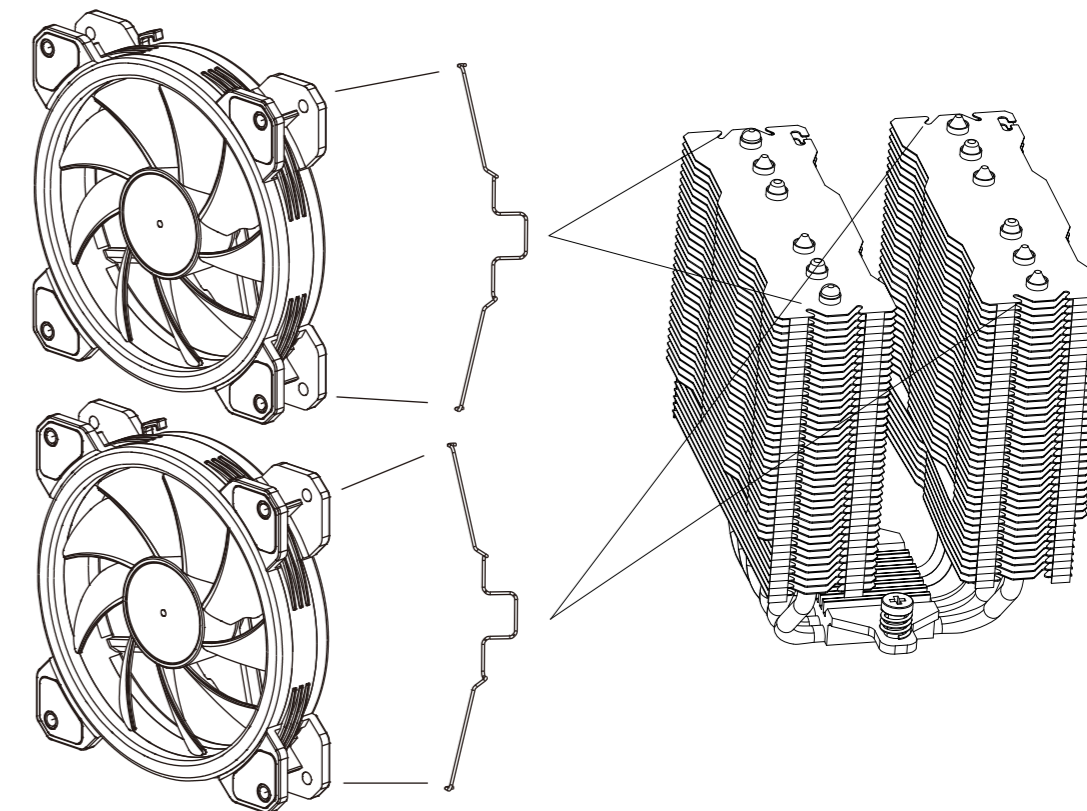
Limits of Warranty:
Warranty coverage does not include the following:
- A faulty product that leads to harm or damage to other products
- Damage of product as a result of other product components
- Incorrect method of operation or use of product not for intended use
- Any form of alteration to original product
- Inability to install the product as a result of incompatibility with other components.

The Specifications are subject to change without notice.
Please consult our website for further information:
www.gelidsolutions.com

Disclaimer:
In no event shall GELID Solutions its directors or employees be liable for any indirect damages, incidental or consequential damages arising from any defect or error in this manual or product.