

Dismantling information

The document is intended for use by end-of-life recyclers or treatment facilities. It provides the basic instructions for the disassembly of LG products to remove components and materials requiring selective treatment.

Product Identification

Type of Product	Monitor Signage
Model name	86UH5J This document covers derivation model which has same conceptual design and dismantling process

Displays must be stored in accordance with the requirements stipulated in Appendix VIII (1) or (2) of Directive 2012/19/EU and must, amongst other things, be stored in a weatherproof manner. Containers with covers must be used when storing and transporting the Displays.

Contents

- 1. Materials and components for Selective Treatment**
- 2. Tools Required**
- 3. Product Disassembly Process**
- 4. Photographs of Product**
- 5. Information of Plastic parts**

1. Materials and components for Selective Treatment

Displays may contain hazardous substances like Pb and BFRs which are covered by exemptions under the RoHS directive. However, the majority is present in the PCB assembly. In order to reduce emissions as much as possible, a complete disposal of the old appliance is required. This treatment may only be performed in authorized handling plants.

Materials and components	Notes	Included	Location
Printed Circuit Boards (PCB) or Printed Circuit Assemblies (PCA)	With a surface greater than 10 square cm	O	5EA
Batteries	For Remote control	O	2EA
	Internal batteries	O	1EA
Mercury containing components	display backlights	-	
Liquid Crystal Displays (LCD) with a surface greater than 100 square cm	Includes background illuminated displays with gas discharge lamps	O	
Capacitors / condensers (Containing PCB / PCT)		-	
Electrolytic Capacitors / Condensers measuring greater than 2.5 cm in diameter or height		O	2EA
External electric cables cords	Power cord	O	1EA
	Signal cable	X	
Gas Discharge Lamps		-	
Plastics containing Brominated Flame Retardants		X	
Components and waste containing asbestos		-	
Components, parts and materials containing refractory ceramic fibers		-	
Components, parts and materials containing radioactive substances		-	

2. Tools Required

List the type that would typically be used to disassemble the product to a point where components and materials requiring selective treatment can be removed.

Tool Description	Tool information
Screw driver	 
Nipper	

3. Product Disassembly Process

1. Batteries

Batteries can easily be removed from the remote control once the back cover of the remote control has been removed.



Batteries can easily be removed from the PCB Assembly once the back cover of product has been removed.




3. Product Disassembly Process

2. PCBs and LCD Module


The back cover of the display can easily be removed by hand and screw driver.




Once removed this will expose the accessible electronic units (PCBs),

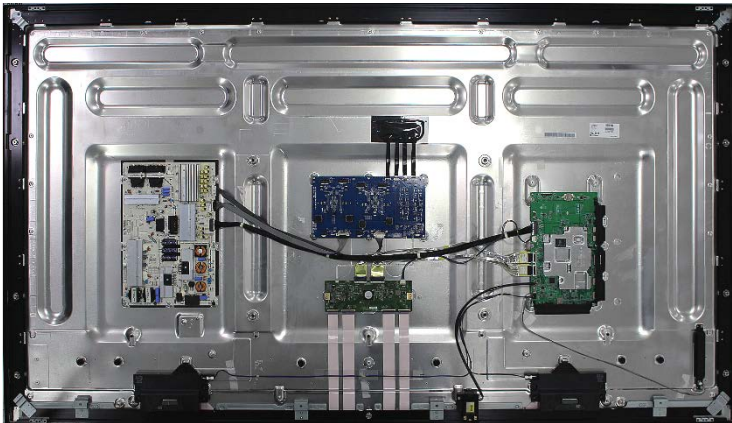

And then remove cabinet & speakers with hand and screw driver.

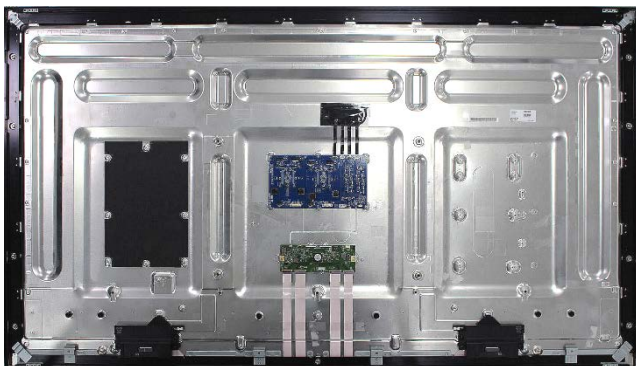


LCD module(together with their casing) is only left after all other parts like electronic units and casing have been removed.

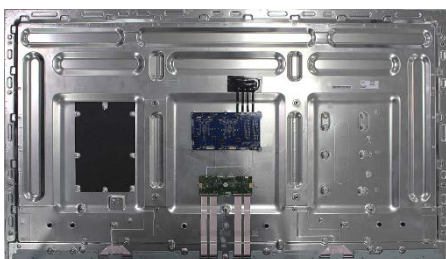

3. Product Disassembly Process

2. PCBs and LCD Module

Main Board

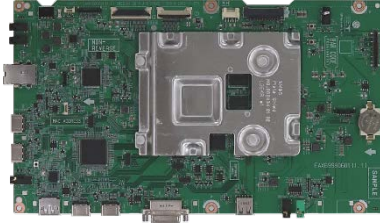

Tcon Board




Wifi Board



Control Board




LED Driver

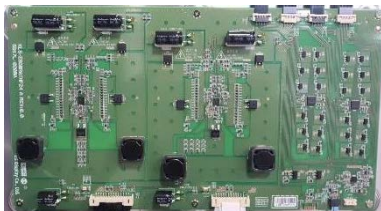

3. Product Disassembly Process

3. Power cord and signal cables

A Power cord plugged into the back of the display can easily be removed by hand or cables are provided as de-attached from the product

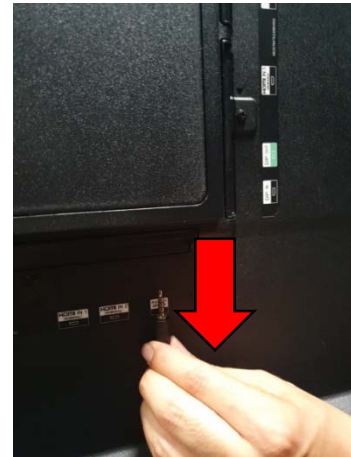

■ IR Cable – Just pull it out

4. Capacitors > 25 mm

Capacitors > 25 mm are located in the power supply units and can be removed by nipper

