



AK2000

3-Axis Stabilized Handheld Gimbal for Camera

— Instructions —


Guilin Feiyu Technology Incorporated Company

User Manual EN V2.0

Catalogue

1.Product Overview	1
2.Installation	2
2.1Battery Charging	2
2.2Battery Installation	2
2.3Camera Installation	3
3.Gimbal Balancing	4
3.1Balance Adjustment of the Tilting Axis	4
3.2Balance Adjustment of the Rolling Axis	6
3.3Balance Adjustment of the Panning Axis	7
4.AK2000 Function / Operation	8
4.1Handle - Function / Operation	8
4.2Function	13
5.App - Download and Connecting	16
5.1Download and Install Feiyu ON App	16
5.2Connecting App	16
6.Advanced Operation	17
6.1Gimbal Initialization	17
6.2Firmware Upgrade	18
7.Parameters	19
8.Compatible Cameras for Reference	20

1.Product Overview

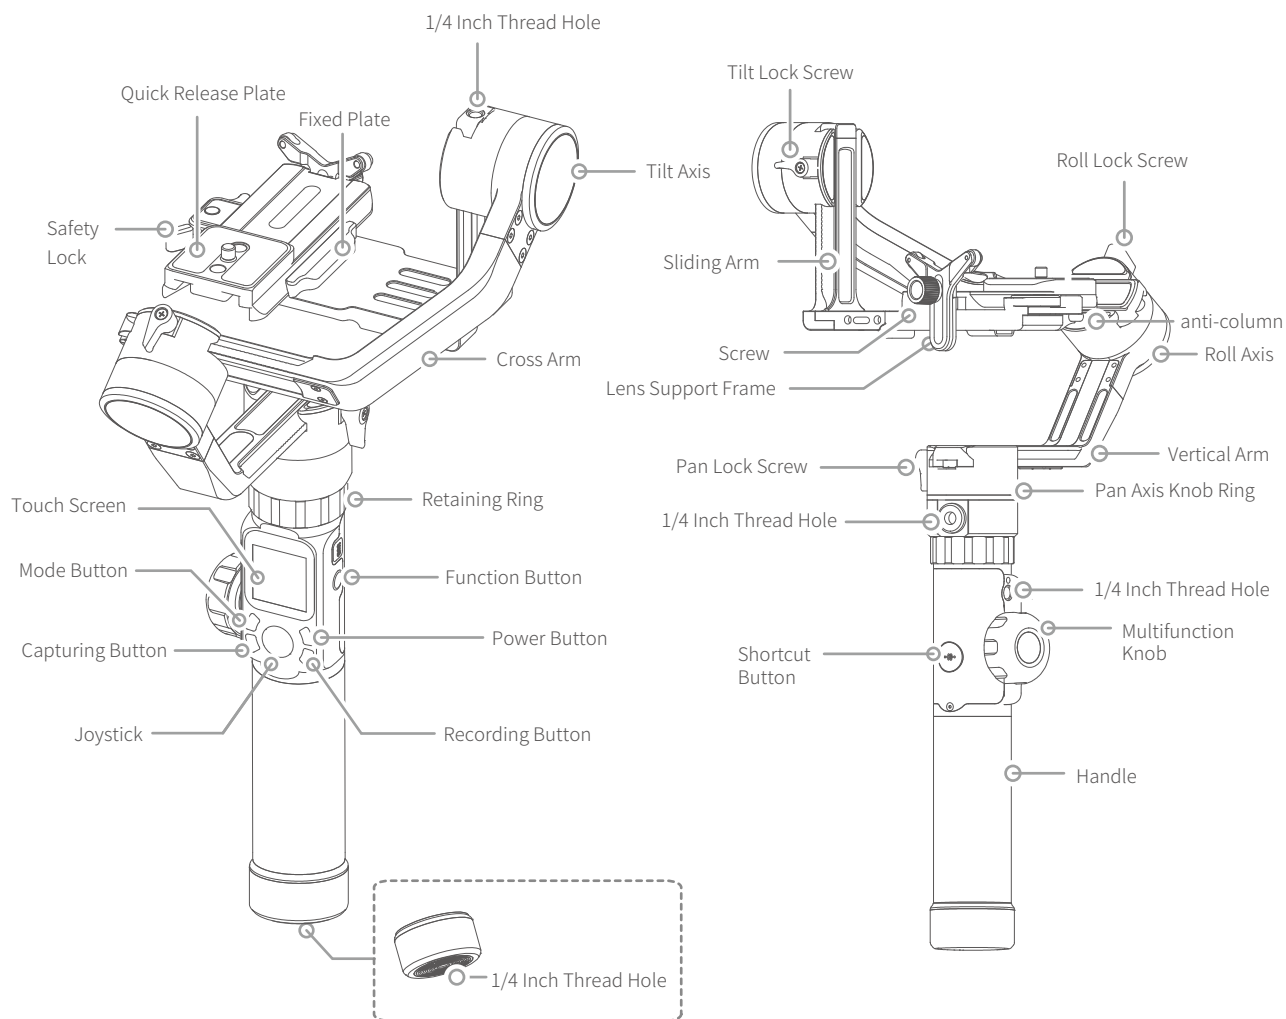


Accessories




18650 Li-ion Battery
X4



Tripod
X1

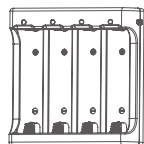


Charger
X1

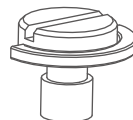


Thumb Screw
(Short)
X1




Micro USB Cable
X1



Sony Control Cable
(3.5 audio to multi)
X1



Canon Control Cable
(RS-80N3)
X1

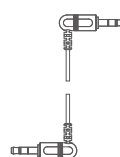

Panasonic Control Cable
(Shift audio 3.5 to 2.5)
X1

2.Installation


TIPS

- (1) Please mount the camera before powering on the gimbal.
- (2) When the battery is low, please charge the gimbal.
- (3) When not in use, turn off the gimbal and then remove the batteries.

2.1 Battery Charging


Please fully charge the batteries before powering on the gimbal for the first time.

Charge the batteries with the charger.

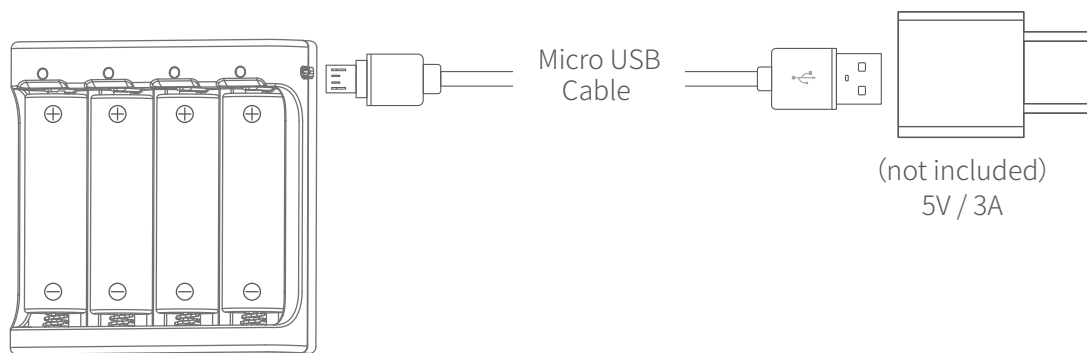

2.2 Battery Installation


Remove the tail cap, open the batteries compartment, and install the batteries correctly.

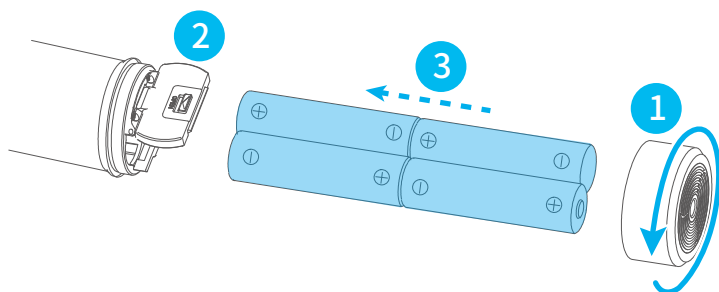


Battery Model:
18650 Li-ion Battery

2.3 Camera Installation

1. Lock the lens support frame with the screw to the quick release plate;
2. Use the thumb screw to lock the camera from the bottom slot of the quick release plate, and slightly adjust the lens support frame after locking the camera;
(Select the long/short thumb screw according to the position of the camera to be mounted on the quick release plate)

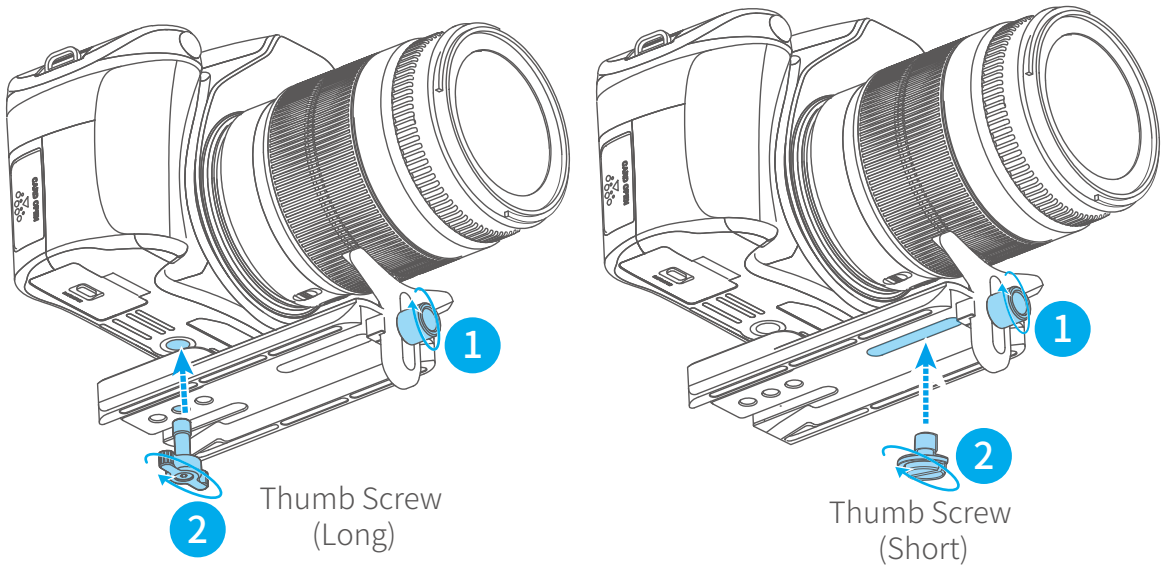

3. Press and hold the anti-column;
4. Place the quick release plate on the fixed plate, loosen the anti-column and tighten the safety lock.

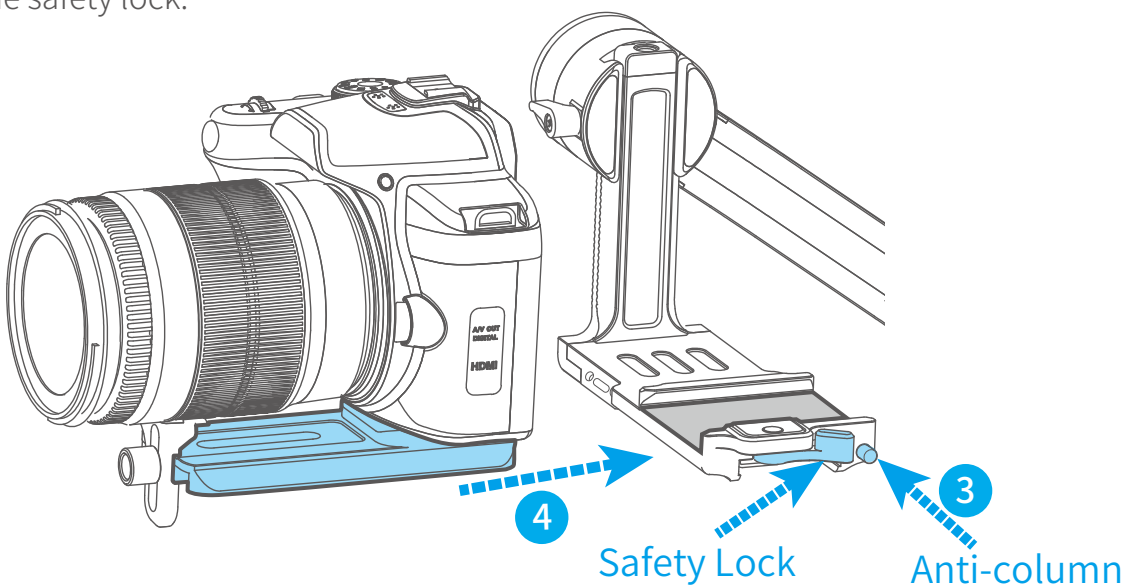


3. Gimbal Balancing

3.1 Balance Adjustment of the Tilting Axis

Adjust the center of gravity of the camera in two steps to the axis of rotation of the tilting axis.

- (1) Adjust the center of gravity position of the tilting axis up and down: point the camera lens down, adjust cross arm to maintain the level, as shown in figure ①, let go and observe the state of rotation. Adjust the balance via adjust the sliding arm up and down (refer to figure ② ③).


* After adjustment, be sure to tighten the lock screw.

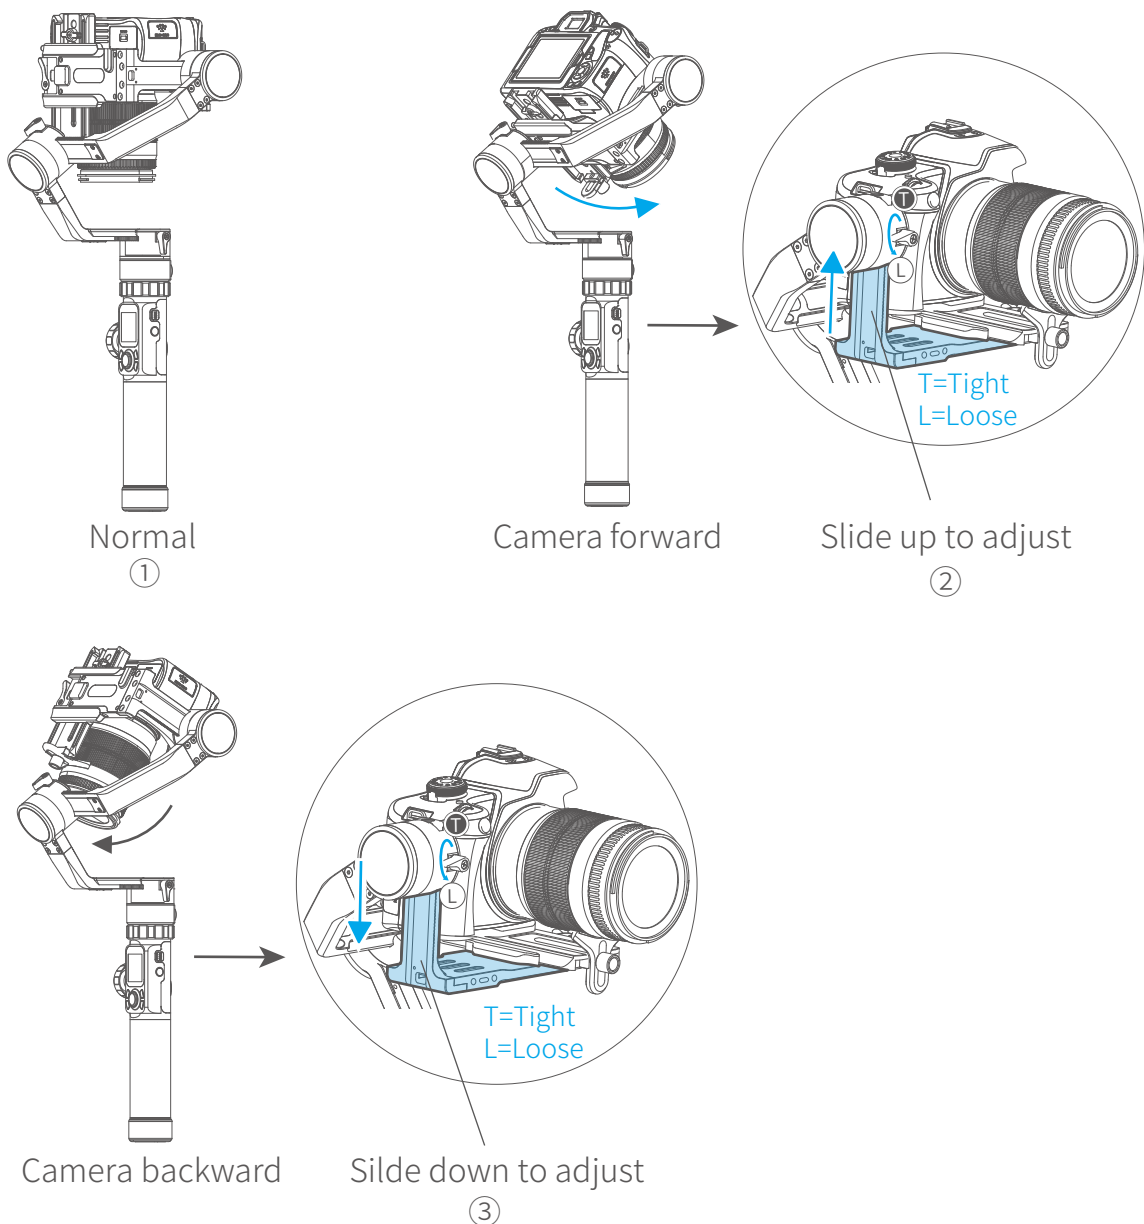

- (2) Adjust the center of gravity position of the tilting axis forward and backward: point the camera lens horizontal forward, adjust cross arm to maintain the level as shown in figure ①, let go and observe the state of rotation.

Loosen the safety lock on the right side of the camera, and adjust the balance by sliding up and down the quick release plate on the bottom of the camera (refer to Figure ② ③).


*Be sure to fasten the safety lock after adjustment.

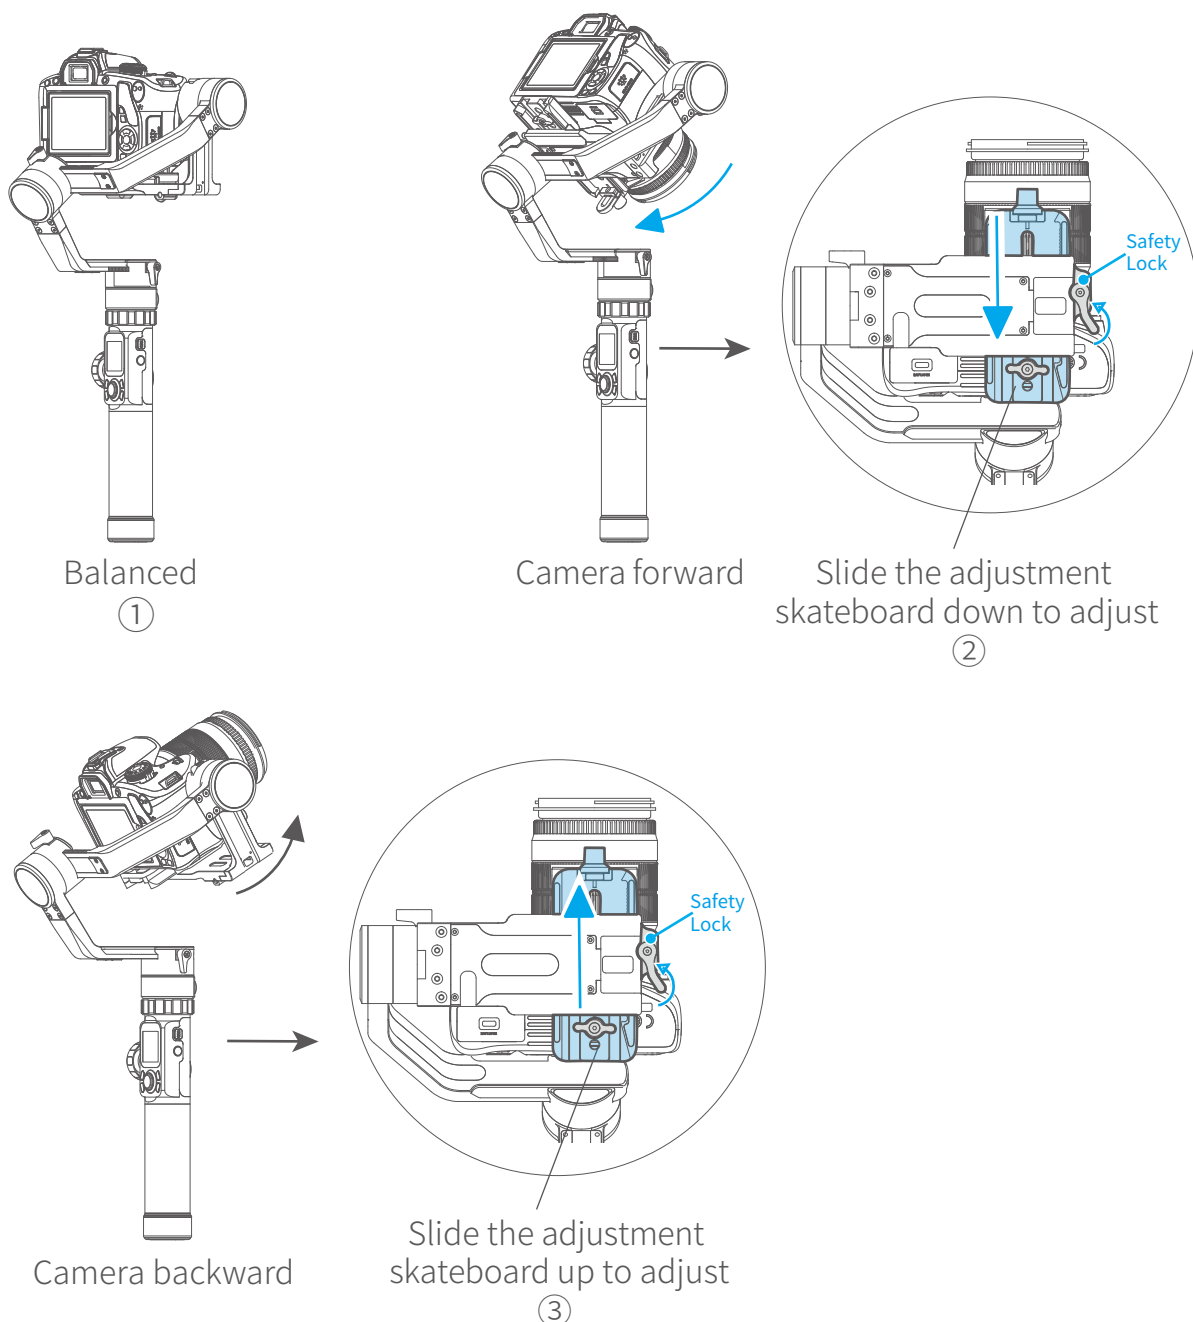

3.2 Balance Adjustment of the Rolling Axis


When the balance adjustment of tilting axis completed, the balance of the rolling axis can be adjusted: keep the gimbal socket connector vertical to the ground with the hand-held control handle as shown in figure ①, leave the gimbal powered off and observe the balance. Loosen the lock screw and slide the cross arm left and right to adjust the roll (refer to figure ② ③).

* After adjustment, be sure to tighten the lock screw.

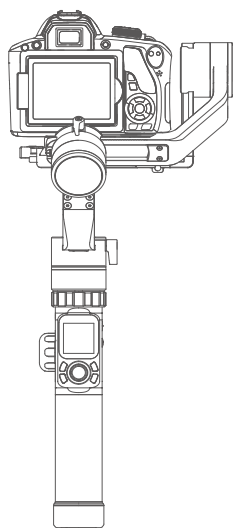


Balanced

①

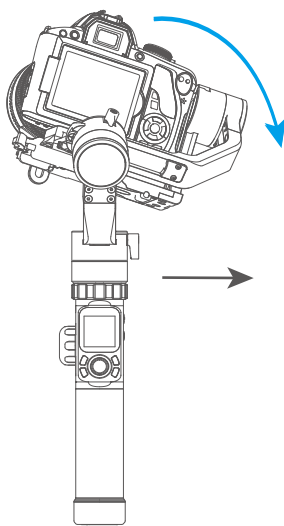


Camera rightward

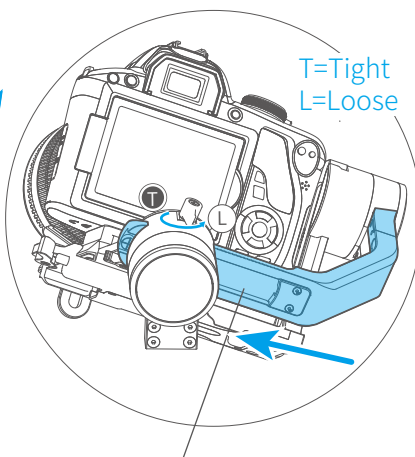


Slide the cross arm left to adjust

②

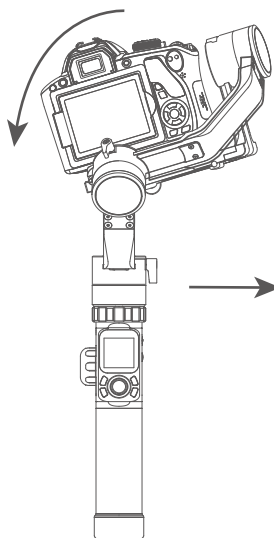

Camera leftward

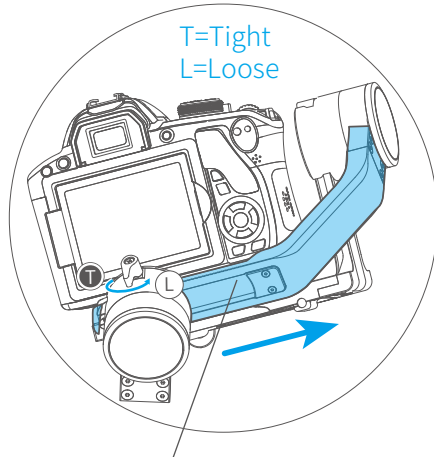

Slide the cross arm right to adjust



③

3.3 Balance Adjustment of the Panning Axis


When the balance adjustment of tilting axis and rolling axis is completed, the balance of the panning axis can be adjusted. Keep the gimbal socket connector in the horizontal position, adjust hand-held panning axis as shown in figure ①, let go and observe the state of rotation.

Loosen the lock screw on the panning and slide the vertical arm forward and backward to adjust (refer to figure ② ③).


* After adjustment, be sure to tighten the lock screw.

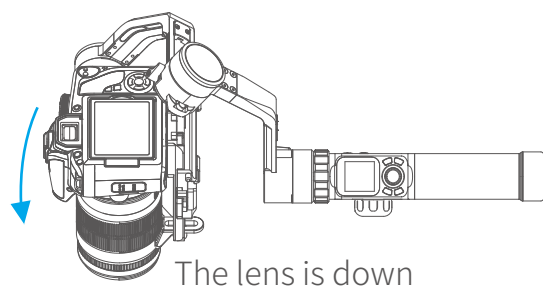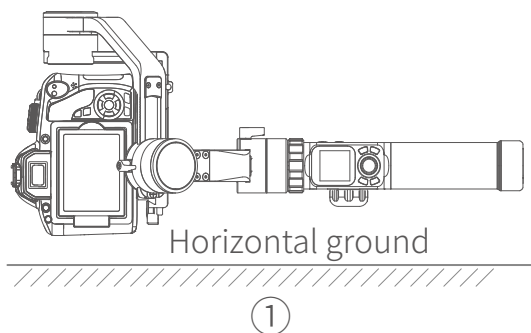


T=Tight
L=Loose

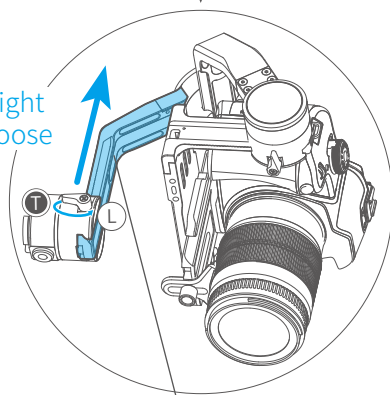

Slide the vertical arm
backward to adjust

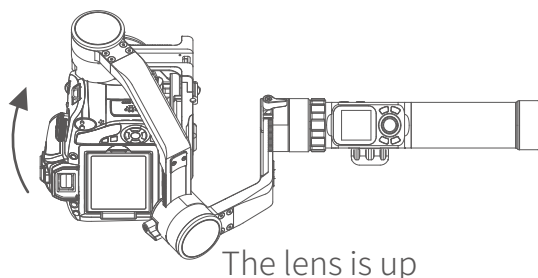

T=Tight
L=Loose

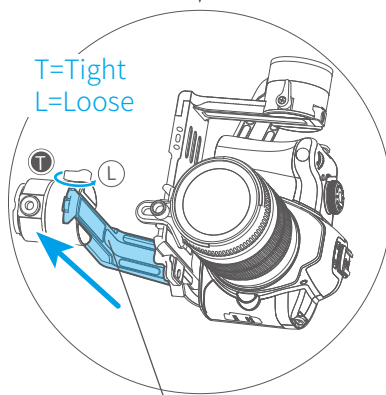





Slide the vertical arm
forward to adjust

4.AK2000 Function / Operation


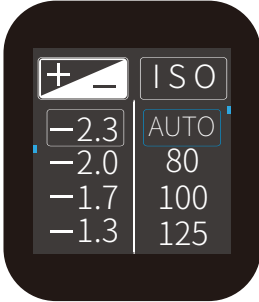
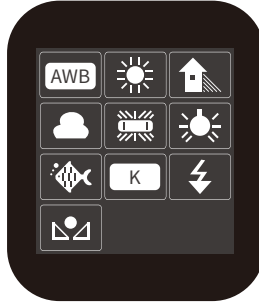
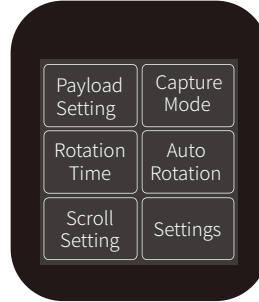











4.1 Handle - Function / Operation

1.Touch Screen

* Click the option to switch or select the function mode, and slide the screen to the left or right to switch the page.


- Single tap the power button in the panning follow mode to enter the panning follow mode and rolling follow (rolling follow angle $\leq 60^\circ$).
- Single tap the power button in the follow mode to enter the follow mode and rolling follow (rolling follow angle $\leq 60^\circ$).
- Single tap the power button in the lock mode to enter the lock mode and rolling follow (rolling follow angle $\leq 60^\circ$).
- Long press  or  lock functions of multifunction knob, single press the multifunction knob /  or  to restore the functions

Screen interface


							
Display icon	Mode / Status	Display icon	Mode / Status	Display icon	Mode / Status	Display icon	Mode / Status
	WiFi is connected	HF	Panning Mode			Payload Setting	Capture Mode
	WiFi is not connect	TF	Follow Mode			Rotation Time	Auto Rotation
	Bluetooth is connected	AF	All follow mode			Scroll Setting	Settings
	Bluetooth is not connect	LK	Lock Mode				
	Battery Level	HF-R	Panning Mode + Rolling follow				
	Camera mode	TF-R	Follow Mode + Rolling follow				
	Camera is not connect	LK-R	Lock Mode + Rolling follow				
	Zoom status		Tilt Axis				
	Follow focus status		Roll Axis				
			Pan Axis				

Screen Interface


The load setting is performed according to the camera.

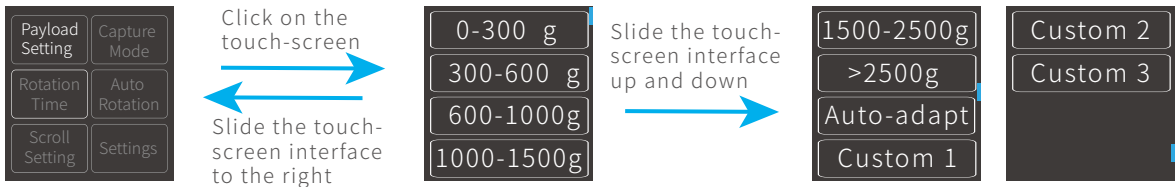


Select the corresponding scene mode according to the shooting scene.

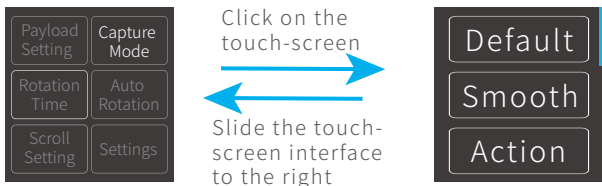


The maximum time setting of PAN and TILT is less than 8 hours, and the maximum time setting of INVL and DWELL is 59 seconds. * PAN/TILT>INVL>DWELL
Please refer to the chapter "Auto-rotation Mode" in page 14

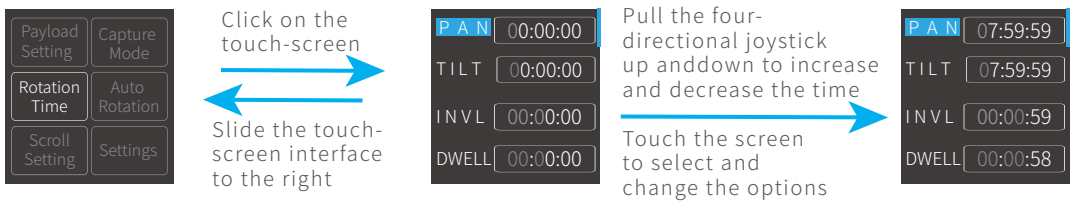


Enter auto-rotation mode

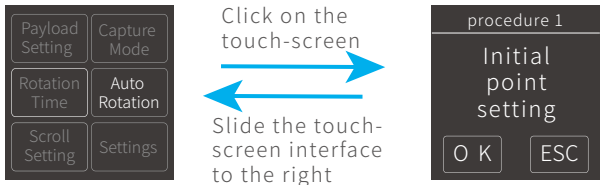

The higher the sensitivity setting, the faster the response of control PTZ/camera

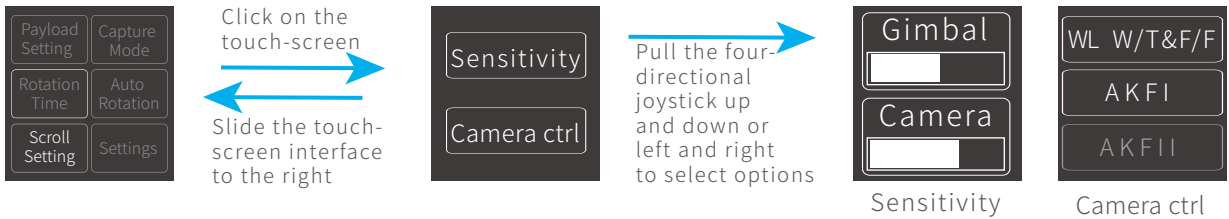


Settings

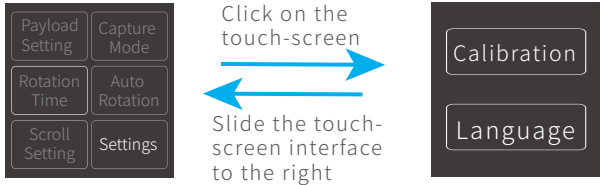

2.Mode Button

Note: The firmware upgrade may occur manual operation function and the actual product features do not match. Please find the latest manual on the official website.


Single click	Panning Mode / Lock Mode	Single tap to switch between panning mode and lock mode
Double click	Follow mode	Under follow mode, single tap to switch to panning mode
Triple click	All follow mode	Enter all follow mode

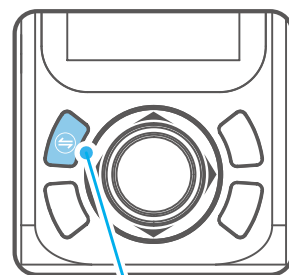

Mode Button

3.Power Button



Long time press	Power on / Power off	Long time press the power button, and release it when the display show FJ
Single tap	Rolling follow mode	Angle limit 60 °
Triple tap	Rotate 180° in horizontal	The roll and tilt direction are fixed, the pan direction rotate 180 °

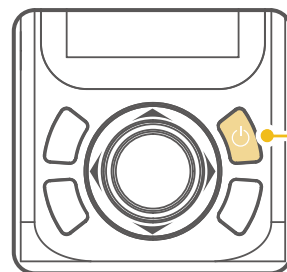

Power Button

4.Capturing Button

Manual capturing	Single click the camera button to focus and single tap again within 3 seconds to take photos. When there is no operation within 3 seconds after clicking for focus, the focus state shall be cleared. * Need to connect to the camera shutter cable or connect to the camera WiFi.
Self-timer	Press and hold the camera button, the gimbal will make a “beep” sound and enter the automatic continuous shooting mode; it shoots once for every 5 seconds by default. Single tap the camera button to exit the automatic continuous shooting mode (you can enter the Feiyu On App to set the continuous shooting interval). * Need to connect to the camera shutter cable.

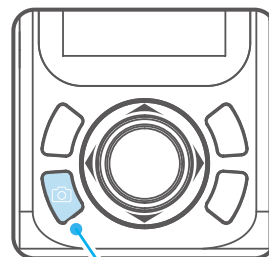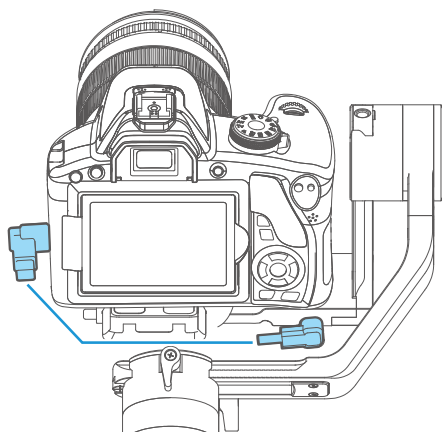


Capturing Button

5.Recording Button

* Need to connect to the shutter release cable or the camera WiFi (for Camera with WiFi function).

Single tap

Start shooting / Stop shooting

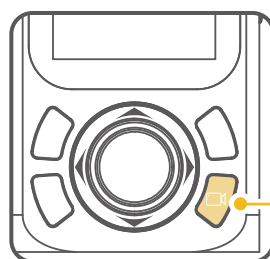

Video Button

6.Shortcut button

Long time press


Fast follow mode

Long time press the shortcut button, enter the fast follow mode.

Double tap

Reset

Double tap the shortcut button, return to panning mode, tilt,roll and pan axis return to initial level.

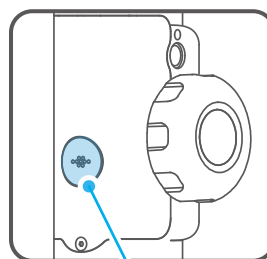

shortcut button


7.Joystick

Upward

- (1) Camera lens upward
- (2) Select the option above

Move to left

- (1) Camera lens move to left
- (2) Select the option on the left

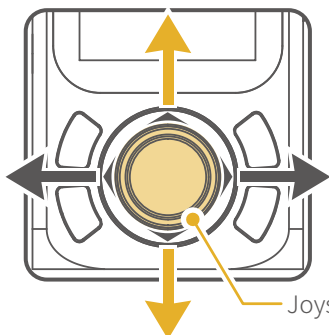

Joystick

Move to right

- (1) Camera lens move to right
- (2) Select the option on the right

Downward


- (1) Camera lens downward
- (2) Select the option below

8.Function Button

Single tap	Return / Lock / Unlock
------------	------------------------

On other interfaces, single tap the function button to return to the main interface.

Single tap the function key on the main interface to enter the locked/unlocked state.

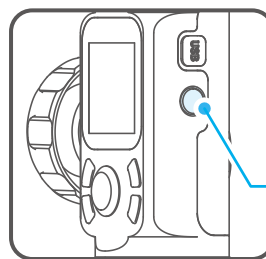


Function Button

9. Multifunction Knob

Rotate	Control the current axial rotation / follow focus and zoom
--------	--

Long time press	Switch between the follow focus & zoom options and the axial options
-----------------	--

Single tap	Switch adjustment option
------------	--------------------------

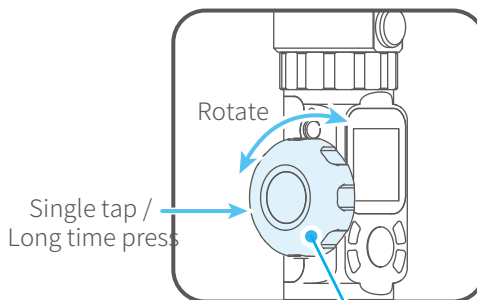

Multifunction Knob

Control Follow focus or Zoom

Single tap
Switch adjustment option

Display



Default

Introduction

Zooming control

Camera supports zooming control



Follow focus

Camera supports follow focus

* After connecting your camera

Please refer to the chapter "Connecting to camera" in page 16

Long time press the multifunction knob

Control the axis direction

Single tap
Switch adjustment option

Display



Default

Introduction

Control the tilt axis rotation



Control the roll axis rotation



Control the pan axis rotation

4.2 Function

Modes

Panning Mode (Default mode)

The roll and tilt direction are fixed, and the camera moves according to the left-right movements of the user's hand.

Follow Mode

The roll direction is fixed, and the camera moves according to the left-right movements, up-down movements of the user's hand.

Rolling Follow Mode

The pan and tilt direction are fixed, and the camera moves according to the left-right movements of the user's hand.

All Follow Mode

The camera moves according to the user's hand.

Lock Mode

The orientation of the camera is fixed.

Reset


Return to panning mode, three axes return to default position.

Manual Lock

Manually move camera to desired position, and hold for half a second. New tilt and/or pan positions are automatically saved.

(Camera can be manually positioned while in panning mode, follow mode or lock mode.)

Take the tilt axis setting for example:

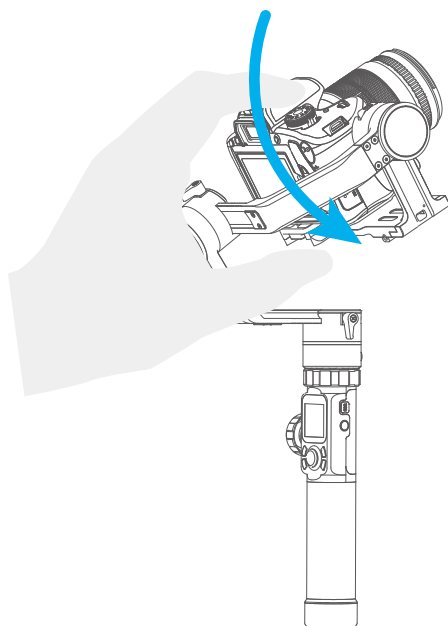


Auto-rotation Mode

Auto-rotation Mode Parameter Setting

Method 1. Enter the Feiyu ON App to set the auto-rotation mode parameters.


Enter the parameter setting interface to select the auto-rotation mode for setting. The maximum time setting for panning and tilting rotation time is less than 8 hours, and the maximum setting time for photographing stop time and photographing interval is 59 seconds.

(Note: The photographing interval setting must be greater than the photographing stop time and less than the panning rotation time or the tilting rotation time.)

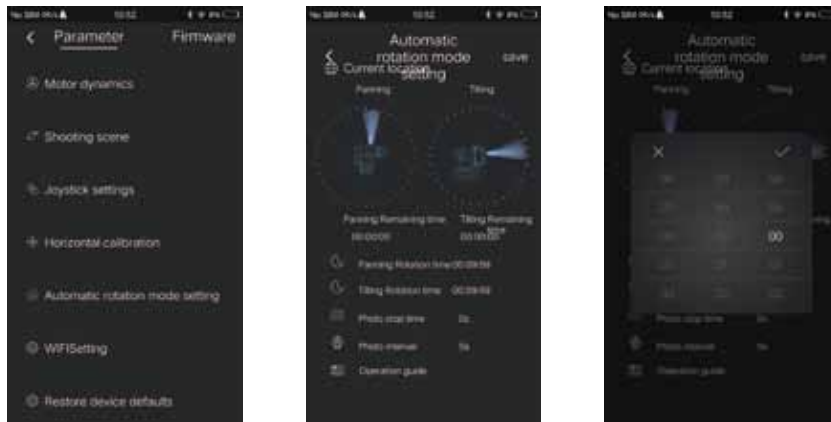

Method 2. Set the auto-rotation mode parameters by entering the rotation time interface through the display screen.

Adjust and control the options via the touch screen or by pulling the four-directional joystick up and down or left and right

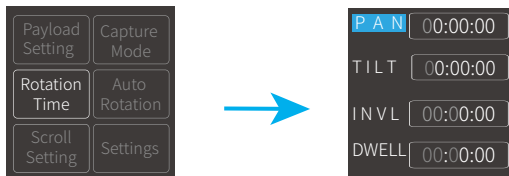

Display icon	Mode / Status	Minimum time setting	Maximum time setting
PAN(T1)	Panning axis rotation time period	00:00:00	07:59:59
TILT (T2)	Tilting axis rotation time period	00:00:00	07:59:59
INVL(t)	Photographing interval	00:00:00	00:00:59
DWELL(P)	Photographing waiting time	00:00:00	00:00:58

* $T1/T2 > t > P$

PAN: Time required for the panning axis to rotate from the start point to the end point.


TILT : Time required for the tilting axis to rotate from the start point to the end point.

INVL: The time between the end of the previous shooting and the end of the next shooting.

DWELL: Gimbal stop time after issuing a photographing command.


Auto- rotation mode setting

(1) Select auto-rotation to enter the auto-rotation mode on the display interface.

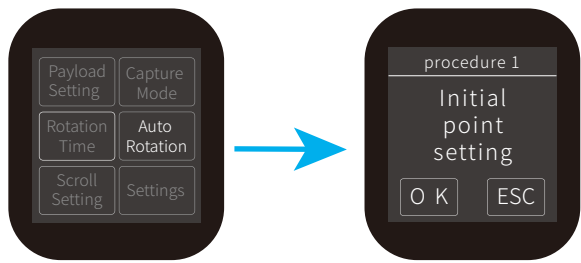


(2) Set rotation start position

Rotate the panning axis or tilting axis to the start position and stay for half a second, and click OK option on the screen to record the start position.

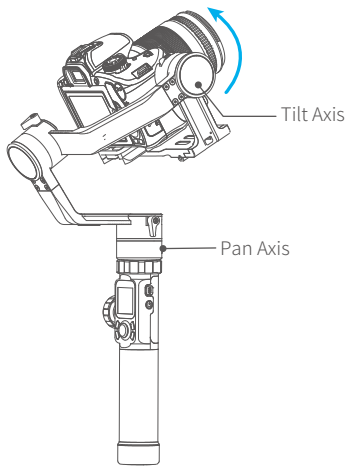


(3) Set rotation end position

Rotate the panning axis or tilting axis to the end position and stay for half a second, and click OK option on the screen again to record the end position.

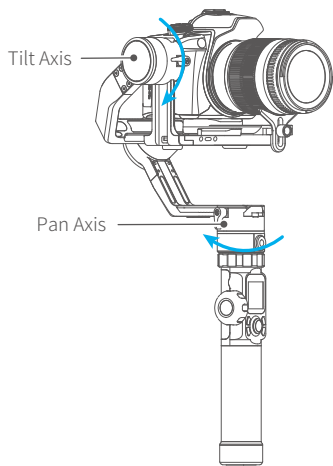

(4) Start auto rotation movements

The gimbal automatically returns to the start position, the tilting axis and panning axis start to rotate to the end position according to the set parameters, and the gimbal automatically resets after completion.

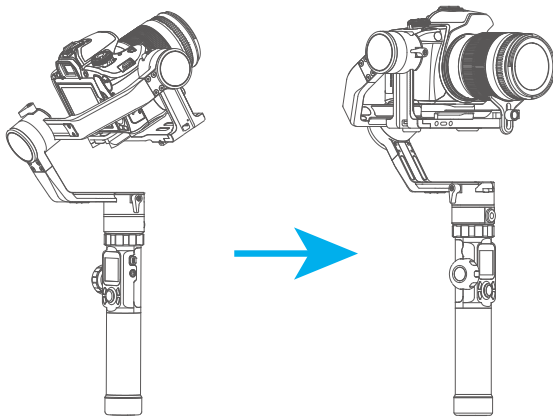

Exit → Double tap Shortcut button or click the ESC option on the screen → Exit the auto-rotation mode and reset

5.App - Download and Connecting

5.1 Download and Install Feiyu ON App

* Requires iOS 9.0 or later, Android 5.0 or later



iOS Version



Android Version

5.2 Connecting App

1. Turn on the mobile phone Bluetooth and start the gimbal;
2. Open the App, and connect to AK2000 according to the App prompts. After the connection is successful, you can control AK2000 on the App.



6.Advanced Operation


6.1 Gimbal Initialization

You can initialize your gimbal when:

- (1) When camera is not balance.
- (2) If not use for a long period of time.
- (3) In case of extreme temperature variations.

(1) Select system settings on the display screen to enter the gimbal calibration.

(2) Place the gimbal on the table, and the gimbal automatically initializes. If the display screen prompts that the calibration is successful, the initialization ends, otherwise the initialization fails.

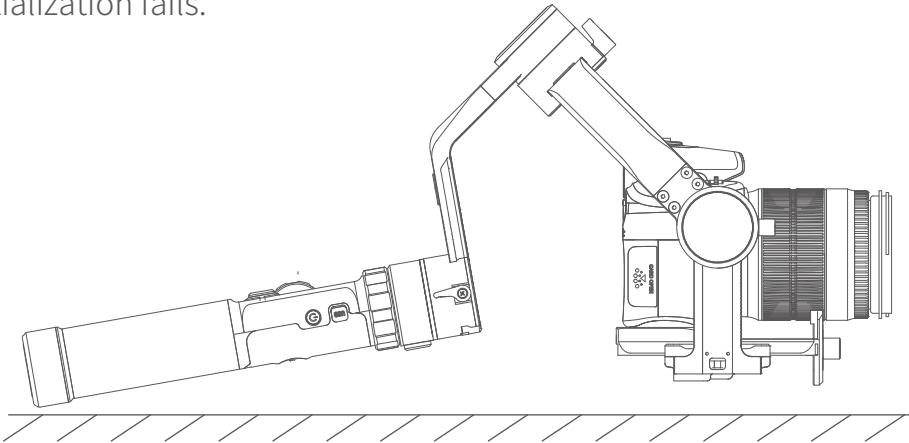


(3) After the initialization is successful, slide the display screen interface to the left/right or click the “ESC” key on the screen to wake up.

6.2 Firmware Upgrade


Connect the gimbal to the Feiyu ON App, to upgrade the firmware through the App.



Feiyu ON

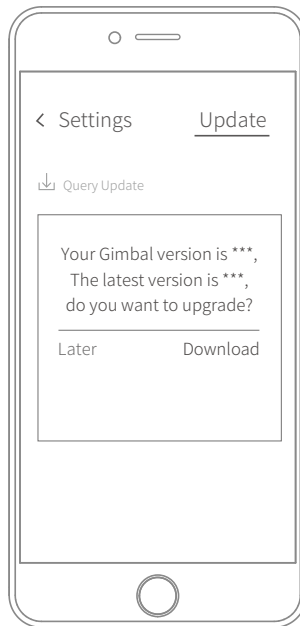

7.Specifications

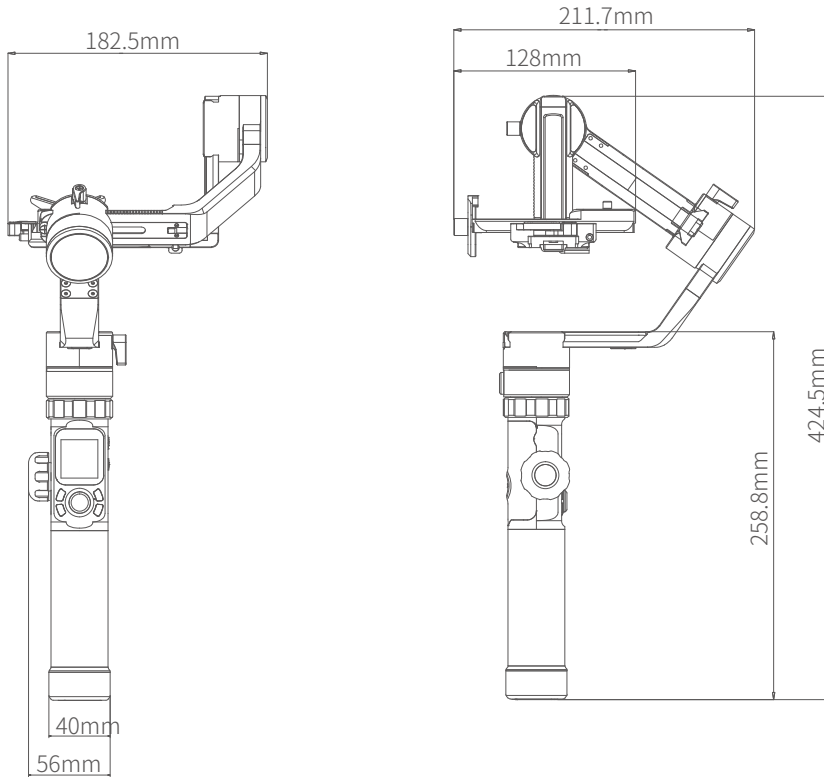

Max. Tilting Range	360°
Max. Rolling Range	360°
Max. Panning Range	360°
Tilting Speed	2°/s ~ 75°/s
Panning Speed	3°/s ~ 150°/s
Operation Time	12 Hours
Weight	About 1252g (not including the batteries)
Payload	2800g (In center of gravity balanced state)

8.Compatible Cameras for Reference

Brand	Model	Can be equipped with a lens
Canon	Canon5DMarkIV	CanonEF 100mm f/2.8L IS USM +Camera hood
		CanonEF 135mm f/2L USM+Camera hood
		CanonEF 85mm f/1.2 L II USM+Camera hood
		CanonEF 50mm f/1.2L USM+Camera hood
		CanonEF 35mm f/2 IS USM+Camera hood
	Canon5DMarkIII	CanonEF 85mm f/1.2 L II USM+Camera hood
		CanonEF 24-105mm f/4L IS USM
	Canon6DMarkII	CanonEF 85mm f/1.2 L II USM+Camera hood
		CanonEF 16-35mm f/2.8L II USM
		CanonEF 24-105mm f/4L IS USM
		CanonEF 50mm f/1.2L USM+Camera hood
Nikon	Nikon D500	NikonAF-S 105mm f/2.8G IF-ED VR
		NikonNikkor 18-140mm f/3.5-5.6G ED VR
	NikonD7500	NikonNikkor 18-140mm f/3.5-5.6G ED VR
		NikonAF-S 105mm f/2.8G IF-ED VR
Sony	Sony α9	Sony E 50mm F1.8
		Sony E PZ 18-105mm F4 OSS
		Sony FE 85mm F1.8
		Sony FE 35mm F1.4
		sony FE 24-240mm F3.5-6.3
	Sony α7R2	SonyVario-Sonnar T* 24-70mm f/2.8 ZA SSM

Brand	Model	Can be equipped with a lens
Sony	Sony α7R3	Sony E 50mm F1.8
		Sony E PZ 18-105mm F4 OSS
		Sony FE 85mm F1.8
		Sony FE 35mm F1.4
		sony FE 24-240mm F3.5-6.3
		Sony FE 24-105mm f/4 G OSS
		Sony FE 12-24mm f/4.0 G
	Sony A6500	SonyFE 28-70mm f/3.5-5.6 OSS
Panasonic	GH5s	25mm f/1.4
		35-100mm f2.8
	GH4	OLYMPUS M.ZUIKO DIGITAL ED 12mm f/2.0

Guilin Feiyu Technology Incorporated Company

Website: www.feiyu-tech.com

E-mail: service@feiyu-tech.com

Tel: +86(0)773 2320865

Due to software and hardware improvements, your actual product might differ from the descriptions and pictures in this user manual. You can get the latest user manual from the official website.

For more information, please visit our official website



DISCLAIMER

Prohibit any user for any illegal purpose. Users will be responsible for all behaviors of purchase and use products.

The Company assumes no liability for any risks related to or resulting from the debug and use of this product (including the direct, indirect or third-party losses).

For any unknown sources of using, we will not be at any services.

The updating and changes of product firmware and program may cause changes in function descriptions in this user manual, please read the instructions carefully before upgrading the firmware and use the corresponding user manual.

You can get the latest user manual from the official website: www.feiyu-tech.com

FeiyuTech reserves the right to amend this manual and the terms and conditions of use the gimbal at any time.